

# UltraPro



Congratulations on your choice of **UltraPro** dual ovenware from Tupperware. Your UltraPro can withstand high temperature and can be used for food preparation and storage in the freezer, microwave, and in a conventional oven. You can invert the **UltraPro** cover to use as a shallow dish, with the base fitting over as a cover.

-25°C  
+250°C



---

## Tupperware®

Preserving your future

Use a low temperature programme on your dishwasher to save energy and protect the environment.

### Use and care

- Safe for use in the conventional oven.
- **Safe for use in the microwave oven. Larger sizes are not suitable for most microwaves due to their size and it is not recommended nor energy efficient to heat up large amounts of food in the microwave.**

---

## Tupperware®

- The material can withstand oven temperature up to 250°C. We do not recommend cooking or baking at this temperature for more than 2 hours as food will degrade.
- Safe for use in the freezer to -25°C.
- Do not use on the top of the stove or under the grill, or in a mini oven.
- Always place the **UltraPro** at least 5 cm away from the walls and the top of the oven.
- Always place the **UltraPro** in a fully preheated oven (not in a cold oven).
- Always ensure that the pre-programmed settings of your oven do not use the grill.
- Always ensure that the temperature in your oven does not exceed the maximum temperature for the UltraPro (250°C). Use extra care in ovens having an open flame.
- When taking the casserole from the oven or the microwave oven, use both hands with oven gloves for safety. Leave to stand for 4 to 5 minutes to allow heat to distribute evenly.
- Always lift off the **UltraPro** cover away from you to direct the steam away.
- **Always use non-metallic utensils with your Ultra Pro, for best results it is recommended to use a silicone spatula or spoon. Using metal utensils will scratch the surface which does not affect the performance of the product but is not covered by your guarantee.**
- Clean before use. Before putting into the oven to cook, wipe the container and cover carefully to remove any spills or spots of food as these could dry out and burn onto the container in the hot oven.
- UltraPro is dishwasher safe. Soak the product in hot soapy water immediately after use.
- If fats burn onto the container at high temperatures leaving brown patches, soak in a solution of 4 tablespoons dishwasher detergent in 5 litres of hot water for at least 2 hours. Then clean gently with a soft microfibre cloth.
- Avoid the use of abrasive cleaners, cloths and scourers.

## Guarantee

**UltraPro dual ovenware** is manufactured with great care and precision from the finest quality materials, approved for use in contact with food. **UltraPro** has a 10 year **guarantee**, which ensures a replacement if a product presents any manufacturing or material defect in normal domestic use.

If roughly handled or dropped, the product could chip or break.