

MULTI-FLO AFFF SYSTEMS

&

Formula Systems

FIA HOMOLGATION NUMBER: - EX.046.17 & EX.050.18 & EX.051.18

Installation Instructions

Please read carefully before attempting to install your system.



The Mill House, Tamworth Road, Packington Hayes Nr Lichfield, Staffordshire, England WS14 9PN Tel: 01543 434580 Fax: 01543 434581 E-mail: sales@spa-uk.co.uk Web Site: www.spa-uk.co.uk

Firefighter/ Firesense-Response AFFF Multi-flo Systems covered by this manual

MFE400A-4-A	4 Ltr Electrical/Auto Alloy
MFM400A-4-A	4 Ltr Mechanical/Auto Alloy
MFM400A-4	4 Ltr Mechanical Alloy
MFE400S-4-A	4 Ltr Electrical/Auto Steel
MFM400S-4-A	4 Ltr Mechanical/Auto Steel
MFM400S-4	4 Ltr Mechanical Steel
MFE75A-4-A	3.375 Ltr Electrical/Auto Alloy
MFM75A-4-A	3.375 Ltr Mechanical/Auto Alloy
MFM75A-4	3.375 Ltr Mechanical Alloy
MFE75S-4-A	3.375 Ltr Electrical/Auto Steel
MFM75S-4-A	3.375 Ltr Mechanical/Auto Steel
MFM75S-4	3.375 Ltr Mechanical Steel
MFE75A-4-A-SL	3.375 Ltr Electrical/Auto Alloy Slimline
MFM75A-4-A-SL	3.375 Ltr Mechanical/Auto Alloy Slimline
MFM75A-4-SL	3.375 Ltr Mechanical Alloy Slimline
MFE400A-4	4 Ltr Electrical Alloy
MFE225A	2.25 Ltr Electrical alloy Slimline
MFM225A	2.25 Ltr Mechanical Alloy Slimline
MFM1.25A	1.25 Ltr Mechanical Alloy



The Mill House, Tamworth Road, Packington Hayes Nr Lichfield, Staffordshire, England WS14 9PN. UK Tel: 01543 434580 Fax: 01543 434581

E-mail: sales@spa-uk.co.uk Web Site: www.spa-uk.co.uk

Thank you for purchasing a FireSense-Response AFFF Multi-flo or Formula System (which has been FIA homologated).

It is important that you read the following instructions carefully before attempting to install your fire suppression system.

The performance of this system will be affected if it is in anyway modified or tampered with it will void its homologation. Please ensure that should any parts need to be replaced, only genuine SPA FireSense-Response components are used.

Should you require any assistance, please do not hesitate in contacting SPA Design on 01543 434580.

IMPORTANT NOTE

The purpose of this along with any other vehicle fire suppression system is to provide sufficient time in which to control the fire to enable the occupants to leave the vehicle. In ideal conditions, the fire will be extinguished completely but this can not be guaranteed. The main purpose is to curb the intensity of either an engine or cockpit fire to provide the means for the occupants to leave the vehicle or for outside assistance to be given.

Automatic Head

The new activation valve fitted to certain models all ending with the letter A within this new range of systems has a special safety feature that does not interfere with the standard operating procedure of the fire suppression system.

The automatic activation feature is a stand alone activation that will operate independent on user input at a temperature specified by the manufacturer.


IMPORTANT NOTE

The fire suppression system requires input by the user by either mechanical cable pull or electrical switch to operate the automatic activation is a safety backup only it is not the primary means of activation the primary means of activation is the driver using the cable pull or electrical switch depending on model purchased.

CONTENTS

Fitting Instructions – Electrical System	Page 5-8
Fitting Instructions – Mechanical System	Page 9-11
Cylinder mounting	Page 12-13
Nozzles & Installation	Page 14-17
Tubing	Page 18
Kit Lists Component Check	Page 19-22
System Maintenance	Page 23
Bottle Dimensions	Page 24-30
Pipework & Nozzle layout	Page 31-35
Safety Data Sheet	Page 36
Agents	Page 37-39

SPA FIRESENSE-RESPONSE ELECTRICAL SYSTEM WIRING SCHEMATIC APPLIES TO ALL ELECTRIC MODELS

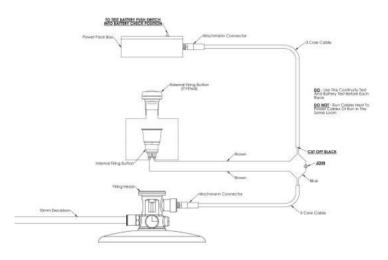

- To test the battery, push and hold control box switch upwards in the "Battery Check" position until yellow light flashes.
- If the extinguisher tubing is to be removed, push the black collett in and pull the tubing out at the same time.

RECOMMENDED: Use the continuity test and battery test before each race.

DO NOT: Run the cables next to power cables, or in the same loom.

ELECTRICAL FITTING INSTRUCTIONS

Unpack all parts and check components against 'kit list'.

- Remove bottle from mounting brackets if fitted by undoing the wing nuts. Decide the best position for the extinguisher – IT IS RECOMMENDED THAT THE BOTTLE SHOULD BE MOUNTED IN THE FORE AND AFT DIRECTION OF THE VEHICLE.
 - The extinguisher label, detailing the contents and the pressure gauge should be clearly visible for inspection, Mount the retaining brackets securely to the vehicle and put the bottle back into place. (Refer to Figure 3.)
- Mount the power pack in a clearly visible position.
- Switch with red plastic shroud to be fitted in the cockpit so that it is in easy reach of both the driver and/or co-driver when sitting in the normal driving position and wearing fully fastened seat-belts.
- The other switch with flexible red membrane (waterproof) is to be fitted to the outside of the vehicle, close to the exterior master switch (for activation by the Marshals).
- Once the system has been wired as per wiring diagrams (refer to Figure 1 / 2), thefollowing tests should be carried out to check the system is fitted correctly and will operate when required. (See Page 5)

SPA DESIGN FIRESENSE-RESPONSE ELECTRICAL DETAILS

The SPA FireSense-Response system uses actuators to operate valves located with in the pressurized container that contains the extinguishant. These are triggered remotely using a battery-powered power pack.

In order to guarantee reliable operation the connectors used are 1P67 and the actuators used are of a military specification with the system / battery test electronics integrated into the power pack.

The power pack electronics can test the continuity of the wiring, and also provides a high current pulse test to ensure system integrity before use. Unlike other systems, the battery test will not destroy or put an excessive drain on the battery during this critical test. These tests are performed using a three way switch on the power pack box and should be performed before each usage of the system, since the system is only as good as the battery that powers it and the integrity of the wiring loom and its connectors.

To check the condition of the battery press and hold up the switch on the power pack box in battery check position. **Every two seconds you will see a YELLOW** light flash.

If the light flashes very dimly the battery must be replaced.

IF IN DOUBT REPLACE THE BATTERY !!!!

To check the continuity of the wiring, ensure that the switch on the power pack box is in the **SYSTEM**INACTIVE position to ensure that the extinguisher is not fired.

Press the internal firing button and check that the <u>RED</u> light comes on, press the external firing button, and check that this also makes the <u>RED</u> light come on.

The external button must be positioned close to the exterior master switch.

When you are ready to race after all these checks push switch into system armed position, the control box will not illuminate in the system armed position if either internal or external switches are pressed the system will activate.

<u>**DO**</u> ensure that the wiring cables do not run next to looms especially if they contain ignition or battery cables


<u>DO</u> ensure that any exposed connections that are likely to get water sprayed are protected.

<u>DO NOT</u> allow cables to run through sharp edged apertures without protection

<u>DO NOT</u> fix cables to any surface that is likely to see excessive temperatures.

MECHANICAL CABLE SETUP

LEVER VALVE

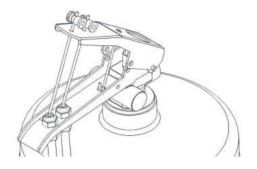

MECHANICAL AUTO HEAD





Make sure Cable is secure.



Once cable is secure, remove safety pin before race, when race is finished replace safety pin.


MECHANICAL SYSTEM

The system uses two T-handle pull cables, one 6ft long and one 12 ft long.

- Remove bottle from mounting brackets if fitted by undoing the wing nuts. Decide the best position for the extinguisher IT IS RECOMMENDED THAT THE BOTTLE SHOULD BE MOUNTED IN THE FORE AND AFT DIRECTION OF THE VEHICLE. The extinguisher label, detailing the contents and the pressure gauge should be clearly visible for inspection, Mount the retaining brackets securely to the vehicle and put the bottle back into place. (refer to Figure 3).
- Insert the end of the Decabon tube into the push-in fitting on the lever-valve and lay the length of the tube from the cylinder to the chosen location; plug the nozzle onto the free end of tube and orientate this to point the nozzles onto anticipated fire sources.
- Mount the 6-ft cable in the cockpit within reach of the driver and / or co-driver when sitting in the normal driving position wearing seat-belts. The other end of the cable is to be threaded through one of the adjusting screws on the handle of the lever-valve (on the cylinder). Then threaded through one of the holes in the other handle and the clamp screw made secure on cable against the underside in such a way that movement of the red pull handle will close the handles of the lever-valve, BUT allowing 6mm of free-play. CAUTION: do not allow this testing to actually move the handles or the valve may open and release the extinguishant (keep the safety pin in place).


- Mount the 12-ft cable on the outside of the vehicle (close to the exterior master switch is the recommended position). Lay the cable inside the vehicle and connect to the lever-valve as above.
- Pull cables should be fitted in such a way that no kinks or 'S' bends are formed, which could cause malfunction.
- Removing the safety pin from the lever-valve leaves the system ready for use.
- SAFETYWARNINGFailure to remove safety pin will render the system inoperable when required.

EXTINGUISHER MOUNT BRACKET

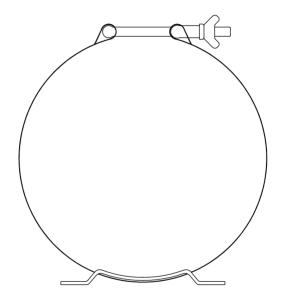

SP144 – 6" Cylinder Retaining Bracket SP148 - 5" Cylinder Retaining Bracket

ANTI TORPEDO MOUNT MANDATORY ON ALL FIA SYSTEMS

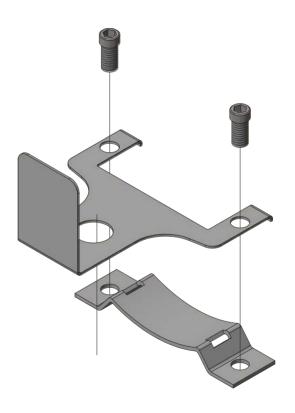

A.F.F.F. NOZZLES

It is important that all of the nozzles provided in the fire system kit are used.

The nozzles will produce a fine atomized spray with the AFFF emerging as a milky white foam substance, which forms a film barrier starving the fire of oxygen. This foam spray has the capability of excellent fire out times and has a cooling effect, which can control re-ignition.

When locating the nozzles it should be noted that there is a

90° cone with a 1/2 meter spray.

Nozzles should not simply be supported by their own pipe work. Where necessary support the nozzle in a bracket.

Nozzles should be checked for damage/possible blockage. They should also be tested to ensure that they are in good working order.

Depending on the class of racing/rallying, (which is the competitors responsibility) e.g. International rallying, which needs a 41t system, the engine bay must have 2 nozzles installed, with one each side of the motor and 2 nozzles installed in the cockpit.


For open cars, the system must include two nozzles one should be aimed at the drivers midriff with special care being taken not to spray into the drivers face.

For saloon /closed cars 2 nozzles must be fitted within the cockpit area. Nozzles should be fitted either to the top of the roll bar main hoop (door B pillar) pointing inwards and downwards towards the foot of the diagonally opposite front roll bar hoop base (door A post) or either under the dashboard aiming at the drivers midriff.


These are guide lines for competitors using SPA Design fire suppression systems

IF IN DOUBT. ASK!!!


Example of Cockpit nozzle location Saloon Cars Only.

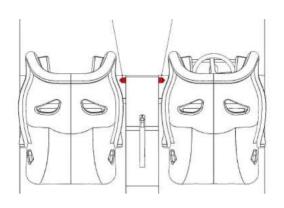

EXAMPLE OF ENGINE NOZZLE LOCATION

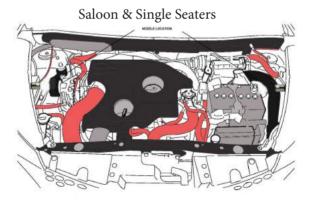


MFM125-A NOZZLE INSTALLATION

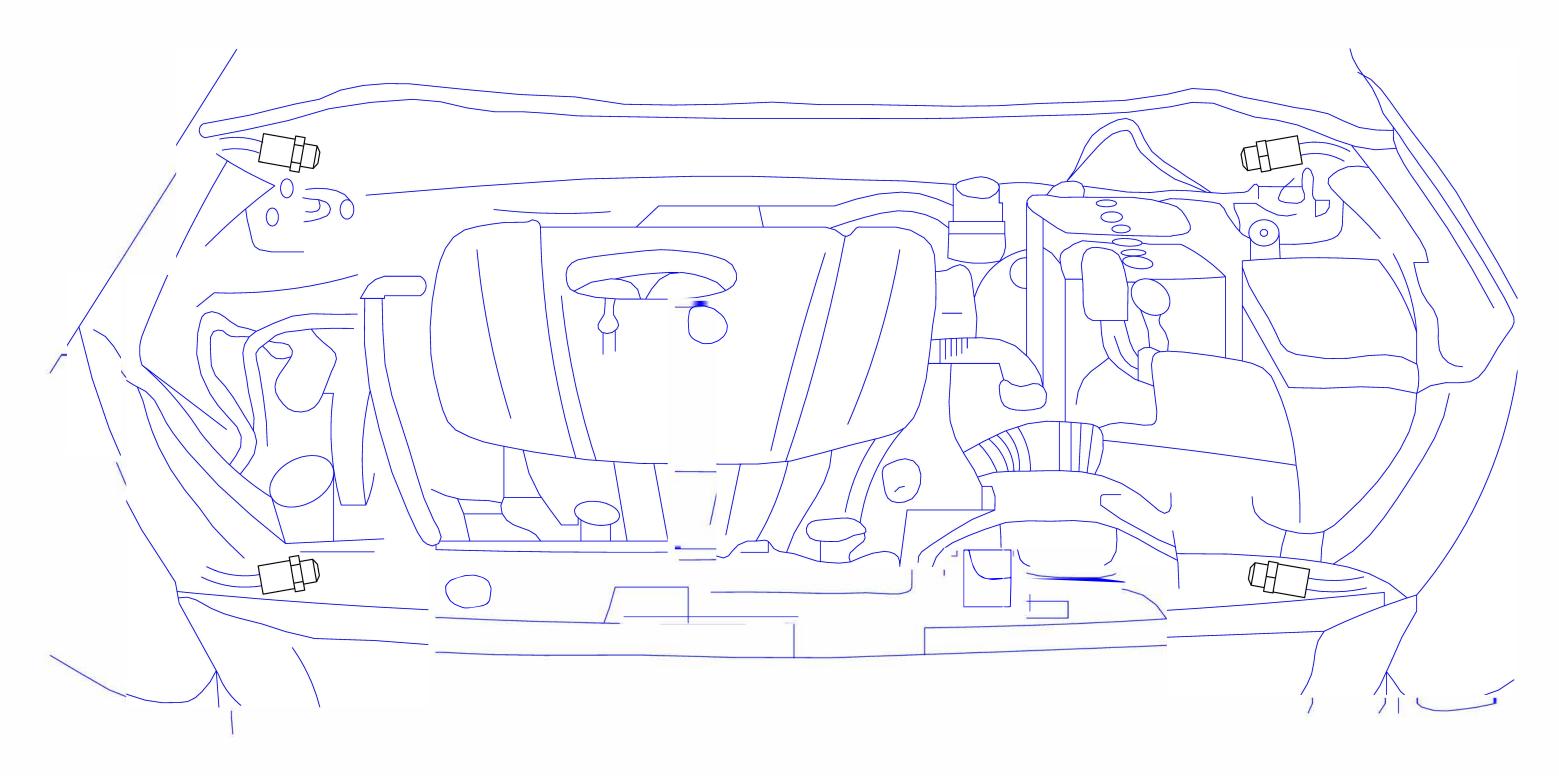

COCKPIT NOZZLE LOCATION FOR SINGLE SEATERS, THIS APPLIES ONLY TO MODELS MFM225A, MFE225A, MFE75A, MFM75A, MFE75S MFM75S, MFE75A-SL & MFM75A-SL MFM125

The SP030 Cockpit nozzles are positioned to aim at the drivers midriff as shown in the image below.

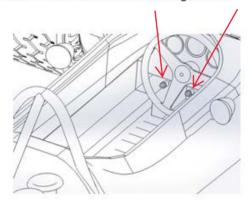

TUBING

Each FireSense-Response System kit is supplied with Decabon tubing which is a coated aluminium tube which can be molded and flexed to suit this application. The FireSense-Response system has been designed and homologated using 10mm & 8mm dia tube. DO NOT substitute this tube for any other type.

TUBE CONNECTIONS

All fittings for tube to nozzles and bottle are of the push-in type. Insert the tube into the fitting, push firmly until it clicks. Once in you should not be able to pull it out.

To remove the tubing, push the tube into the fitting and at the same time push/pull the black collett back towards the fitting and then pull the tube from the fitting.

KIT LISTS

4 LTR & 3.375 Ltr Multi-Flo Electrical

Electrical system comes fitted with firing head.

- 2 x SP144 6" Cylinder Retaining Bracket
- 2 x SP319 6" Anti Torpedo Mounting Tab
- 1 x SP007H Power Pack (Hirschman as standard)
- 2 x SP005H Plug & Lead
- 1 x SP011 Internal Fire Button
- 1 x SP012 External Fire Button
- 4.5 x SP032 8mm Decabon Tubing (Mtr)
- 0.5 x SP072 10mm Decabon Tubing (Mtr)
- 4 x SP031 8mm Nozzle
- 2 x SP028 8mm Tee
- 1 x SP029 8mm Bulkhead Fitting
- 1 x SP183 10mm-8mm Y Piece connector
- 1 x SP017 'E' location sticker
- 1 x SP129 Small 'E' Location Sticker

4 Ltr & 3.375 Ltr Multi-Flo Mechanical

Mechanical System comes fitted with Lever Valve or Mechanical Head

- 2 x SP144 6" Cylinder Retaining Bracket
- 2 x SP319 6" Anti Torpedo Mounting Tab
- 1 x SP018 6ft Pull Cable
- 1 x SP019 12ft Pull Cable
- 4 x SP031 8mm Nozzle
- 2 x SP028 8mm Tee Piece
- 1 x SP029 8mm Bulkhead Fitting
- 1 x SP183 10mm-8mm Y Piece connector
- 4.5 x SP032 8mm Decabon Tubing (Mtr)
- 0.5 x SP072 10mm Decabon Tubing (Mtr)
- 1 x SP017 'E' Location Sticker
- 1 x SP129 Small 'E' Location Sticker

KIT LISTS MFM225-A

2 x SP147	5" Mounting brackets
2 x SP319	Anti-torpedo mounts
1 x SP018	6 Foot mechanical cable
1 x SP019	12 Foot mechanical cable
1 x SP017	Large E sticker
1 x SP129	Small E sticker
0.5 x SP072	10mm Dekabon Tubing
1 x SP183	10mm-8mm Y piece
1 x SP029	8mm Bulkhead connector
1 x SP028	8mm T piece
3 x SP032	8mm Dekabon tubing
1 x SP184	8mm-6mm Y piece
2 x SP016	6mm Dekabon tubing
2 x SP030	6mm AFFF nozzles
2 x SP031	8mm AFFF nozzles

KIT LISTS MFE225A

2 x SP147	5" Mounting brackets
2 x SP319	Anti-torpedo mounts
1 x SP007H	Hirschman Style power pack
2 x SP005H	Hirschman plug & Lead
1 x SP011	Internal switch
1 x SP012	External switch
1 x SP017	Large E sticker
1 x SP129	Small E sticker
0.5 x SP072	10mm Dekabon Tubing
1 x SP183	10mm-8mm Y piece
1 x SP029	8mm Bulkhead connector
1 x SP028	8mm T piece
3 x SP032	8mm Dekabon tubing
1 x SP184	8mm-6mm Y piece
2 x SP016	6mm Dekabon tubing
2 x SP030	6mm AFFF nozzles
2 x SP031	8mm AFFF nozzles

KIT LISTS MFM1.25A

2 x SP147	5" Mounting brackets
2 x SP319	Anti-torpedo mounts
1 x SP018	6 Foot Mechanical Pull Cable
1 x SP019	12 Foot Mechanical Pull Cable
1 x SP017	Large E sticker
1 x SP129	Small E sticker
1 x SP184	8mm-6mm Y piece
1 x SP054	8mm Y piece
1 x SP029	8mm Bulkhead connector
2 x SP032	8mm Dekabon tubing
1 x SP184-4	8mm-6mm 4 way Y piece
7.5 x SP016	6mm Dekabon tubing
6 x SP030	6mm AFFF nozzles

MAINTENANCE

To ensure maximum possible performance from your SPA Fire FireSense Response system, the following checks and maintenance procedures should be carried out.

- Regularly check the pressure gauge to ensure they are in the green section.
- Regularly check nozzles for debris or any obstructions externally and internally.
- Regularly check the integrity of the pipe work and fitting.
- Regularly check the cylinder for physical damage or corrosion.
- Regularly check the mounting brackets, retaining straps and bolts are secure.
- Regularly check your power pack control box and condition of the internal. alkaline battery, the battery should be changed preferably every 6 months or if system has been fired off.
- Regularly check your wiring and electrical connectors for any damage.
- If the system has been activated the nozzles and pipe work should be washed through with fresh water and then cleared with an air line if possible to avoid residue of the extinguishant crystallizing in the pipe work or nozzles.
- Your SPA fire suppression system must be serviced every 2 years, a service due date is written on the contents label located on your cylinder. It is up to you to ensure the services are carried out at the correct intervals.
- If your system has been discharged or requires a 2-year service you must return it to SPA or an approved agent of SPA fire suppression systems.


NOTES

Please ensure that you monitor the following, as you \underline{may} \underline{not} pass scrutineering \underline{if} ;

- The needle on the gauge is in the red section
- The bottle contents label is worn, damaged or unreadable.
- The unit is not within the service date.
- The system is in a poor condition


BOTTLE DIMENSIONS

Ô[ç^|• Á[||[, ã * ÁT [å^|•

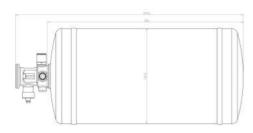

TØÒI€€ŒÜËËŒ TØTI€€ŒËËËŒ


T ØÒ75A-4-A MFM75A-4-A

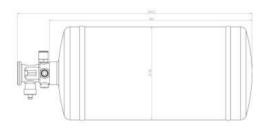


MFE400S-4-A MFM400S-4-A

MFE75S-4-A MFM75S-4-A

BOTTLE DIMENSIONS

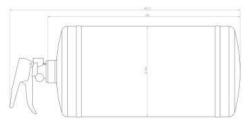


MFM400S-4 MFM75S-4

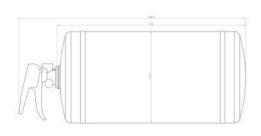



MFM400A-4 MFM75A-4

BOTTLE DIMENSIONS




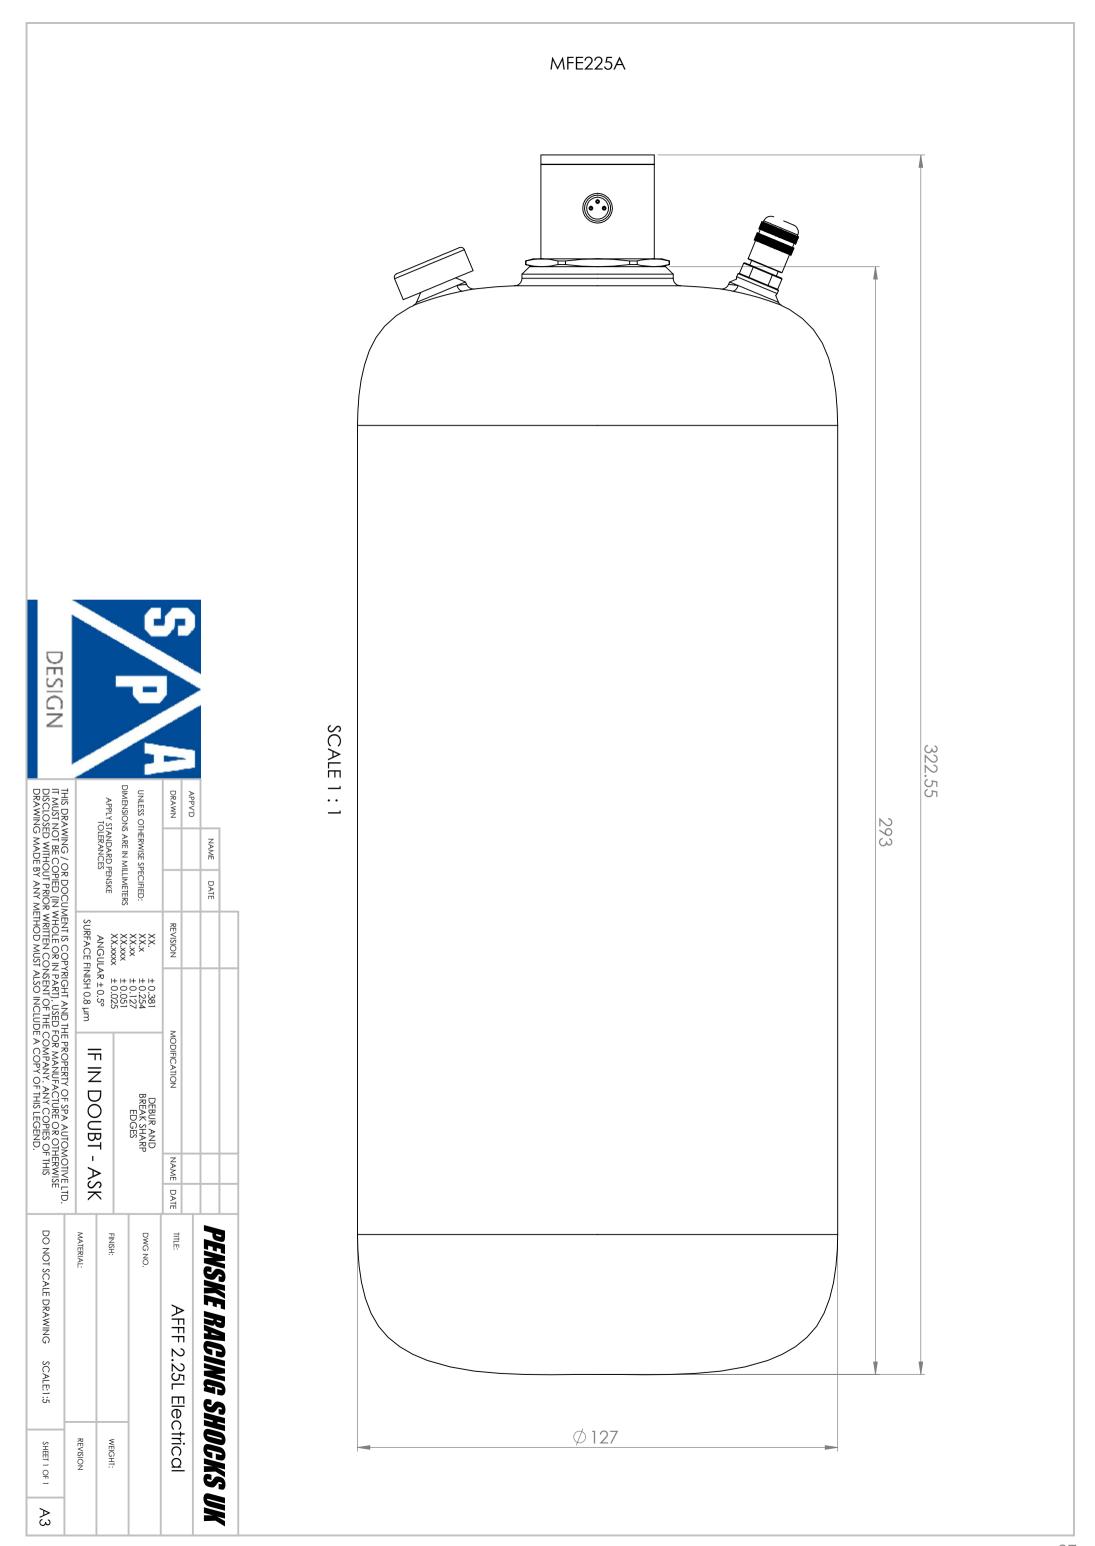

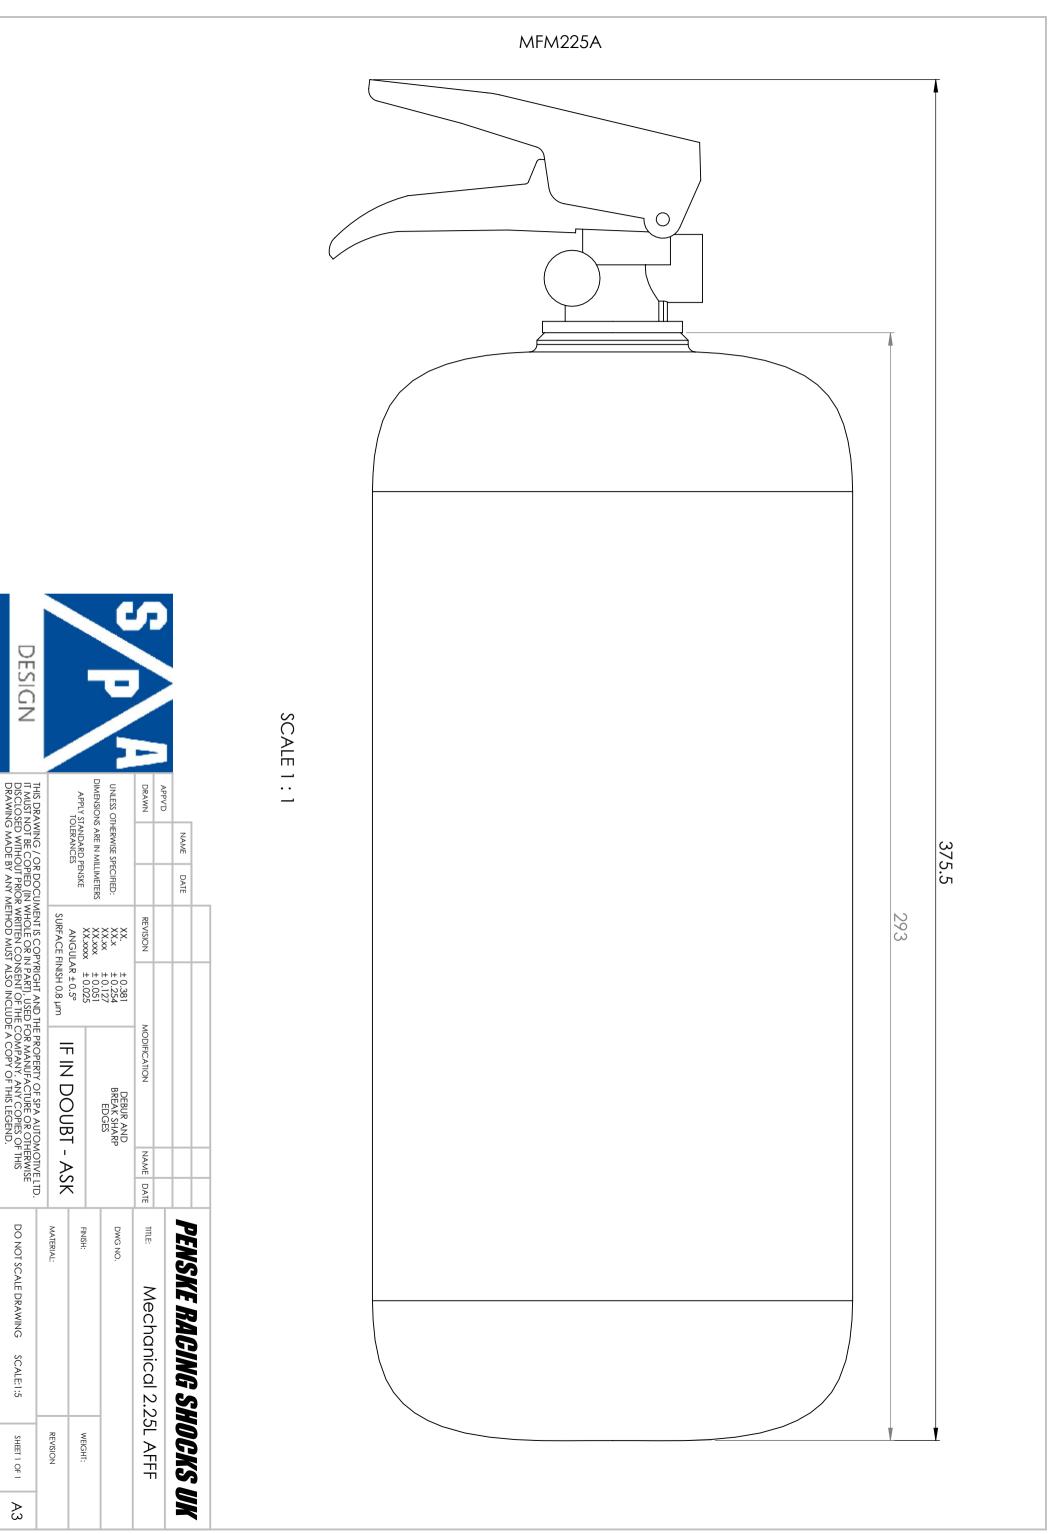


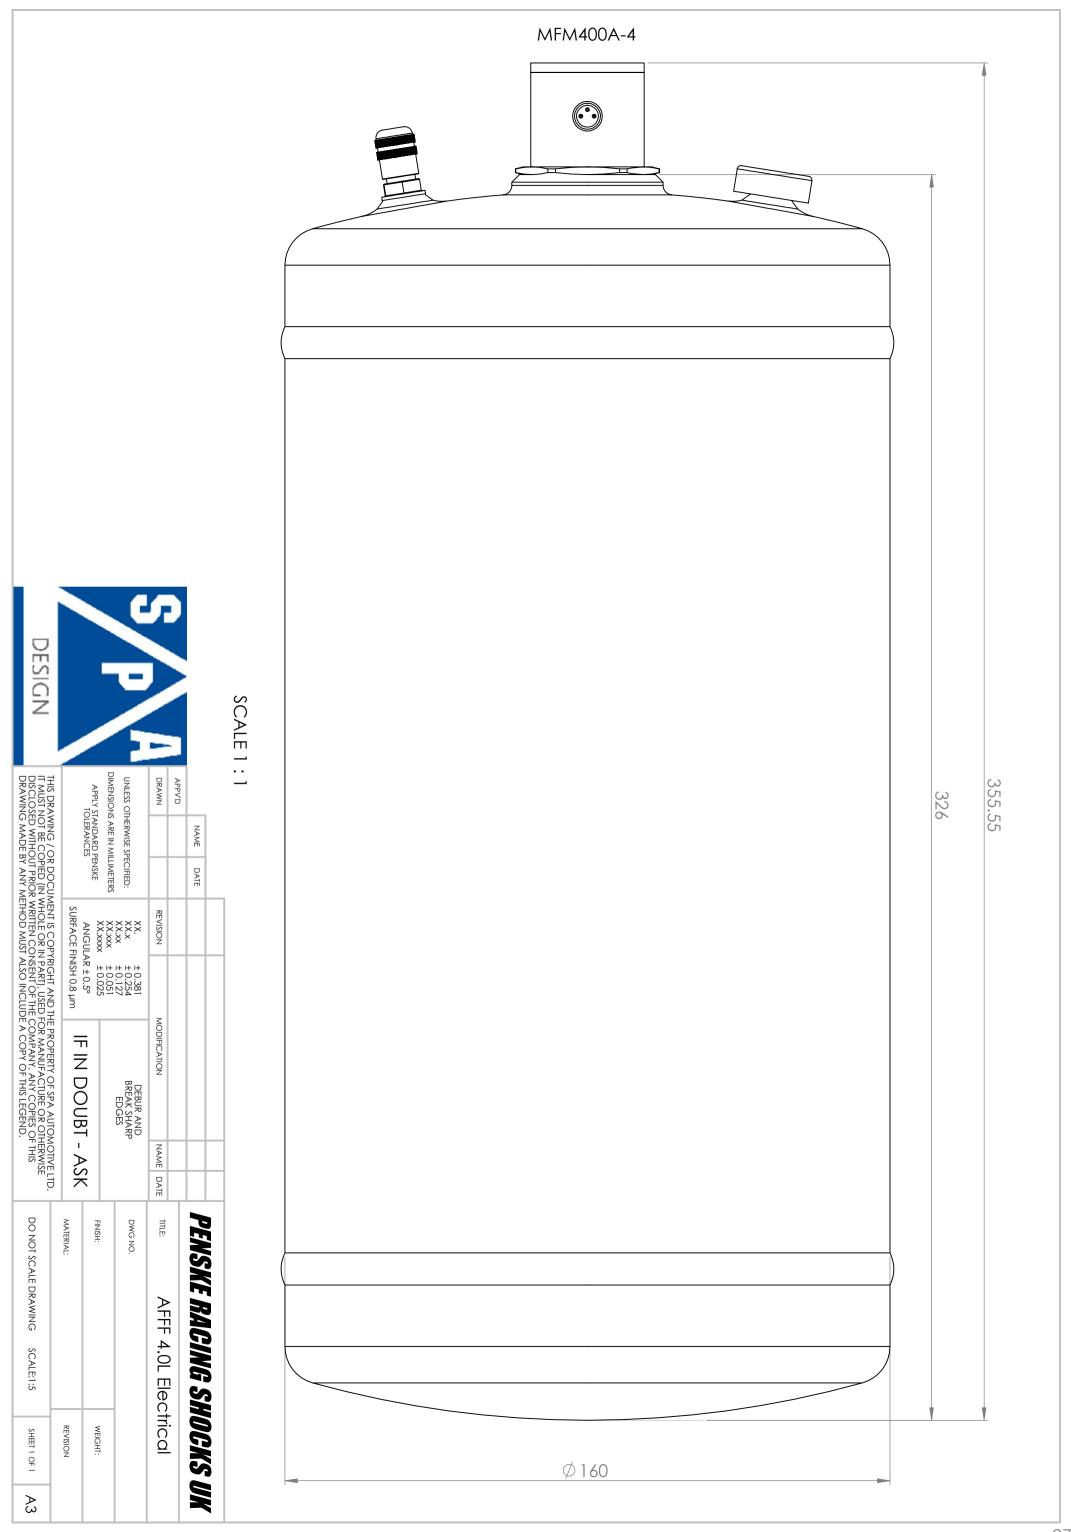



MFM1.25A

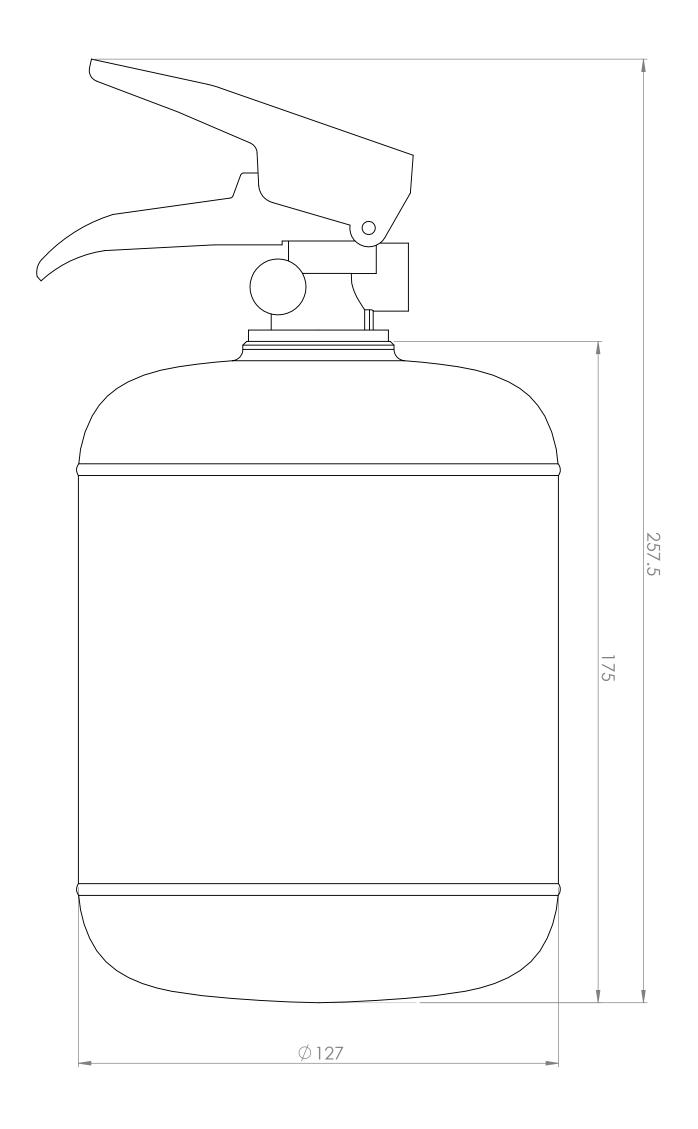



Pipework and Nozzle Layout Electrical and Mechanical Systems

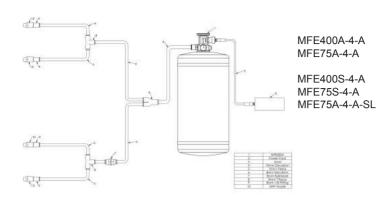

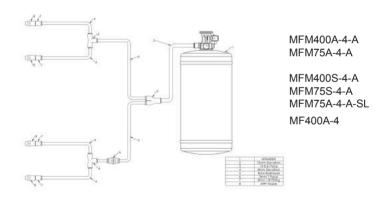


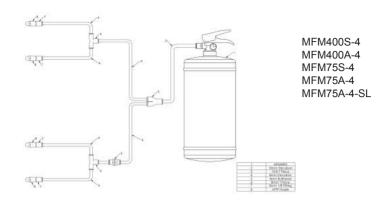

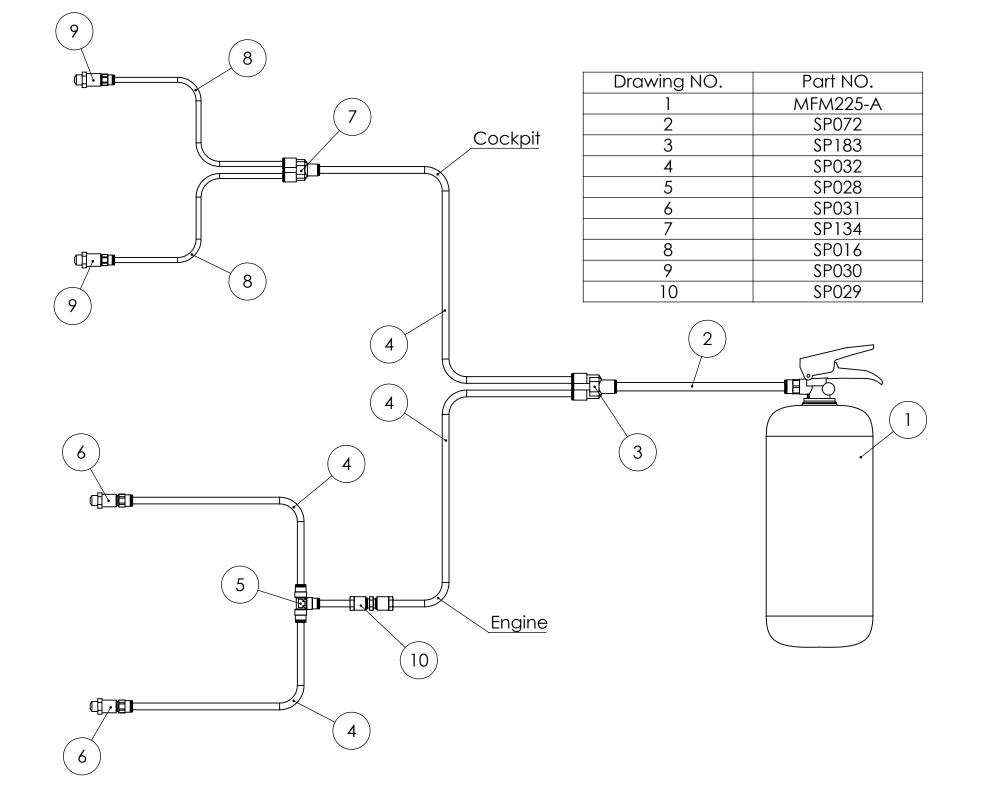

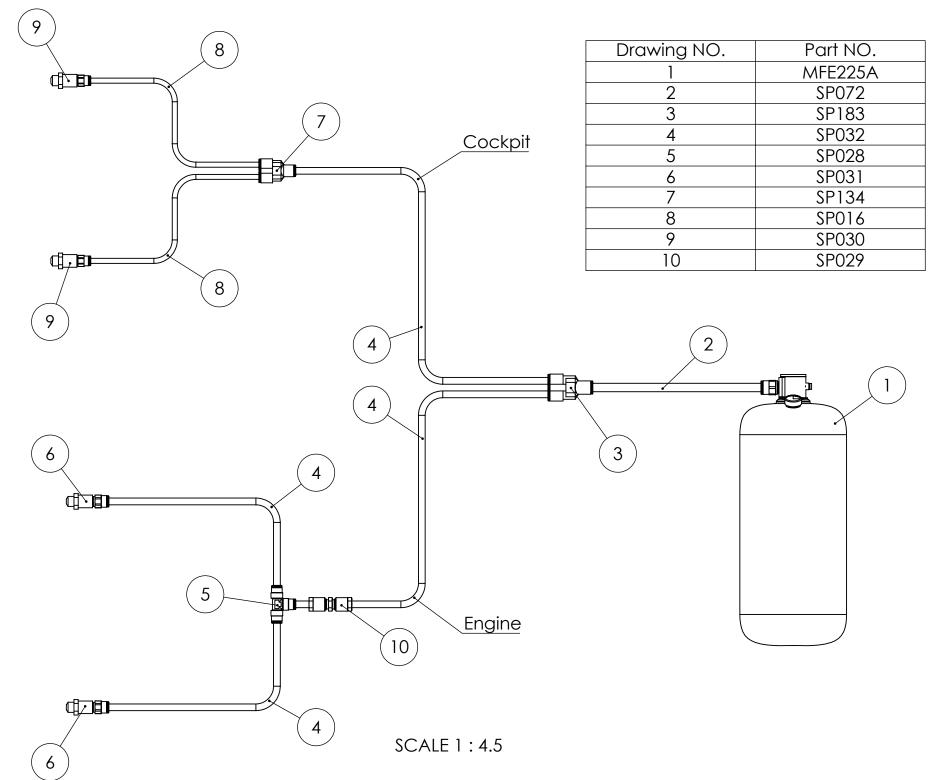

MFM1.25A

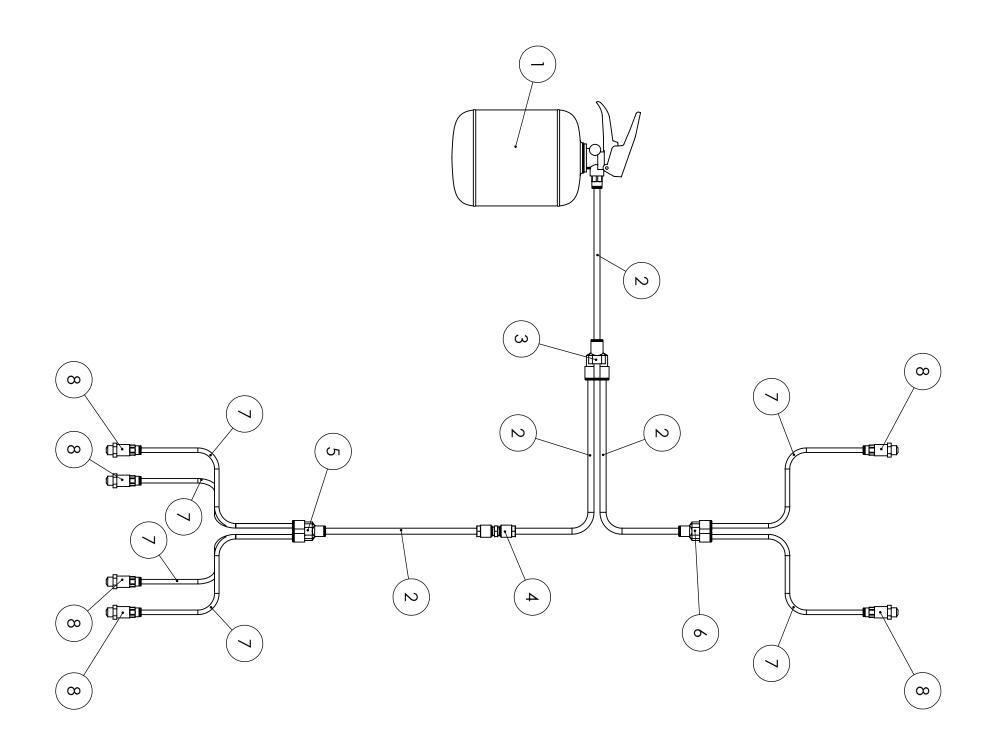

8	7	6	5	4	ω	2	1	Drawing NO.
SP030	SP016	SP184	SP184-4	SP029	SP054	SP032	MFM1.25-A	Part NO.

SAFETY DATA SHEET FOR AFFF (Aqueous Film Forming Foam)

APPLICATION Autosport industry –

including saloon, single

seaters and other racing cars.

CONTENTS Hydral AR 3x3 Low

Viscosity AFFF, Water

COMPOSITION Water, Ethaned ol,

Ethylene glycol, Urea, Sod um Monodecylsulfate.

Diethylene Glycol Monobutyl Ether,

Caprylcapr lyl Glucos de

APPEARANCE Clear Liquid with a hint of

blue

pH Approx. 6.5 – 8.5

BOILING POINT 100°C (initial)

VAPOUR PRESSURE Approx. 17.6 mm Hg Calc @

20°C

WATER SOLUBILITY Miscible

FREEZING POINT -10°C

PHYSICOLOGICAL Non-harmful.

PROPERTIES

SERVICE AND REFILL AGENTS FOR SPA FIREFIGHTER/FIRESENSE-RESPONSE SYSTEMS.

ATS MOTORSPORT

30 SCHOONGEZICHT RD **BERGBRON** JOHANNESBURG SOLITH AFRICA PH · 0027 11 726 6314

FAX: 0027 11 673 5185 E: atsleeke@global.co.za www. ats-motorsport.co.za

DANIELSON EQUIPEMENT

5 RUF CHAMP MAGNY 58470 MAGNY COURS

FRANCE

PH· 0033 386 212 255 FAX: 0033 386 212 265

contact@danielson-equipement.com www. danielson-equipement.com

R&R LOGISTICS NI LTD

7 CADGER RD CARRYDUFF **BELEAST** RT8 8ALL

Contact: Jonathan Martin / Raymond Moore

PH: 02895 213335 ionathan@rr-ni.com www. raceandrally.com

MURRAY MOTORSPORT

UNIT 20 BEECHLAWN IND COMPLEX GREENHILLS RD

DUBLIN 12

FIRE

PH: 00353 1 4500555 FAX 00353 1 4500585

info@murraymotorsport.ie F: www. murraymotorsport.ie

GULFSPORT BACING LLC

LINIT 8 INDUSTRIAL AREA 4 STREET 29 DUBAL UAF Contact: Mike Scott PH : 00971 4 341 5438

FAX: 00971 4 341 5438

F· mike.scott@gulf-sport.com

GIEFFE SRL

VIASAN GIUI IANO 39A 15040 CASTELCEBIOLO (AL) ITAI Y

PH: 0039 0131 216505 EAX · 0039 0131 216506

E: damiano.logiudice@gieffesrl.it

www. aieffesrl.it

KH MOTORSPORT

RAMSASEN 665 91 KII SWEDEN

PH: 00465 421040 FAX · 00465 421165

kh.msport@swipnet.se www. khmotorsport.se

ORECA

PARC DACTIVITES DE SIGNES

AVE DE ROME 83870 SIGNES

FRANCE

PH · 0033 494 885 801 FAX: 0033 494 328 001 F: lcourdon@oreca.fr

www oreca fr

DES MOORE RALLYING

46 CARRICKADUFF RD CARNAGH CO. ARMAGH

BT60 3HZ PH: 02837 538633

FAX : 02837 539286 E: des@dmrr.net www. dmrr.net

RECHSTEINER RACING S A

ZONE INDUSTRIELLE DES PRES MORES 1315 LA SARRAZ

SWITZERI AND Tel: 0041 21 866 1666 Fax: 0041 21 866 1667

Email: pa.rechsteiner@rechracing.com

Website: www.rechracing.com

SERVICE AND REFILL AGENTS FOR SPA FIREFIGHTER/FIRESENSE-RESPONSE SYSTEMS.

BOTH IMPORTS

55 NORTH TERRACE HACKNEY SA 5069 AUSTRALIA

PH: 0061 8 8113 0600 FAX: 0061 8836 28811 E: spalite@nttyres.com.au

www. nttyres.com.au

IMPORT PARTS

SEPN 504 BL.C LOJA 34 ED. MARIANA BRASILIA DE

BRAZIL

CEP 70. 730 - 523

PH: 0055 61 326 2614 FAX: 0055 61 326 7717 E: ip-parts@uol.com.br

www. ip-part.com

SERVALL INC

GREEN HILL ST. MICHAEL BARBADOS WEST INDIES

PH: 001 246 424 5912 FAX: 001 246 429 4854

MERLIN MAILORDER

THE BRIDGESTONE BUILDING
CASTLE COMBE MOTOR RACING CIRCUIT
NR CHIPPENHAM

WILTSHIRE, SN14 7EX, UK PH: 01249-782101 FAX: 01249782161

RACER INDUSTRIES

286 SOUTHPORT NERANG ROAD SOUTHPORT QUEENSLAND 4215 AUSTRALIA Tel: 0061 7 5591 8198 Fax: 0061 7 5591 6458

Email: sales@racerindustries.com Website: www.racerindustries.com.au

NEIL ALLPORT MOTORSPORT

34 OLIVE RD PENROSE AUCKLAND NEW ZEALAND PH: 00649 579 0113

FAX: 00649 579 0114 E: sales@namsport.co.nz

www.namsport.co.nz

NOVA ENGINEERING

220 – 1 OHMIKA OYAMA - CHO SUNTO - GUN SHIZUOKA 410 - 1308 JAPAN

PH: 0081 550 780329 FAX: 0081 550 780064 E: nova-eng@mail.wbs.ne.ip

GUNNAR AASKOV MOTORSPORT

CREDITOR 231826 KORNMARKEN 2. GRAVENT

DK-6040 EGTVED. DENMARK

PH: 0045 75 55 32 90 FAX: 0045 75 55 38 85

F: mail@aaskov-motorsport.dk

SPA TECHNIQUE INC

8225 INDY LANE INDIANAPOLIS 46214

USA

PH: 001 317 271 4941 FAX: 001 317 271 7951 E: info@spatechnique.com www.spatechnique.com

MARDI GRAS MOTORSPORT LTD

UNIT 45 SILVERSTONE CIRCUIT

TOWCESTER NORTHANTS NN12 8G7

Tel: 01327 858 006 Fax: 01327 858 800

Email: info@mardigras.co.uk Website: www.mardigras.co.uk

SERVICE AND REFILL AGENTS FOR SPA FIREFIGHTER/FIRESENSE-RESPONSE SYSTEMS.

ALL FIRE SECURITY

BRANDBEVEILIGING MARLIER BVBA ROESELARESTRAAT 180 WEVELGEM 8560 BEI GILIM

Tel: 0056 42 32 29 Fax: 0056 42 00 83 Email: info@allfiresecurity.be

Email: info@allfiresecurity.be Website: www.allfiresecurity.be

H C GROUP

222 SRI WORACHAK BLD NO G8 LUANG ROAD DOMPRAB, BANGKOK THAILAND 10100 Tel: 00662 223 1144

Fax: 00662 226 3660 Email: info@hcthailand.com Website: www.hcthailand.com

MOTORSPORT ASIA

SUITE 22 - 1 LEVEL 22 MENARA PANGLOBAL NO 8 LORONG P RAMLEE 50250

KUALA LUMPUR Tel: 00603 2026 1680 Fax: 00603 2026 1681 Email: mal@motorsportasia.com

Website: www.afos.com

SPEEDMASTER

7 HAREFIELD CLOSE NORTH EPPING NEW SOUTH WALES 2121

AUSTRALIA Contact: Tony Dunn

TEL: (02) 9868 5899 Mob: 0404 007 768

Email: tony@speedmaster.net.au

MTEC FORMULA TECHNOLOGY

MAKELA RACING TEAM URHEILUTE 4 RANTSILA 92500 FINLAND

Contact: Miikka Makela TEL +358 (0) 40 867 8197 Email: miikka@makelracing.fi

THE CROSSLE CAR COMPANY LIMITED

RORY'S WOOD OLD HOLYWOOD ROAD HOLYWOOD CO DOWN BT18 9QS

Tel: 0044 (0) 28 9076 3332 Fax: 0044 (0) 28 9076 0676 Email: arnie@crossle.fsnet.co.uk Website: www.crossle.co.uk

OSATUONTI RACING SHOP

PUROKATU 9 21200 RAISIO FINLAND Tel: 00358 500 525342

Email: myynti@osatuontiracingshop.fi Website: www.osatuontiracingshop.fi

PERFORMANCE RACEGEAR

246 GREAT EASTERN HWY ASCOT WA 6104 AUSTRALIA Contact: Mike Nairn

TEL: (08) 6461 6919 Mob: 0424036418

Email: mike@performanceracegear.com.au

AUTOSLANGER

RANTZAUSGAVEVEJ 5 8355 SOLBJERG DENMARK

Contact: Benjamin Muusmann PH: +45 228678790

E: benjamin@autoslanger.dk

REVOLUTION RACEGEAR

592 WHITEHORSE ROAD MITCHAM VICTORIA 3132 AUSTRALIA Contact: Tullio Salta Tel: 03 9873 8700

Fax: 03 9873 8711

Email: tullios@racegear.com.au Web: www.revolutionracegear.com.au

SERVICE AND REFILL AGENTS FOR SPA FIREFIGHTER/FIRESENSE-RESPONSE SYSTEMS.

COMPLETE FIRE & SAFETY

43 ALLARDICE STREET STONEHAVEN ABERDEEN, AB39 2AB SCOTLAND Contact: Garrith Glennie Tel: 01224 911 148

Mob: 07518 339528 Email: garrith@firesafety247.co.uk

BERNICO INTERNATIONAL RACING

VICTOR DUMONLAAN 6 2830 WILLEBROEK ANTWERP BELGIUM Contact: Raf Van Belle Tel: +32 34558728 Fax: +32 34550088

Email: magazijn@bernico.be



