

ibells

SCREEN RECEIVER

MD-1100



Manual

MAIN FEATURES:

- 1 Setting menu with voice prompt, easy to operate;
2. Calling records cycle display;
3. Adjustable volume;
4. Transmitter capacity: 999pcs;
5. Range: 500m (open air);
6. Support maximum 10pcs remote control for management.

SYSTEM SETTING:

Plug in display receiver, the screen displays from 000,111,222...999 along with airport broadcast music and left big LED tube display “- - -” to standby.

Long press and hold “SET” button for 2 second to entre main setting menu, then press “UP/DOWN” button to select relevant menu F01 to F08, and then press “SET” button again to entre relevant submenu (Long press and hold UP/DOWN button at top of the display receiver can change the number or submenu number faster and continuously.);

F01; Number Registration

A) Add transmitter

When display F01, short press “SET” button to entre F01 submenu, the display shows “1”, then trigger the transmitter to program it to be Number 1 transmitter (after program, the number will be increased by 1 automatically). If need to program another transmitter to be number 20, long press and hold “UP/DOWN” till shows “20” and then trigger relevant transmitter. The speaker will sound “successfully registration”. After program press “BACK” button to previous menu or press “BACK” button twice to exit to standby.

B) Delete transmitter separately

During number registration, press “UP/DOWN” button to select one of the number which want to delete, then press “DEL” button at the top side of the display receiver. If the number was programmed, the number will flicker: If the number was not programmed before, the number would not flicker. After delete the number. It would not flicker and sounds “Delete Successfully”.

To delete all transmitters quickly, please use F08 restore factory default (submenu 001 or 002).

C) Add Manager Remote Control

During number registration, press “DOWN” button to display “000”, then press relevant remote control. After program Manager Remote Control, the user can use programmed remote control to setup the display receiver remotely.

F02: Prompt Music

Press “SET” button to enter F02 submenu, the display shows 001 (Default), then press “UP/DOWN” to select prompt music mode, and then short press “SET” button to confirm:

001: Ding-Dong + Speaking Number (Default); 002: Airport Broadcast Voice only; 000: Speaking Number only.

After program, press “BACK” button to previous menu or press “BACK” button twice to exit to standby.

F03: Display Cycle Time Settings

Press “SET” button to enter F03 submenu, the display shows “015” (Default), then press “UP/DOWN” to setup relevant display cycle seconds. Short press “SET” button to confirm.

F04: Volume

Press “SET” button to enter F04 submenu, the display shows “006” (Default), then press “UP/DOWN” to setup relevant volume from 001 (lowest) to 006 (highest). Short press “SET” button to confirm.

F05: Delete Time Settings

Press “SET” button to enter F05 submenu, the display shows “000” (Default), then press “UP/DOWN” to setup relevant seconds to delete calling history (short press UP/DOWN once to add/reduce 10 seconds). Short press “SET” button to confirm.

F06: Key Switch

Press “SET” button to enter F06 submenu, the display shows “001” (Default), then press “UP/DOWN” to choose relevant key value and the press relevant key on transmitter.

001: Order;
004: Cancel;
007: Pulling Needles;
010: Pay;

002: Call;
005: Change Medication;
008: Service;
011: Nurses;

003: Check Out;
006: Emergency;
009: Water;

Note: Before redefine or rematch keys value of transmitter, please add or program relevant transmitter at first.



F07: Time-Out

Press “SET” button to enter F07 submenu, the display shows “000” (Default), then press “UP/DOWN” to set relevant seconds for Time-out settings. Short press “SET” button to confirm.

When Time-out is set, during the setup time, service person should go to provide service in time, otherwise the screen will flicker to remind service person to offer service as quick as possible.

F08: Restore Factory Default

Press “SET” button to enter F08 submenu, the display shows “000” (Default), then press “UP/DOWN” to choose 000, 001 or 002 and then short press “SET” button to confirm and restore factory default.

000: restore factory default but not delete transmitter;

001: restore factory default also delete all transmitters (but do not delete manager remote control);

003: restore factory default also delete all transmitters and manager remote control together;

OTHER PARAMETER:

1. Operating current: <450mA;
2. Standby current: <40mA;
3. Operating frequency: 433MHz;
4. Size: L230*W185*H40;
5. Weight: 369g;
6. Power supply: 9V1A.