## INSTALLATION INSTRUCTIONS STC No. SE02352CH #1124 REVISION C DATED 11/28/2023

## **CLEANABLE OIL FILTER INSTALLATION INSTRUCTIONS**

- 1. Remove existing oil filter from engine
- 2. Lubricate Challenger's cleanable oil filters mounting O-ring with clean engine oil.

## Note: "INSTALL FILTER WITH CLEAN HANDS AND CLEAN OIL FILTER EXTERIOR SURFACE, FREE OF GREASE OF OIL."

- 3. Install or remount Challenger's oil filter on to the engine or the engine oil filter adapter. Tighten oil filter by hand until getting tight, then secure oil filter by setting torque value at 16-18 ft lb. Note: 'DO NOT OVER TIGHTEN."
- 4. Run engine and check for oil leaks and safety wire filter using drilled holes in the top cooling fin.

Call Challenger Aviation for product support at 937-387-6500 or email <a href="mailto:info@challengeraviation.com">info@challengeraviation.com</a>