

CLEANABLE OIL FILTER INSTALLATION INSTRUCTIONS

1. REMOVE EXISTING SPIN-ON DISPOSABLE OIL FILTER OR REINSTALL CHALLENGER CLEANABLE OIL FILTER.
2. LUBRICATE CHALLENGER'S CLEANABLE OIL FILTERS MOUNTING O-RING WITH ENGINE OIL OR DOW CORNING #4.
3. INSTALL OR REMOUNT CHALLENGER'S OIL FILTER ONTO THE ENGINE OIL FILTER ADAPTER. TIGHTEN OIL FILTER BY HAND UNTIL TIGHT, THEN 1/4 TURN. **NOTE: "DO NOT OVER TIGHTEN"**.
4. RUN ENGINE AND CHECK FOR OIL LEAKS. SAFETY WIRE FILTER USING HOLES IN THE 1" HEX NUT.

FAA APPROVED


NOV 13 2006

CHICAGO AIRCRAFT
CERTIFICATION OFFICE
CENTRAL REGION