ZBAR1-10V REMOTE LED DIMMING PACK

TECHNICAL OVERVIEW

The ZBAR1-10V will dim 1-10V loads and is designed to fit both new and existing installations. No need for screened cable, simply connect using any 2 core cable.

Control of the unit can be made via a Zano rotary controller, where up to 32 rotary controllers can be connected in parallel to one ZBAR1-10V. Each controller may be connected on existing twin and earth wiring.

SPECIFICATION

| Compatible With : | Any 1-10V load |
|----------------------------|---------------------------------|
| Dimming Operation | Rotary Controller |
| Soft Start | Yes |
| Minimum Level Pre Set? | Yes |
| Continuous Operation Noise | < 110 dBA |
| Power Consumption | < 2 Watts |
| Supply Voltage | 230 V |
| Frequency Range | 50 HZ |
| Max Operating Temp | 50° C |
| Humidity Range | 95% Non Condensing |
| Max Ambient Temp | 35° C |
| Min Ambient Temp | -5° C |
| Max Fittings | 30 |
| Max Current | 10A |
| Termination | Pre Terminated 8 core 0.75 flex |
| Protection | IP40 |
| Country Of Origin | U.K. |

FEATURES

- Flicker Free & Silent
- Up to 32 Rotary Controllers*
- No Commissioning
- No Rewiring Required
- Easy To Install
- Made In The U.K.
- Technical Helpline
- Fit & Forget.
- Will fit through min Hole 62 mm ø
- * Zano rotary controller available separately

PART CODES

| PRODUCT | CODE |
|---------------------|-----------|
| Remote dimming pack | ZBAR1-10V |

0



INSTALLATION MUST BE CARRIED OUT BY A QUALIFIED ELECTRICIAN

 This product must be installed in accordance with the relevant wiring regulations.

- Switch off mains supply
- Decide on a suitable location for the dimmer pack with adequate ventilation and ensure the dimmer is mounted away from insulation
- Commence connections as per appropriate wiring diagrams

ZBAR1-10V REMOTE LED DIMMING PACK



and in accordance with the relevant wiring regulations

Rotary Controller Operation

Push on and off, turn control knob clockwise to increase light load, anti-clockwise to decrease light load. Note : When dimming your lights with multiple rotary controllers the light levels are adjusted from the last setting selected at that switch point.

Setting the minimum level

- Turn light on and turn control knob fully clockwise for full brightness.
- Press to turn off.
- Turn control knob fully anti clockwise and press to turn on, the lights will then flash and the dimmer is in programming mode.
- Rotate the control knob to adjust the light level.
- Once you have achieved the desired minimum level, leave the control knob for 5 seconds and the lights will then flash, the dimmer has then stored the minimum level.