

## **User Manual**

READ THIS MANUAL CAREFULLY BEFORE USE – FAILURE TO DO SO MAY RESULT IN INJURY, PROPERTY DAMAGE AND MAY VOID WARRANTY.
KEEP THIS MANUAL FOR FUTURE REFERENCE.
PRODUCTS COVERED BY THIS MANUAL MAY VARY IN APPEARANCE, ASSEMBLY, INCLUSIONS, SPECIFICATIONS, DESCRIPTION AND PACKAGING.



## **CONTENTS**

Safety & Warning	2
Introduction	4
Handlebar Installation	6
Front Wheel Installation	7
Headlight and Front Fender Installation	<u>9</u>
Pedals Installation	11
Seat Height Adjustment	11
● BatteryCharging	12
Serial Number Record	. 15
Function Summary	. 17
USB connection indicator	
Display Interface	
Switching the Lighting On/Off	19
Assist Level Options	
Battery SOC Indicator	
Motor Power Indicator	21
USB Connection Indication	. 21
Error Code Indication	. 22
Riding Instructions	23
Using Gears	24
Using Brakes	
Guidelines for Using Brakes	. 25
Froubleshooting	
12 Month Limited Warranty	33
Warranty and Repair Claim	34



## **Safety & Warning**

- Riding can be a hazardous activity. Certain conditions may cause the equipment to fail without fault of the manufacturer. The product can and is intended to move, and it is therefore possible to lose control, fall-off and/or get into dangerous situations that no amount of care, instruction or expertise can eliminate. If such things occur, you can be seriously injured or die, even when using safety equipment and other precautions. RIDE AT YOUR OWN RISK AND USE COMMON-SENSE. FAILURE TO USE COMMON-SENSE AND HEED ALL SAFETY WARNINGS AND RECOMMENDATIONS INCREASES RISK OF INJURY. USE THE PRODUCT ONLY WITH APPROPRIATE CAUTION AND SERIOUS ATTENTION TO SAFE OPERATION.
- Before riding on the road, take time riding in an enclosed area to familiarise yourself with the controls and behaviour of an electrically assisted bicycle. Try all settings so you are familiar with the results.
- Before every ride, check bicycle condition and ensure that no fasteners are loose, particularly axles, pedals, seat and handlebars. Ensure that the tyres are inflated to within specification (printed on the tire sidewall), and that the brakes are operating correctly.
- Maximum load capacity = 330lbs.
- Understand and obey any local laws or regulations which may affect locations where the product may be used. Ride defensively.
- This product is manufactured for performance and durability but is not impervious to damage. Stunts or other aggressive riding can over-stress and damage the product, and the rider assumes all risks associated with how the product is looked after.
- Keep fingers and other body parts away from moving components.
- Always wear suitable protective equipment, such as an approved safety helmet (with chin strap securely buckled). A helmet may be legally required by local law or
- regulation in your area. Wear suitable footwear for bicycle riding and clothing that helps make you visible to others.
- Please read this instruction manual carefully before you ride the electric bike for the first time.
- Please always check the brakes prior to riding to make sure they are working correctly. Adjust the brake sensitivity if needed. Only ride at a speed that the conditions
  permit, for example, slow down on snowy or rainy days.
- Always hold the handlebars with both hands, except when you need notify others you are turning.
- Use a light at night, or when visibility is not good. If you are not able to see clearly with a light, do not attempt to ride your bike.
- Make sure your body and other objects do not come into contact with the chain or the wheels whilst they are moving.
- Never touch the charging connector on the battery case with your hands when they are wet, or with keys or other metallic objects, in case they damage the battery
  pole and cause a short circuit.
- Wear bright clothing to help make you visible to others when you are riding at night.



- Don't lend the electric bicycle to anyone who doesn't know how to operate it, or who haven't read the manual.
- Like other cycles, it can only carry one person, carrying a passenger is not permitted.
- To brake, the rider must action both brake levers to the correct degree.
- Never ride the electric bike under the influence of drugs or alcohol.
- Do not ride under bad conditions, such as on uneven, wet or loose surfaces.
- If possible, do not ride in adverse weather conditions, low visibility or if you are very tired.
- This electric bicycle can be used in the rain; however, it must not be submerged in water or puddles. The controller, motor and other electrical devices may be short-circuited, causing damage and creating possible dangerous situations.
- Never spray your bike directly and don't get the electrical components wet (the battery connector, motor, controller, cables, handlebar controls, etc)
- Don't let children under the age of 18 ride the bike.
- ONLY use the charger which was provided (never use a charger from a different model).
- The charger is designed for indoor use only. Keep the charger away from water to avoid short circuit. Don't even use it in a dampening, combustible or explosive environment. Do not remove the plug by pulling the cord, always grip the charging port by its metal body.
- Never modify the electrical system. Alterations could cause a fire resulting in serious injury and could also damage the electrical system.
- Ensure the voltage and frequency of the charger is compatible with mains electrical supply.
- Use the battery charger in dry locations only.
- Regularly check the charger for damage to the electrical cord, plug, enclosure and other parts. If any damage or malfunction occurs, do NOT use the charger until repaired or replaced.
- Do not operate the charger or charge batteries near flammable materials.
- Do not clean or perform any maintenance on the product when it is being charged.
- Learn how to use the display.
- PLEASE KEEP THE BIKE CARTONS AT LEAST 14 DAYS, TO AVOID THE RESTOCK FEE IF YOU WANT TO RETURN THE BIKE.



### Introduction

Congratulations on purchasing a MEIGI electric bicycle. We hope you enjoy years of satisfactory and safe riding.

### Read the manual

This manual is provided to help you to get the best performance, comfort, enjoyment and safety from your bicycle. The manual describes specific care and maintenance procedures that help protect your warranty and ensure trouble-free use. Please pay particular attention to the section on battery charging and maintenance.

## Read the manual before assembling and riding your bicycle.

Note that the manual is not intended to be an extensive reference source for servicing, maintenance and/or repairs. For additional assistance, contact an authorised MEIGI service centre.

In the interests of your safety and the safety of others, it is highly recommended to have your bicycle assembled and serviced / adjusted by a skilled bicycle mechanic.

### Installation Video Guide is available at

https://www.youtube.com/channel/UCBQ-\_5jeBB65oRkqot0Ur3g



## **Operation**

Before riding, ensure that all required fasteners are tightened to the correct torque and charge the battery prior to use.

Always wear a helmet and appropriate safety equipment and always keep both hands on the handlebars and both feet on the pedals whilst riding. Read, understand and follow all safety recommendations before riding. Avoid riding in damp conditions, rain etc as this may affect operation or possibly damage the bicycle electronics.



No.	Name	No.	Name
1	Handle Stem	10	Pedal
2	Handle	11	Chain Wheel
3	Suspension switch	12	Chain
4	Front Light	13	Derailleur
5	Front Fender	14	Hub Motor
6	Front Suspension Fork	15	Rear Rack
7	Tire	16	Tail Light
8	Front Wheel Quick Release Clamp	17	Saddle
9	Disc Brake Caliper	19	Battery
			7-11-11-12



## **Assembly Instructions**

### Handlebar Installation

Step 1: Loose the cap of head set, put on the handle stem, and then lock the stem with the cap.



Step 2: Adjust the handle to your preferred angle and the best position before you tighten the bolts properly.

AND YOU MAY NEED TO DO A FINAL CHECK, TO MAKE SURE YOU HAVE TIGHTEN ALL SCREWS PROPERLY ON THE STEM.



## **●** Front Wheel Installation

Step 1: Remove the wheel axle cover and front fork protection plate.



Step 2: Put the fork on the front wheel hub, and the disc should be inserted in the brake caliper.

 




Step 3: Prepare the quick-release wheel axle, remove the nut and cone spring.



Step 4: Insert the axle thorough the wheel hub, the removed nut and cone spring will be used on the brake caliper side.



Step 5: Tighten the nut until the axle clamp cannot be locked. And then release the nut circle by circle until the clamp can be locked.





## Headlight and Front Fender Installation

Step 1: Put the head light in front of the fork shoulder, and put the fender clamp behind of the shoulder. Lock them with a bolt, washer and nut.



Step 2: Connect the front fender support to the front fork, and tighten the screws.





## ■ Rear Fender&Rear Rack Installation





### Pedals Installation

Step 1: Check the side mark on the pedal set. "L" = Left, "R" = Right.

Step 2: Carefully thread in the pedal by hand and then tighten it by wrench.

Note: Left side pedal is counterclockwise rotation, Right side pedal is clockwise rotation.



## Seat Height Adjustment

Step 1: Open the seat quick-release clamp

Step 2: Insert the seat tube, and adjust the height you need. Then lock the clamp by hand.


Note: There's min insert line on the seat post, it must keep in the frame tube.





## Battery Charging

Charge the battery on the bike

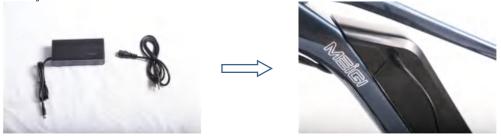

## Charge the battery off the bike





## Check the battery status

Light Status	<b>Charging Status</b>
Red (on charger)	Charging
Green (on charger)	Fully charged
Yellow (on battery)	40%-60% power
Red (on battery)	<40% power

Before charging, you must turn the power switch to "OFF" and pull out the key. Keep the charger in a dry and ventilated condition when it's working.

- Firstly, connect the output plug of the charger with the socket of the battery case properly, and then insert the input plug into the electrical outlet. The chargers indicator light will turn on, which means it's charging.
- When the light turns from Red to Green, it means the battery has been fully charged. Usually, it will take about 4-6 hours to recharge the battery depending on the
  batteries state of charge. However, it's a good idea to let it charge for an additional 2 hours after the light has turned green if it's convenient for you, as it will extend
  the service life of the battery.
- Do not charge the battery for more than 10 hours to avoid overcharging and damaging the battery. After the light turns GREEN, the charger is in the state of trickle
  electric current and will fill slowly to attempt to maintain the state of charge. If you are going to be out for a long time, you should disconnect the charger, especially
  in hot weather.
- The charger will become warm during charging, so keep the charger away from any heat sources. Please always keep the charger dry and clean. The electronics
  inside contain high voltages, so never disassemble the charger by yourself.
- After charging, please pull the input plug out of the electrical outlet first, and then pull out the output connecting a plug from the battery case. Do not let the charger charge the battery or be left connected for a long time, as it may damage the charger and cause a fire.
- . While charging, please keep it the charger and battery out of the reach of children. Do not put anything on top of the charger when use, and prevent any liquid, metal
- or metal fillings from coming into contact with the charger.
- . You can also remove the battery from the bicycle and then charge it. You should lift the saddle with the lever that is underneath it, which will enable you remove



- the battery. Before you do this, you will have to unlock the battery with the ignition key. When you finish charging, replace the battery. To replace the battery, insert the battery along with the slide bracket and then lock the battery with the ignition key.
- Do not touch the two poles in the battery case with your hands when the battery is removed for charging. The charging connector poles cannot be touched with any
  metal or any other material that conducts electricity, otherwise, it may cause a short circuit.
- If you don't ride your bike for a long time, the battery should be charged at least one time per month. This will ensure the battery life. DO NOT use in the state of low
  battery capacity. Do not leave your battery in a fully discharged state for long periods of time. The battery will continue to self-discharge, resulting in damage.
- · Avoid any contact with water when charging your battery. If a plug or socket gets wet, dry it completely before using.
- · When charging, if there is a peculiar smell or the temperature is extremely high, please stop charging immediately and contact us.



### Serial Number Record

After you finished assembly, you will need to record the frame, motor and battery serial number. That's a important information for the warranty service.







FRAME NUMBER:	
MOTOR NUMBER:	
BATTERY NUMBER:	



## **Presentation of Display**





## **Specifications**

Rated voltage: 48V

Rated working current: 10mA

Maximum working current: 30mA Off-state leakage current: <1uA

Operating temperature:  $-20^{\circ}\text{C} \sim 60^{\circ}\text{C}$ Storage temperature:  $-30^{\circ}\text{C} \sim 70^{\circ}\text{C}$ 



## **Function Summary**

- Battery SOC percentage indication
- Motor Power indication
- Assist-level indication
- Speed indication (incl. running speed, Max. speed and Ave. speed)
- Odometer and trip distance
- The push-assistance function
- Trip time indication
- Backlight On/Off
- Error code indication
- USB connection indicator
- Various Parameters Settings (e.g., wheel size, speed limit, voltage set, assistance level, controller limited current, password enable/change/disable, etc.)

# **General Operation**

### Switching the E-bike System On/Off

To switch on/off the E-bike system, press the power button for 2s

When the E-bike is parked for approx. 10 minutes, the E-bike system switches off automatically.

## **Display Interface**

After switching on the E-bike system, the display will show Speed and Trip Distance as default. Press "i" button on the remote to switch between the indication functions below: Trip Distance  $\rightarrow$ 0D0  $\rightarrow$ Max. Speed  $\rightarrow$ Avg. Speed  $\rightarrow$ Trip Time







### **Switching Walking Mode On/Off**

To activate the Walking Mode function, hold the "-"button. After 2s, The E-bike's drive is activated at a uniform speed of 6 Km/h while the screen displays " . The walking mode function is switched off as soon as you release the "-" button on the operating unit. The E-bike system stops the power output immediately.



Push-assistance Mode

Walking mode function may only be used when pushing the E-bike.

Be aware of danger of injury when the wheels of the E-bike do not have ground contact while using the push-assistance function.

### **Switching the Lighting On/Off**

To switch on the headlight, hold the + button. The backlight brightness is automatically reduced. Hold the + button again, the lighting can be switched off.





 
## **Assist Level Options**

Briefly press "+" or "-" button to switch between assistance levels so as to change the motor output power, The default assistance level ranges from level "0" to level "5", The output power is zero on Level "0". Level "1" is the minimum power. Level "5" is the maximum power. When you reach "5", press the "+" button again, the interface still shows "5", and blinks at "5" to indicate the power highest. After the power downshift reaches "0", press the "-" button again, the interface still shows "0" and blinks at "0" to indicate the power minimum. The default value is level "1".



## **Battery SOC Indicator**

The five battery bars represent the capacity of the battery. Each bar is equivalent to a capacity of approx. 20%. The five battery bars are bright when the battery is in full voltage. When the battery is in low voltage, battery frame will flash to give a notice that the battery needs to be recharged immediately.



**Battery SOC Indication Interface** 



### **Motor Power Indicator**

The power of the motor can be read via below interface



Motor Power Indication Interface

### **USB Connection Indication**

When the display is inserted into a USB external device, the display interface will show as below.



**USB Connection Indication Interface** 



### **Error Code Indication**

The components of the E-bike system are continuously and automatically monitored. When an error is detected, the respective error code is indicated in text indication area. Refer to the detail message of the error codes in attached list.



**Error Code Indication** 



Have the display repaired when error code appears. Otherwise, you will not be able toride the bike normally. Please always refer to an authorized dealer.

Error Code	Definition
21	Current Absormality
22	Throttie Abnormality
23	Motor Phase Abnormality
24	Motor Hall Signal Abnormality
25	Brake Abnormality
30	Communication Abnormality

### **Riding Instructions**

### Check before riding it for the first time:

The bicycle was assembled and checked before leaving the factory, nevertheless, before using for the first time, check the unit thoroughly.

- First, check to see whether the battery is fully charged and locked.
- Check the air pressure of the tires is normal
- Check and make sure the front and rear brakes are working properly
- Check the tightness of the front and rear wheels
- Check and make sure the handlebar and saddle are fastened tightly enough. Make sure the quick releases are locked and all lock nuts and screws are tightened.

#### Riding:

Turn on the power switch (turn the ignition key to" ON" position), the power display indicator will light on, indicating the unit is powered.

Just like riding a normal bicycle, seat yourself on the saddle. Put one foot on the pedal and do a final check to see that everything is okay and working well, especially the breaks. Start pedaling, and when you reach a certain speed, the motor will automatically be activated and start to move your bike. To stop the bicycle motor, just stop pedaling and twisting throttle and the motor will stop automatically. To bring the vehicle to a halt, use the brake.

The brake will trigger the motor to stop. If either of the brake levers are pulled, the power will be cut off automatically and the motor will not work.



#### Battery level gauge:

When the battery is getting low, you will see it on the LCD display, as the battery indicator empties. When this occurs, turn OFF the power switch and only use the pedals to ride, without the assistance of the motor. You will have to charge the battery when you get to an electrical outlet and will be able to use the electric motor again once the unit is fully charged.

#### Parking:

Shut the power "OFF" and pull out the key of the battery case while parking. The power switch should be turned "OFF" when pushing so that you don't start up the motor by accident. Use a chain lock to further secure your bicycle when necessary.

Note: Don't expose the e-bike to sunlight or rain for a long time, or some electrical components may behave abnormally.

Note: If you use the brakes frequently, turn the bicycle ignition on and off often, ride against the wind, ride uphills or are pedaling with a higher load on the bike, the battery

will not last as long and you will not be able to travel as far using the battery.

#### **Using Gears**

Some models are equipped with gears. Gears are used to change the ratio between rotations of the rear wheel and the crank set. This enables you to pedal less and travel faster on flat or downhill sections, or pedal faster and travel slower to climb hills. Gearing is independent to pedal assistance, so pedal assistance operates the same regardless of selected gear. Remember, however, that pedal assistance is "governed" by overall speed.

The freewheel (A) are located on the rear axle

known as a "gear cluster" or "cassette". The larger the gear, the smaller number of rotations per rotation of the crank. The largest gear is the "lowest" and is referred to as "1". As each gear becomes smaller, it is a "higher" gear then the previous and is numbered sequentially. The number of gears may vary between different models. Beneath the gear cluster is the derailleur mechanism (**B**), which moves the chain so it runs on different gears. The derailleur is operated by the rider using controls mounted on the handlebars. The gear change is "indexed" so each gear selection positively engages. There may be slight variations between bicycle models in method to change gear "up" (from a lower gear to a higher gear), or to change gear "down" (from a higher gear to a lower gear). The image shows a "7-speed" type that uses a button (**C**) for changing up gears (push button to activate derailleur), and a lever (**D**) for changing down gears (rotate lever forward to activate derailleur)





#### **Using Brakes**

All bicycle models are equipped with a front and rear wheel braking system. Brakes are used to slow the bicycle down. The braking systems may use different brake calipers, however, the functionality is the same, and that is to change the energy of the moving bicycle into heat energy ("friction"):

• For disc brakes, this means pads made from a special friction material pinching against a disc mounted to the centre of the bicycle wheel,



The brakes are operated by the rider through levers mounted to the handlebars. The left-hand lever operates the front brake, the right- hand lever operates the rear brake. The ability of the rider to adequately slow and/or stop the bicycle depends largely on the skill of the rider, the surface being ridden on and other factors such as rain, tyres, adjustment and condition of the brake parts etc

#### **Guidelines for Using Brakes**

To get the best performance and service life from the brake system, understand and apply the following techniques:

- In wet conditions, which reduces friction, always provide additional distance for braking and adjust how quickly you apply the brakes.
- When applying the brakes, particularly the front brake, use a lower pressure to start with until you feel the brakes starting to "bite", then increase pressure as required. Do NOT over-apply the brakes and cause the wheel to stop rotating this may result in loss of control.
- Maintain the brake friction components (pads, shoes, rubbers) in good condition and replace when they reach the wear limit.
- Maintain brake adjustment so that the brakes perform effectively, the levers are comfortably positioned, and there is not excessive play in adjustable components.
- If the brakes are not performing effectively, making abnormal noise or any part is not serviceable or cannot be adjusted correctly, have the brakes inspected and adjusted by a bicycle mechanic or suitably qualified person.
- If the brake cables become frayed or otherwise damaged, have them replaced by a bicycle mechanic or suitable qualified person.



### **Battery Storage**

When storing the batteries for a long period of time:

Charge the batteries at least every 30 days to avoid capacity loss. Batteries slowly self-discharge when unused over a long period. If the battery cells are left at a critically low charge state, the lifespan and capacity will be permanently reduced.

Always disconnect the charger from the mains electrical supply and battery before storing the battery.

Avoid storing batteries in extreme temperatures, whether hot or cold. The recommended battery storage temperature is between 0 and 25°C (32 to 77°F). Avoid exposing batteries to temperatures at or above  $40^{\circ}$ C ( $104^{\circ}$ F) for extended periods.

Batteries are best kept in a cool, dry place. Do not allow batteries to accumulate condensation, as this may cause shorting or corrosion.

#### **Tire Pressures**

The tires must always be inflated to the correct pressure (as specified on the tire sidewall) before every ride. Riding the bicycle with either too low or too high pressures will affect bicycle performance, may affect effective electrical assistance range, and may render the bicycle as dangerous. Use an accurate pressure gauge when checking pressures.

### **Maintenance**

### ATTENTION:

Before carrying out any sort of maintenance, turn off the power switch and remove the ignition key.

Do some test riding and check the unit is riding normally and safely. Always keep your bike clean. For the battery poles, when dirty, clean them top prevent reduced efficiency or burnt poles. Your E-Bike should undergo an annual check-up. This will keep it in good working condition.

### Adjust chain tension:

The chain may loosen after using the bike for a certain period of time, so please adjust the chain when necessary:

Loosen the bolts on the rear shaft, if the chain is loose, please adjust the Chain Bolts on both sides in clockwise until correct. If the chain is too tight, adjust the bolts using counter-clockwise rotation. Keep the crank gear and wheel gear aligned. If you are not experienced or confident, contact a bike specialist.



### Adjusting the brakes:

Correct brake adjustment will make the controls easier and offer greater safety.

The brakes are adjusted in a similar fashion to any standard bicycle. It is important for the brakes to work correctly and that the electric cut-off devices to be in working order (Electric cable to the brake levers).

Once the brakes have been adjusted, make the wheels turn to ensure there is no binding and check that when either of the brake levers is pulled, the motor stops working.

#### Lubrication:

For a long service life, the following parts of your E-Bike should be regularly lubricated every half year:

- Front axle
- Chain
- Rear axle
- Freewheel
- Front fork and other rotation parts.

For electrical parts, you do not need to lubricate them because they are lubricated in the factory. If you find anything wrong, please go to a bicycle specialist or contact Fortis.

### Cleaning:

The bike should be cleaned with a damp sponge, taking special care not to get electrical parts wet (Battery connection, motor (rear axle), electric cables, handlebar controls, etc.). Dry with a cloth. When cleaning your electric bike, do not use a steady direct stream of water from a hose. Use a cloth to avoid short-circuiting any electrical components. Your electric bike has a durable finish and does not need to be waxed. Clean with a mild detergent and buff to restore its original shine if needed.

For safety, longest possible service life and reliability, maintain the bicycle properly. Use the maintenance schedule below for guidance. It is very important that you check certain systems and components before each and every ride. The proper condition and function of these systems is critical to your safety.



Maintenance Schedule				
Component / Condition	Check Before Every Ride	*Check Periodically	Clean / Lubricate	Adjust / Tighten / Replace as Required
Tyre Pressure				
Tyre Wear / Damage				
Brake Adjustment				
Handlebar Tightness				
Controls and Display				
Seat Post Tightness				
Fasteners / Mounting Hardware				
Brake Pads				
Brake Cable Wear		1		
Chain		- 1		
Reflectors				
Battery / Charger				
Steering Head Bearings				
Derailleur	-	- 1		
Wheel Spoke Tension				
Wheel Trueness				
Wheel Bearings				
Bottom Bracket (Crank) Bearings			•	

<sup>\*</sup>Every 5 to 10 rides depending on ride length and conditions.



# **Troubleshooting**

Malfunction	Possible Cause	Possible Solution
Pedal assistance not working	Under-charged battery.     Battery no longer serviceable.     Battery charger faulty.     Motor electrics or switches damaged / faulty.	Charge battery. Follow battery care procedures.     Have battery checked. Replace if faulty.     Have charger checked. Replace if faulty.     Seek diagnosis and repair from authorised service centre.
Reduced range and/or speed	Under-charged battery.     Battery no longer serviceable.     Low tyre pressure.     Brakes dragging.     Terrain, headwind, etc.	Charge battery, Follow battery care procedures.     Have battery checked. Replace if faulty.     Inflate to recommended pressure.     Adjust.     Normal.
Gear change (where applicable) rough / not changing	Derailleur cables sticking / stretched / damaged.     Derailleurs / shifter not correctly set.	Lubricate / adjust / replace cables.     Adjust.
Chain slip / jumping off sprockets	Worn sprockets.     Stretched chain.     Front sprocket loose / out of true.     Sprocket teeth bent / broken.     Derailleur / shifter not correctly adjusted.	<ol> <li>Replace.</li> <li>Replace.</li> <li>Re-true / tighten.</li> <li>Replace.</li> <li>Adjust.</li> </ol>
Clicking noises when pedaling	Stiff chain link.     Loose pedals / bearings.     Loose bottom bracket / bearings.     Bent bottom bracket or pedal bolt.     Loose pedal arm bolts.	Lubricate chain.     Tighten / adjust bearings.     Tighten / adjust bearings.     Replace.     Tighten.
Grinding noise when pedaling	Pedal bearings too tight.     Bottom bracket bearings too tight.     Rear wheel not straight.     Chain too tight.     Derailleur dirty.	1. Adjust. 2. Adjust. 3. Align so chain straight. 4. Adjust. 5. Clean and lubricate.



Brakes not effective	1. Pads worn.	1. Replace.
	2. Pads / discs dirty.	Clean and degrease.
	3. Brake cables binding / stretched / damaged.	3. Lubricate / adjust / replace cables.
	4. Brakes levers binding.	4. Clean pivots.
	5. Brakes require adjustment.	5. Adjust.
Brakes squeal	1. Pads / discs dirty.	Clean and degrease.
	Brakes not centred.	2. Centre brakes and adjust.
	3. Caliper fasteners loose.	3. Tighten.
trakes chatter / vibrate	Brake mounting bolts loose.	1. Tighten.
	2. Brakes out of adjustment.	2. Centre brakes and adjust.
	Steering head bearings loose.	3. Adjust bearings.
Wheel vibration / wobble	Axle bent or broken.	1. Replace.
	2. Wheel out of true.	2. True wheel.
	<ol> <li>Wheel hub bearings loose / not serviceable.</li> </ol>	3. Adjust / replace.
	4. Quick-release (if equipped) mechanism loose.	4. Adjust.
teering not accurate	Wheels not aligned to frame,	Align wheels.
	2. Steering head loose / binding.	2. Adjust.
	3. Front forks or frame bent.	3. Straighten.
fotor "clicks" / has reduced power and/or shuts off	Under-charged battery.	Charge battery. Follow battery care procedures.
	2. Motor internal fault.	2. Replace.
a power when pedal assistance switched ON	1. Blown fuse.	1. Replace.
	<ol><li>Loose connectors / wiring damage.</li></ol>	2. Check connectors / wiring, Replace as required.
	3. Faulty switch.	3. Replace.
	4. Faulty controller.	4. Replace.
edal assistance OK, but no display	Loose connectors / wiring damage.	1. Check connectors / wiring, Replace as required.
	2 Faulty controller.	2. Replace.
isplay OK, but no pedal assistance	Loose motor connectors / wiring damage.	Check connectors / wiring. Replace as required.
	<ol><li>Poor contact at battery terminals.</li></ol>	2. Inspect and clean terminals.
	3. Faulty braking sensor,	3. Replace.
licycle runs at full speed without pedalling	Faulty crank sensor.	1. Replace.
The second secon	2 Faulty controller.	2. Replace.



Pedal assistance operating intermittently or not as expected	Loose connectors / wiring damage.     Faulty controller.	Check connectors / wiring, Replace as required.     Replace.
	3. Faulty crank sensor.	
Charger shows "full charge" in an unusually short amount	Faulty charger.	1. Replace.
of time	2. Faulty batteries.	2. Replace.
Charger indicator not illuminating when charger is plugged	Outlet has no power.	Check charger plugged in and electrical supply ON.
into outlet	2. Faulty charger.	2. Replace.
Charger indicator flashes red and never changes to green	1. Damaged wire from charger to battery.	1. Replace charger.
	2. Faulty batteries.	2. Replace.





Some experts believe that the incorrect or prolonged use of almost any product may cause serious injury or death. Yo help reduce your risk of serious injury or death, refee to the information below.

- Consult all discussion action partiaging and product labeling before the. New that some products feature decrementation as a label online. It is recommended to using and relate the decrementation.
- Before each use, check the product for loose/irmsen/damaged/masses out to won or leaks (if applicable). Here upon product with time/henken/stanaged/massing parts wear or leaks.
- Products must be inspected and activised for applicable) by a qualified technician every 6 member. This is hared on average insurential techniques of average streams arrough, and interpretary at average interopolition and that reyond these resonancements are unit sequenment from the resonancement of the contract.
- Besure that all users of the product have completed a ultrade industry recognized training covers before being allowed acress to the product.

- The product has been supplied by a general mursh under reliable from may set be familiar with pour specific application or description of application. Be set to attain that depart approval from equalified specialist for your application before use, reportless of any assurances from the retailor in its representatives.
- The product a not appendial for one where failure operation is popular. At with any product (for example, automobile, remains, master), there is the product of party, or the product away require the repeat or replacement of party, or the product may in the possibility could be any way interviewed. The automoted tray it may take to sectly would be any way interviewed. The ones, including or employed, or thousaidly afford the user, including or employed, for the middly afford the user, including or employed, for thousaidly afford the user, incomes, or employed, then the product to not unended for your requirements. This product is not unended for use where more requirements that product of any failed, including but not limited to, a condition requiring greatlest tentor, implactment, partitionly the more in arrive by a receival seem may reason financial bay, they of employed time for an income account or popularing compression.
- If this product has been purchased in error when considering the information presented here, contact the reladerial rectly for Autalism their returns unliky, if required.

If you have any questions regarding any issues with your electric bicycle, please contact our Customer Support team on www.dwmeigi.com

©2022 MEIGI. All rights reserved. No part of this document, including descriptive content, concepts, ideas, diagrams or images may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, scanning or recording, or any information storage and retrieval system, without express permission or consent from the publisher.



### 12 Month Limited Warranty

We warrant against possible manufacturing defects providing the following conditions are satisfied:

- · Product is completely and correctly assembled
- Product is used under normal condition for its intended purpose
- Product receives all necessary maintenance and adjustments
- · Product is used for general transportation or recreational use only

### What is covered by this Limited Warranty;

1 Year Frame only

1 Year Warranty on Motor only

1 Year Warranty on Battery only

### What is not covered by this Limited Warranty:

- When the bicycle is used negligently or results in damage due to traffic accident.
- Top Speed is not covered under warranty, if your electric bike does not reach estimated top speeds, this is not covered under warranty.
- If your electric bike does not reach the factory estimated distance advertised, and can vary depending on how you use the electric bike and the total weight carried, this is not covered under warranty.
- All batteries will and do lose capacity over time, capacity loss is not covered under warranty. (If the battery unit is used incorrectly or seal tampered with, this will void your battery warranty). Others that is not covered under warranty for battery are; If you have not charged your battery regularly, left your battery sitting unused for over more than 3 months, If you damaged your charger or battery by incorrect use.
- When your battery starts to lose capacity, and runs for less distance, this is not covered under warranty.
- Damage due to normal wear and tear and maintenance. Parts that are not covered under warranty under normal wear and tear include; tires, tubes, brakes, brake pads, derailleur and gear adjustments, tightening on all nuts, spokes, bottom bracket, chain and general adjustments (Please have your bike service regularly by a bicycle mechanic)
- · Rust and corrosion on bike is not covered under warranty.
- · Damage due to external causes will not be covered under warranty.
- Any minor scratches, marks or imperfections will not be covered.

### Warranty will be void if the product is ever:

- Used in any competitive sport
- Modified in any way, includes but not limited to: modifications to the bicycle, components, electrical components
- · Misused, abused or neglected
- · Rented, for commercial use, sold or given away



MEIGI will not be liable for incidental or consequential loss or damage due directly or indirectly from use of this product.

### Warranty and Repair Claim

To claim your warranty, please provide proof of purchase and contact us via email or phone listed below.

The cost of sending and returning of your MEIGI electric bike is at the customers expense.

Warranty repair timeframe may take up to 60 days depend on replacement part availability. If there is a delay due to the nature of the repair, or a delay beyond our control, we will inform you and do whatever possible to limit the turnaround time of your product.

### Other Repairs

All MEIGI electric bike repairs which is not covered by warranty can also be repaired at authorized service centre at the customers cost. We will carry most of the spare parts on our current and past models. Should you wish to purchase any parts, please contact us.

#### **Contact Information**

Website: www.dwmeigi.com

Address: 23122 Alcalde Drive, Laguna Hills, CA 92653

Email: support@dwmeigi.com

Our goods and services come with guarantees that cannot be excluded under the United States Consumer Law. For major failures with the service, you are entitled:

- · to cancel your service contract with us; and
- to a refund for the unused portion, or to compensation for its reduced value.

You are also entitled to choose a refund or replacement for major failures with goods. If a failure with the goods or a service does not amount to a major failure, you are entitled to have the failure rectified in a reasonable time. If this is not done you are entitled to a refund for the goods and to cancel the contract for the service and obtain a refund of any unused portion. You are also entitled to be compensated for any other reasonably foreseeable loss or damage from a failure in the goods or service.



wwww.dwmeigi.us