 


WPM
WELHOME PRO

Milk Steamer
MS-130T

Instruction Manual

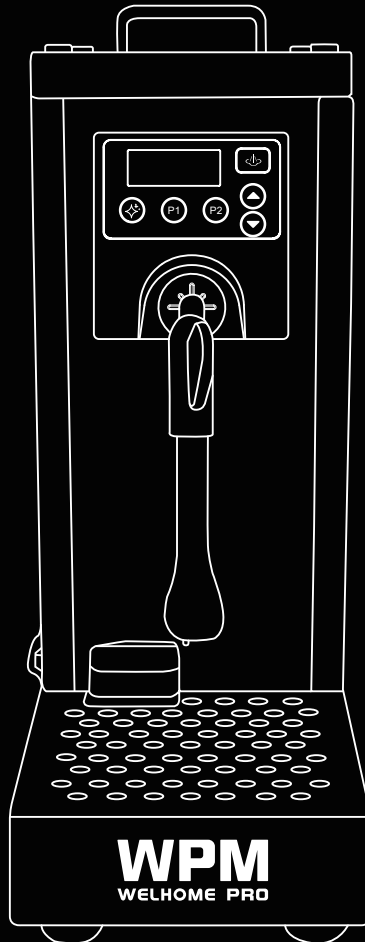

Content

Safety Precautions	2-4
Parts Names of MS-130T	5
Operation Guidelines of MS-130T	6-8
Cleaning and Maintenance	8-9
Recycle and Disposal	9-10
Product Specifications	10

Thank you for purchasing the WPM Welhome Professional Machine. Please read these instructions carefully to use the product correctly and safely.

Before using this product please give your special attention to "Safety Precautions" (Page 2-4).

Please keep this instruction manual for future use.

Safety Precautions

In order to prevent accidents or injuries to the user, other people, and damage to property, please follow the instructions below.

1. Ensure that unit is used on a firm and flat surface.
2. Never immerse the appliance in water or other liquids.
3. Room temperature must range between 10° and 32°C (50°F and 90°F).
4. Do not use the appliance under direct sunshine.
5. Do not operate with empty water tank. Do not fill with any substance other than room temperature water.
6. Do not touch the hot steam wand directly after operation.
7. Please turn off the appliance when not in use otherwise it may result in danger.
8. Please turn off the appliance and unplug the socket when unattended otherwise it may result in danger.
9. Do not hang over the power cord at the edge of table or bench top or contact with any hot surface.
10. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
11. Keep the appliance and its cord out of reach of children less than 8 years.
12. Children should be supervised to ensure that they do not play with the appliance.
13. Appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
14. With any indication of malfunction (including power cord), please stop using the appliance immediately to avoid hazard. Take it to the authorized service center for repair. Do not attempt to repair or change any parts by yourself.
15. Please turn off and unplug the appliance before cleaning or maintenance.

16. Clean the surface of the appliance with a dry cloth. Do not use corrosive detergent or solvent to clean. Do not swash the appliance with water.
17. Please turn off and unplug the appliance when not in use, make sure the power is off before pulling out the plug and do not pull the cord.
18. When the appliance is not in use for a prolonged period, please turn it off, unplug it, pack it well, and store it in dry cool place.
19. Forbid to put flammable and explosive objects around the appliance, and do not use the appliance in an environment full of flammable gas and powder. Keep away from any fire and heat sources.
20. Please put the power cord in the right place in order to avoid tripping the appliance over.
21. Do not let the power cord hang over the edge of table counters or touch hot surfaces.
22. Do not use your appliance with an extension cord unless the cord has been checked and tested by qualified technician or service person.
23. Do not operate the appliance without load to avoid damaging the heat elements.
24. Do not place hands under the steam nozzle directly, as it can lead to a scalding or injury.
25. Please use suitable power source (220-240V~/50Hz).
26. Never leave an appliance unattended while in use.
27. Do not place on top of any other appliances.
28. The appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
29. Never clean the steam wand with an abrasive pad as this will damage the steam wand.
30. Clean the steam wand immediately after use because dried milk may block the steam nozzle.


31. Never clean the steam wand with an abrasive pad as this will damage the steam wand.
32. Clean the steam wand immediately after use because dried milk may block the steam nozzle.
33. The heating element surface is subject to residual heat after use.
34. Do not touch the hot surface.
35. The surfaces are liable to get hot during use.
36. Do not install in rooms (kitchens) that are cleaned with jets of water.
37. Do not clean the machine with jets of water.
38. Operation and maintenance can only be done by trained personnel.
39. WARNING: Avoid spillage on the connector.
40. WARNING: Potential injury from misuse.



Failure to observe caution may result in personal injury!

Attention: Users can refer online manual on WPM website
(https://www.wpm.hk/en/news_detail.php?id=22)

Parts Names of MS-130T

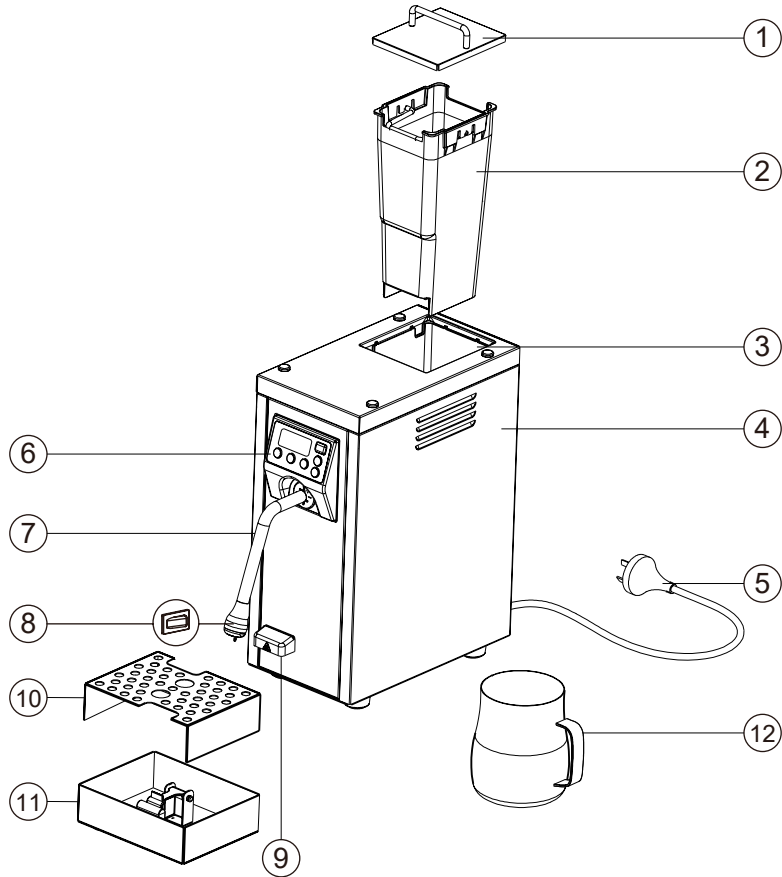


- | | |
|-------------------------|-------------------------------|
| 1. Tank Lid | 7. Anti-heat Steam Wand |
| 2. Removable Water Tank | 8. Main Power Switch |
| 3. Tank Entry | 9. Pressure Outlet |
| 4. Steamer Body | 10. Removable Drip Tray Cover |
| 5. Power Cord | 11. Removable Drip Tray |
| 6. Control Panel | 12. Stainless Steel Pitcher |

High-efficiency Heating System

This milk steamer contains a 4 bar / 0.4 MPa pressure pump for generating 1.5 bar / 0.15 MPa steam. With a high-efficient heater, it is capable of generating continuous and powerful steam.

Operation Guidelines of MS-130T

Control Panel

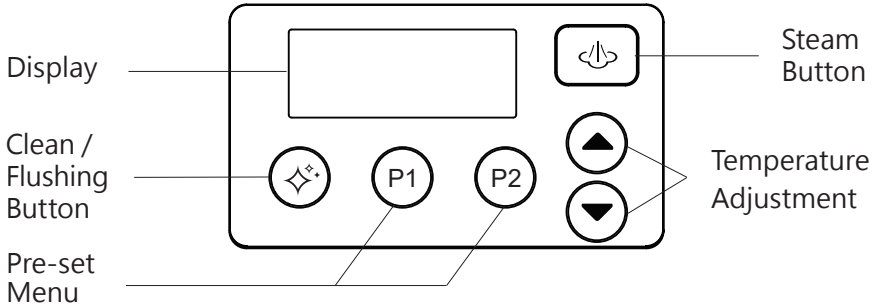

REMINDER

Press ▲ and ▼ simultaneously to switch from Fahrenheit(° F) to Celsius(° C) conversion.

1. Switch on the Main Power Button
(Left lower side of machine)



2. Preheating

Monitor shows “- - - -” for few minutes to represent preheating. When the machine is ready, previous target temperature is shown.


 

 


3. Temperature Setting

Setting Preset Menu

- a. Pressing and holding (P1) / (P2) button, the machine shows its preset temperature.
- b. Press ▲ or ▼ to adjust target temperature.


 
REMINDER
Temperature setting range: 40° C - 90° C (104° F - 194° F)

- c. Release  /  button, machine beeps three times to show that saving is successful.
- d. Press  /  button to set target temperature rapidly.


Setting Normal Target Temperature

Press  or  to adjust target temperature.


ATTENTION

Target temperature returns to previous setting after every use. However, it will be rewritten after pressing  /  button.

4. Start Milk Frothing

- a. Setting target temperature, press  to start frothing.
Liquid temperature will be shown in the display.
- b. During frothing, the display shows rising temperature. When the target temperature is reached, machine automatically stops dispensing steam.

REMINDER

User can stop steam dispensing with  button.

WARNING

Hot Water Caution!
Pressure outlet may release hot water after steam dispensing!

5. After frothing

Machine returns to ready mode and display shows previous target temperature.


CAUTION



Do not remove steam wand from liquid before completely shutting down.

ATTENTION

The maximum time of steam release is 4 minutes. If the liquid does not reach the target temperature after 4 minutes, it will stop to release steam automatically.

6. Clean after use

Press  to start flushing. Machine dispenses steam for 6 seconds to clean milk residual inside steam wand. Then wipe the steam wand clean with a damp cloth to clean milk residual on the surface of the steam wand.

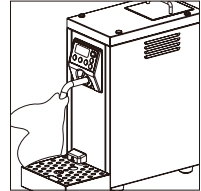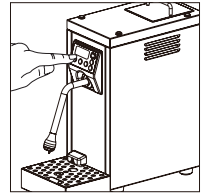


 **ATTENTION**

Prevent blockage of steam wand, users **MUST** flush the machine after each use.




 **WARNING**


The surfaces are liable to get hot during use.

Cleaning and Maintenance

Every single use	After 1 week usage
Press short clean  button and clean the steam wand with a damp cloth.	Descaling agent should be applied. Please follow the and instruction in below.



With unique dispensing pattern, the machine can be cleaned thoroughly. Cleaning agents are highly recommended to use. Please refer to the manual of cleaning agents for detailed operation.

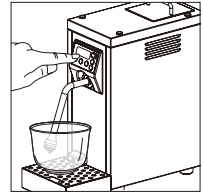1. Check and ensure water tank is filled.
2. Place a heat-resistant large container below steam nozzle.
3. Press  and hold for 3 seconds to start cleaning mode and display shows  .
4. Press  to start cleaning. Rhythmic hot water dispensation program start.



**Be careful
of burns!**

**Warning:
hot water
temperature
40° C - 60° C**

5. Program stops when water tank is empty and display shows  . User can refill water to keep cleaning or press  and hold for 3 seconds to leave cleaning mode.
6. The machine will restart automatically for next use.

REMINDER

Ensure all cleaning agent are consumed after cleaning.

Recycling and Disposal

Disposal of the Packaging

The packaging protects the unit against transport damage. The packing materials are selected according to the environmental compatibility and disposal related aspects and can therefore be recycled.

The return of packaging into the material cycle saves raw material cycle saves raw material and reduces the waste volume.



Disposal of the Unit

At the end of its service life, this product cannot be disposed of in normal domestic waste. The symbol on the product and in the operating instructions point out to this fact. The materials are recyclable according to your marking. With the reuse, recycling or other forms of recycling of old equipment, you make an important contribution to the protection of our environment. Please ask your municipal administration for the disposal point.



Product Specifications

Product name: Milk Steamer

Product model: MS-130T

Voltage and Power:

220V-240V~ 50-60Hz 1450W-1720W

Attention: Product Specifications, designs and dimensions are subject to change without prior notice.

Situations below are not accepted in the maintenance terms:

1. Formation of scale in thermoblock due to not using distilled water or inadequate and irregular cleaning.
2. Blocking in steam wand due to inadequate and irregular cleaning.

G.M.P. Industrial Co Ltd

Address: 7/F, Meyer Industrial Building,
2 Chong Yip Street, Kwun Tong,
Kowloon, Hong Kong

Tel. No.: +852 23438211

Fax: +852-23431647

E-mail: welhome@gewcorp.com

Website: www.wpm.hk

WPM
WELHOME PRO

Ver. Cod.:MS-130T-HK-IB-V002-202011301620