

Jura Impressa X7S

Operating & cleaning instructions



My Coffee Shop Pty Ltd
ACN 102 850 037

390 Johnston St
Abbotsford VIC 3067
ph: 03 9946 4160

97/1-5 Harwood St
Pyrmont NSW 2009
ph: 02 9034 6580

Cleaning Products – Jura Impressa X7S

Daily

See procedure – Daily milk system clean

Must be performed at the end of each day just before the machine is turned off

Purpose: To ensure the milk system is clean overnight so milk does not go off blocking the pathways



Use Cafetto daily milk cleaner 1 litre bottle (Prod no. 71144)
or Jura Milk System Cleaner Mini Tabs 180g (Prod no. 71150)

Weekly

See procedure – Weekly milk system clean

Performed once per week

Purpose: To remove any build up of milk fats to ensure the milk frother works correctly



Use Cafetto weekly milk cleaner – 1 litre bottle (Prod no. 71145)

When prompted

Clean machine – See procedure (Coffee system clean)

Performed only when prompted (Every 220 coffees)

Purpose: Removes coffee oil from the brewing unit and coffee path to maintain the quality of the coffee



Use Jura cleaning tablets - 6 pk (Prod no. 71111)
- 25 pk (Prod no. 71112)

See procedures – Changing the filter or Descaling the machine

Perform a filter change or descale only when prompted.

Purpose: Protects against lime scale build up inside the machine maintaining water & steam paths



Prod no.71133



9 pk – Prod no. 71121


36 pk – Prod no. 71122



My Coffee Shop Pty Ltd
ACN 102 850 037

390 Johnston St
Abbotsford Vic 3067
ph: 03 9946 4160


97/1-5 Harwood St
Pymont NSW 2009
ph: 02 9034 6580

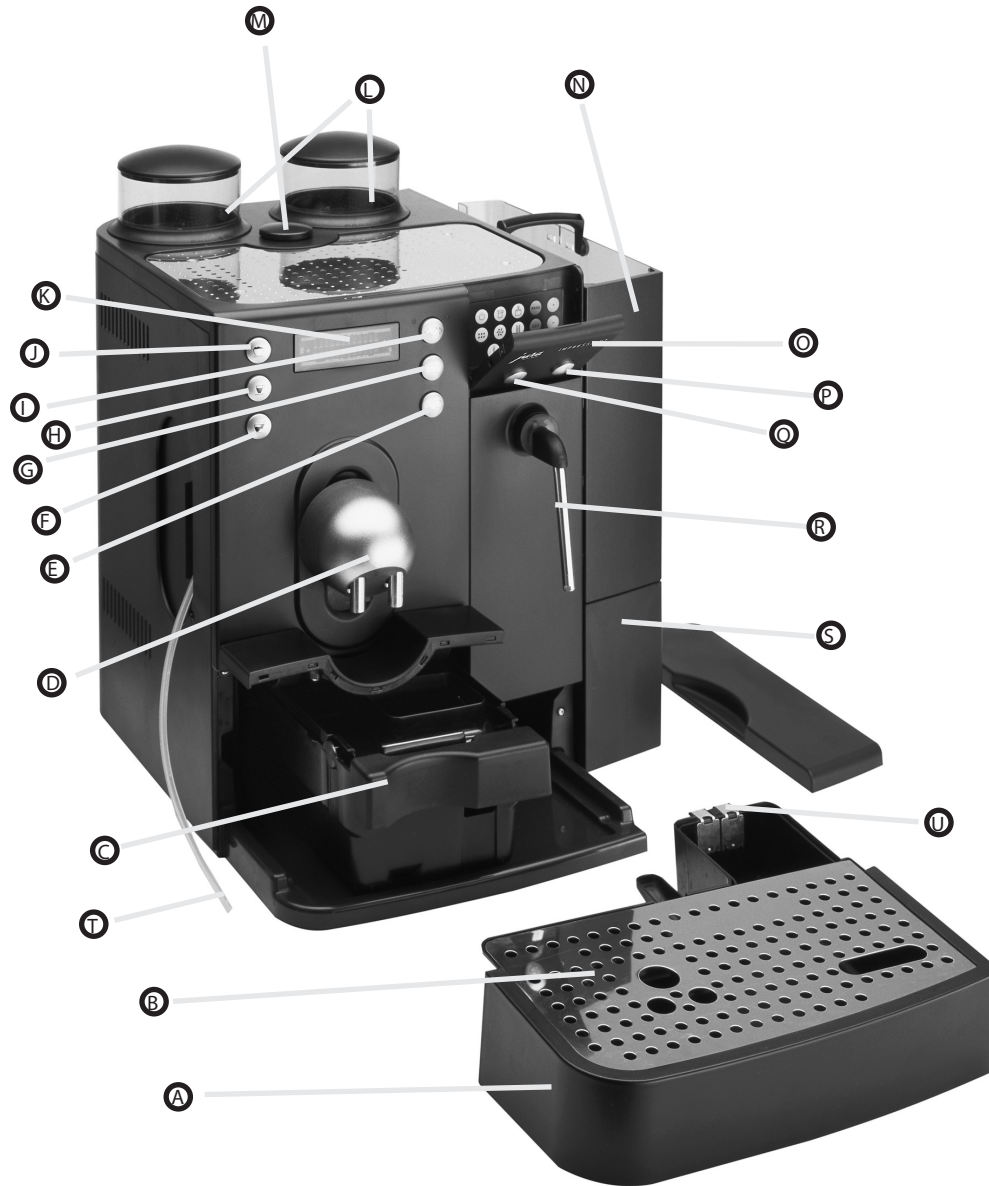

- A Drip tray
- B Drip tray cover (grid)
- C Ground container
- D Height-adjustable coffee and cappuccino spout
- E Draw-off button 2 coffees
- F Draw-off button 2 espressos
- G Draw-off button 1 coffee
- H Draw-off button 1 espresso
- I Selector key for grinder
- J Draw-off button cappuccino
- K Display dialogue system (screen)
- L Bean container / grinders
- M Funnel for cleaning tablets
- N Water tank
- O Programming panel behind door
- P Draw-off button steam
- Q Draw-off button hot water
- R Pivoting nozzle for hot water / steam
- S Accessory drawer
- T Tube for cappuccino
- U Contacts

Programming Buttons

- | | | | |
|----|---------------------------------|-----|--------------------------------|
| a. | Additional On / Off Button | g.. | Descaling Button |
| b. | Pot Draw off Button | h. | Steam Button |
| c. | Additional Milk Draw Off Button | i | Programme Enter Button |
| d. | Rinse Button | j. | Programme Parameter Forwards |
| e. | Hot water Button | k. | Exit Programme |
| f. | Cleaning Button | l. | .Programme Patameter Backwards |

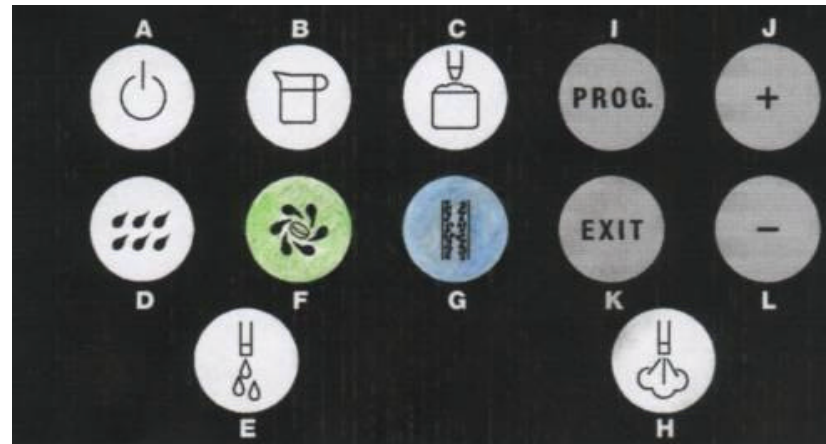

End of day cleaning



1. Remove the milk tube from the milk bottle. Place the milk bottle in your fridge overnight.
2. Wipe out the milk fridge with a damp cloth.
3. If the display shows **SELECT PRODUCT** follow
 - ABBREVIATED GUIDELINES: CLEANING – AUTO CAPPUCCINO.
4. If the display shows **CLEANING NECESSARY** follow
 - ABBREVIATED GUIDELINES: ENTIRE – CLEANING
5. Clean the drip tray and coffee grounds bin. Do not use a dishwasher.
6. Turn the coffee machine OFF at programming panel ON-OFF switch (A).
7. Place a sign on the machine 'Machine has been cleaned – Do not use'

Steam wand:

After frothing milk wipe the steam arm with a damp cloth. Run the steam for 2 seconds to ensure the steam arm is clean. At the end of the day check the steam arm is clean before turning off.



My Coffee Shop Pty Ltd
ACN 102 850 037

390 Johnston St
Abbotsford VIC 3067
ph: 03 9946 4160

97/1-5 Harwood St
Pymont NSW 2009
ph: 02 9034 6580



ABBREVIATED GUIDELINES - CLEANING - AUTO-CAPPUCCINO

(Should be done daily when Auto-Cappuccino is used)

IMPRESSA X7

You can start the cleaning process whenever the below signal appears.

SELECT PRODUCT



The programme lasts approx. 5 minutes.



Do not interrupt programme once started.

1

Open door (O) and press this key until you hear an acoustic signal to start the cleaning programme.



2

SELECT CLEANING - +

Press this key.



CAPPUCCINO CLEANING

3

Press this key.



 
4

Place any jug under the coffee spout (D).

5

CLEANER FOR CAPPUCCINO

Fill any jug with about 0,25 litres of tap water and add about 3 cupfuls of the Cappuccino cleaner. Immerse the cappuccino tube (T) into it.



Use JURA-cleaning tablets and -Cappuccino cleaner only, which are available at your local authorized dealer.

6

PRESS CLEANING

Place any jug under the coffee spout (D) and press this key (O).



7

CAPPUCCINO CLEANING

PLEASE WAIT

9

WATER FOR CAPPUCCINO



PRESS CLEANING

You hear an acoustic signal. Fill any jug with tap water and immerse the Cappuccino-tube (T) into it.

10

Press this key.



11

CAPPUCCINO CLEANING

PLEASE WAIT

12

SELECT PRODUCT

The cleaning programme is now complete.



ABBREVIATED GUIDELINES - ENTIRE-CLEANING

(Should be done when Auto-Cappuccino is used)

IMPRESSA X7

You know your machine needs cleaning when below signals appear.

CLEANING NECESSARY

SELECT PRODUCT

You can still draw off coffee or hot water and start the cleaning programme later.



The programme lasts approx. 20 minutes.



Do not interrupt the programme once

1

Open door (O) and press this key until you hear an acoustic signal to start the cleaning programme.



2

SELECT CLEANING - +

Press this key twice.



ENTIRE CLEANING

3

Press this key.



4

EMPTY DRAWER

Empty the drip tray (A) and the grounds container (C).

5

 
INSERT TABLET

Put a JURA cleaning tablet in the funnel (M).

6

CLEANER FOR CAPPUCCINO

Fill any jug with about 0,25 litres of tap water and add about 3 cupfuls of the Cappuccino cleaner. Immerse the cappuccino tube (T) into it.



Use JURA-cleaning tablets and -Cappuccino cleaner only, which are available at your local authorized dealer.

7

PRESS CLEANING

Place any jug under the coffee spout (D) and press this key.



8

ENTIRE CLEANING

PLEASE WAIT



Lasts approx. 13 minutes.


9

WATER FOR CAPPUCCINO



PRESS CLEANING

You hear an acoustic signal. Fill tap water in any jug and immerse the Cappuccino-tube (T) into it.

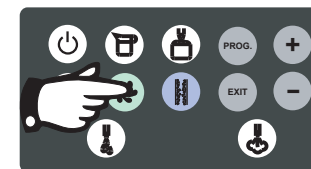

10

ENTIRE CLEANING

PLEASE WAIT



Lasts approx. 1 minute.

11

EMPTY DRAWER

Empty the drip tray (A) and the grounds container (C).

12

SELECT PRODUCT

The cleaning programme is now complete.

1

Open door (O) and press this key to switch on the machine.



2

RINSE UNIT

3

Press this key.



4

The rinsing is first done via the cappuccino nozzle (D), after which the coffee spout (D) is cleaned.

5

SELECT PRODUCT

The rinsing process is complete.

COFFEE DRAW OFF - KEYS



Cappuccino



1 Espresso



2 Espressos



Selector key for grinder



1 Coffee



2 Coffees



ABBREVIATED GUIDELINES - COFFEE SECTOR - CLEANING

(Should be done when Auto-Cappuccino is not used)

IMPRESSA X7

You know your machine needs cleaning when below signals appear.



You can still draw off coffee or steam/hotwater and start the cleaning programme later.

1

Open door (O) and press this key until you hear an acoustic signal to start the cleaning programme.



2



Press this key 3 times.



3



Press this key (O).



4



Empty the drip tray (A) and the groundscontainer (C).

5



Put a JURA cleaning tablet in the funnel (M).



Use JURA cleaning tablets only, which are available at your local authorized dealer.

6



Place a container under the coffee spout (D) and press this key (O).



7



Lasts approx. 12 minutes

8



Empty the drip tray (A) and the groundscontainer (C).

9



The cleaning programme is now complete.



The programme lasts approx. 15 minutes.



Do not interrupt programme once started.



ABBREVIATED GUIDELINES - DE-SCALING

(De-scaling only required if you do not use JURA Claris filter)

IMPRESSA X7

You know your machine needs de-scaling when below signals appear.

DECALCIFYING NECESSARY

SELECT PRODUCT

You can still draw off steam/hot water and start the cleaning programme later.



The programme lasts approx. 40 minutes.



Do not interrupt the programme once started.


1

Open door (O) and switch off machine to start the de-scaling programme.



2

Press this key.

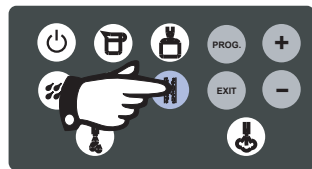

EMPTY DRIP TRAY

Empty the drip tray (A) and the grounds container (C).


3

INSERT AGENT IN TANK

PRESS DECALCIFYING

Place any jug under the coffee spout (D) and the pivoting nozzle (R).

4


Dissolve 3 tablets  completely in 0,7 litres of water in a vessel and pour the mixture into the empty water tank (N).



Use JURA-de-scaling tablets only, which are available at your local authorized dealer.

5

Press this key.

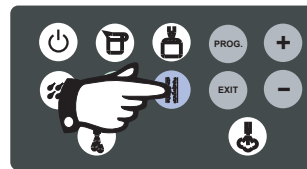

UNIT DECALCIFYING

PLEASE WAIT

6



Lasts approx. 31 minutes.

7



EMPTY DRIP TRAY

You hear an acoustic signal. Empty the drip tray (A) and the grounds container (C).

8

FILL WATER TANK


Rinse water tank (N) and refill it with tap water.

9

Place any jug under the coffee spout (D) and the pivoting nozzle (R).

10

PRESS DESCALING

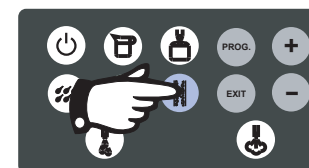

11

UNIT DECALCIFYING

PLEASE WAIT



Lasts approx. 4 minutes.

12

EMPTY DRIP TRAY

CLEAN CONTACTS



You hear an acoustic signal. Empty the drip tray (A) and the grounds container (C). Clean contacts at the back.

13

The machine switches off automatically. The de-scaling programme is now complete.

Trouble shooting:

- **No milk flow**
- **Milk spluttering**
- **Not filling cups**
- **Froth milk is flat / cool**

Solution:

1. Remove the dome coffee spout cover by pressing the release button up (At the base of the dome behind the coffee spouts) and pulling the dome cover off (pull towards you and down). (Fig 1 & 2)
2. Replace the air suction (Fig 3) and test the milk system using the milk button. If the problem has been resolved, order in a spare air suction (part no. 71866) otherwise go to step 3.
3. Remove the auto frother. Open the coffee spout cover (Fig 4), slide the auto frother forward (Fig 5), push the auto frother out of the housing (Fig 6 - 7) and disconnect the steam and milk tubes. (Fig 8)
4. Separate the auto frother into 6 parts. (Fig 9)
5. Soak the parts in 250ml of warm water and 15 ml of Cafetto red weekly cleaner (71145) for 30 min.
6. Remove the parts from the solution and rinse them under tap water.
7. Clean the milk, air and steam paths with the cleaning brush (part no. 71161). (Fig 10 – 14)
8. Re-assemble the auto frother and refit onto the machine.
9. Test the operation. If the problem has not been resolved descale the machine and test again. If the problem has still not been resolved call phone support on 1300 365 487.



Figure 1



Figure 2



Figure 3



Figure 4



Figure 5



Figure 6



Figure 7



Figure 8



Figure 9

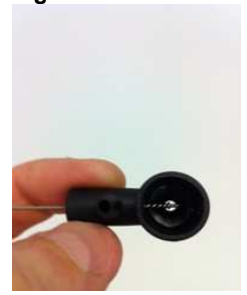


Figure 10 - Milk



Figure 11 - Air



Figure 12 - Milk



Figure 13 - Steam



Figure 14



My Coffee Shop Pty Ltd
ACN 102 850 037

390 Johnston St
Abbotsford Vic 3067
ph: 03 9946 4160

97/1-5 Harwood St
Pyrmont NSW 2009
ph: 02 9034 6580

Welcome to My Coffee Shop!

Our hours of operation are Monday – Friday 9am to 5pm. Visit us at your convenience at www.mycoffeeshop.com.au. Orders and service requests can be placed by:

Phone: 1300 365 487
E-mail: clientservices@mycoffeeshop.com.au
Online: www.mycoffeeshop.com.au
Remittances: accountsreceivable@mycoffeeshop.com.au
Service enquiries: servicecentre@mycoffeeshop.com.au

Next business day delivery via courier to:

Adelaide Canberra Melbourne Sydney

for product orders placed by 1.30pm

Please note you will be advised when ordering if delivery charges apply to your order.

Once again, welcome to My Coffee Shop and remember we are here to help. If you have any questions please don't hesitate to contact us.

We look forward to exceeding your expectations and making your day easier and more enjoyable.

Kind regards,

My Coffee Shop
Client Services
My Coffee Shop Pty Ltd



My Coffee Shop Pty Ltd
ACN 102 850 037

390 Johnston St
Abbotsford VIC 3067
Ph: 03 9946 4160

97 / 1-5 Harwood St
Pymont NSW 2009 Ph:
02 9034 6580