

FOR BMW

Read and set maintenance data
Read and set maintenance cycle for partial mileage
Date adjustment - Next maintenance
Mileage adjustment - Next maintenance
Next maintenance - Mileage adjustment
Read and set maintenance cycle for partial mileage
Read and set SERVICE (maintenance) data
Read and set maintenance intervals for partial mileage

FOR DUCATI

Maintenance light off
Maintenance indicator extinguished
Engine oil maintenance indicator reset
DESMO maintenance indicator reset
DESMO service light reset
Change next annual maintenance date
Annual maintenance warning light off
Annual service warning light disabled

FOR HARLEY

Air Purifier Intake Valve, TPS Reset

FOR HONDA

ECM Reset

FOR SUZUKI

ABS HU operating
ABS HU operating 2
Stand limitation lifted (PC throttle operation)
Stand limitation lifted (vehicle throttle operation)
ISC rpm control
ISC aperture learned value reset
TP fully closed learned value reset
Long term fuel trim reset
Reset Closed Accel Position
Reset gear position learned value
Reset IMU learning value
PPS learned value reset

FOR YAMAHA

Writing Frame number
CO volume adjustment

FOR KAWASAKI

Clock setting
Maintenance indicator display setting-Indicator function
Maintenance indicator display setting-Change setting value

FOR PIAGGIO

**(APRILIA,DERBI,GILERA,MASH,MOTOGUZZI,RBS,R
IEJU,VESPA)**

A-PRC disabling
ASR disabling
ASR enabling

Actuators total reset
Belt replacement
Change keys stored
Coding reset
Control unit EEPROM reset
Demand sen.beat reg
Demand sens.beat reset
Diagn.throt.self-learn
Disable ABS
Disable ABS+ATC
Disable ASR
Disable colour display
Driver saddle heater test
ECU reset
EEPROM reset
El.Car Synchronisation
Enable ABS
Enable ABS+ATC
Enable ASR
Enable display colour
Exhaust valve homing
Exhaust valve self-learn
Front wheel TPMS learning
Gearb. stroke def. rep
Handgrip self-learn
Inclination sensor test
Initialization
Key err.count reset
Odometer writing
Passenger saddle heater test
Phonic wheel reset
Potentiometer reset
Pre-positioning reset
Preload motor beats
Premium equipment vehicle configuration (Km)
Premium equipment vehicle configuration (Miles)
QuickShift disabling
QuickShift enabling
RADAR BLIS system disabling
RADAR BLIS system enabling
Rear wheel TPMS learning
Reset Trip A
Reset Trip B
Reset keys

Reset trip meter
Restore user code
Reverse pot. self-learn
Rot.sensor reset
Self-adapt.par.reset
Service reset
Synchronisation reset
TPMS Reset
TPMS system disabling
TPMS system enabling
TPS reset
TPS zero-setting
Throttle Self-Learn
Throttle self-learn
UK gallon config
US gallon config
User code entering
Veh.conf.w/susp.(km)
Veh.conf.w/susp.(mi)
Vehicle conf. AQS (Km)
Vehicle conf. AQS (Mi)
Vehicle conf. Km °C
Vehicle conf. Mi °F (UK)
Vehicle conf. basic (Km)
Vehicle conf. basic (Mi)
Vehicle config. (Km)
Vehicle config. (miles)
Vehicle configuration
Vehicle setup reset
Wheel tooth value reset
Windscreen test
Wings test
Zeroing km equiv

FOR KTM

Time setting
Date setting
Set distance remaining until next scheduled maintenance