

ELECTRONIC
TOILET SEAT

USER MANUAL

CBT-11030RW
CBT-IS1131REW
CBT-IS1131RRW

CUCKOO

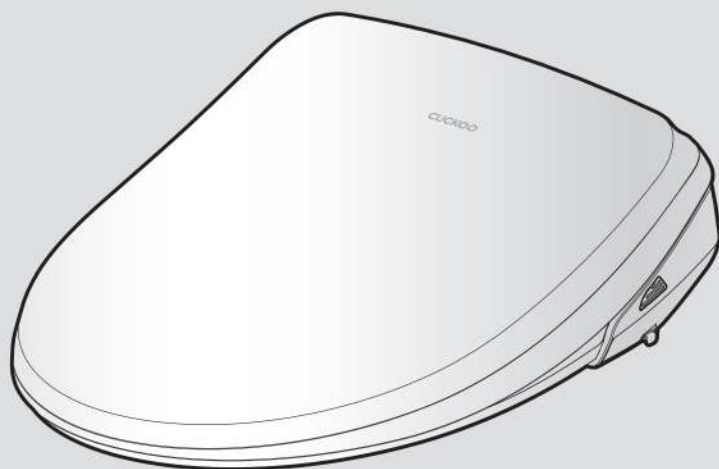

CUCKOO

Thank you for purchasing your CUCKOO Electronic Toilet Seat! This manual will detail operational instructions as well as any troubleshooting should any issues arise.



Product Benefits

- **Strong bidet**
It is a bidet made to be used for a long period without minor malfunctions.
- **Everyday waterproof (IPX5 grade) structure**
The product can be used safely and cleanly thanks to the IPX5-grade structure.
- **Convenience in cleaning**
Bidet installation and separation can be done using the one-touch method, which adds convenience to cleaning.
- **Bidet in consideration of children(CBT-I1030RW)**
It is a bidet that children can use safely thanks to a button exclusively usable by them.
- **Extended nozzle length**
The length of the nozzle is increased to broaden the range of nozzle position selection by body shape.
- **Bidet that saves electricity bills**
ECO function helps you save electricity bills.
- **Stainless nozzle**
It is sanitary as stainless is applied to the nozzle, which reduces the amount of pollutants stained on it.
- **Remote control**
A detachable remote control enables anyone to use the bidet easily and conveniently.
- **Deodorize function(CBT-IS1131REW, CBT-IS1131RRW)**
It eliminates unpleasant odors of a bathroom for comfortable use.

CONTENTS

BEFORE USING	●	Safety Warnings	4-15
		Parts & Accessories	16
WHEN USING	●	Before Installation	17
		How to Install	18-22
		After Installing	23
		Before Use	24
		Explanation of functions of Control Panel	25-26
		How to Use	27
		How to Use Each Functions	28-30
		How to Clean	31-32
		How to Disassemble the Product & Store	33
BEFORE ASKING FOR SERVICE	●	Troubleshooting	34
SERVICE GUIDE	●	Product Specifications	35

IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS BEFORE USING

DANGER : To reduce the risk of electric shock :

1. Do not place or store this appliance in a location where it can fall or be pulled into a tub or sink.
2. Do not place in, or drop into water or other liquids.
3. Do not touch a product that has fallen into water. Unplug immediately.

WARNING : To reduce the risk of burns, electric shock, fire or injury.

1. Close supervision is necessary when this appliance is used by or is near infants, elders, or handicapped persons.
Children should not be permitted to use or touch this appliance without adult supervision.
Be sure to adjust the toilet seat's temperature for elders, handicapped persons, or people with sensitive skin.
2. Use this appliance only for its intended purpose as described in this manual.
Do not use attachments not recommended by the manufacturer.
3. Do not operate this appliance if the cord is damaged or if the product is dropped into water.
4. Install the unit properly by following the installation procedure.
5. Only authorized persons can install or repair the unit. Do not attempt to service this appliance by yourself. Doing so could void the warranty.
6. Keep the cord away from heated surfaces.
7. Never drop or insert any objects into any opening or hose.
8. Do not use outdoors. Do not use aerosol or oxygen spray products on the unit.
9. Always follow the grounding instructions in this manual before plugging in the unit.

SAVE THESE INSTRUCTIONS

CAUTIONS BEFORE INSTALLATION

NOTE THE FOLLOWING IMPORTANT POINTS

1. Do not install in a location where water might be splashed on this appliance or in a location exposed to excessive moisture where condensation might form on the product's surface.
2. To avoid damage to electronic components due to high levels of humidity, provide adequate ventilation by opening a window and/or door when bathing.
3. Water supply should have a water pressure of 0.11MPa to 0.68MPa.
4. Connect the product to a pipe carrying potable water. Do not connect to an industrial water line or other water supplies that are not potable.
5. Cool the unit in the room before installation.
6. The thermal protector in the water tank may malfunction when transporting or storing warm water.
7. The rated power voltage is 120V AC, 60Hz.
8. Do not plug the unit in until installation is complete. It may result in malfunction.

CAUTIONS BEFORE INSTALLATION

WIRING REQUIREMENTS

1. Any other servicing should be performed by authorized service representatives.

2. GROUNDING INSTRUCTIONS

This product should be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This product is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

DANGER: Improper use of the grounding plug can result in a risk of electric shock.


If the cord or plug is necessary to repair or needs to be replaced, do not connect the grounding wire to a flat blade terminal. The grounding wire can be identified by its insulated outer surface. It will either be colored green or will not contain yellow stripes.

Check with a qualified electrician or serviceman if you do not understand grounding instructions or if you do not know whether the product is properly grounded.

3. This product is for use on a nominal 120V circuit. It has a grounding plug that looks like the plug illustrated in sketch A.

A temporary adapter, which looks like the adapter illustrated in sketches B and C, may be used to connect this plug to a 2-pole receptacle as shown in sketch B if a properly grounded outlet is not available. The temporary adapter should be used only until the properly grounded outlet (sketch A) can be installed by a qualified electrician. The green colored rigid ear lug and the like extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover.

Whenever the adapter is used, it must be held in place by the screw.

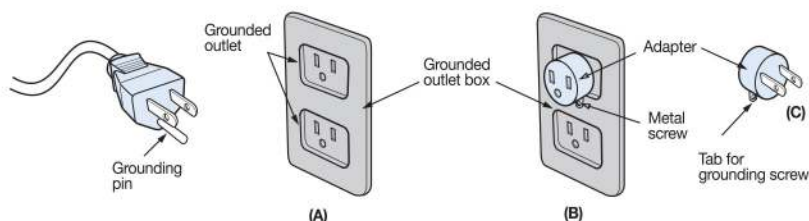

4. If it is necessary to use an extension cord, use only a three wire extension cord that has a three-blade grounding plug, and a three-slot receptacle that will accept the plug on the product. Replace or repair a damaged cord.

CAUTIONS FOR SAFE USE

- Please comply with the 'Warnings for Safe Use' to ensure safe and proper use of the product and prevent accidents and dangerous situations.
- The 'Warnings for Safe Use' section consists of 'Warning' and 'Caution' items, which are defined as follows:



Warning

Potentially dangerous situation that can cause serious injuries or death if not avoided.



Caution

Potentially dangerous situation that can cause minor injuries if not avoided.



 
- This symbol indicates a potentially dangerous situation under special circumstances that requires your attention.
- Please read the details carefully and follow the instructions to avoid dangerous situations.



- This symbol indicates to 'prohibit' a certain action.



- This symbol indicates to 'instruct' a certain action.



Warning



Prohibited

When cleaning the product, do not use or spray a cleaning agent (acidulant for a gas stove, toilet cleaning agent for sink, a variety of stain removers) or an air freshener for deodorizing onto the exterior of the Electronic Toilet Seat.



- If you use any of the above-mentioned cleaning agents or air freshener, the exterior of the product may be discolored or damaged, causing a problem in safety of electricity.

Please use the product only with a Power Outlet exclusively for 120V with at least a rating of 15A and when properly grounded. Do not plug multiple devices into the same Power Outlet simultaneously.



- If you use it with a lot of products, it may cause a fire or an electric shock.
- Please check the power outlet regularly.
- If it is not properly grounded, it may cause electric shock due to short circuit.
- If there is a foreign substance or moisture on the Power Plug, wipe it thoroughly before use.

This Product is not intended for use by people (including children) who lack physical or mental abilities, or lack experience and knowledge to be able to use the product safely without supervision or instruction.



- Do not let children play with the device.
- It may cause electric shock or injury.

Do not block the hot air hole or put foreign substances such as your hand or a metal stick into the product.

- It may cause burns or electric shock.
- It may cause a malfunction of the product.

When putting in or pulling out the Power Plug, first remove moisture on your hands and then put in or pull out the Power Plug by holding the Power Plug.



- If you do not do so, it may cause an electric shock.

Never supply power to the product which is not installed on a toilet and to which no water supply hose is connected.

- It may cause a fire or malfunction.

Do not bend, tie or pull the Power Cord by force.



- It may cause an electric shock or fire.

Use the waterworks for the water supply.

Do not connect an industrial water supply or a heavy water supply other than the waterworks to the product.

- It may cause a skin infection, skin disease, or bladder infection, and it may cause a malfunction.

Beware of low-temperature burns.

- If your skin comes in contact with the product for a long time even at a relatively low temperature, your skin may get low-temperature burns.
- Children, the elderly and the infirm, and those with disabilities in physical activities should use the product at low toilet seat temperatures, hot water temperatures, and dry temperatures.
- After using the product at a high temperature, please lower the temperature for those users who are the elderly and the infirm, children, and those with weak skin.



If you use the product for a long time on the toilet seat or the hot air dry mode, you may get a low-temperature burn.

Particularly pay attention to the temperature when children, those who cannot control the temperature on their own, or those with weak skin use the product.

CAUTIONS FOR SAFE USE

Warnings

Prohibited

 
Do not disassemble, repair, or remodel the product, and prevent foreign substances from entering into the product.

- It may cause a malfunction of the product.
- It may cause a fire, electric shock, or bodily injury.
- Please contact our Customer Service Center for repair of the product.



Stop using the product if the Power Cord or the Power Plug is damaged or is shaking, and contact our Customer Service Center.

- If the sheath of the Power Cord is peeled off or chopped during use due to negligence, it may cause fire or electric shock. Thus, please check the status of the Power Cord, Power Plug, and Power Outlet frequently.
- To prevent dangerous situations arising from the damage of the Power Cord or the Power Plug, please contact the manufacturer, distributor or certified technician (servicemen) for replacement.
- We strongly recommend that the damaged parts be repaired at a designated service center.




Do not put cigarettes or burning materials near the product or put such materials onto the product.

- It may cause a fire or malfunction of the product.



When disassembling the product from the toilet, always first pull out the Power Plug from the Power Outlet for safety.

- It may cause an electric shock or fire.

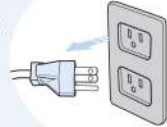

Do not sprinkle water onto the Main Frame of the product or the Power Plug or use the product in a humid place.

- It may cause a fire due to a short circuit.
- It may cause a malfunction, and you may not receive a service free of charge.



Do not put inflammables such as a stove for heating the bathroom heater, or cigarettes near the product.

- It may cause a fire, discoloration, or malfunction.



Do not randomly connect or process the Power Cord.

- It may cause an electric shock or fire.



Do not insert power plugs of several products in a single outlet at the same time.

- If you put power plugs of various products such as a ventilator in the bathroom or other electric products in a single power outlet, it may cause heat generation, ignition, or fire.



When taking a shower or cleaning the bathroom with water, always pull out the Power Plug, and prevent water or detergent or the like from being put on the Main Frame of the product or the Power Plug.

- It may cause an electric shock or fire.
- When water or other foreign substances are put into the product, pull out the Power Plug, close the water supply valve, and then contact our Customer Service Center.



Do not pull or bend the Connection Pipe Hose using excessive force.

- It may cause a water leak or suspension of water supply.



CAUTIONS FOR SAFE USE

⚠ Caution

If a strange noise, smell, or smoke comes out from the product during use, immediately pull out the Power Plug, and contact our Customer Service Center.

- If you continue to use the product with such malfunction, it may cause a fire or electric shock.



⊘ Prohibited

Do not use the product for any other usage described in the User Manual.

- It may cause a fire, electric shock, or bodily injury.

Install the product by avoiding the direct sunlight.

- It may cause a discoloration on the exterior of the product or a malfunction of the product.



When there is dust on the Power Plug, wipe it off with a dry cloth.



Do not forcibly close the toilet seat or the toilet seat cover.

- It may cause malfunction.



Do not press any button on the Control Panel after putting the toilet seat on the toilet by your hand or other things without sitting on the toilet seat.

- Water may come out from the nozzle, so your clothes may get wet. In addition, you may get a bodily injury or burns by hot water or hot air.



Do not step on the toilet seat or the toilet seat cover to go up or put anything on the toilet seat or the toilet seat cover. In particular, do not sit on the toilet seat cover.

- Do not put your hand on or step on the toilet seat cover, toilet seat, or the Main Frame to go up.
- It may cause damage or malfunction of the product.
- It may cause a bodily injury due to deformation or damage.



Prevent children from putting any foreign substances or their hand into the nozzle or the hot air outlet.

- It may cause burns.
- It may cause a fire or electric shock.
- It may cause a malfunction of the product.



Never soak the product in water.

- It may cause a malfunction, electric shock, or fire.



Children may fall into the toilet through the toilet seat, so adults should accompany children to use the product.

- If you do not do so, it may cause a bodily injury.



Do not excessively lean on the toilet seat cover.

- It may cause malfunction.
- It may cause a bodily injury due to deformation or damage.



If you are going to not use the product for a long time or to clean the product, first pull out the Power Plug.

- If you do not do so, it may cause a fire.



CAUTIONS FOR SAFE USE

⚠ Caution

🚫 Prohibited

After installing the product, always check if any water leaks from the Water Supply Connection Unit.

- It may cause a fire or electric shock due to water leak.



In a region with concern over freezing, please provide heating, and prevent the surrounding temperature from going down to below zero.

- If the product is frozen, the pipes such as the water supply pipe may be damaged, and water leakage may be caused.
- If there is concern over freezing, please take the water out from the product.



When cleaning the waterworks filter of the Main Frame of the Electronic Toilet Seat, first close the Water Supply Valve, and disassemble the Water Supply Hose for the Electronic Toilet Seat.

After cleaning, when you try to re-assemble the product, close it firmly to leave no gap.

- It may cause a water leak.



Prevent urine from being spilled on the hot air outlet and the nozzle parts.

- It may cause odor or malfunction of the product.
- When a nozzle is blocked by foreign substances such as urine, wipe it off with a soft toothbrush which you do not use.

Never connect the product to a hot water pipe.

- It may cause a malfunction of the product or a bodily injury. Always connect the product to the cold water pipe.



Do not use the product with any disorder.

In the following cases, pull out the Power Plug, and close the Water Supply Valve.

- Water leaks from the pipe or the Main Frame.
- There is a strange noise or odor.
- There is a crack or broken part on the Main Frame.
- There is smoke coming out from the Main Frame.

- If you continue to use the product with any disorder, it may cause a fire, electric shock, or water leak.
- Please contact our Customer Service Center for repair of the product.



IMPORTANTES MESURES DE PROTECTION

VEUILLEZ LIRE TOUTES LES INSTRUCTIONS AVANT UTILISATION

DANGER : Pour réduire tout risque de choc électronique :

1. Ne placez pas ou ne rangez pas cet appareil dans un endroit où il peut tomber ou être déposé dans une baignoire ou un évier.
2. Ne pas mettre ou jeter dans l'eau ou d'autres liquides.
3. Ne touchez pas un appareil tombé dans l'eau.
Débranchez-le immédiatement.

AVERTISSEMENT : Pour réduire tout risque de brûlure, de choc électronique, d'incendie ou de blessure.

1. Une surveillance accrue est nécessaire lorsque cet appareil est en utilisation ou près d'un enfant, d'une personne âgée ou handicapée.
Les enfants ne devraient pas être autorisés à utiliser ou à toucher cet appareil sans la surveillance d'un adulte.
Assurez-vous de régler la température du siège de toilette pour les personnes âgées, les personnes handicapées ou les personnes à la peau sensible.
2. N'utilisez cet appareil que pour l'usage auquel il est destiné, tel que décrit dans ce manuel.
N'utilisez pas d'accessoires non recommandés par le fabricant.
3. N'utilisez pas cet appareil si le cordon est endommagé ou si le produit tombe dans l'eau.
4. Installez l'appareil correctement en suivant la procédure d'installation.
5. Seules les personnes autorisées peuvent installer ou réparer l'appareil.
Ne tentez pas d'effectuer l'entretien de cet appareil par vous-même.
Cela pourrait annuler la garantie.
6. Tenir le cordon à l'écart des surfaces chauffées.
7. Ne laissez jamais tomber ou n'insérez jamais d'objets dans une ouverture ou un tuyau.
8. Ne pas utiliser à l'extérieur.
N'utilisez pas de produits en aérosol ou de vaporisation d'oxygène sur l'appareil.
9. Toujours suivre les instructions de mise à la terre de ce manuel avant de brancher l'appareil.

CONSERVEZ CES INSTRUCTIONS

MISES EN GARDE AVANT L'INSTALLATION

VEUILLEZ NOTER LES POINTS IMPORTANTS SUIVANTS

1. N'installez pas l'appareil dans un endroit où l'eau pourrait être éclaboussée ou dans un endroit exposé à une humidité excessive où de la condensation pourrait se former sur la surface de l'appareil.
2. Pour éviter d'endommager les composants électroniques en raison de niveaux élevés d'humidité, assurez-vous d'une ventilation adéquate en ouvrant une fenêtre et/ou une porte lorsque vous prenez un bain.
3. La pression de l'eau doit être maintenue entre 0,1 MPa et 0,68 MPa.
4. Raccordez le produit sur une conduite d'eau potable.
Ne pas raccorder à une conduite d'eau industrielle ou à d'autres sources d'approvisionnement en eau qui ne sont pas potables.
5. Refroidir l'appareil dans la pièce avant l'installation.
6. La protection thermique du réservoir d'eau peut ne pas fonctionner correctement lors du transport ou du stockage de l'eau chaude.
7. La tension de puissance nominale est de 120V AC, 60Hz.
8. Ne branchez pas l'appareil tant que l'installation n'est pas terminée.
Cela pourrait entraîner un dérèglement.

MISES EN GARDE AVANT L'INSTALLATION

EXIGENCES DE CÂBLAGE

1. Tout autre entretien doit être effectué par un technicien autorisé.

2. INSTRUCTIONS DE MISE À LA TERRE

Ce appareil doit être mis à la terre. En cas de court-circuit électrique, la mise à la terre réduit le risque de choc électrique en fournissant un fil d'évacuation pour le courant électrique.

Ce produit est équipé d'un cordon ayant un fil et une fiche de mise à la terre.

La fiche doit être branchée dans une prise de courant correctement installée et mise à la terre.

DANGER : Une utilisation incorrecte de la fiche de mise à la terre peut entraîner un risque de choc électrique.

Si le cordon ou la fiche est nécessaire pour une réparation ou doit être remplacé, ne branchez pas le fil de mise à la terre à une borne à lame plate.

Le fil de terre peut être identifié par sa surface extérieure isolée.

Il sera soit de couleur verte ou ne contiendra pas de bandes jaunes.


Si vous ne comprenez pas les instructions de mise à la terre ou si vous ne savez pas si le produit est correctement mis à la terre, consultez un électricien ou un technicien qualifié.

3. Ce produit est destiné à être utilisé sur un circuit nominal de 120V.

Il est muni d'une fiche de mise à la terre qui ressemble à la fiche illustrée sur le schéma A.

Un adaptateur temporaire, qui ressemble à l'adaptateur illustré sur les schémas B et C, peut être utilisé pour raccorder cette fiche à une prise à 2 pôles comme indiqué sur le schéma B si une prise correctement reliée à la terre n'est pas disponible.

L'adaptateur temporaire ne doit être utilisé que jusqu'à ce que la prise de courant correctement mise à la terre (schéma A) puisse être installée par un électricien qualifié. La cosse d'oreille rigide de couleur verte et les pièces similaires s'étendant à partir de l'adaptateur doivent être reliées à une terre permanente telle qu'un couvercle de boîte de sortie correctement relié à la terre. Chaque fois que l'adaptateur est utilisé, il doit être maintenu en place par la vis.

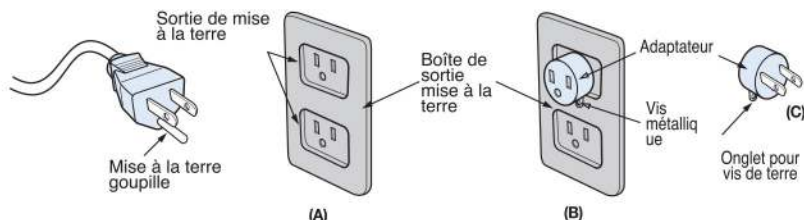

4. S'il est nécessaire d'utiliser une rallonge, n'utilisez qu'un cordon rallonge à trois fils muni d'une fiche de mise à la terre à trois lames et d'une prise à trois fentes qui conviendra pour la fiche sur l'appareil. Remplacez ou réparez tout cordon endommagé.

Avertissements pour une utilisation sécuritaire

- Veuillez respecter les « avertissements pour une utilisation sécuritaire » afin d'assurer une utilisation sécuritaire et appropriée de l'appareil et prévenir les accidents et les situations dangereuses.
- La section « Avertissements pour une utilisation sécuritaire » est divisée en sous-sections « Avertissements » et « Mises en garde » définit comme suit :



Avertissement

Situation potentiellement dangereuse pouvant causer de sérieuses blessures ou la mort si non évitée.



Mise en garde

Situation potentiellement dangereuse pouvant causer des blessures mineures si non évitée.



- Ce symbole indique une situation potentiellement dangereuse dans des circonstances particulières qui requièrent votre attention.
- Veuillez lire attentivement les détails et suivre les instructions pour éviter les situations dangereuses.



- Ce symbole indique qu'il faut « interdire » une certaine action.



- Ce symbole indique qu'il faut « introduire » une certaine action.



Avertissement



Interdiction

Lors du nettoyage du produit, ne pas utiliser ou vaporiser un agent nettoyant (acidulant pour cuisinière à gaz, agent nettoyant pour lavabo, divers détachants) ou un désodorisant pour désinfecter l'extérieur du siège électronique de la toilette.



- Si vous utilisez l'un des produits de nettoyage ou de rafraîchissement de l'air mentionnés ci-dessus, l'extérieur du produit peut se décolorer ou être endommagé, causant un problème de sécurité de l'électricité.

Veuillez utiliser l'appareil seulement avec les prises de courant de 120 V exclusivement avec au moins un classement de 15A et une mise à la terre.



Ne pas brancher plusieurs appareils dans la même prise de courant simultanément.

- Si vous l'utilisez avec plusieurs produits, cela peut causer un incendie ou un choc électrique. Veuillez vérifier régulièrement la prise de courant.
- S'il n'est pas correctement mis à la terre, il peut y avoir un risque de choc électrique ou d'incendie.
- S'il y a présence d'une substance étrangère ou de moisissure sur la fiche d'alimentation, nettoyez la surface avant utilisation.

Cet appareil n'est pas destiné à être utilisé par des personnes (y compris des enfants) dont les capacités physiques ou mentales sont déficientes ou qui manquent d'expérience ou de connaissances pour pouvoir utiliser l'appareil en toute sécurité sans supervision ou instructions.



- Ne laissez pas les enfants jouer avec l'appareil.
- Cela peut provoquer un choc électrique ou des blessures.

Ne bouche pas le trou d'air chaud et ne mettez pas de substances étrangères telles que votre main ou un bâton métallique dans l'appareil.

- Cela peut provoquer un incendie ou un choc électrique.
- Cela peut provoquer une défectuosité de l'appareil.

Lorsque vous insérez ou retirez la fiche d'alimentation, veuillez tout d'abord assécher vos mains et par la suite, insérer ou retirer la fiche d'alimentation en la tenant fermement.



- Si vous ne respectez pas cette consigne, il peut y avoir risque de choc électronique.

Ne jamais alimenter en électricité un appareil qui n'est pas installé sur une toilette et auquel aucun tuyau d'alimentation en eau n'est raccordé.

- Cela pourrait provoquer un incendie ou un dysfonctionnement.

Ne pas plier, serrer ou tirer le cordon d'alimentation en appliquant une force.



- Cela peut provoquer un choc électrique ou un incendie.

Utilisez le réseau d'aqueduc pour l'alimentation en eau.

Ne pas raccorder au produit une alimentation en eau industrielle ou une alimentation en eau lourde autre que l'installation du réseau d'aqueduc.

- Cela peut causer une infection ou une maladie de la peau, ou une infection de la vessie et mener à un dysfonctionnement.

Méfiez-vous des brûlures à basse température.

- Si votre peau entre en contact avec l'appareil pendant une longue période, même à une température relativement basse, votre peau risque de subir des brûlures à basse température.
- Les enfants, les personnes âgées, les personnes handicapées ou à capacité réduite devraient utiliser l'appareil à basse température à température de l'eau chaude et à température de séchage.
- Après avoir utilisé l'appareil à une température élevée, veuillez abaisser la température pour les personnes âgées ou à capacité réduite, les enfants et les personnes à la peau fragile.



Si vous utilisez le produit pendant une longue période sur le siège de toilette ou en mode de séchage à l'air chaud, vous risquez de vous brûler à basse température.

Faites particulièrement attention à la température près des enfants qui ne peuvent pas contrôler la température par eux-mêmes ou ceux dont la peau est sensible.

Avertissements pour une utilisation sécuritaire

⚠ Avertissement

🚫 Interdiction

Ne pas démonter, réparer ou remodeler le produit et éviter que des substances étrangères ne pénètrent dans l'appareil.

- Cela peut provoquer un dysfonctionnement de l'appareil.
- Cela peut provoquer un choc électrique ou des blessures.
- Veuillez communiquer avec notre centre de service à la clientèle pour la réparation de l'appareil.



Arrêtez d'utiliser l'appareil si le cordon d'alimentation ou la fiche d'alimentation est endommagé ou que la prise de courant est instable et communiquez avec le service à la clientèle.

- Si la gaine du cordon d'alimentation est décollée ou coupée suite à une utilisation abusive, cela peut provoquer un incendie ou un choc électrique. Veuillez vérifier le cordon d'alimentation, la fiche d'alimentation ainsi que la prise de courant fréquemment.
- Pour éviter toute situation dangereuse provenant d'un cordon d'alimentation ou d'une fiche d'alimentation endommagé, veuillez communiquer avec le fabricant, le distributeur ou un technicien certifié (réparateur) pour un remplacement.
- Nous vous recommandons fortement de réparer les pièces endommagées dans un centre de service désigné.




Ne placez pas de cigarettes ou de matériaux combustibles à proximité ou sur l'appareil.

- Cela peut provoquer un incendie ou un dysfonctionnement de l'appareil.



Lorsque vous démontez le siège de la toilette, retirez toujours d'abord la fiche d'alimentation de la prise de courant pour des raisons de sécurité.

- Cela peut provoquer un choc électrique ou un incendie.

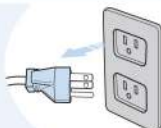

Ne pas asperger d'eau sur le châssis principal de l'appareil ou sur la fiche d'alimentation et ne pas utiliser l'appareil dans un endroit humide.

- Cette action peut provoquer un incendie suite à un court-circuit. Cela pourrait causer un dysfonctionnement et vous pourriez ne pas recevoir un service de réparation sans frais.



Ne placez pas d'objets inflammables tels qu'un poêle pour chauffer le radiateur de la salle de bains ou des cigarettes à proximité de l'appareil.

- Cela pourrait provoquer un incendie, une décoloration ou un dysfonctionnement.



Ne pas brancher le cordon d'alimentation aléatoirement.

- Cela peut provoquer un choc électrique ou un incendie.



N'insérez pas les fiches de plusieurs appareils dans une seule prise en même temps.

- Si vous branchez les prises de courant de divers produits tels qu'un ventilateur dans la salle de bains ou d'autres produits électriques dans une seule prise de courant, cela peut générer de la chaleur, de l'inflammation ou un incendie.



Lorsque vous prenez une douche ou nettoyez la salle de bain avec de l'eau, retirez toujours la fiche secteur et évitez de mettre de l'eau, du détergent ou autre sur le cadre principal du produit ou la fiche secteur.

- Cela peut provoquer un choc électrique ou un incendie.
- Lorsque de l'eau ou d'autres substances étrangères sont introduites dans l'appareil, retirez la fiche d'alimentation, fermez la valve d'alimentation en eau, puis communiquez avec notre centre de service à la clientèle.



Ne tirez pas ou ne pliez pas le tuyau de raccordement avec une force excessive.

- Cela peut provoquer une fuite d'eau ou une interruption de l'approvisionnement en eau.



Mises en garde pour une utilisation sécuritaire

⚠ Mises en garde

Si vous suspectez un bruit ou une odeur anormal provenant de l'appareil, veuillez débrancher l'appareil de la fiche d'alimentation dans un premier temps et communiquer avec le service à la clientèle.

- Si vous continuez à utiliser l'appareil avec un tel dysfonctionnement, cela peut provoquer un incendie ou un choc électrique.



🚫 Interdiction

Ne pas utiliser le produit pour toute autre utilisation décrite dans le manuel de l'utilisateur.

- Cela peut provoquer un choc électrique ou des blessures.

Installez le produit en évitant la lumière directe du soleil.

- Cela peut causer une décoloration de l'appareil ou provoquer une défectuosité.



Lorsque la fiche d'alimentation est poussiéreuse, essuyez-la à l'aide d'un chiffon sec.



Ne fermez pas de force le siège de toilette ou la housse de siège de toilette.

- Cela peut provoquer une défectuosité.



N'appuyez sur aucun bouton du panneau de commande après avoir posé le siège de toilette sur la cuvette avec la main ou d'autres objets sans vous asseoir sur le siège de toilette.

- L'eau peut s'écouler de la buse, ce qui peut mouiller vos vêtements. De plus, vous risquez de vous blesser ou de vous brûler avec de l'eau chaude ou de l'air chaud.



Ne marchez pas sur le siège de toilette ou sur la housse de siège de toilette pour monter ou poser quoi que ce soit sur le siège de toilette ou la housse de siège de toilette. Il est déconseillé de s'asseoir sur la housse de siège de toilette, en particulier.

- Ne mettez pas la main sur la housse de siège de toilette, le siège de toilette ou le cadre principal et ne marchez pas sur eux pour les relever.
- Cela peut endommager ou causer un dysfonctionnement de l'appareil.
- Cela peut causer des blessures corporelles dues à des déformations ou des dommages.



Ne pas laisser les enfants mettre des corps étrangers ou leur main dans la buse ou dans la sortie d'air chaud.

- Cela peut provoquer des brûlures.
- Cela peut provoquer un incendie ou un choc électrique.
- Cela peut provoquer un dysfonctionnement de l'appareil.



Ne jamais immerger l'appareil dans l'eau.

- Cela peut provoquer une défaillance, un choc électrique ou un incendie.



Les enfants peuvent tomber dans les toilettes par le siège de toilette, les adultes doivent donc accompagner les enfants pour utiliser cet appareil.

- Si vous ne respectez pas cette consigne, cela peut causer des blessures corporelles.



Ne vous appuyez pas excessivement sur la housse du siège de toilette.

- Cela peut provoquer une défectuosité.
- Cela peut causer des blessures corporelles dues à des déformations ou des dommages.



Si vous prévoyez de ne pas utiliser l'appareil pendant une longue période ou de le nettoyer, retirez d'abord la fiche d'alimentation.

- Si vous ne respectez pas cette consigne, cela peut provoquer un incendie.



Mises en garde pour une utilisation sécuritaire

⚠ Mises en garde ⚡ Interdiction

Après l'installation de l'appareil, toujours vérifier s'il y a des fuites d'eau de l'unité de raccordement de l'alimentation en eau.

- Cela peut provoquer un incendie ou un choc électrique à cause de la fuite d'eau.



Dans une région où le risque de gel est préoccupant, veuillez fournir du chauffage et éviter que la température ambiante ne descende en dessous de zéro.

- Si l'appareil est gelé, les tuyaux tels que le tuyau d'alimentation en eau peuvent être endommagés et des fuites d'eau peuvent se produire. En cas de risque de gel, veuillez retirer l'eau de l'appareil.



Lors du nettoyage du filtre d'adduction d'eau du châssis principal du siège de toilette électronique, fermez d'abord la valve d'alimentation en eau et démontez le conduit de l'eau pour le siège de toilette électronique.

Après le nettoyage, lorsque vous essayez de remonter l'appareil, fermez-le solidement pour ne laisser aucun espace.

- Cela peut provoquer une fuite d'eau.



Ne pas répandre de l'urine sur la sortie d'air chaud et les parties de la buse.

- Cela peut dégager une odeur ou causer un dysfonctionnement de l'appareil.
- Lorsqu'une buse est obstruée par des substances étrangères telles que l'urine, essuyez-la avec une brosse à dents douce que vous n'utilisez pas.

Ne jamais raccorder l'appareil à une conduite d'eau chaude.

- Cela peut provoquer un dysfonctionnement de l'appareil ou des blessures. Toujours raccorder le tuyau à la conduite d'eau froide.



Ne pas utiliser l'appareil s'il y a un problème.

Dans les cas suivants, débranchez la fiche d'alimentation et fermez la valve d'alimentation en eau.

- L'eau s'échappe du tuyau ou du châssis principal.
- Il y a un bruit ou une odeur étrange.
- Il y a une fissure ou une pièce cassée sur le châssis principal.
- Il y a de la fumée qui sort du châssis principal.


- Si vous continuez à utiliser l'appareil avec un tel dysfonctionnement, cela peut provoquer un incendie, un choc électrique ou une fuite d'eau.
- Veuillez communiquer avec notre centre de service à la clientèle pour la réparation de l'appareil.




PARTS & ACCESSORIES

Main Frame


<FRONT>

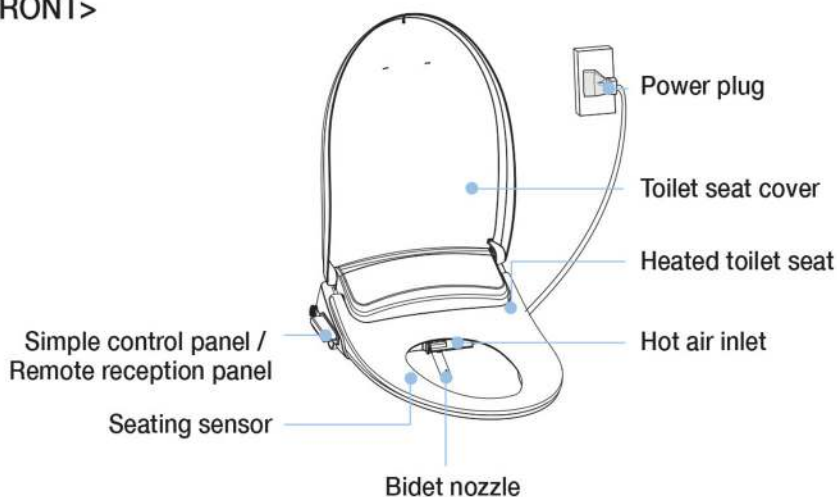

<BACK>

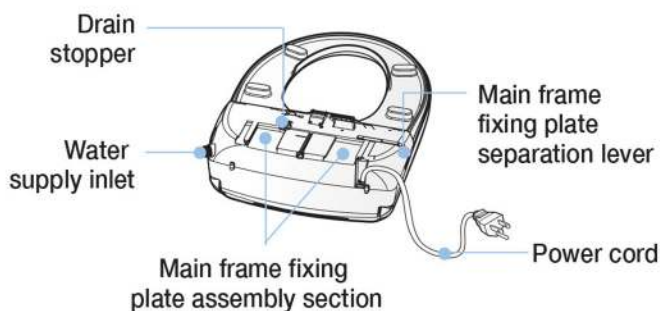

<NOZZLE>

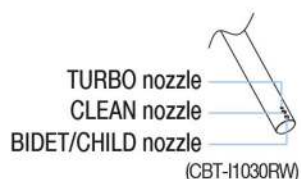


Accessories

Materials to fix product	Installation materials (CBT-IS1131REW, CBT-IS1131RRW)	Materials for piping	Others
Fixing bolts (2) Fixing washer (2) Fixing brackets (2) Rubber nut (2)	Main frame fixing plate (1)	<p><CBT-IS1131REW> <CBT-IS1131RRW></p> Filter	Branched T-valve (1)
			User manual (1) Remote control Mount AA batteries (2)

Details to Check before Installation

⚠ Precautions for Place of Installation

- 1 Avoid direct sunlight and electric heating appliances.
 - ▶ Avoid contact with direct sunlight and electric heating appliances as they may cause fire, damage, or discoloration of the unit.
- 2 Check the size of your toilet.
 - 1) At least 490 mm of length of the toilet and at least 490 mm of length from the front of the water tank to the front end of the toilet are required.
 - 2) At least 140-200 mm of the distance between the centers of the product fixing holes in front of the toilet water tank is required.
 - ▶ This product may not be compatible with imported toilets due to ill-fitting sizes.
- 3 Do not install where the product may be exposed to moisture, excessive dust, or splashing water as this may cause the product to malfunction.
 - ▶ It may cause a malfunction of the product.
- 4 Avoid installing in areas where the temperature will drop to freezing temperatures.
 - ▶ The product is intended to be used indoors. Installing it in a place where the temperature goes down below 0 °C may lead to a malfunction of the product due to frozen filters or inside of the product.
- 5 The product may not be able to be installed if the water supply valve is a flush valve. Check the valve status before installation.

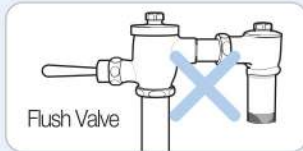


⚠ Precautions for Moving the Product

- 1 Always use caution when moving the product.
 - ▶ Never place the product upside down.
 - ▶ Always remove the power plug before attempting to move the product.



⚠ Precautions for Connecting Pipes

- 1 Ensure the water supply valve is connected to the cold water pipe.
 - ▶ Connecting the product to the hot water pipe may cause burns or a product malfunction.

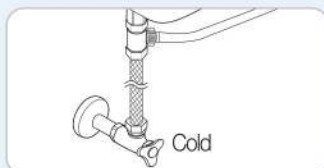

HOW TO INSTALL

Installation Order (CBT-I1030RW)




Warnings

- Use only with a properly grounded 120V AC power outlet with a rating of at least 15A.
- Do not plug in the power cord before and while installing.

1 Separate water supply hose

- ▶ Turn the water supply valve clockwise to lock, then separate the toilet hose using a spanner.

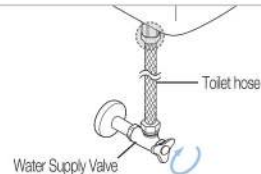


2 Remove the existing toilet seat

- ▶ Unfasten the nut and remove the toilet seat.
- ▶ Set the old toilet lid and nuts aside for future re-installation.





3 Connect T-valve

- ▶ Install the T-valve as shown in the image.

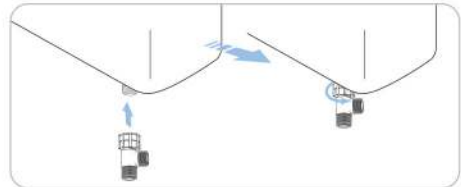


4 Install the body.

- ▶ Place the main frame fixing plate on the toilet and affix the fixing bolts on the main frame fixing plate as shown in the image.
- ▶ The location at which the Main Frame Fixing Plate is secured determines the location where the product is installed. Considering the size of the product and toilet, fix the Main Frame Fixing Plate in a suitable position. If the position of Main Frame Fixing Plate is improper, the seat will not be properly positioned in relation to the toilet.

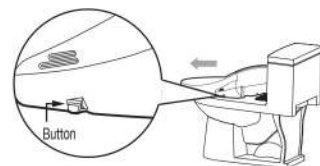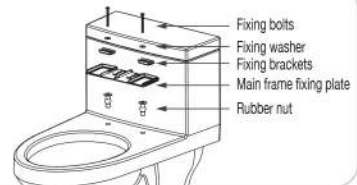

5 Connect the flexible hose

- ▶ Connect the flexible hose to the T-valve and the main body.
- ▶ Turn the water supply valve counterclockwise to allow water flow.

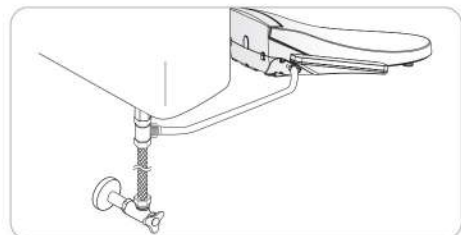

Order of installation (CBT-IS1131REW, CBT-IS1131RRW)



Warnings

- Use only with a properly grounded 120V AC power outlet with a rating of at least 15A.
- Do not plug in the power cord before and while installing.

1 Separate the original seat from the toilet.


- ▶ Unfasten the fixing nuts (2) on left and right sides and then separate the original seat and the seat cover.
- ▶ Store the detached original seat, seat cover and fixing nuts in a secure place in case of moving or re-installation in the future.




- Before installing the bidet, check the size of the toilet (porcelain).



2 Turn the water supply valve clockwise to lock it and then separate the water supply hose on the toilet side connected to the water supply valve.

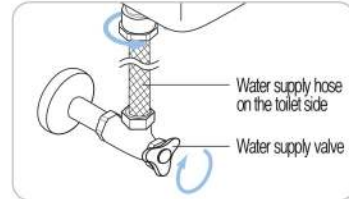

3 Install a T-valve from where the water supply hose has been separated.

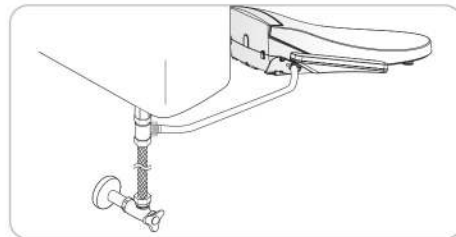



HOW TO INSTALL

4 Install the main frame of the bidet.


- ▶ As shown in the image, place the Main Frame Fixing Plate on the toilet and affix the fixing bolts on the Main Frame Fixing Plate to fix it onto the toilet.
At this time, secure it firmly by using a tool, etc. so that the Main Frame Fixing Plate does not shake.
- ▶ The location at which the Main Frame Fixing Plate is secured determines the location where the product is installed. Considering the size of the product and toilet, fix the Main Frame Fixing Plate in a suitable position.
If the position of Main Frame Fixing Plate is improper, the seat will be too forward or backward compared to the toilet.



- When attaching and fixing the main frame, fix it carefully so that the centers of the main frame and toilet are aligned.

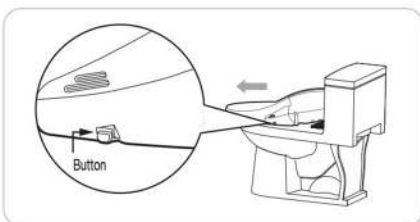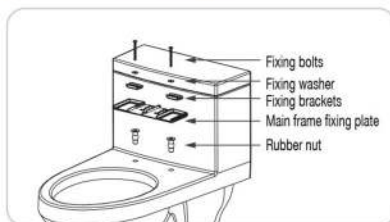


5 Connect the hose for the bidet to the bidet's water supply inlet.

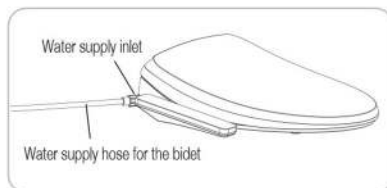

6 Connect the branched T-valve, waterworks filter and water supply hose for the bidet.


- ※ Refer to below for installation of a waterworks filter.

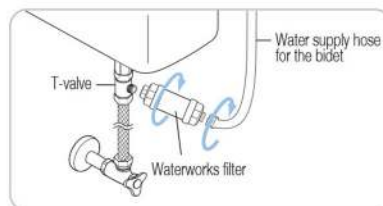

How to Install the Filter

1 Connect the filter between the T-Valve and bidet tubing.

- ※ Please check the rubber sealing when connecting the T-Valve to filter.
- ※ Do not use excessive force when connecting the T-Valve and tubing to the filter.

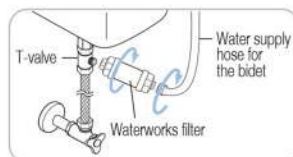

2 Please check for any leakages in the connection between the T-Valve, tubing, and the filter.

How to Install the Remote Control


Precautions for Installing the Remote Control

- Avoid direct sunlight during installation.
- If a fluorescent light is in the proximity of the remote control or the remote control reception panel on the main frame, be careful as transmission of signals may be interfered with due to the light.
- Install the remote control in a location where the product is able to be operated as soon as you press the buttons (where the signals from the remote control can be received).


- 1** Determine the location on the wall where the mount is to be attached and wipe the area cleanly to remove any water or residue.
 - ▶ Install in a location that is easily reachable when sat on the toilet seat and where water is not splashed.



- 2** Remove the protective cover of the adhesive sticker on the back of the mount and firmly press it on a wall in the correct orientation.

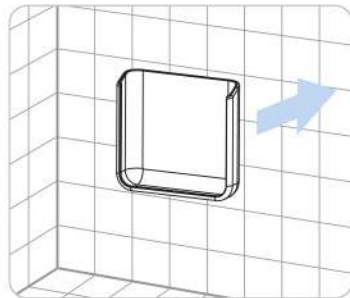

- 3** Ensure the mount is securely attached to the wall, then place the remote control inside.
 - ▶ Install the mount in a position that allows the remote control to be inserted from top to bottom.

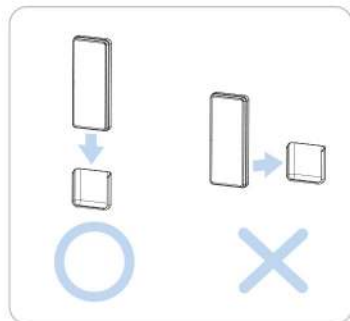

HOW TO INSTALL


How to Replace Remote Control Batteries



Warnings

- If the remote control appears to have its signal weakened during operation, this signifies the batteries need to be replaced soon.
- The remote control requires two AA batteries. Always ensure they are placed correctly inside the remote.
- Do not use a new battery together with an old battery.

- 1 Remove the remote control from the mount.
- 2 Lift the battery cover on the back of the remote control in the direction of the arrow to open it.
- 3 Take out existing batteries and insert new batteries according to the direction marked.
- 4 Replace the battery cover to the back of the remote control.
- 5 To check if the batteries have been successfully replaced, press the CLEAN button. Press the STOP button once the LED screen on the remote illuminates.
- 6 Reinsert the remote control into the mount.

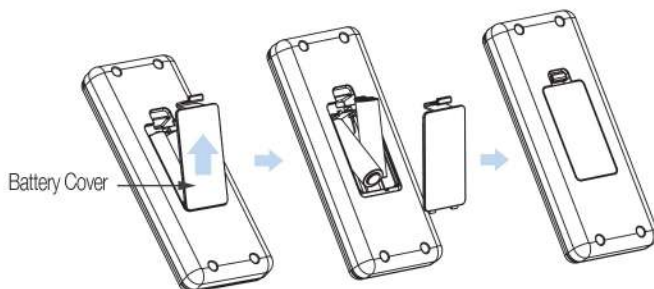

Check List for Installation

- When operating a remote control while two or more products are installed at a close distance to each other, multiple products may be activated simultaneously.
- In such cases, it is possible to configure the code of each product and its remote control so that a single remote control can activate a single product only.
- If you wish to apply this setting, please contact our Customer Service Center.

Sequence of Installation

1 Remove the packing sticker from the Bidet Nozzle.

※ You need to first remove the nozzle packing sticker from the center of the Main Frame of the Electronic Toilet Seat to normally operate the product.





2 Open the Water Supply Valve by turning it to the left, and check if water leaks from the connection parts .

• Check if the T-Valve and the Main Frame Water Supply Hose are fastened in a straight line.

※ Warnings

• All parts throughout the manual need to be formatted the same—either Sentence Case or all lowercase

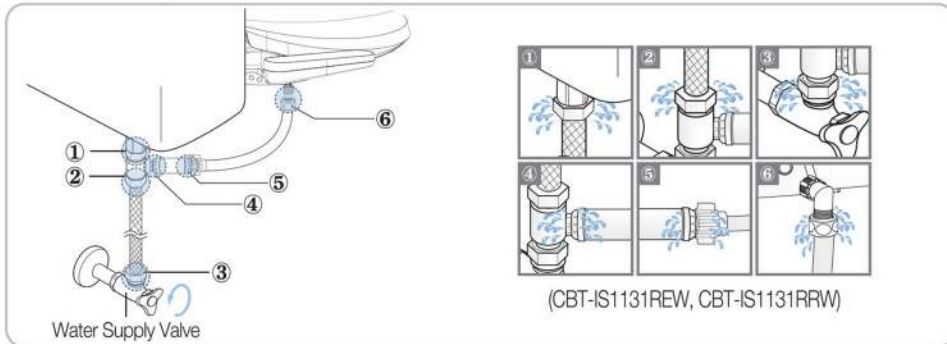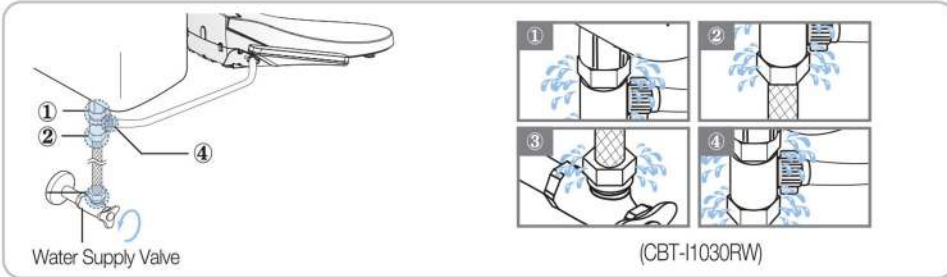


3 Plug in the power cord to an available power outlet.

• If the power supply lamp is not turned on after plugging in the power cord, press any button on the control panel found on the main frame.

※ Warnings

• When power is supplied to the main frame, do not turn or move the main frame as this may cause product malfunction.


4 With your left hand in contact with the Seating Sensor Unit (with the Seating Sensor Unit operating), press the Clean or the Bidet button to check if the Nozzle works and water is sprayed. Here, Cover the clean nozzle with your right hand to prevent water from splashing.

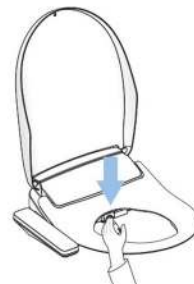

BEFORE USE

Checklist before Use

- 1 Please turn the power ON.
 - ▶ Plug the power cord into an available 120V AC outlet.

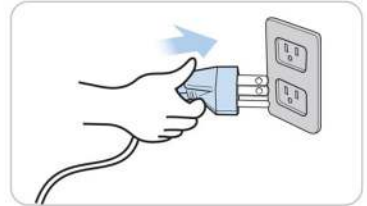

- 2 Replace the waterworks filter et on a regular basis.
(CBT-IS1131REW, CBT-IS1131RRW)
 - ▶ If the filter is blocked by foreign substances or the water penetration rate is reduced as it nears the replacement period, water supply into the product may not be active.
- 3 Always sit on the center of the toilet seat. Never perch on the outer edge.
 - ▶ If you move your buttocks or cross your legs while using the product, the product may stop operation.
 - ▶ If you install an auxiliary seat for infants on the Electronic Toilet Seat, the product will not work.
(The Skin Sensor will fail to detect.)
- 4 Ensure the water pressure is appropriate for use.
 - ▶ If you use the Electronic Toilet Seat at the same time as you flush the toilet after relieving yourself, the water pressure may decrease.
 - ▶ If your region has a low water pressure, the Electronic Toilet Seat may not work.
(If the water pressure is 0.04 MPa (0.4Kgf/cm²) or lower, the Electronic Toilet Seat may not work.)

EXPLANATION OF FUNCTIONS OF CONTROL PANEL




Warnings


Always unplug the power cord before attempting to clean the bidet.
While cleaning, use a slightly damp cloth to wipe down. Do not use a dishwashing sponge, benzene, thinner or any other harmful substances that could cause damage to the product.

Control panel

< REMOTE CONTROL >

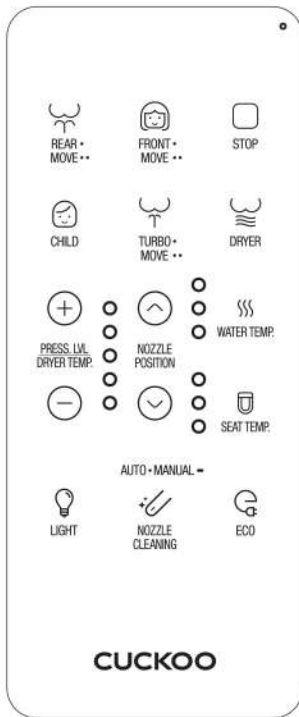


(CBT-I1030RW)

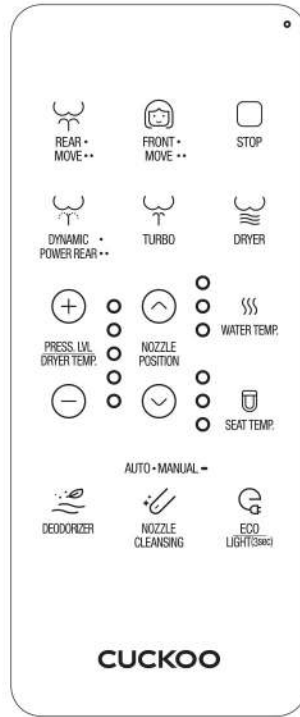






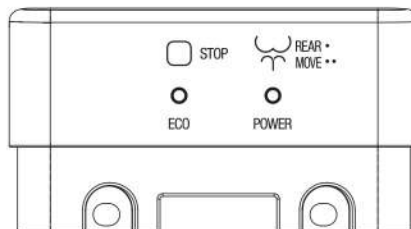







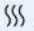



(CBT-IS1131REW, CBT-IS1131RRW)

< CONTROL PANEL ON MAIN FRAME >



FUNCTIONS

 REAR • MOVE ••	Used when cleaning the anus	 NOZZLE POSITION 	Adjusts the nozzle's position from front to rear
 FRONT • MOVE ••	Cleaning for women	 WATER TEMP.	Adjusts the water temperature from Level 0 to Level 3
 TURBO • MOVE ••	Turbo water streams massage the anus to induce active and satisfying bowel movements.	 SEAT TEMP.	Adjusts the seat temperature from Level 0 to Level 3
 DYNAMIC • POWER REAR •• (CBT-IS1131REW, CBT-IS1131RRW)	DYNAMIC • This mode uses varied water pressure and an effective sequence of settings to ensure a deep clean. POWER REAR • This mode is more powerful than the default rinse mode.	AUTO • MANUAL ◀  NOZZLE CLEANING	* Cleans the nozzle * To move the nozzle back and forth for automatic cleaning, press the button briefly * To move the nozzle all the way forward for 2 minutes, press and hold the button
 DRYER	Initiates hot air drying • Automatically shuts off after 3 minute * Dries quicker if you wipe off the waterdrops with a tissue, etc. before drying.	 LIGHT (CBT-I1030RW)	Turns the mood lamp on when pressed once. Turns off the mood lamp with a second press. (differentiated by sound)
 CHILD (CBT-I1030RW)	Emits soft water streams to automatically proceed from cleaning to drying • Automatically stops after 1 minute of cleaning and 3 minutes of drying	 DEODORIZER	If the Deodorize button is pressed during use, the deodorization function is activated. Press while the bidet is in use to deodorize. Press once more to cease deodorization. (The Deodorize function can be used selectively.) (A deodorization filter is installed inside the main frame.) * The Deodorize function is used to eliminate bathroom odors. (CBT-IS1131REW, CBT-IS1131RRW)
 PRESS. LVL DRYER TEMP. 	Adjusts the water pressure and hot air temperature from Level 1 to Level 5	 ECO  ECO LIGHT (3sec)	Press the button once to turn ON/OFF the Power Save function. The ECO function can be used by pressing the button briefly. * Press and hold the button for 3 seconds to use the mood lamp function. If you press and hold the button for 3 seconds once more, the mood lamp function is canceled.(CBT-IS1131REW, CBT-IS1131RRW)

- Always sit in the center of the toilet seat. Never perch or sit on the edge of the seat as the seating sensor will not be activated properly.
- If the water entry temperature is 15°C or lower, the temperature of the cleaning water may become lower than the set temperature (other operations work normally).
- If the water pressure is strong (especially while using TURBO or POWER CLEAN function), the temperature of the cleaning water may become lower than the set temperature.
In such cases, adjust the water pressure level to 3 or below for use.




If you stay seated on the seat or use the product in the hot air dry mode for a long time, you may get a low-temperature burn.

- When used by the following persons, please set the SEAT TEMP. button to "OFF" or "Level 2" for use. When used by children, senior citizens, those with vulnerable skin, those who are unable to control their own body temperatures, those who have taken sleep-inducing drugs (sleeping pills or cold medicine), those who are hungover or fatigued, it may cause a low-temperature burn or an accident.

Basic method of use

1 Sit on the seat.

- ▶ Sit in the center of the toilet seat to activate the sensor.

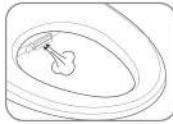


2




Press the button.

- ▶ Press the desired button to initiate the cleaning function.
- ▶ If the button that was pressed during use is pressed one more time, MOVE CLEAN can be used.

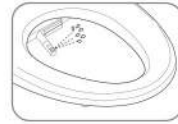

3 Press the button.


- ▶ Press the DRYER button to begin drying.
- ▶ The bidet will carry out the function for 3 minutes before automatically shutting off.

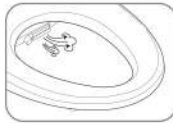

4

Press the STOP button.


- ▶ The initiated function will stop.

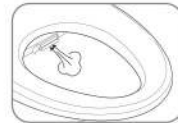

- The seating sensor of this product is installed inside the seat. It activates as soon as your skin comes in contact with the seat at the location of the seating sensor. If a cover, etc. is applied over the surface of the seat, the skin will not touch the seat, which may not activate the seating sensor.

SIMPLE CONTROL PANEL ON THE MAIN FRAME

- The simple control panel can activate basic functions (CLEAN/STOP) in the case that the remote control is lost, broken, or the batteries have been depleted.
- Due to its limited functions, the temperature control and water pressure cannot be adjusted using the simple control panel.

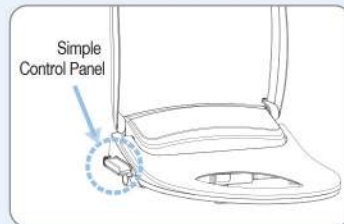

1 Sit on the seat.

- ▶ Sit on the center of the toilet seat.

2



Press the CLEAN button.

- ▶ CLEAN function can be used.
- ▶ After cleaning, the bidet will automatically begin the DRYER function for 3 minutes then shut off.
- ▶ If the button that was pressed during CLEAN is pressed one more time, MOVE CLEAN can be used.

3



Press the STOP button.

- ▶ CLEAN or DRYER operation stops.

HOW TO USE EACH FUNCTION

MOVE CLEAN

- If the button is pressed one more time while CLEAN, BIDET or TURBO is in use, the nozzle moves back and forth to perform MOVE CLEAN.
- If the button is pressed one more time during MOVE CLEAN, the nozzle stops.

WATER PRESSURE CONTROL

- You may change the strength of the water stream from Level 1 to 5 by pressing the PRESS. LVL/DRYER TEMP. button.
- If foreign substances become stuck on the waterworks filter, the water pressure may become weak. If the water pressure continues to weaken, the filter needs to be replaced.
- The default water pressure level is Level 3.

NOZZLE POSITION CONTROL

- You can change the nozzle position by pressing the NOZZLE POSITION button.
- The display lamp preferentially shows the water pressure level at all times.
- When the NOZZLE POSITION button is pressed, the position of the nozzle is displayed.

DRYER TEMPERATURE CONTROL

- You may change the drying temperature from Level 1 to 5 by pressing the PRESS. LVL/DRYER TEMP. button while the DRYER function is in use.
- The default drying temperature level is Level 3.

HOT WATER TEMPERATURE CONTROL

- You may change the hot water temperature from Level 0 (OFF) to the three levels (Low, Medium, High) by pressing the "WATER TEMP." button.
- The default hot water temperature level is set to OFF. After the hot temperature has been set once, the chosen level will then be automatically set as the default temperature.

SEAT TEMPERATURE CONTROL

- You may change the seat temperature from Level 0 (OFF) to the three levels (Low, Medium, High) by pressing the "SEAT TEMP." button.
- The default seat temperature level is set to OFF. After the seat temperature has been set once, the chosen level will then be automatically set as the default temperature.

HOW TO CONTROL AND USE EACH FUNCTION

CHILD (CBT-I1030RW)

- This is a convenient function for children.
- It emits softer water streams than typical cleaning and is activated for 1 minute during which it executes automatic water pressure control and MOVE function.
- Once cleaning is complete, it automatically starts drying and stops it after 3 minutes.

ECO

- The ECO function can be used by pressing the "ECO" button briefly.
- The initial setting is in OFF and you can check whether or not the ECO function is activated through the display lamp.
- If you press the button briefly one more time, the ECO function is deactivated.



- In the ECO mode, the hot water and seat temperatures are maintained lower than the set temperature so, when using the ECO mode in wintertime, the water and seat may be cold at first.

Other power-saving measures

To save power, the following are recommended.

- Keep the seat cover closed. If the seat cover is closed after use, less heat is generated from the surface of the seat to save power.
- Set a low temperature. It saves power if the temperature is set as low depending on the season and to the extent that you do not feel cold.
- Keep the power cord unplugged. When you go out or do not plan to use the product for a long period, unplugging the power plug saves power.

HOW TO CONTROL AND USE EACH FUNCTION

SELF-CLEANING

- Before every use of cleaning, the nozzle comes out and cleaning water is emitted to clean the nozzle.
- After every use of cleaning, the nozzle goes in and cleaning water is emitted to clean the nozzle.

NOZZLE CLEANING

(1) Automatic function

- While you are not seated on the seat, press the "NOZZLE CLEANING" button briefly to use the automatic function.
- In the automatic function, the nozzle automatically moves for automatic cleaning of the nozzle.

(2) Manual function

- While you are not seated on the seat, press and hold the "NOZZLE CLEANING" button to use the manual function.
- When the manual function is activated, the nozzle comes out.
- Once the "STOP" button is pressed or 2 minutes pass by, the nozzle goes in for self-cleaning.



Pushing the nozzle in by force without pressing the STOP button may damage the nozzle.



Cleaning Precautions

- Use of a sharp brush or a coarse dishwashing sponge for cleaning may cause scratches and/or damage to the product.
- Do not use sharp brushes or coarse dishwashing sponges to clean the bidet in order to prevent scratches or damage to the product.
- Refrain from spraying water on the nozzle and hot air inlet as this may cause electrical shock or product malfunction.
- Do not use a dishwashing sponge, benzene, thinner or other harmful detergents when cleaning the control panel. Always ensure the power plug is removed from the outlet before attempting to clean.

How to Clean the Nozzle

1 Automatic nozzle cleaning

- While you are not seated on the seat, press the "NOZZLE CLEANING" button briefly.
- The nozzle automatically moves back and forth for automatic cleaning.

2 The nozzle will automatically move back and forth for automatic cleaning

While you are not seated on the seat, press and hold the "NOZZLE CLEANING" button for 3 seconds.

The manual function will be activated to protrude the nozzle.

- Clean the nozzle with a toothbrush, etc. you do not use.
- Once the STOP button is pressed or 2 minutes elapses, the nozzle goes in for self-cleaning.

AUTO-MANUAL -



NOZZLE
CLEANING


(CBT-I1030RW)

AUTO-MANUAL -



NOZZLE
CLEANING

(CBT-IS1131REW, CBT-IS1131RFRW)

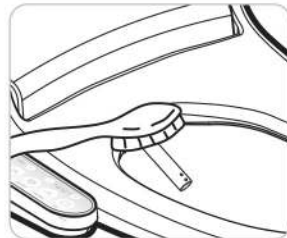

Pushing the nozzle in by force without pressing the STOP button may damage the nozzle.

How to Clean & Replace Nozzle Cap (CBT-I1030RW)

- 1 (Manual nozzle cleaning) If you press and hold the "NOZZLE CLEANING" button without sitting on the seat, the nozzle moves forward and stops for 2 minutes.
- 2 At this time, take out the nozzle cap and use a toothbrush, etc. to clean both the nozzle and nozzle cap.
- 3 The nozzle cap will be separated from the nozzle if you press both of its ends and the nozzle downward in the vertical direction and then pull the cap slightly in the horizontal direction of the nozzle.



If you pull the nozzle cap by force, the hook located on the rear of the nozzle cap may be damaged.

- 4 After cleaning, insert the nozzle cap and press the STOP button to return the nozzle.



Press both ends of the nozzle cap and the nozzle downward in the vertical direction.





While pressing them down, pull the cap in the horizontal direction of the nozzle.

HOW TO CLEAN

How to Clean the Exterior


- To prevent damage to the bidet, do not clean with a dishwashing sponge or harmful cleaning detergents.
Do not use a thinner, benzene and other cleaners for bathrooms to clean the exterior of the bidet directly.
- The main frame can be cleaned with water, for instance, through a shower head during a shower or bath. Ensure the power plug does not come into contact with water or liquid to avoid electrical shock.
- Always ensure the power plug has been removed from the outlet before attempting to clean.
- Touching a power outlet with wet hands may cause electric shock.
- After cleaning, use a soft cloth to remove the water.

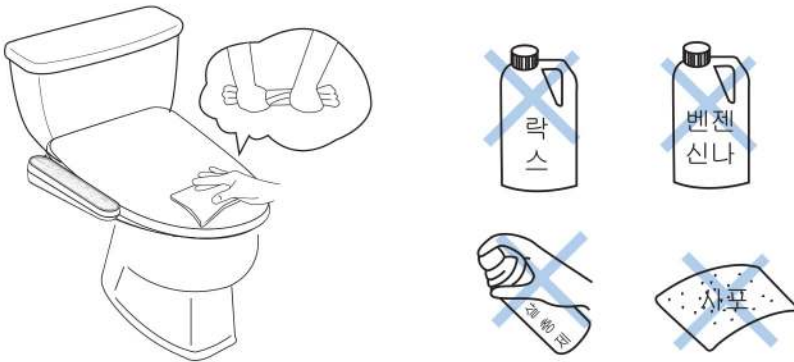

 Damage including discoloration, crack and scratch on the exterior case caused by an incorrect cleaning method will incur a paid replacement even if the warranty period has not expired yet.

How to Clean Waterworks Filter Net

- Clean the filter on a regular basis with regular use.
- Lock the water supply valve and separate the waterworks filter adapter or bidet hose to clean the waterworks filter net installed in the product.

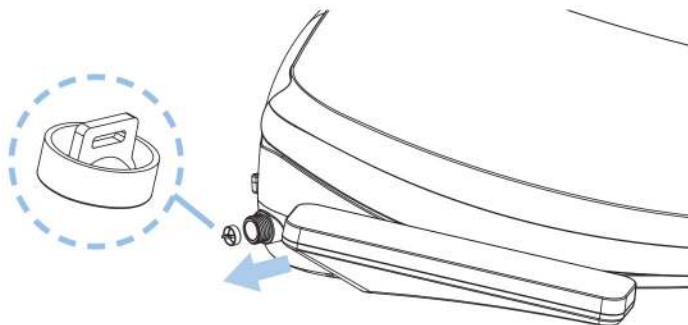


HOW TO DISASSEMBLE THE PRODUCT & STORE


How to Disassemble and Keep the Product

※ If you need to disassemble the product from the toilet because of moving to another house or cleaning, follow the following instructions.

- 1 Remove the power plug from the outlet.

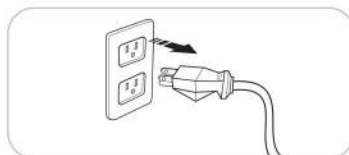

- 2 Close the water supply valve by turning it clockwise until loose.

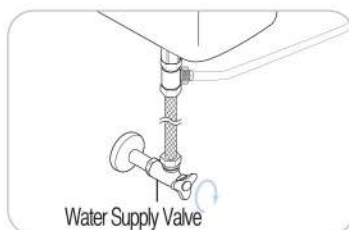

- 3 Loosen the nut on the T-Valve side of the Hose for the Electronic Toilet Seat and disassemble the Main Frame of the Electronic Toilet Seat from the toilet.


※ How to Disassemble the Electronic Toilet Seat With your hand pressing the Lever, pull out the product forward.

- 4 Disassemble the Hose for the Electronic Toilet Seat, the T-Valve, and the Main Frame Fixing Plate.

- 5 Connect the Water Supply Pipe to the Water Supply Valve.

- 6 Open the Water Supply Valve by turning it counterclockwise, and check if there is water leakage from the Water Supply Pipe Connection Unit.

- 7 Replace the old toilet seat onto the toilet with the saved nuts.

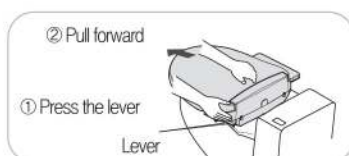

How to Use the Electronic Toilet Seat in Winter

- 1 Plug the power cord into an available 120V AC outlet.

- 2  Set the WATER TEMP. to "Low"

- 3 If storing the bidet during winter, do not store the bidet outside and be sure to keep in a warm, dry area.

TROUBLESHOOTING

- ▼ If you're running into any issues while using your bidet, refer to the below troubleshooting chart to properly assess and correct the problem.
If the problem persists, contact our Customer Service Center.

Problem	Possible Issues	Corrective Action
Water is not being sprayed out when the bidet is plugged in and a function is initiated	<ul style="list-style-type: none"> • Is the water flow shut off? • Is the water supply valve locked? • Is the waterworks filter blocked? 	<ul style="list-style-type: none"> • Wait until the water flow shut-off process ends. • Open the water supply valve. • Replace the waterworks filter.
The bidet is not operating properly/turning on	<ul style="list-style-type: none"> • Is the power plug plugged into a working outlet? • Was the bidet activated while you are not sitting down on the seat? • Has there been a blackout? 	<ul style="list-style-type: none"> • Plug the power cord into an available 120V AC outlet. • Sit on the center of the toilet seat to activate the seating sensor. The bidet will not function if the sensor cannot detect you. Wait to operate the bidet until the blackout ceases. • Please wait until the power is recovered.
There is a water leakage	<ul style="list-style-type: none"> • Is the pipe connection properly made? 	<ul style="list-style-type: none"> • Refer to "Before Installation" to ensure the water supply was connected to the bidet properly. • Contact the location of purchase or our Customer Service Center.
The water pressure is too weak	<ul style="list-style-type: none"> • Are foreign substances stuck on the waterworks filter? • Is the hose of the main frame bent? • Is the water pressure display lamp set to Level 1? • Is the waterworks filter blocked? 	<ul style="list-style-type: none"> • Clean the waterworks filter. • Smooth out the bent part of the hose. • Try raising the water pressure. • Contact the location of purchase or our Customer Service Center.
The water temperature, the seat temperature, or air temperature are not warm enough	<ul style="list-style-type: none"> • Is the hot water or seat temperature set to "Low" or "OFF"? • Is the hot air temperature set to "Level 2" or below? • Is the water entry temperature low (below 15°C) or the water pressure set to "Level 5"? • Is the ECO mode turned on? 	<ul style="list-style-type: none"> • Set the hot water or seat temperature to either "Medium" or "High". • Set the hot air temperature to "Level 3" or higher. • To maintain the temperature of hot water, set the water pressure to "Level 3" or below. • In the ECO mode, the temperature is maintained lower than the set temperature. Either deactivate the ECO mode or sit on the seat and wait for about 5 minutes.
The main frame shakes while in use	<ul style="list-style-type: none"> • Are the fixing bolts that fix the main frame loose? 	<ul style="list-style-type: none"> • Re-fasten the fixing bolts of the main frame.
The buttons do not operate when pressed	<ul style="list-style-type: none"> • Is there any water on the touch control panel? • Is the display lamp of the remote control lit? 	<ul style="list-style-type: none"> • If any water gets onto the control panel, buttons may not work so be sure to remove any water first before use. • If the batteries of the remote control are too low, the display lamp will not be lit. Please replace the batteries.

Product Specifications

Model name		CBT-I1030RW	CBT-IS1131REW	CBT-IS1131RRW
Seat type		ELONGATED	ELONGATED	ROUND
Rating		120V AC / 60Hz		
Maximum power consumption		660W	1,260W	
Power cord		About 1.5m		
Water supply method		Direct connection water supply		
Cleaning device	Water volume	CLEAN	About 0.74L/min	About 0.7L/min
		BIDET	About 0.71L/min	About 0.57L/min
		TURBO	About 0.76L/min	About 0.9L/min
	Water pressure control	5 levels		
	Temperature control	Room temperature, Low (93.2°F / 34 °C), Medium (98.6°F / 37°C), High (104F / 40 °C)		
	Heater capacity	600W	1,200W	
	Safety device	Temperature fuse, thermo switch, water level sensor		
Reverse-current prevention	Check Valve, Vacuum Valve			
Seat heating device	Temperature control	Room temperature, Low (93.2°F / 34 °C), Medium(98.6°F / 37°C), High(104F / 40 °C)		
	Heater capacity	55W		
	Safety device	Temperature fuse		
Hot air drying device	Temperature control	Room temperature - 131°F / 55 °C (5 levels)		
	Heater capacity	250W		
	Safety device	Temperature fuse		
Water supply pressure used		0.1 ~ 0.74Mpa (1.0 ~ 7.5 kgf/cm ²)		
Water supply temperature used		41 - 93.2 °F (recommendation: 59 - 77 °F) / 5 - 34 °C (recommendation: 15 - 25 °C)		
Ambient temperature usage		41 - 104 °F (recommendation: 50 - 95 °F) / 5 - 34 °C (recommendation: 15 - 25 °C)		
Product size		16.9 × 21 × 6.4 Inch / 430.5 × 534 × 162mm		16.9 × 19.4 × 6.4 inch / 430.5 × 493.9 × 162mm
Product weight		About 8.8 lbs / 4.0kg		

* The product design and specifications may be changed without prior notice for improving product performance.

* The proper water pressure for use is 0.11-0.68 Mpa (1.1 bar ~ 6.8 bar).

가족 여러분!

저희 쿠쿠 비데를 이용해 주셔서 감사합니다.
이 사용설명서(보증서 포함)는 잘 보관하여 주십시오.
사용 중에 모르는 사항이 있을 때나 기능이 제대로 발휘되지 않을 때 많은 도움이 될 것입니다.



이런 점이 좋습니다.

- **튼튼한 비데**
잔고장 없이 오래 사용할 수 있도록 만든 비데입니다.
- **생활안심 방수(IPX5등급) 구조**
IPX5등급 안심구조로 안전하고 깨끗하게 사용할 수 있습니다.
- **청소의 용이성**
비데의 장착 및 분리구조가 원터치 방식으로 되어 있기 때문에 청소의 편리함을 더해줍니다.
- **어린이를 생각하는 비데(CBT-I1030RW)**
어린이 전용 세정버튼이 있어, 어린이가 안전하게 사용할 수 있는 비데입니다.
- **연장된 노즐길이**
노즐의 길이를 증대시켜 체형별 노즐위치 선택의 폭을 넓혔습니다.
- **전기료를 아끼는 비데**
절전기능이 있어 전기료를 아낄 수 있습니다.
- **스테인레스 노즐**
노즐에 스테인레스 재질을 적용하여 오염물이 잘 묻지 않아 위생적입니다.
- **리모컨 조작**
탈부착이 가능한 리모컨을 채택하여 누구나 쉽고 편리하게 비데를 사용할 수 있습니다.
- **탈취기능 (CBT-IS1131REW, CBT-IS1131RRW)**
화장실의 불쾌한 냄새를 제거하여 쾌적하게 사용할 수 있습니다.

CONTENTS(목차)

사용하기전에	● 안전상의 경고	38~41
	각 부분의 명칭 / 부속품 안내	42
사용할때	● 설치 전 확인 사항	43
	설치방법	44~48
	설치 후 필수 점검 사항	49
	사용 전 확인 사항	50
	조작부 기능 설명	51~52
	기본적인 사용방법	53
	각 기능조절 및 사용방법	54~56
	세척 및 청소방법	57~58
	제품 분리방법 및 보관방법/겨울철 비데 사용방법	59
고장신고전에	● 고장신고 전에 확인하십시오	60
서비스안내	● 제품 규격	61

안전상의 경고

- '안전상의 경고'는 제품을 안전하고 올바르게 사용하여 사고나 위험을 미리 막기 위한 것이므로 반드시 지켜 주십시오.
- '안전상의 경고'는 '경고'와 '주의'의 두가지로 구분되어 있으며 '경고'와 '주의'의 의미는 다음과 같습니다.

<p>⚠ 경고 피하지 않을 경우 사망이나 중상을 초래할 수 있는 잠재적인 위험상황</p>	<ul style="list-style-type: none"> • 이 기호는 특정조건하에서 위험을 끼칠 우려가 있는 사항에 대하여 주의를 환기시키는 표시입니다. • 위험 발생을 피하기 위해 주의깊게 읽고 지시에 따라 사용하십시오.
<p>⚠ 주의 피하지 않을 경우 경상을 초래할 수 있는 잠재적인 위험상황</p>	<ul style="list-style-type: none"> • 이 기호는 어떤 행위를 '금지'하는 표시입니다. • 이 기호는 어떤 행위를 '지시'하는 표시입니다.

⚠ 경고 (금지)

제품청소시 비데 외관에 세정제(가스렌지용, 산성제, 싱크대전용, 변기세척제, 각종 얼룩제거제) 및 냄새제거용 방향제를 사용하거나 뿌리지 마십시오.

- 위의 세정약품이나 방향제를 사용하면 제품외관의 변색과 파손의 위험이 있고 전기안전상의 문제가 발생 할 수 있습니다



본 제품은 AC 120V 전용입니다.

- 전원플러그는 반드시 접지가 되어 있는 정격 15A 이상의 교류 120V 전용 콘센트에 바르게 꽂아 주십시오.

이 기기는 신체, 감각, 정신 능력이 결여되어 있거나 경험과 지식이 부족하여 감독이나 지시 없는 안전하게 기기를 사용할 수 없는 사람(어린이 포함)이 사용하도록 만들어지지 않았습니다.

- 어린이가 기기를 가지고 놀지 않도록 주의하세요.
- 감전이나 부상의 원인이 됩니다.



온풍구를 막거나 제품 내부에 손 또는 금속막대기 등의 이물질들을 절대 넣지 마십시오.

- 화상이나 감전의 원인이 됩니다.
- 제품 고장의 원인이 됩니다.

저온화상에 주의 하십시오.

- 비교적 낮은 온도에서도 장시간 피부와 접촉하면 저온 화상을 일으킬 수 있습니다.
- 어린이, 노약자, 환자, 신체활동이 불편하신 분들은 변화온도, 온수온도, 건조온도를 ("저단")로 사용하여 주십시오.
- 고온으로 사용한 후에는 노약자, 어린이, 피부가 약한 사용자 등을 위해 사용온도를 낮은 온도 ("저단")로 조절해 주시기 바랍니다.

⚠ 변좌나 온풍건조에서 장시간 사용시 저온화상의 위험이 있습니다. 어린이나 자신이 온도 조절을 할 수 없는 분, 피부가 약한 분 등이 사용할 때는 특히 주의해 주십시오.

전원플러그를 콘센트에 꽂거나 뺄때는 손의 물기를 반드시 제거한 후 전원 플러그를 잡고 꽂거나 뺍아 주십시오.

- 감전의 원인이 됩니다.



변기에 설치되지 않고, 급수용 호스가 연결되지 않은 제품에는 절대 전원을 연결하지 마십시오.

- 화재나 고장의 원인이 됩니다.

전원코드를 무리하게 구부리거나 묶거나 잡아당기지 마십시오.

- 감전이나 화재의 원인이 됩니다.



반드시 접지 처리된 AC 120V 전용 콘센트에 꽂아 사용 하십시오.

- 콘센트에 접지가 되어있지 않으면, 고장 및 감전의 원인이 됩니다.

급수는 상수도를 사용해 주십시오. 상수도 외의 공업용수 또는 중수를 제품에 연결하지 마십시오.

- 피부 염증이나 피부병 및 방광염을 일으킬 염려가 있으며 제품 고장 발생의 원인이 됩니다.

⚠ 경고

(금지)

제품을 분리, 분해하거나 수리 또는 개조하지 마시고, 제품내부에 이물질이 들어가지 않도록 하십시오.

- 제품 고장의 원인이 됩니다.
- 화재나 감전 신체 상해의 원인이 됩니다.



담배나 타는 물질을 제품에 가까이 놓거나 제품에 버리지 마십시오.

- 화재나 제품 고장의 원인이 됩니다.



전원플러그에 물을 뿌리거나, 습기가 많은 곳에서 사용하지 마십시오.

- 누전으로 인한 화재의 원인이 됩니다. (고장의 원인이 되며 무상서비스를 받을 수 없습니다.)



전원코드를 임의로 연결하거나 가공하여 사용하지 마십시오.

- 감전 및 화재의 원인이 됩니다.



사위나 화장실 물청소시 전원플러그를 반드시 빼고, 본체나 전원플러그에 물 또는 세제 등이 묻지 않도록 하세요.

- 감전, 화재의 위험이 있습니다.
- 제품 내부에 물이나 기타 이물질이 들어간 경우 전원플러그를 뽑고, 고객센터로 연락 주십시오.



비닐 포장재 및 소모품은 어린이가 손대지 않도록 폐기하십시오.

- 포장재로 인한 질식의 원인이 됩니다.
- 폐 건전지는 전기 수거함에 분리 폐기해 주십시오.



전원코드나 전원플러그가 파손되었거나 흔들릴 때는 사용을 중지하고 고객센터로 문의 바랍니다.

- 제품 사용 중 사용상의 부주의로 전원 코드의 파복이 벗겨지거나 찢힐 경우 화재 및 감전의 원인이 될 수 있으니, 수시로 전원코드와 전원플러그, 콘센트의 상태를 꼭 확인하십시오.
- 전원코드나 전원플러그가 파손된 경우에는 위험이 생기지 않도록 하기 위하여 제조자나 판매원 또는 자격 있는 기술자(서비스 기사)에 의해 코드 교환을 하십시오.
- 반드시 지정된 서비스 센터에서 수리하시기 바랍니다.



제품을 청소할 때나 번거에서 분리할 때는 안전을 위해 반드시 전원 플러그를 콘센트에서 뽑아 주십시오.

- 고장 및 감전의 원인이 될 수 있습니다.



화장실 난방용 스토브, 히터, 담배등의 화기류를 가까이 하지 마세요.

- 화재, 변색, 고장의 원인이 됩니다.



한개 콘센트에 여러 제품의 전원 플러그를 동시에 꽂아 사용하지 마십시오.

- 화장실내의 환풍기나 다른 전기제품등을 한 개 콘센트에 사용할 경우 발열, 발화, 화재의 원인이 됩니다.



연결관 호스를 무리하게 잡아 당기거나, 구부리지 마십시오.

- 물이 새거나 공급되지 않을 수 있습니다.



안전상의 경고

⚠ 주의

🚫 (금지)

사용 중에 이상한 소리가 났거나 연기가 나면 즉시 전원 플러그를 뽑고 고객센터로 문의하여 주십시오.



- 고장난 상태에서 계속 사용하면 화재나 감전의 원인이 됩니다.

변좌나 변좌뚜껑을 밟고 올라가거나 물건을 올려 놓지 마십시오. 특히 변좌뚜껑 위에 앉지 마십시오.



- 변좌뚜껑, 변좌 등 본체를 짚거나 밟고 올라서지 마십시오.
- 제품이 손상되거나 고장의 원인이 됩니다.
- 변형, 파손에 의한 신체 상해의 원인이 됩니다.

사용설명서에 기재된 용도 이외로 사용하지 말아 주십시오.

- 화재, 감전, 신체 상해의 원인이 됩니다.

어린이가 노즐이나 온풍 배출구에 이물질 또는 손을 삽입하지 못하도록 하여 주십시오.



- 화상을 입을 수 있습니다.
- 화재나 감전의 원인이 됩니다.
- 제품 고장의 원인이 될 수 있습니다.

직사광선을 피해서 제품 및 리모컨을 설치해 주십시오.



- 제품 외관의 변색 또는 제품 고장의 원인이 됩니다.
- 직사광선으로 인해 리모컨 조치가 원활하지 않을 수 있습니다.

제품을 절대 물에 넣지 마십시오.



- 고장, 감전, 화재의 원인이 됩니다.

전원플러그에 먼지가 묻어 있을 때는 마른천으로 닦아내 주십시오.



어린이가 사용시 변좌에 빠질 수 있으므로 어른과 동행하여 사용하십시오.



- 신체 상해의 원인이 될 수 있습니다.

변좌나 변좌뚜껑을 무리하게 닫지 마십시오.



- 고장의 원인이 됩니다.

변좌뚜껑에 무리하게 기대지 마십시오.



- 고장의 원인이 됩니다.
- 변형, 파손에 의한 신체상해의 원인이 됩니다.

변좌에 앉지 않은 상태에서 손이나 기타물질로 착좌시킨 후 조작부 버튼을 누르지 마십시오.



- 노즐로부터 물이 나와 옷이 젖을 수 있습니다. 또한 온수 및 온풍에 의한 신체 상해 및 화상을 입을 수 있습니다.

제품을 장시간 사용하지 않을 경우에는 전원 플러그를 뽑고 제품 내부의 물을 배수해 주십시오.




- 제품내 소량의 물이 변질되어 피부질환의 원인이 될 수 있습니다.
- 화재의 원인이 될 수 있습니다.

⚠ 주의

🚫 (금지)

제품 설치 후 급수
연결부의 누수여부를
반드시 확인 하십시오.

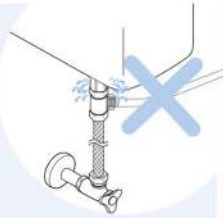

- 누수로 인한 화재 및
감전의 원인이 됩니다.

동결의 염려가 있는 지역에서는
난방을 해주시고, 주위의 온도가
영하로 내려가지 않도록
해주시십시오.

- 동결되면, 급수관등의 배관이 파손되고,
누수의 원인이 됩니다.
동결의 염려가 있을때는, 제품내부의 물을 빼주시십시오.

비데 본체의 수도필터를
청소 할 때는 먼저,
급수밸브를 잠그고
필터를 분리하십시오.
청소 후 다시 조립시 틈새가
없도록 확실하게 잠귀 주십시오.



- 누수의 원인이 됩니다.

온풍배출구와 노즐부위에 소변이 묻지 않도록
하십시오.

- 약취발생 및 고장의 원인이 됩니다.
• 소변등의 이물질로 인해 노즐이 막혀 있을 경우
사용하지 않는 부드러운 칫솔로 닦아주시십시오.

온수배관에 절대 연결하지
마십시오.

- 제품고장 또는 신체 상해의
원인이 될 수 있습니다.
반드시 냉수 배관에 연결 하십시오.



⚠

이상이 있는 상태에서는 사용하지 마십시오.
다음과 같은 때는 전원플러그를 뽑고, 급수밸브를 닫아 주세요.

- 배관이나 본체로부터 물이 샌다.
- 이상소음, 이상한 냄새가 난다.
- 본체에 균열이나 깨짐이 있다.
- 본체에서 연기가 난다.
- 이상이 있는 상태에서 계속 사용하면, 화재, 감전, 누수의 원인이 됩니다.



각 부분의 명칭 / 부속품 안내

본체



<전면>



<뒷면>



<노즐>

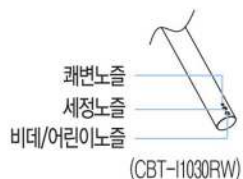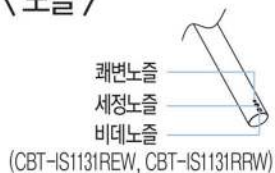

부속품

제품고정용 자재	필터 설치 자재 (CBT-IS1131REW, CBT-IS1131RRW)	배관용 자재	기타
<p>고정볼트 (2개) 고정와사 (2) 고정브라켓(2개) 고무너트 (2개)</p>	<p>본체 고정판 (1개)</p>	<p>직결형 정수필터</p>	<p>분기형 T-밸브(1개)</p>
			<p>사용 설명서 사용설명서 (1개)</p> <hr/> <p>리모컨 거치대 AA건전지(2개)</p>

설치 전 확인사항

⚠ 설치장소의 주의

- 1 직사광선이나 전열 기구를 피해 주십시오.
 - ▶ 화재 및 제품 변색이 발생 할 수 있습니다.
 - ▶ 직사광선으로 인해 리모컨 조치가 원활하지 않을 수 있습니다.
- 2 변기의 크기를 확인해 주십시오.
 - 1) 변기 길이 490mm 이상
물탱크 앞부터 변기 앞 끝까지의 길이가 최소 490mm 이상 필요합니다.
 - 2) 제품 고정 홀 중심거리 140~200mm
변기 물탱크 앞 제품 고정 홀 중심간의 거리가 140~200mm 이어야 합니다.
 - ※ 국내 표준 제품 고정 홀 중심거리는 140mm 입니다
 - ▶ 일부 수입 변기의 경우 비데와 크기가 맞지 않아 설치되지 않을 수 있습니다.
- 3 습기, 먼지가 많은곳, 물이 직접 튀는 곳 등은 피해 주십시오.
 - ▶ 제품 고장의 원인이 됩니다.
- 4 온도가 0°C이하로 내려가는 곳은 피해 주십시오.
 - ▶ 본 제품은 옥내용으로 온도가 0°C이하로 내려가는 곳에 설치할 경우 필터 및 제품 내부의 결빙으로 제품 고장이 발생 할 수 있습니다.
- 5 변기의 급수밸브가 후레쉬밸브 등일 경우 비데가 설치되지 않을 수 있습니다.
설치전에 확인하시기 바랍니다.



⚠ 위치 이동시 주의

- 1 제품 이동시 주의해 주십시오.
 - ▶ 제품을 절대 뒤집어서 옮기지 마십시오.
 - ▶ 제품을 옮기기 전에는 반드시 전원플러그를 뽑고, 비데 본체내의 물을 빼신 후 이동하십시오.



⚠ 배관 연결시 주의

- 1 냉수 배관에 연결해 주십시오.
 - ▶ 온수 배관에 연결할 경우 화상 및 제품 고장의 원인이 될 수 있습니다.



설치방법

설치순서(CBT-I1030RW)



주의

- 본 제품은 AC120V 전용 제품입니다.
- 설치가 완료되지 않은 상태에서 절대로 전원을 연결하지 마십시오.


- 1** 급수호수를 분리하십시오.
- ▶ 급수밸브를 오른쪽으로 돌려서 잠그고 급수밸브에 연결된 변기쪽 급수 호스를 분리하십시오.





- 2** 일반 변좌시트를 변기에서 분리하십시오.
- ▶ 좌, 우측 고정너트(2개)를 풀고 일반 변좌와 변좌 뚜껑을 분리하십시오.
 - ▶ 분리한 일반 변좌와 변좌뚜껑, 고정너트는 이사 또는 이후 재설치가 필요할 경우를 대비해 잘 보관하십시오




- 3** T 밸브를 설치하십시오.
- ▶ T 밸브를 보이는 것처럼 설치하십시오.

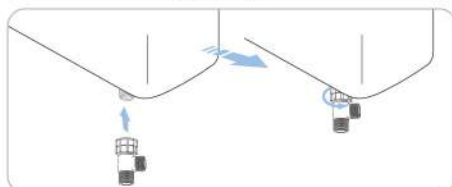

- 4** 비데를 설치하십시오.
- ▶ 그림과 같이 본체고정판을 양변기 위에 올려놓고, 본체고정판에 고정볼트를 결합하여 양변기에 고정시킵니다.
이때 본체고정판이 흔들리지 않도록 공구등을 이용하여 견고하게 고정하십시오.
 - ▶ 본체고정판의 고정위치에 따라, 제품이 설치되는 위치가 결정됩니다. 제품과 양변기의 크기를 고려하여 본체 고정판을 적당한 위치로 고정하여 주십시오. 본체고정판의 위치가 적당하지 않으면 시트가 변기보다 앞으로 나오거나 뒤로 들어가게 됩니다.

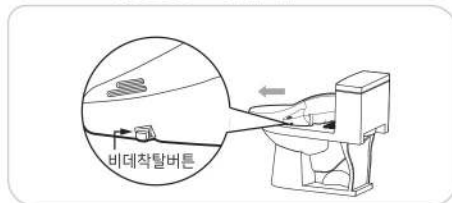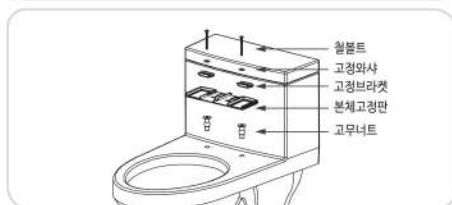

- 5** 비데용 호스를 연결해주십시오.
- ▶ T 밸브와 비데에 호스를 연결해주십시오.
급수밸브를 왼쪽으로 돌려서 물을 공급해주십시오.

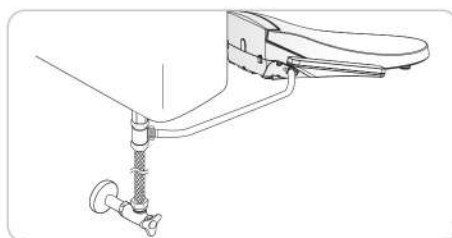

설치순서 (CBT-IS1131REW, CBT-IS1131RRW)

! 주의

- 본 제품은 AC120V 전용 제품입니다.
- 설치가 완료되지 않은 상태에서 절대로 전원을 연결하지 마십시오.
- 접지가 되어있지 않은 콘센트는 한전이나 전기공사업체에 의뢰 하여 반드시 접지후 사용하십시오.

1 일반 변좌시트를 변기에서 분리하십시오.

- ▶ 좌, 우측 고정너트(2개)를 풀고 일반 변좌와 변좌 뚜껑을 분리 하십시오.
- ▶ 분리한 일반 변좌와 변좌뚜껑, 고정너트는 이사 또는 이후 재설치가 필요할 경우를 대비해 잘 보관 하십시오.




- 비데 설치전 반드시 변기(도기) 크기를 확인하여 주십시오.

2 급수밸브를 오른쪽으로 돌려서 잠그고 급수밸브에 연결된 변기쪽 급수호스를 분리 하십시오.



3 급수 호스를 분리한 곳에 T밸브를 설치하십시오.

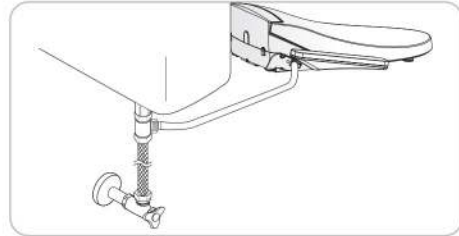



설치방법

4 비데 본체를 설치 합니다.


- ▶ 그림과 같이 본체고정판을 양변기 위에 올려놓고, 본체고정판에 고정볼트를 결합하여 양변기에 고정시킵니다. 이때 본체고정판이 흔들리지 않도록 공구등을 이용하여 견고하게 고정하십시오.
- ▶ 본체고정판의 고정위치에 따라, 제품이 설치되는 위치가 결정됩니다. 제품과 양변기의 크기를 고려하여 본체 고정판을 적당한 위치로 고정하여 주십시오. 본체고정판의 위치가 적당하지 않으면 시트가 변기보다 앞으로 나오거나 뒤로 들어가게 됩니다.



• 본체를 부착하여 고정시킬때 본체와 변기의 중심이 맞도록 주의하여 고정시켜 주세요.

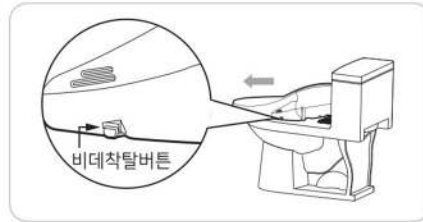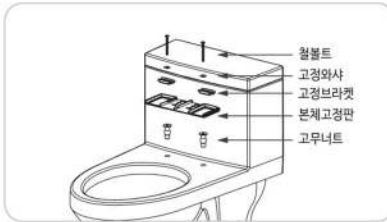

5 비데급수구에 비데용 호수를 연결합니다.

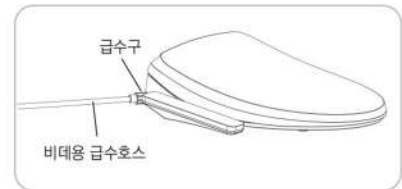

6 분기형 T밸브와 정수필터, 비데용급수호스를 연결해주십시오.

※ 정수필터의 설치방법은 하단을 참조바랍니다.



정수필터 설치방법

1 정수필터를 T밸브와 비데용 호스 사이에 연결합니다.

- ※ T밸브와 정수필터 체결시 고무실링을 꼭 확인하세요.
- ※ 정수필터를 과도하게 체결하지 마십시오.

2 호스 연결부위 및 정수필터의 연결부위에 누수가 없는지 확인하여 주십시오.




리모컨 설치방법


⚠ 리모컨 설치시 주의사항

- 직사광선을 피해 설치해 주십시오.
- 형광등이 리모컨이나 본체의 리모컨 수신부에 근접되어 있는 경우 빛으로 인해 신호를 주고 받지 못할 수 있으니 주의하여 주십시오.
- 리모컨은 버튼을 터치하였을 때 제품이 동작하는(리모컨 신호가 수신되는) 위치에 설치해 주십시오.


- 1** 거치대를 부착할 벽면의 위치를 결정하여 깨끗하게 닦은 후 물기를 제거하십시오.
- ▶ 변좌에 앉았을 때 손이 쉽게 닿고 물이 튀지 않는 곳으로 하십시오.

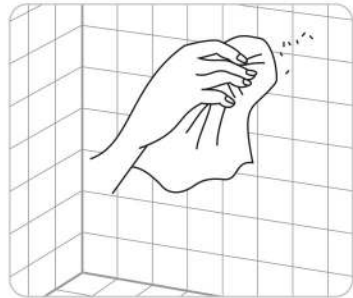

- 2** 거치대 뒷면 부착용 스티커의 보호 커버를 제거하고 벽면에 올바른 방향으로 붙여 주십시오.

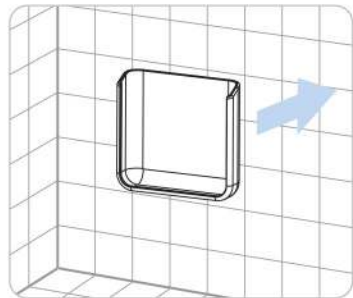

- 3** 거치대가 단단하게 부착되었는지 확인한 후 리모컨을 거치하십시오.
- ▶ 리모컨이 위에서 아래로 가도록 거치하여 주십시오.

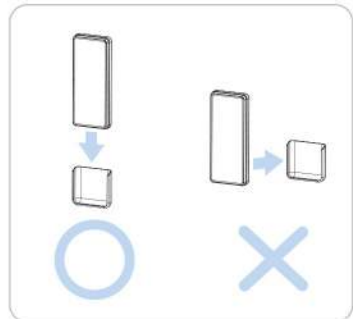


리모컨 건전지 교환방법

! 주의

- 건전지를 오래 사용할 경우 신호가 약해져 정상 작동이 안될 수 있으니 건전지를 주기적으로 교체해 주십시오.
- 리모컨 LED 밝기가 현저히 약해지거나 버튼 조작시 비데가 동작하지 않는 경우 건전지를 교체해 주십시오.
- 리모컨은 AA건전지 2개가 필요하며 건전지의 [+], [-] 방향을 리모컨에 표시되어 있는 방향에 따라 바르게 넣어 주십시오.
- 새 건전지와 오래된 건전지를 혼용해서 사용하지 마십시오.

- 1 리모컨을 거치대에서 분리하여 주십시오.
- 2 리모컨 후면의 건전지 커버를 화살표 방향으로 당겨 열어 주십시오.
- 3 기존 건전지를 분리하고 표시되어 있는 방향에 맞게 새 건전지를 넣어 주십시오.
- 4 건전지 커버를 장착해 주십시오.
- 5 세정 버튼을 눌러 리모컨의 수압/온풍 LED가 점등되는지 확인한 후 정지 버튼을 눌러 주십시오.
- 6 리모컨을 다시 거치대에 거치해 주십시오.

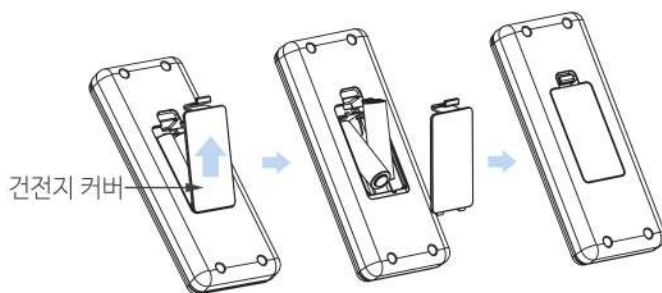

! 설치 시 참고사항



- 두 대 이상의 제품을 인접한 거리에 설치할 경우 리모컨 조작 시 두 대 이상의 제품이 동시에 작동할 수 있습니다.
- 이럴 경우 각각의 리모컨과 제품의 코드를 설정해 한 개의 리모컨으로 한 대의 제품만이 동작하도록 설정할 수 있습니다.
- 해당 설정을 하고자 한다면 고객센터로 문의하여 주십시오.

설치 후 필수 점검 사항

- 1** 비데 노즐의 포장 스티커를 제거하여 주십시오.
 ※ 비데 본체 중심부의 노즐 포장 스티커를 제거하여야 제품이 정상 동작합니다




- 2** 급수밸브를 왼쪽으로 돌려 열어 주시고, 연결부위에서 누수가 없는지 확인합니다.
 ※ 경고 : 정수필터가 과도하게 체결되거나 느슨하게 체결되어 있으면 누수의 원인이 됩니다.

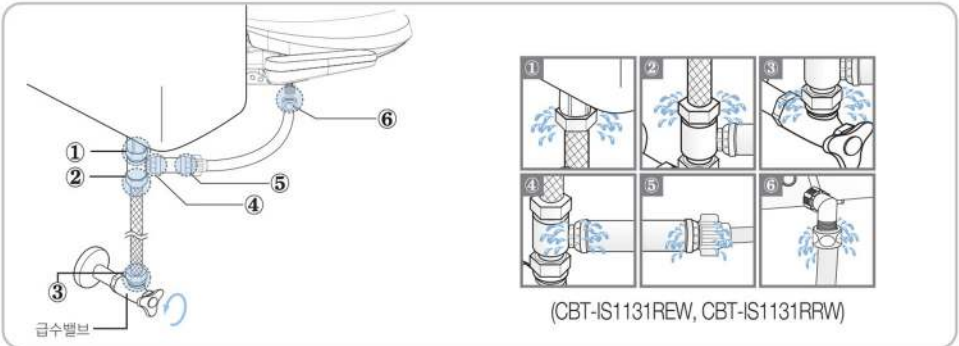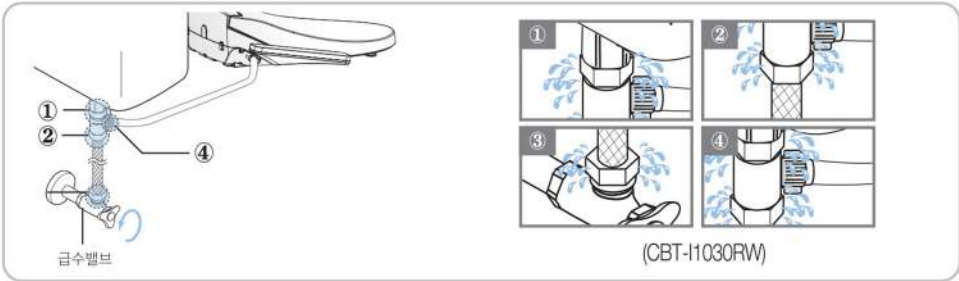

- 3** 전원플러그를 콘센트에 꽂아 주십시오.
 ※ 경고 : 본체에 전원이 들어간 상태에서는 본체를 뒤집거나 움직이지 마십시오. 고장의 원인이 됩니다.

- 4** 자동으로 탱크에 물이 채워집니다.
 물이 채워지는 동안 "빠-익" 하는 부저음이 연속적으로 납니다.
 물이 다 채워지면 알람소리와 함께 부저음이 멈춥니다.


- 5** 왼손으로 착좌감지센서부를 접촉한 상태에서 (착좌감지센서를 동작시킨 상태에서) 세정 또는 비데버튼을 눌러 노즐동작 물이 분사되는지를 확인합니다.
 이때, 세정노즐부위를 오른손으로 가려 물이 밖으로 튀지 않도록 하십시오.
 (확인 후, 착좌감지센서부에서 왼손을 떼면 분사가 멈춥니다.)

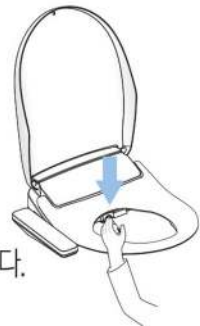

사용 전 확인 사항

비데 사용전 확인 사항

- 1 전원을 연결한 후, 급수밸브를 열어주십시오.
 - ▶ 본 제품은 AC120V 전용 제품입니다.
 - ▶ 전원플러그는 반드시 접지된 AC120V 전용 콘센트에 꽂아 주십시오.
 - ▶ 전원이 연결되고 물이 공급되어야 비데가 정상적으로 작동합니다.

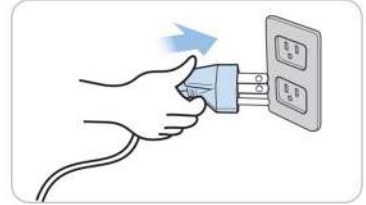

- 2 정기적으로 정수필터를 교체해 주십시오.
(CBT-IS1131REW, CBT-IS1131RRW)
 - ▶ 이물질로 인해 필터가 막히거나 교체 시기가 되어 물 투과율이 줄어들 경우 제품내 물 공급이 원활하지 않을 수 있습니다.
 - ※ 정수필터 권장 사용기간은 약4~8개월이나 사용량, 수질상태 등 사용환경에 따라 달라질 수 있습니다.

- 3 변좌에 걸터 앉지 말고 항상 중앙에 앉으십시오.
 - ▶ 사용중 엉덩이를 움직이거나, 다리를 꼬고 앉아서 사용시 비데가 동작을 멈출 수 있습니다.
 - ▶ 비데의 변좌 위에 유아용 보조시트를 설치하시면 비데가 동작하지 않습니다. (착좌감지센서 인식 안 됨)


- 4 비데수압이 약할 경우
 - ▶ 용변을 마친 후 변기의 물내림과 동시에 비데를 사용하면 수압이 약해질 수 있습니다.
 - ▶ 수압이 약한 지역일 경우 비데가 동작하지 않을 수 있습니다.
(수압 0.04 MPa (0.4Kgf/cm²)이하일 경우 비데가 동작하지 않을 수 있습니다.)

⚠ 주의


비데 조작부의 세척시, 전원플러그를 분리한 후, 물에 젖은 부드러운 천을 사용하고
수세미나 벤젠, 신나, 락스, 방향제 등은 사용하지거나 묻지 않게 하십시오.
※ 조작부의 변색, 균열, 파손 등이 될 수 있습니다.

조작부

〈리모컨〉

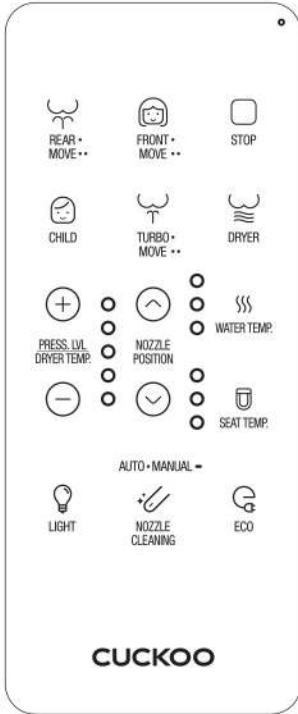


(CBT-I1030RW)

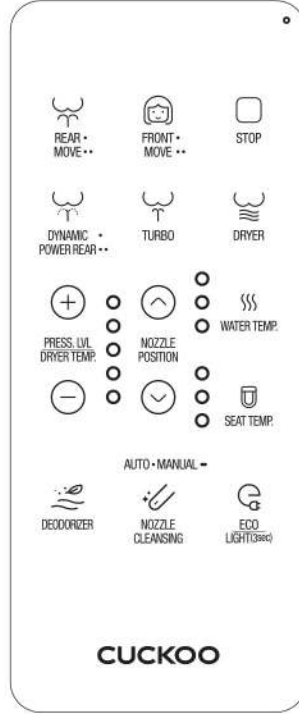

(CBT-IS1131REW, CBT-IS1131RRW)

〈본체 간단 조작부〉

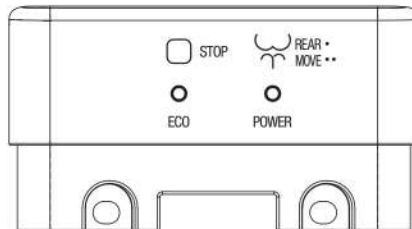

조작부 기능 설명

 <p>REAR MOVE</p>	<p>항문세정시 사용합니다.</p>	 <p>NOZZLE POSITION</p>	<p>앞뒤로 노즐의 위치를 조절할 수 있습니다.</p>
 <p>FRONT MOVE</p>	<p>여성전용 비데 세정입니다.</p>	 <p>WATER TEMP.</p>	<p>온수온도를 0~3단계까지 조절할 수 있습니다.</p>
 <p>TURBO MOVE</p>	<p>쾌변용 물줄기가 항문을 마사지하여 시원한 배변을 유도합니다.</p>	 <p>SEAT TEMP.</p>	<p>변좌온도를 0~3단계까지 조절할 수 있습니다.</p>
 <p>DYNAMIC POWER REAR (CBT-IS1131REW, CBT-IS1131RRW)</p>	<p>DYNAMIC • 수압과 세정방식이 변화하여 다이내믹한 세정을 할 수 있습니다. POWER REAR • 일반 세정보다 강력한 세정입니다.</p>	<p>AUTO-MANUAL  NOZZLE CLEANING</p>	<p>* 노즐을 청소할 수 있습니다. * 버튼을 짧게 누를 경우 노즐이 전/후로 무브하면서 자동세척을 합니다. * 버튼을 길게 누르면 수동기능이 실행되어 노즐이 최대로 전진한 후 2분간 정지합니다.</p>
 <p>DRYER</p>	<p>온풍 건조를 시작합니다. • 3분 후 자동 정지합니다. * 건조전에 티슈등으로 물방울을 닦아내면 빨리 마릅니다.</p>	 LIGHT (CBT-I1030RW)	<p>버튼을 누르면 무드등이 ON 상태가 됩니다. 버튼을 다시 누르면 무드등이 OFF 상태가 됩니다. (소리 구분)</p>
 <p>CHILD (CBT-I1030RW)</p>	<p>부드러운 물줄기로 세정부터 건조까지 자동으로 진행됩니다. • 1분 세정, 3분 건조 후 자동정지합니다.</p>	 DEODORIZER	<p>사용중에 탈취버튼을 누르면 탈취가 작동됩니다. 탈취 버튼을 다시 누르면 탈취가 정지됩니다. (탈취기능을 선택적으로 사용할 수 있습니다.) (탈취필터는 본체 내부에 장착되어 있습니다.) * 화장실의 냄새 제거를 위하여 탈취기능을 사용합니다. (CBT-IS1131REW, CBT-IS1131RRW)</p>
 <p>PRESS. LVL. DRYER TEMP.</p>	<p>수압 및 온풍온도를 1~5단계까지 조절할 수 있습니다.</p>	 ECO  ECO LIGHT (3sec)	<p>버튼을 짧게 눌러 절전 기능을 사용할 수 있습니다. * 버튼을 3초간 길게 누르면 무드등 기능을 사용할 수 있습니다. 버튼을 한번 더 3초간 길게 누르면 무드등 기능이 해제됩니다. (CBT-IS1131REW, CBT-IS1131RRW)</p>

- 변좌에 걸터 앉지 말고 항상 중앙에 앉으십시오.(착좌감지센서가 작동되지 않아 기본 기능들이 동작하지 않게 됩니다.)
- 입수온도가 15℃ 이하일 경우 설정온도보다 세정수 온도가 낮아질 수 있습니다. (나머지 동작은 정상동작합니다.)
- 수압이 강할 경우(특히 쾌변/파워세정 기능 중) 설정온도보다 세정수 온도가 낮아질 수 있습니다. 이럴 경우 수압을 3단 이하로 조절하여 사용하세요.




변좌나 온풍건조에서 장시간 오래 사용시 저온화상의 위험이 있습니다.


- 다 음과 같은 사람이 사용했을 때에는 변좌온도 조절버튼을 "OFF" 또는 "2단"으로 사용해 주세요.
어린이, 노약자, 피부가 약한 분, 혼자서 온도 조절을 할 수 없는 사람, 수면을 재촉하는 약(수면제나 감기약 등)을 복용한 사람, 숙취, 피로한 사람 등은 저온 화상이나 사고의 원인이 됩니다.

기본적인 사용방법

- 1** 변좌에 앉습니다.
▶ 변좌 중앙에 앉습니다.

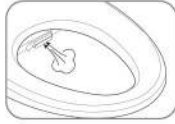


- 2** 또는 버튼을 누릅니다.

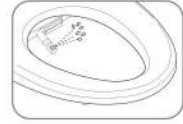


- ▶ 세정, 비데, 래변 기능을 사용할 수 있습니다.
▶ 사용도중 눌렀던 버튼을 한번 더 누르면 무브세정을 사용할 수 있습니다.

- 3** 버튼을 누릅니다.

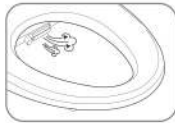

- ▶ 건조 기능을 사용할 수 있습니다.
▶ 3분간 동작합니다.
▶ 화장지로 가볍게 물방울을 훑어주면 건조효과가 뛰어납니다.

- 4** 버튼을 누릅니다.

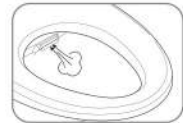

- ▶ 세정, 비데, 래변 또는 건조 동작이 멈춥니다.

• 본 제품의 착좌감지센서는 변좌내부에 설치되어 있습니다. 착좌감지센서 위치에 인체의 피부가 닿으면 동작하게 됩니다. 만약 변좌표면에 커버등을 씌우면 피부가 닿지 않아 착좌감지센서가 동작하지 않을 수 있습니다.

간단 조작부 사용방법

간단 조작부란?

- 리모컨의 분실 및 고장 또는 건전지가 다 닳았을 경우, 기본 기능(세정/정지)을 동작 시킬 수 있는 비상 조작부입니다.
- 비상시 사용하는 보조 조작부이기 때문에 수압 및 온도 조절은 리모컨을 통해서만 가능 합니다.



- 1** 변좌에 앉습니다.
▶ 변좌 중앙에 앉습니다.

- 2** 버튼을 누릅니다.

- ▶ 세정 기능을 사용할 수 있습니다.
▶ 세정 후 건조 기능이 3분 동작합니다.
▶ 세정 사용도중 눌렀던 버튼을 한번 더 누르면 무브세정을 사용할 수 있습니다.

- 3** 버튼을 누릅니다.

- ▶ 세정 또는 건조 동작이 멈춥니다.

각 기능조절 및 사용방법

무브세정

- 세정 또는 비데, 쾌변 사용 중에 버튼을 한번 더 누르면 노즐이 앞뒤로 움직이며 무브세정을 합니다.
- 무브세정 중에 버튼을 한번 더 누르면 노즐이 정지합니다.

수압조절

- 수압/온풍 조절 버튼을 눌러 물세기를 1단에서 5단까지 조절할 수 있습니다.
- 정수 필터에 이물이 끼면 수압이 약해질 수 있습니다. 수압이 점점 약해지면 필터를 교체해야 합니다.
- 초기 설정 수압은 3단입니다.

노즐위치조절

- 노즐위치 조절 버튼을 눌러 노즐위치를 조절할 수 있습니다.
- 표시램프에는 항상 수압단계를 우선적으로 표시합니다. 노즐위치 버튼을 누르면 노즐의 위치가 표시됩니다.

건조온도조절

- 건조 기능 사용 중 수압/온풍 조절버튼을 조작해 건조온도를 1단에서 5단까지 조절할 수 있습니다.
- 초기 설정 건조온도는 3단입니다.

온수온도조절

- “온수온도” 버튼을 눌러 온수온도를 0단(OFF)에서 3단(저, 중, 고)까지 조절할 수 있습니다.
- 초기 설정 온수온도는 OFF입니다. 그 이후에는 사용한 온수온도를 기억합니다.

변좌온도조절

- “변좌온도” 버튼을 눌러 변좌온도를 0단(OFF)에서 3단(저, 중, 고)까지 조절할 수 있습니다.
- 초기 설정 변좌온도는 OFF입니다. 그 이후에는 사용한 변좌온도를 기억합니다.

어린이 기능(CBT-I1030RW)

- 어린이를 위한 편리한 기능입니다.
- 일반 세정보다 부드러운 물줄기로 1분간 자동으로 수압조절 및 무브 기능을 실행하며 동작합니다.
- 세정이 끝나면 자동으로 건조를 시작하며 3분 후 정지합니다.

절전

- “절전” 버튼을 짧게 눌러 절전 기능을 사용할 수 있습니다.
- 초기 설정은 OFF이며 표시램프를 통해 절전 기능 실행 여부를 확인할 수 있습니다.

절전 기능 CBT-I1030RW, CBT-IS1131REW, CBT-IS1131RRW

OFF	꺼짐
ON	켜짐

- 버튼을 한번 더 짧게 누르면 절전 기능이 해제됩니다.

- 절전 중에는 온수 및 변좌 온도가 설정 온도보다 낮게 유지되기 때문에 겨울철 절전기능 사용 시 초기에는 온수 및 변좌가 차가울 수 있습니다.

그외의 절전 방법

절전을 위해서는 다음과 같은 것을 당부합니다.

- 변좌뚜껑은 닫아 둡니다. 사용후 변좌 뚜껑을 닫아두면, 변좌표면으로 부터의 발열을 적게하여 절전이 됩니다.
- 설정온도를 낮게 합니다. 계절에 따라서, 차가움을 느끼지 않는 범위에서 설정온도를 낮게 조절하면, 절전이 됩니다.
- 전원코드를 빼 놓습니다. 외출시등 장시간 사용하지 않을때는, 전원플러그를 빼두면 절전이 됩니다.

각 기능조절 및 사용방법

셀프클리닝

- 모든 세정 사용 전 노즐이 나오면서 세척수가 나와 노즐을 청소합니다.
- 모든 세정 사용 후 노즐이 들어가면서 세척수가 나와 노즐을 청소합니다.

노즐청소

(1) 자동기능

- 변좌에 앉지 않은 상태에서 “노즐청소” 버튼을 짧게 눌러 자동기능을 사용할수 있습니다.
- 자동 기능은 노즐이 자동으로 움직이면서 노즐을 자동세척하는 기능입니다.

(2) 수동기능

- 변좌에 앉지 않은 상태에서 “노즐청소” 버튼을 길게 눌러 수동기능을 사용할수 있습니다.
- 수동기능 동작시 노즐이 돌출 됩니다.
- “정지” 버튼을 누르거나 2분이 지나면 노즐이 들어가면서 자가세척을 합니다.

정지버튼을 누르지 않고 노즐을 강제로 밀어 넣으면 노즐이 손상될 수 있습니다.

! 세척 전 주의사항

- 날카로운 솔이나 거친 수세미 청소시 제품에 긁힘이나 손상이 발생할 수 있습니다.
- 올바르게 않은 청소 방법으로 발생한 제품변색, 균열, 긁힘 등 파손으로 외관케이스 교체시 보증기간이내라도 유상처리됩니다.
- 가압적 노즐 및 온풍구를 향하여 물을 뿌리지 마십시오. 물이 내부로 들어가 감전 및 고장의 원인이 될 수 있습니다.
- 비데 조작부는 전원플러그를 분리한 후, 물에 젖은 부드러운 천을 사용하고 수세미나 벤젠, 신나, 락스, 방향제 등은 사용하지거나 묻지 않게 하십시오.

노즐 세척방법

1 자동 노즐 청소

- 변좌에 앉지 않은 상태에서 "노즐청소" 버튼을 짧게 누르십시오.
- 자동으로 노즐이 전,후를 움직이면서 자동세척을 합니다.


2 수동 노즐 청소

변좌에 앉지 않은 상태에서 "노즐청소" 버튼을 3초간 길게 누르십시오. 수동기능이 실행되어 노즐이 돌출됩니다.

- 사용하지 않는 칫솔등으로 노즐을 청소합니다.
- 정지버튼을 누르거나 2분이 지나면 노즐이 들어가면서 자가세척을 합니다.



(CBT-I1030RW) (CBT-IS1131REW, CBT-IS1131RRW)

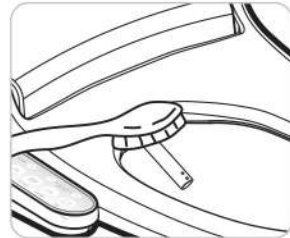

- ! 정지버튼을 누르지 않고 노즐을 강제로 밀어 넣으면 노즐이 손상될 수 있습니다.

노즐캡 청소방법 및 교체방법(CBT-I1030RW)

- 1 (수동노즐세척) 변좌에 앉지 않은 상태에서 "노즐청소" 버튼을 길게 누르면 노즐이 앞으로 나와 2분간 정지합니다.
- 2 이때 노즐캡을 뺀 후, 칫솔 등을 이용하여 노즐 및 노즐캡을 청소하여 주십시오.
- 3 노즐 캡 양끝단을 노즐과 수직방향 아래로 누르면서 노즐과 수평방향으로 살짝 당기면 분리가 됩니다.

- ! 강제로 노즐 캡을 당기시면 노즐 캡 후면에 있는 후크가 손상될 수 있습니다.

- 4 청소가 끝난 후 노즐 캡을 끼우고 정지버튼을 누르면 노즐이 복귀됩니다.



노즐캡 양끝단을 노즐과 수직방향 아래로 누릅니다.




수직방향으로 누르면서 노즐과 수평방향으로 당깁니다.

세척 및 청소방법

외관청소방법


- 비데는 외관이 플라스틱으로 되어 있어 수세미, 약품 등에 의해 손상될 수 있습니다.
신나, 벤젠, 화장실 청소용 크리너는 직접 비데 외관청소용으로 사용하지 마십시오.
- 본체는 목욕중 샤워기 등으로 물청소가 가능하나, 전원플러그에는 물을 뿌리지 마십시오.
(감전사고의 원인이 됩니다.)
- 청소시에는 전원플러그를 콘센트에서 분리한 후에 하여 주시고, 전원 플러그 및 콘센트에는 물이 튀지 않도록 하여 주십시오.
- 젖은 손으로 전원 콘센트를 만지면 감전의 원인이 됩니다.
- 청소 후에는 부드러운 천을 이용하여 물기를 제거하여 주십시오.

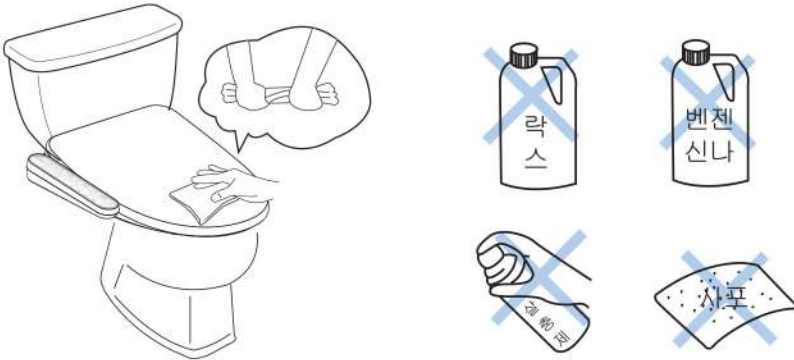

 올바른지 않은 청소 방법으로 발생한 제품변색, 균열, 굽힘 등 파손으로 외관케이스 교체시 보증기간이내 라도 유상처리됩니다.

수도 필터 여과망 청소방법

- 정기적으로 수도필터 여과망을 청소해 주십시오.
- 이물질로 인해 여과망이 막힐 경우 제품내 물 공급이 원활하지 않을 수 있습니다.
- 급수밸브를 잠근 후 정수필터 아답터 또는 비데호스를 분리하여 제품 내장 수도 필터 여과망을 청소하여 주십시오.

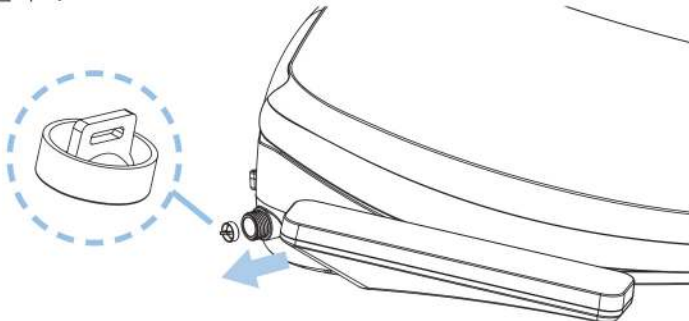


제품 분리 방법 및 보관방법 / 겨울철 비데 사용방법

제품 분리 방법 및 보관방법

※ 이사 및 청소등으로 제품을 변기에서 분리하실 때에는 다음과 같이 하십시오.

- 1 전원 플러그를 콘센트에서 뽑아 주십시오.

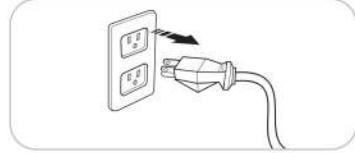

- 2 급수밸브를 시계방향으로 돌려 잠그어 주십시오.



- 3 비데용 급수호스의 정수필터와 T밸브측의 너트를 풀고 비데 본체를 변기로부터 분리하십시오.

※ 비데분리방법
레버를 누른 상태에서 제품을 앞으로 당깁니다

- 4 비데본체 밑면의 배수구 마개를 분리하여 온수탱크의 물을 완전히 배수시켜 주십시오.

- 5 급수관을 급수밸브에 연결하십시오.



- 6 급수밸브를 반시계방향으로 돌려 열고 급수관 연결부에서 누수가 없는지 확인하여 주십시오.

- 7 비데 설치시 분리하였던 변기시트, 커버를 변기에 조립하여 주십시오.

겨울철 비데 사용법

- 1 전원플러그를 콘센트에 꽂아 주시고 본체에 전원이 공급되는지 확인하여 주십시오.

- 2 온수온도 버튼을 눌러 온수온도를 완전히 끄지 마시고 “약”이상으로 설정하여 주십시오.

- 3 장시간 사용하지 않을 경우에는 온수탱크의 물을 완전히 배수시켜 주십시오.

고장신고 전에 확인하십시오

▼ 사용방법 대로 올바르게 사용하지 않았을 경우에는 고장이 아니라도 제품이 제대로 작동하지 않을 수가 있습니다. 제품 기능에 이상이 있으면 아래의 점검표대로 점검해 보고 그래도 이상이 있으면 고객센터실로 문의하여 주십시오.

증 상	확인사항	조치사항
물이 나오지 않을 경우	<ul style="list-style-type: none"> • 단수된 것은 아닙니까? • 급수밸브가 잠겨있지 않나요? • 정수필터가 막혀있지 않나요? 	<ul style="list-style-type: none"> • 단수 복귀시까지 기다려 주세요. • 급수 밸브를 열어 주세요. • 정수필터를 교체하여 주세요.
동작이 되지 않을 경우	<ul style="list-style-type: none"> • 전원플러그가 콘센트에 꽂혀 있나요? • 변좌에 앉지 않은상태에서 비데를 작동시켰나요? • 정전되어 있지는 않습니까? 	<ul style="list-style-type: none"> • 전원플러그를 콘센트에 꽂아 주세요. • 변좌에 앉아 비데를 작동시켜 주세요. (착좌감지센서에 피부가 닿도록 앉아 주십시오.) • 전원이 복귀 될때까지 기다려 주세요.
누수가 있을 경우	<ul style="list-style-type: none"> • 배관 연결이 정확히 잘 되어 있나요? 	<ul style="list-style-type: none"> • '설치 후 필수 점검 사항' 페이지를 참조하세요. • 구입처 또는 고객센터실로 연락 주세요.
수압이 약할 경우	<ul style="list-style-type: none"> • 수도필터에 이물질이 끼어 있지 않습니까? • 본체의 호스가 꺾여 있지 않습니까? • 수압표시등이 1단계로 설정 되어 있나요? • 정수필터가 막혀 있지 않나요? 	<ul style="list-style-type: none"> • 수도필터를 청소해 주세요. • 호스의 꺾인 부분을 펴 줍니다. • 수압을 올려보세요. • 구입처 또는 고객센터실로 연락 주세요.
온수, 변좌, 온풍 온도가 따뜻하지 않을 경우	<ul style="list-style-type: none"> • 온수/변좌 온도 설정이 '저' 또는 'OFF'로 되어 있습니까? • 온풍 온도 설정이 '2단' 이하로 되어 있습니까? • 입수온도가 낮거나(15℃ 미만) 수압 설정이 '5단'으로 되어 있습니까? • 절전모드가 설정되어 있습니까? 	<ul style="list-style-type: none"> • 온수/변좌 온도를 '중' 또는 '상'으로 설정해 주세요. • 온풍 온도를 '3단' 이상으로 설정해 주세요. • 온수 온도 유지를 위해 수압을 '3단' 이하로 설정해 주세요. • 절전모드 설정시 설정온도보다 낮은 온도를 유지합니다. 절전모드를 해제하거나 변좌에 앉은 후 5분 정도 기다려 주세요.
본체가 흔들릴 경우	<ul style="list-style-type: none"> • 본체를 고정하는 고정볼트가 느슨해져 있지 않습니까? 	<ul style="list-style-type: none"> • 본체의 고정볼트를 다시 조여 주세요.
버튼이 동작하지 않을 때	<ul style="list-style-type: none"> • 터치 조작부에 물이 묻어 있습니까? • 리모컨의 표시램프가 점등 됩니까? 	<ul style="list-style-type: none"> • 조작부에 물이 묻어 있으면 버튼이 동작하지 않을 수 있으므로 물기를 제거 후 사용하여 주십시오. • 리모컨의 건전지가 부족할 경우 표시램프가 점등되지 않습니다. 건전지를 교체해 주세요.

제품규격

모 델 명			CBT-I1030RW	CBT-IS1131REW	CBT-IS1131RRW
변 좌 타 입			ELONGATE	ELONGATE	ROUND
정 격			AC 120V / 60Hz		
최 대 소 비 전 력			660W	1260W	
전 원 코 드			약1.5m		
급 수 방 식			수도직결식		
세 정 장 치	토수량	세정	약0.74L/min	약0.7L/min	
		비데	약0.71L/min	약0.57L/min	
		쾌변	약0.76L/min	약0.9L/min	
	수압조절	5단계			
	온도조절	상온, 저(34℃), 중(37℃), 고(40℃)			
	히터용량	600W	1200W		
	안전장치	온도퓨즈, 써모 스위치, 수위센서			
역류방지	Check Valve, Vacuum Valve				
난방 변좌 장치	온도조절	상온, 저(34℃), 중(37℃), 고(40℃)			
	히터용량	55 W			
	안전장치	온도퓨즈			
온풍 건조 장치	온도조절	상온 ~ 55℃(5단계)			
	히터용량	250 W			
	안전장치	온도퓨즈			
사 용 급 수 압			0.1 ~ 0.74 Mpa (1.0 ~ 7.5 kgf/cm ²)		
사 용 급 수 온 도			5 ~ 34℃ (권장 15 ~ 25℃)		
사 용 주 위 온 도			5 ~ 40℃ (권장 10 ~ 35℃)		
제 품 크 기			430.5 x 534 x 162 mm		430.5 x 493.9 x 162 mm
제 품 중 량			약 4.0kg		

* The product design and specifications may be changed without prior notice for improving product performance.

* The proper water pressure for use is 0.11-0.68 Mpa (1.1 bar ~ 6.8 bar).

MEMO

CUCKOO

www.cuckooamerica.com / www.cuckoorental.com

We provide satisfying Consultation and services concerning your complaints, suggestions, and recommendations upon receiving your troubled product model name, status, and contact information.

- ♣ After reading this manual, keep it in a place easily accessible to the user for future reference.
- ♣ This manual includes the warranty.
- ♣ Caution : Please read this manual carefully to ensure safety and a longer product lifespan.