

Grinding automatic stop function description

1. Grinding will stop automatically when grinder no-load;
2. Grinding will stop automatically when grinding done;
3. The automatic stop function will be affected by different voltage in different regions, there is a manual calibration function set, operation as follows:
Firstly make sure no coffee bean in the grinder, Secondly power off grinder, long press the button⑪, then power on in the meantime, let grinder working until stop, the calibration is done.

How to deal with motor stalling

1. Press switch button⑪ to stop motor, plug out grinder to power off;
2. Take off the lid①, pour out coffee beans and empty the burr and chamber;
3. Plug in and rotate dial scale⑥ to coarse grind, press switch button⑪ to restart the motor.

Safety precautions

- * Do not modify this product without prior authorization;
- * Do not place the product near any fire source;
- * Do not wash the exterior and interior of the product with water;
- * Do not use this product outdoors or in direct sunlight;
- * Do not grind anything other than coffee beans;
- * Do not allow children to touch or operate this product;
- * Do not squeeze, pull, knot or damage the power cord;
- * If the power cord is damaged, in order to avoid the risk of electric shock, it must be replaced by the manufacturer or after-sales service professionals.

Warranty and after sales service

The warranty period is one year from the date of purchase. Under the warranty period the company will provide a full range of warranty services in instances of product failure (excluding any failure due to misuse or inappropriate operation). Proof of purchase is required for any warranty claims. The warranty covers:

1. Free repair of faulty grinders;
2. Free replacement of faulty parts (excluding any consumables such as burr sets);
3. Items stipulated by law.

Exceptions

Product failure or damage in one of the following situations is not covered by the warranty.

1. Product failure caused by unauthorized use;
2. Product failure caused by dismantling the machine without authorization;
3. Product failure caused by failure to operate in accordance with the instructions;
4. Obtain the product by illegal means;
5. Product failure caused by force majeure;
6. Products repaired by unauthorized third party personnel without contacting the company and its authorized dealers.

 
Application and usage

1. Young children should be supervised to ensure that they do not play with the appliance.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
3. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
4. If the manufacturer wants to limit the use of the appliance to less than the above, this shall be clearly stated in the instructions.

Conical Burr

Coffee Grinder

Instructions

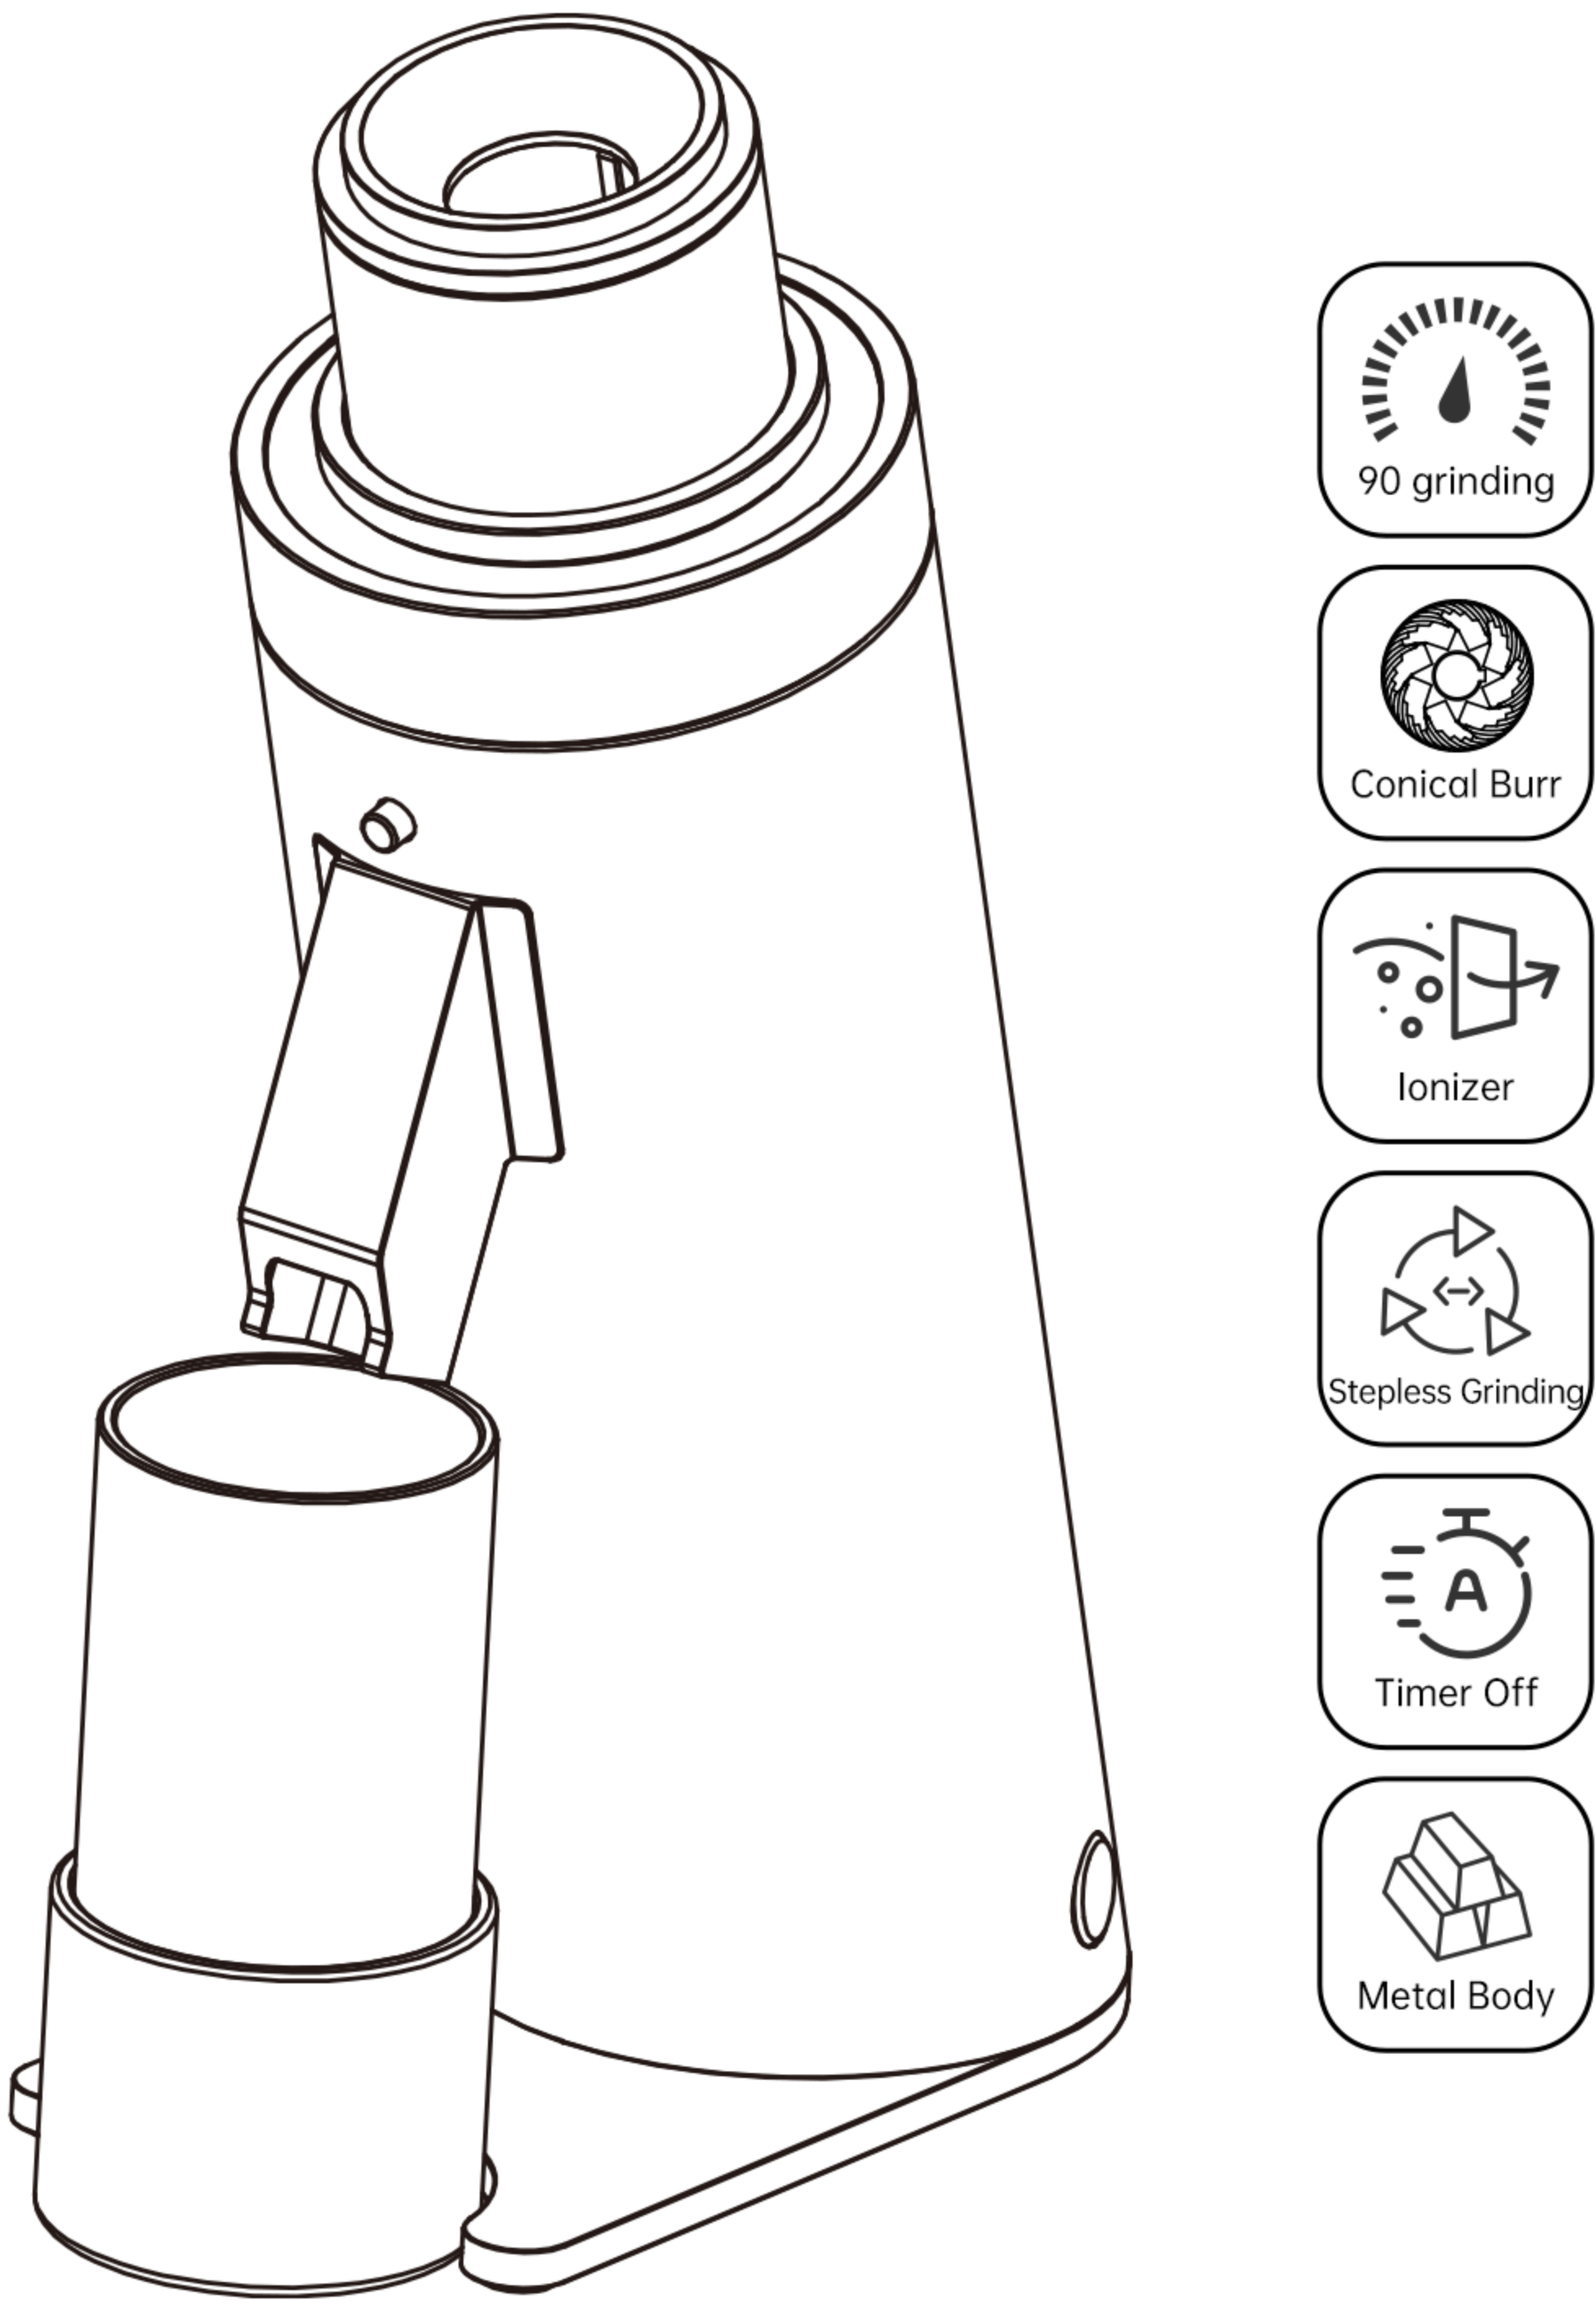

DC63

Single dose coffee grinder

Please read this manual thoroughly before use.
Keep this manual in a safe place for future reference.

Parameters

Item	Coffee grinder
Model	DC63
Item size	L165×W100×H320mm
Carton size	L440*W325*H185mm
N.W	5.3Kg
G.W	6.7Kg
Rated power	190W
Burr	63mm Conical
Capacity of grinder chamber	20g
Capacity of bellows	25g

 
Accessories

 
① Bellow hopper With lid allows for the gentle compression of air to minimizing coffee grinds retention.	③ Cup stand Wood
② Dosing cup 6063 aluminum alloy with anodizing	④ Cleaning Brush Clean grinder and workspace
⑤ Allen wrench Size:2.0, Lock/unlock the screw on scale indicator ring	


①
Bellow hopper


②
Dosing cup


③
Cup stand

 

④
Cleaning Brush

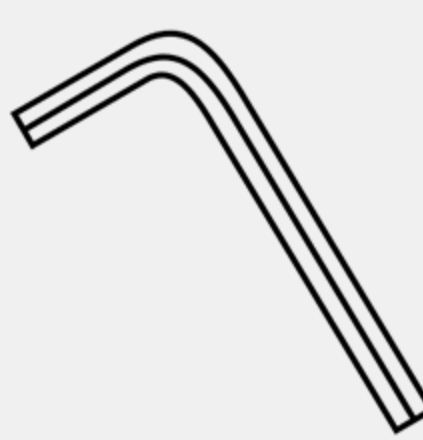
⑤
Allen wrench

Grind Range

 0-10 Turkish Coffee	 10-30 Espresso	 30-50 Mocha	 50-80 Pour Over	 80-90 French Press
---	--	---	---	--

 
Presentation

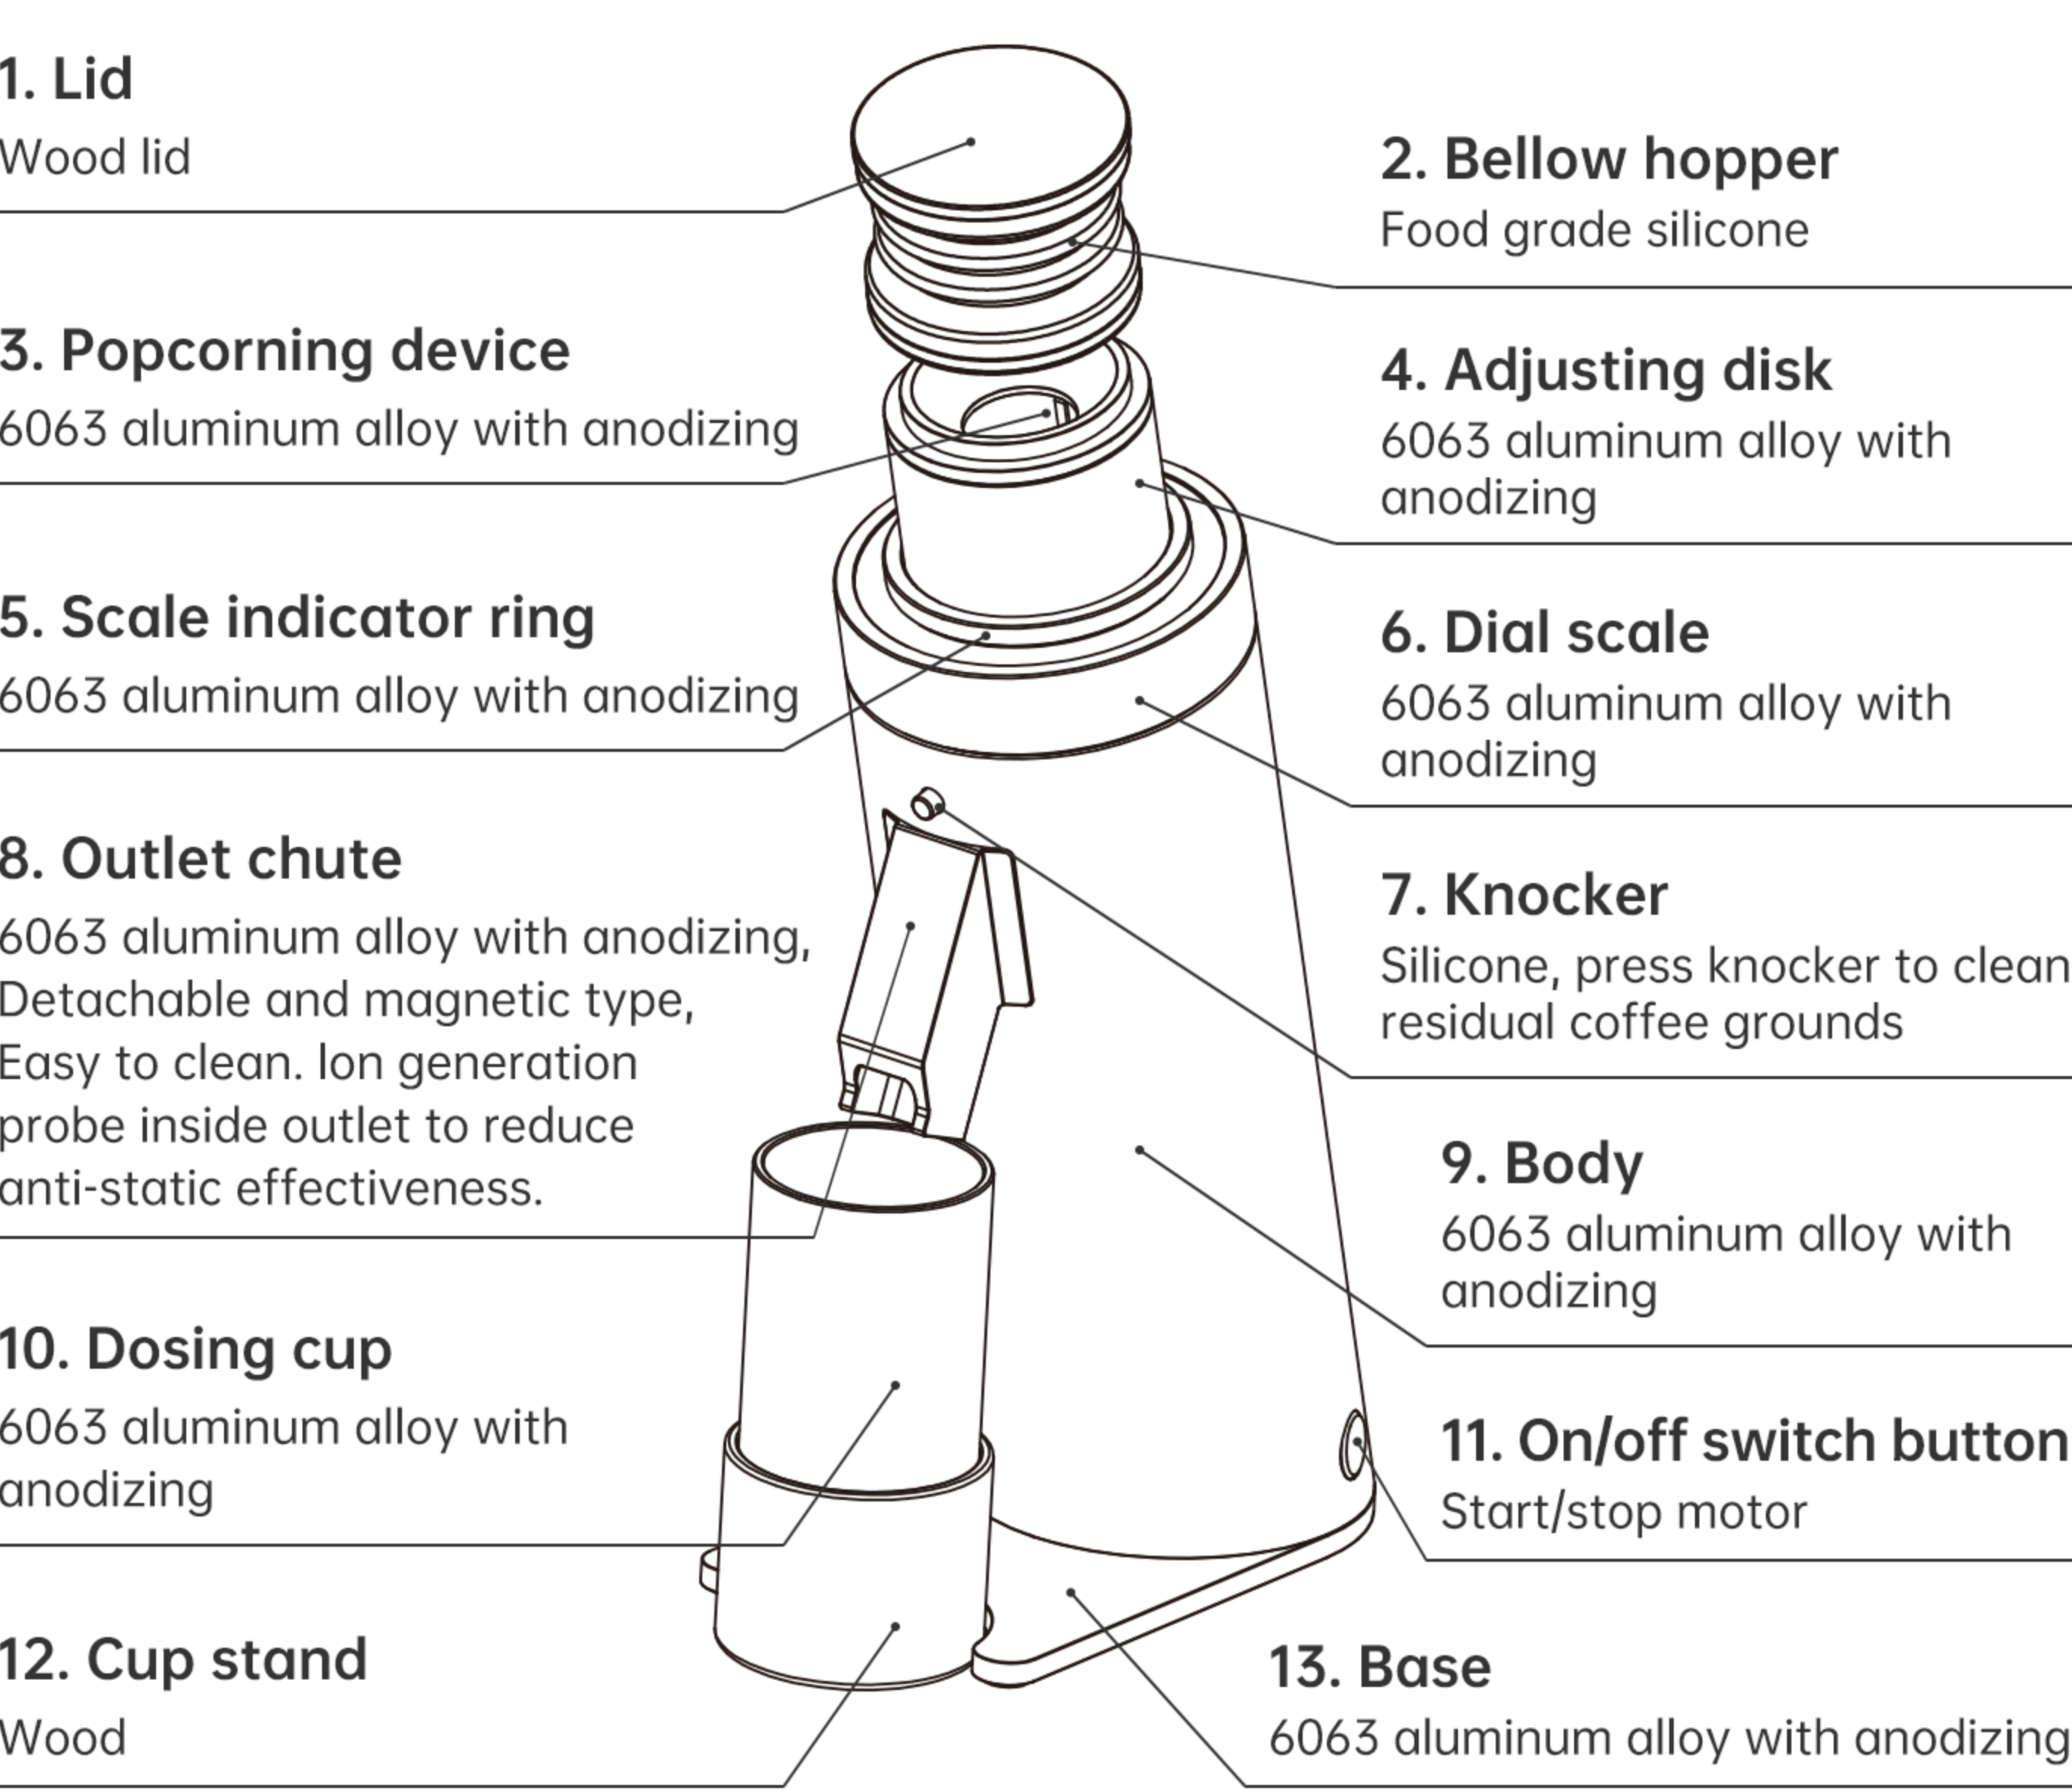

Grind Adjustment

Easy stepless adjustment to any desired grind coarseness.

Note:
Please adjust the coarseness whilst there are no coffee beans in the grinder, or whilst the grinder motor is running.

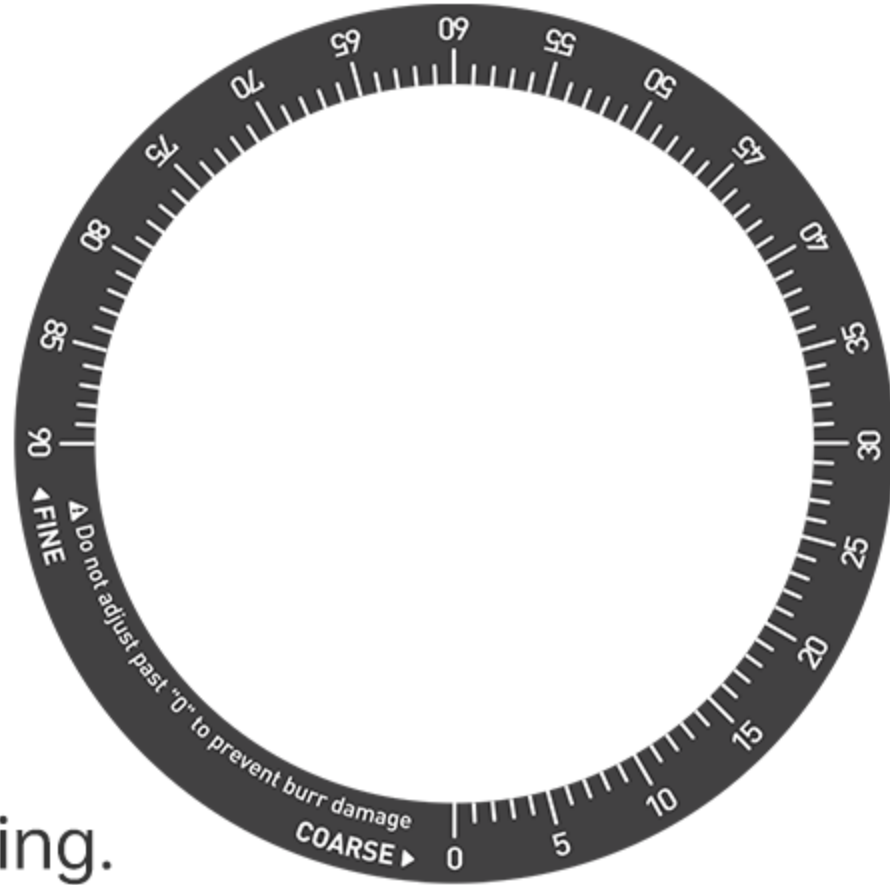

Operating instructions

Step 1 | Plug in the grinder and turn on the switch button⑪ on the right, the motor starts running. (Motor will stop running if no coffee bean place in);

Step 2 | Open the top lid① and place in coffee beans in the hopper②, then grinder is working;

Step 3 | Upon completion of the grinding process, press the bellows①② to expel any coffee grinds retention, then press knocker⑦ to clean one more time;

Step 4 | Motor stop running automatically when grinding process is done. (Can press switch button⑪ to stop motor);

Step 5 | Take off outlet chute⑧, use brush to clean outlet and chute.

Cleaning process

Step 1 | Plug in and turn on button⑪ to start motor, press bellow① and knocker⑦ to clean the chamber, then press button⑪ to turn off motor and plug out;

Step 2 | Take off the chute⑧, use a brush to clean outlet and chute. (avoiding contact with your finger due to the presence of the plasma generator pin inside);

Step 3 | Rotate the dial scale⑥ anticlockwise to take off the adjustment components (adjusting disc④/scale indicator ring⑤ / dial scale⑥) ;

Step 4 | Take off upper burr carrier, use a brush to clean burrs and chamber;

Step 5 | Reassemble all the parts in the reverse order.

Grind alignment after cleaning process

Step 1 | Upon completion of cleaning process and all parts reassembled, take off indicator ring⑤ with a allen wrench;

Step 2 | Rotate dial scale⑥ clockwise until can't rotate it, make sure scale"0" align at the knocker⑦;

Step 3 | Rotate adjusting disk④ clockwise until can't rotate it, make sure red dot on adjusting disk nearly to scale "60", then rotate adjusting disk④ anticlockwise nearly half circle, let the red dot align at scale"0";

Step 4 | Reassemble indicator ring⑤, make sure white mark on indicator ring⑤ align at red dot and scale"0", lock screw on indicator ring, grind alignment is done.

Note:
1. Grinder can power on ONLY after completion of grind alignment, otherwise burr gonna damage.
2. The lubricant of the dial scale needs to be retained, otherwise the screw thread will be damaged.

