

SAFETY PRECAUTIONS

- * Do not modify this product without authorization;
- * Do not place the product near the fire source;
- * Do not wash the exterior and interior of the product with water;
- * Do not use this product outdoors or in direct sunlight;
- * Do not grind crops other than coffee beans;
- * Do not allow children to operate, touch or climb this product;
- * Do not squeeze, pull, knot or damage the power cord;
- * If the power cord is damaged, in order to avoid the risk of electric shock, it must be replaced by the manufacturer or after-sales service professionals.

PARAMETERS

Item	Coffee grinder
Model	DF83
Item size	L25*W15*H45cm
Carton size	L56*W31*H25cm
N.W	10.8KG
G.W	12.8KG
Rated input	100-120V/60Hz
Rated power	550W
Burr	flat 83mm
Capacity of mini hopper	225G
Capacity of bellow	50G

PRESENTATION

1. Lid

Black Walnut

2. Bellow

Silica gel

3. Upper burr carrier

Aluminum alloy

4. Grind indicator

Aluminum alloy 6061

5. Adjustment dial

Stepless adjustment

6. Outlet

Plastic with painted

 
7. Holder

For portafilter or dosing cup

8. Body

Aluminum alloy with painted

10. Power cord

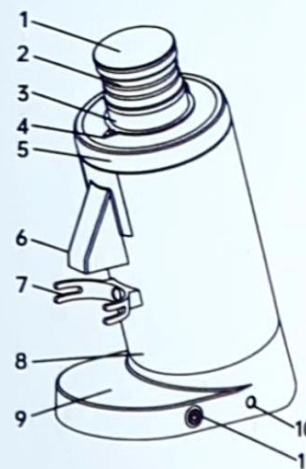

9. Base

Aluminum alloy with painted

11. On/off switch

ACCESSORIES

1. Dosing cup and metal collar

Aluminum alloy 6061



2. Mini hopper



3. Bellow

With lid to compress air to clean coffee powder inside, no retention.



COARSENESS ADJUSTMENT

Stepless grinds, easy to adjust.

Note:

please adjust the coarseness when there is no coffee beans in the grinder, or when the grinder motor is running.



OPERATING INSTRUCTIONS

- STEP 1** put the weighed coffee beans into the upper burr holder of the grinder and cover the lid;
- STEP 2** put the portafilter or dosing cup on the holder, then press the power switch once, and the grinder will start working;
- STEP 3** when the coffee beans are finished grinding, press the power switch again, the grinder will stop running.

CLEANING PROCESS OF GRINDER

1. Install the blowing hopper on the upper burr holder, press the power switch to start, and press the blowing hopper to blow out the residual powder inside the grinder;
2. Turn the adjusting disc anticlockwise to take it out, and then take out the upper burr holder;
3. Clean the up and down burr with a dry brush;
4. Clean the outlet with a dry brush;
5. Reinstall the upper burr holder and put the adjusting disc on, press the upper burr holder, and rotate the adjusting disc clockwise until it can't move, then adjust it counterclockwise to scale 10.

WARRANTY AND AFTER SALES SERVICE

The warranty period is one year from the date of receiving the product. Under the warranty period and conditions, the company will provide a full range of warranty services in accordance with the provisions of the product failure and abnormal problems:

 
1. Free repair of faulty machines
2. Free replacement of faulty parts (except burr)
3. Items stipulated by laws of other countries

EXCEPTIONS

Product failure or damage in one of the following situations is not covered by the warranty.

1. Product failure caused by using accessories other than our company;
2. Product failure caused by dismantling the machine without authorization;
3. Product failure caused by failure to operate in accordance with the instructions;
4. Obtain the product by illegal means or means;
5. Product failure caused by force majeure;
6. Products repaired by unauthorized third party personnel without contacting the company and its authorized dealers.

COFFEE GRINDER DF83 INSTRUCTIONS

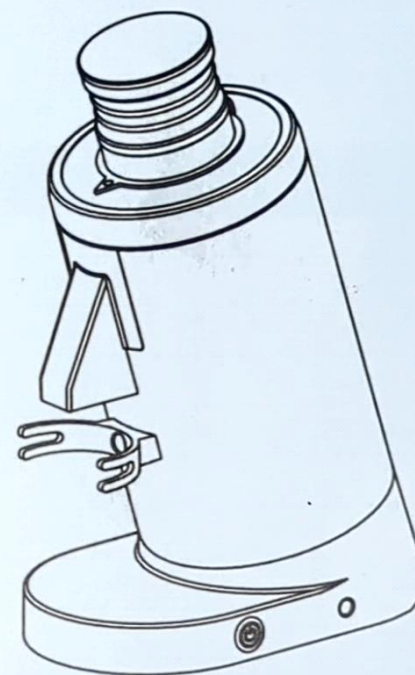

Please read this manual and keep it properly before using the product