

CBM3 **INSTRUCTION** **MANUAL**



 **CONCOURSE**

Congratulations on the purchase of your Concourse CBM3 Golf Buggy.

To assist you in setting up and using your new CBM3 Golf Buggy we have prepared detailed instructions to guide you through the process.

If at any time you require any further assistance simply call us Toll Free on Australia: 1300 650 059 and one of our friendly team will assist you.



Attaching to your golf bag.



Fig. 1 Contents of box



Fig. 2 Slowly peel sticker off



Fig. 3 Sticker peeled off

Open and unpack the box. Laying the contents out on a flat surface, this is what you will see. *[fig. 1]*

CBM3 mobiliser with mounting straps x1

Rear wheels x2

Front wheel x1

Wheel bag x1

Read the information on the yellow sticker situated on the top handle and then slowly remove the sticker. *[fig 2 & 3].*

Lay the buggy assembly on a bench or table and unravel the straps. *[fig 4 & 5].*



Fig. 4 Locate upper and lower bag supports



Fig. 5 Unravel bag support straps

Remove the lower bag support and strap from the buggy assembly and place on the base at the rear of the golf bag with the strap around bag base and passing through the plastic buckle. *[fig 6 & 7].*



Fig. 6 Lower bag support



Fig. 7 Strap around base and through buckle



Fig. 8 Pull strap tight



Fig. 9 Fastened bag support



Fig. 10 Top bag support

Bag support positioned centrally on bag

Rotate the golf bag into the position (**fig 8**) and pull the strap as tight as possible, while holding tension on the velcro strap, then lock the velcro strap into place.

Note: It is vitally important that the lower bag support (once tightened) is perfectly central on the bag base (**fig 9**). It may take a couple of attempts to make sure the lower bag support is perfectly central on the bag base.

Once the lower bag support and strap have been fitted, stand the buggy up with the top strap hanging loose. (**fig 10**).

Note: Please ensure that the top bag support is central at the top of the bag as per fig 10.

Pass the velcro strap through the plastic buckle on the top bag strap. *[fig 11].*

Hold the bag securely and pull on the strap as tight as possible, then lock the velcro strap into place.

Note: Once the top bag strap is tightened, you must ensure that the top bag support is still positioned centrally on the golf bag.



Fig. 11 Top bag support strap

Bag support positioned centrally on bag

Unfolding your CBM3.

To unfold, hold the buggy securely and press the red unlock button situated on the top handle of the buggy *[fig. 13]*. Then lift the top handle upwards and the buggy will begin to unfold. *[fig 14]*.



Fig. 12 Unfold handle



Fully locked position



Fig. 13 Handle locked in place



Fig. 14 Front wheel



Fig. 15 Front wheel



Fig. 16 Front wheel

Continue to lift the handle upwards until the buggy is fully unfolded **[fig 13]** and it will automatically lock into position with the upright locking pin locating itself in the red unlock arm **[fig 16]**.

To attach the front wheel, hold the buggy securely and place the front wheel into the front wheel housing **[fig 14]**. Push inwards **[fig 15]**, until the front wheel is fully inserted into the front wheel housing **[fig 16]**.

Note: The front wheel is secured by magnets once fully installed.

To fit the rear wheels hold the buggy securely and slide both rear wheels onto the axles until they click into place. [figs 17 & 18].



Fig. 17 Rear wheel



Fig. 18 Rear wheels in place

To set the front wheel, pull down on the handle and allow the buggy to sit on all 3 wheels [fig 19]



Fig. 19 Buggy resting on all 3 wheels



Fig. 20 Front wheel lever



Fig. 21 Front wheel extending



Fig. 22 Front wheel fully extended

To lock front wheel into position, locate the red lever on the side of the main buggy frame *[fig 20]*.

Push down on the handle to lift the front wheel slightly off the ground.

Pull the red lever outwards to unlock, and then turn the lever towards the front of the buggy *[fig 21]* until the front wheel is fully extended and the red lever is locked in the forward position. *[fig 22]*.

Additional features.

Handle height.

On the lower section of the handle is the handle lock lever. To adjust the handle height, pull down on the lever to unlock the handle. [figs 23 & 24].



Fig. 23 Handle lock lever (locked)

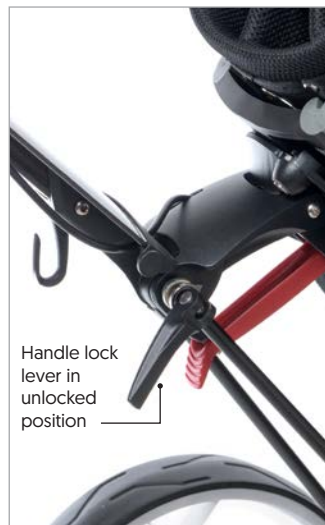


Fig. 24 Handle lock lever (unlocked)

The handle has 3 different heights [fig 25]. When you have chosen your preferred handle height, push the handle lock lever upwards to lock the handle into position [fig 23].

Note: You can leave the handle height in your preferred position and the buggy will still fold up normally. There is no need to keep adjusting the handle position each time you unfold and fold up the buggy.



Fig. 25 Handle heights



Fig. 26 Hand brake lever (off)



Fig. 27 Hand brake lever (on)



Fig. 28 Locking lever



Fig. 29 Separating from bag



Fig. 30 Locking pins



Fig. 31 Refitting to bag

Hand brake.

To apply the hand brake, simply pull upwards on the red handbrake lever (fig 26), until the lever is in the locked position (fig 27).

To unlock the brake, simply pull upwards on the lever and the hand brake will disengage and return to the off position.

Separating from your bag.

The CBM3 has the added advantage of being able to be separated from your golf bag without the need to remove the straps.

Unlock the mobiliser by lifting up the locking lever near the top bag support (fig 28).

Hold the mobiliser in a stable upright position and push the top of your golf bag away from the mobiliser (fig 29).

To refit the mobiliser to the bag, simply line up the 2 locking pins with the slots in the lower bag support (fig 30) and then bring the mobiliser up to meet the top bag support and push down on the mobiliser locking lever (fig 31).

Folding your CBM3.

Push down on the handle to lift the front wheel slightly off the ground.

Fold up the front wheel by pulling the red lever outwards to unlock, and then turn the lever towards the back of the buggy (fig 33) until the front wheel is fully retracted and the red lever is locked in the backward position. (fig 34).



Fig. 32 Front wheel lever



Fig. 33 Front wheel retracting



Fig. 34 Front wheel fully retracted



Fig. 35 Lift handle up



Fig. 36 Buggy resting on base



Fig. 37 Rear wheel release button



Fig. 38 Removing rear wheels

To remove the wheels, lift handle upwards and allow the buggy to sit on its base *[fig 36]*.

To remove the rear wheels, press the release button in the centre of each wheel and slide both wheels off the axles. *[figs 17 & 18]*.

Remove the front wheel by holding the buggy securely and pulling it out of the front wheel housing [figs 39 – 41].



Fig. 39 Front wheel



Fig. 40 Front wheel



Fig. 41 Front wheel

To fold down the handle, press downwards on the red unlock arm [fig 42] and pull the handle away from the bag to begin folding.



Unlocking arm



Fig. 42 Unlocking arm

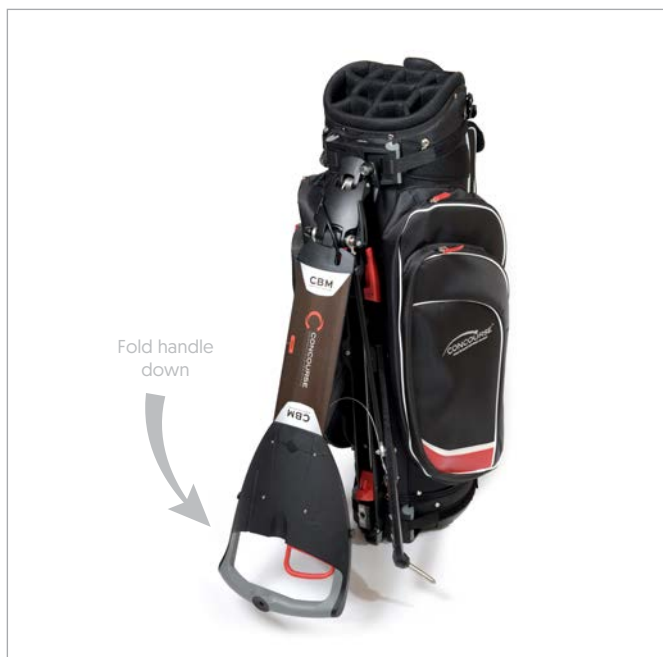


Fig. 43 Fold handle



Fig. 44 Handle locked

Continue to fold the handle down until it clicks into the locked position.
[fig. 44].

To see the CBM3 in action
visit concoursegolf.com

