



 
STANFORD SURROUND SOUND TV BED WITH LED

Assembly Instructions


please keep these instructions for future reference.



3 Hrs



X2

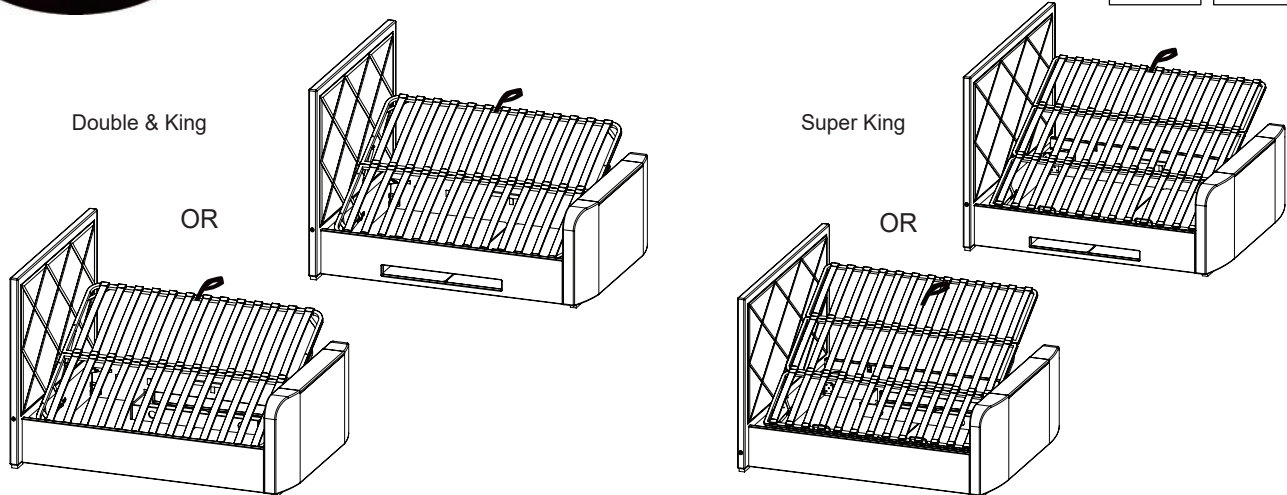 


Important Information

- We suggest you spend a short time reading through this leaflet and then follow the simple step-by-step instructions.
- Carefully check that you have all the parts before beginning assembly.
- Keep fittings out of children's reach and keep children well away from construction area.




An instructional video of the Operation of the Ottoman Lift Up system is available via YouTube using the following address: https://youtu.be/hyq4zm7h_yU

 SOUND SYSTEM CONTROL

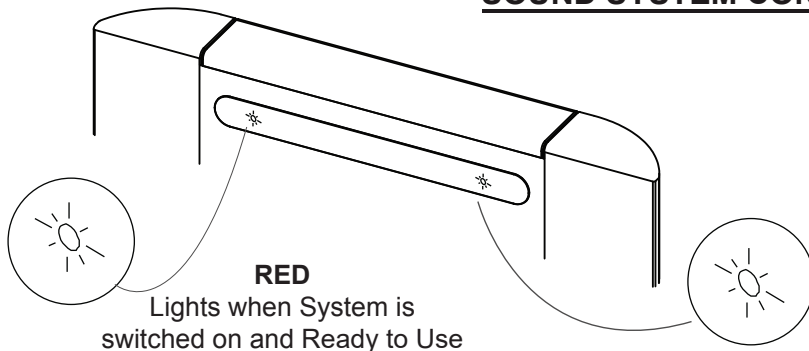

 RED
Lights when System is switched on and Ready to Use

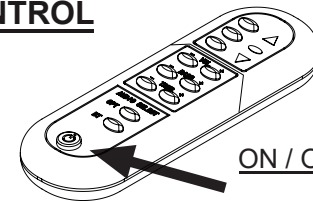


ON / OFF BUTTON

Press this button for 3 seconds. Red Indicator light comes on.

BLUE
Lights when Bluetooth is Selected.

 ADJUST VOLUME




PRESS BUTTON ON REMOTE CONTROL (RC) IN EITHER MODE.

- SELECT BT; PLEASE RAISE VOLUME ON DEVICE TO HIGH LEVEL THEN ADJUST RC.
- SELECT OPTICAL; PLEASE MUTE TV SPEAKERS FOR BEST RESULTS.


ONE MAY OCCASIONALLY NEED TO ADJUST TV SETTINGS FOR EXTERNAL SPEAKERS, THIS DEPENDS ON THE MAKE OF TV, PLEASE CHECK THE TV USER GUIDE. RESULTS.

 ADJUST BASS - THIS BUTTON LIMITS LOWER FREQUENCIES OF THE SOUND




ADJUST BASS ATTENUATION TO SUIT THE SOUND EFFECT YOU LIKE

 ADJUST TREBLE - THIS BUTTON LIMITS HIGH FREQUENCIES OF THE SOUND




ADJUST TREBLE ATTENUATION TO SUIT THE SOUND EFFECT YOU LIKE. NOTE IF YOU REDUCE LEVEL OF THE HIGHER FREQUENCIES, SOUND VOLUME IS REDUCED - THIS IS NORMAL.

 SELECT BT (BLUETOOTH) - DEVICE INPUT - TO PAIR LOOK FOR "BT SPEAKER"



NOTE THAT IF TV IS IN THE UP POSITION AND SWITCHED ON, TV PICTURE IS STILL SHOWING, IT IS NOT SWITCHED OFF WHEN BLUETOOTH IS SELECTED. TO REMOVE, TURN OFF TV OR PRESS THE RC DOWN BUTTON TO LOWER TV TO REST POSITION WHERE TV POWER IS DISCONNECTED AUTOMATICALLY - MUSIC CAN STILL PLAY.

 SELECT OPT (OPTICAL) SOUND OUTPUT TO TV




WHEN FINISHED WATCHING TV, PRESS RC DOWN BUTTON TO SEND TV BACK DOWN TO REST POSITION, TV SWITCHES OFF AUTOMATICALLY.


PRESS ON/OFF FOR THREE SECONDS TO SWITCH WHOLE SYSTEM OFF.




Components Packed in carton 1

 (1) Headboard x 1

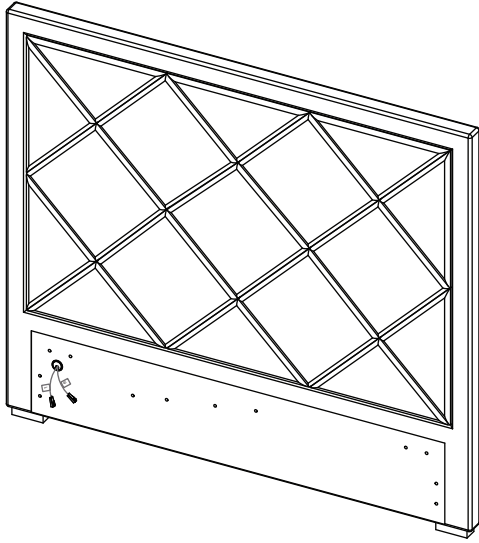


LED Kit is Packed in Rear of Headboard

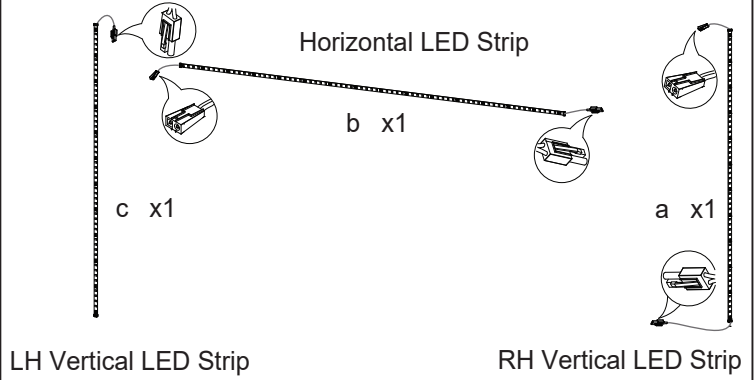 

  
- d x10

Cable Clips
- e x20

 Screw
- f x1

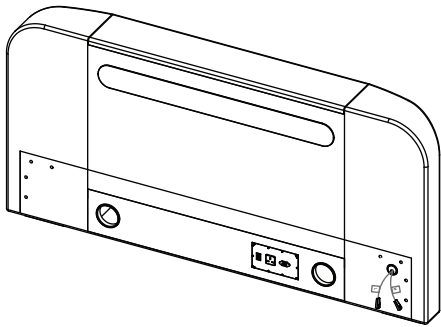LED Power Plug - 2mt
220/240V AC > 12V DC

 Components Packed in carton 2

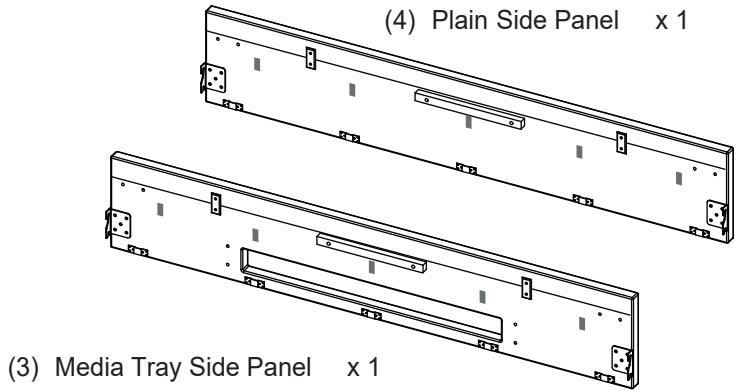(2) Footboard x 1

 


 
 


 
 
 
 

 



Components Packed in carton 3




ALL HARDWARE IS IN CARTON 2 - FOR ASSEMBLING THE BED & FITTING TV

HARDWARE FOR ASSEMBLING THE BED

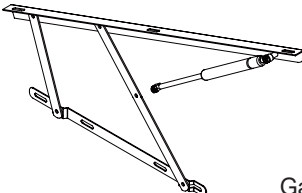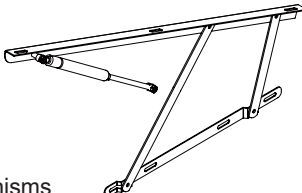
<p>A x36</p>  <p>M8x30mm</p>	<p>B x38</p>  <p>Ø8mm</p>	<p>C Double & King x48 Super King x54</p>  <p>Ø8mm</p>
<p>D x1</p>  <p>Allen Key (5mm)</p>	<p>E x6</p>  <p>M8x45mm</p>	<p>F x6</p>  <p>M8mm</p>
<p>G x2</p>  <p>M6 Nyloc Nut for Gas Lift Piston</p>	<p>J(a) x1</p> 	<p>J(b) x1</p>  <p>Gas-Lift Mechanisms</p>
<p>H x1</p>  <p>Spanner for (G)</p>	<p>K x4</p>  <p>Screws (Ø5x50mm)</p>	<p>L x4</p>  <p>Plastic Barrel Nuts</p>
<p>Note: These parts only supplied for Super King Size.</p>	<p>M x6</p>  <p>M8x20mm</p>	<p>N x2</p>  <p>Metal Connection Plates</p>

HARDWARE FOR TV INSTALLATION

 P x1




Allen Key (4mm)

 


Allen Key (2.5mm)

 
Q x2



 Screw-Washer Sets
(M8x25mm)
Use 5mm Allen Key (D)




Counter-Sunk Screws
(M6x12mm)

 

Counter-Sunk Screws
(M4x12mm)

CABLES & ACCESSORIES FOR TV INSTALLATION

 S x1




Power Lead - 3 metre

T x2




HDMI Leads - 2.8 metre

 U x1




Aerial Lead - 4 metre

 V x3




Cable Clips

 W x3

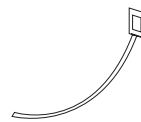


Cable Ties

 X x1




HDMI 90° adaptor

 Y x1

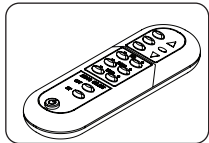


Remote Control for TV Lift_Audio

 Z x1



Headboard Speaker Connection Cable

 
Components Packed in carton 4

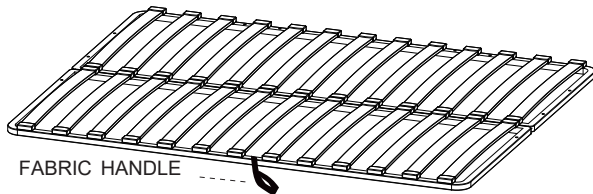

(5) Double Metal Slat Frame for Double or King Size x1



 (10) MediaTray Back Panel

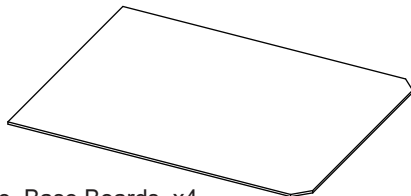


(6) Storage Base Boards x4




(11) Media Tray Side Panel - Left



 (12) Media Tray Side Panel - Right



 (7) Base Board Support Rails (wood) x5

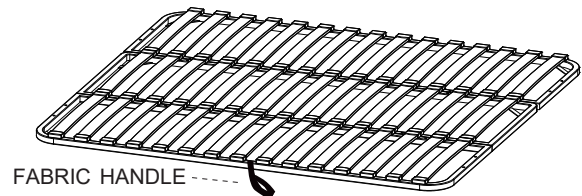

(13) Triple Metal Slat Frame for Super-King Size x1

(8) Angle Brackets x4

 


(9) Mattress Stoppers x2




(14) Cross Bar for Super-King Size only x1


Step 1

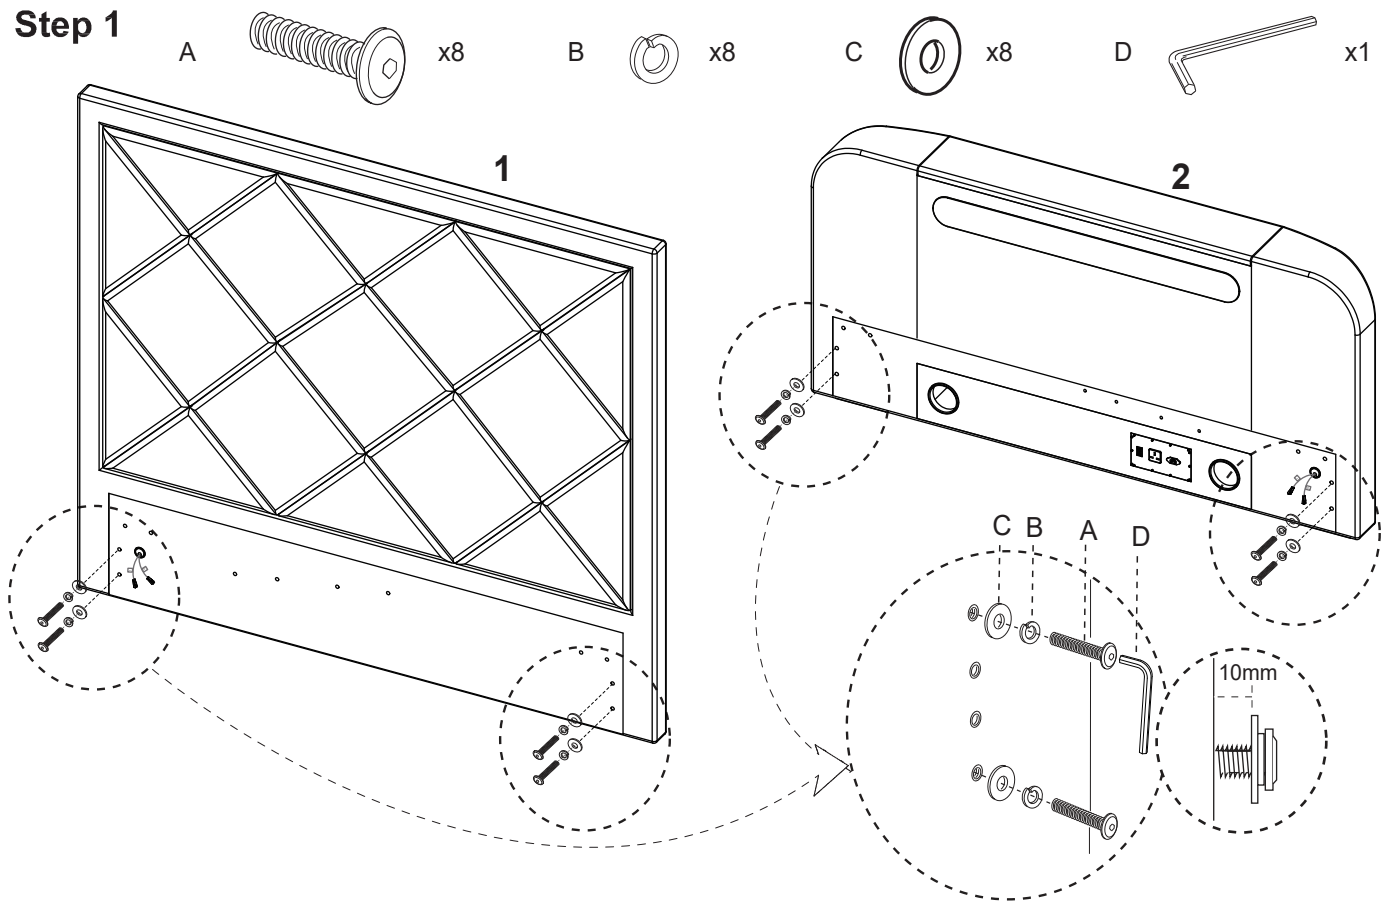

 Step 2

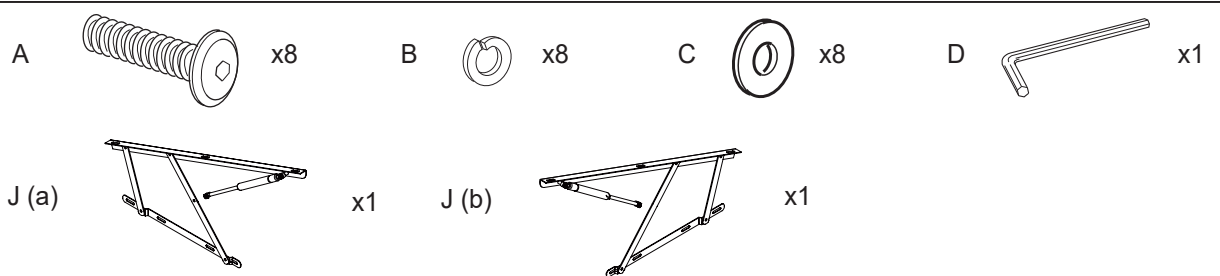

 
ALIGN WITH THE HOLES
 MAKE SURE FIXING BOLTS ARE IN THE
 CENTRE OF THE LONG HOLES

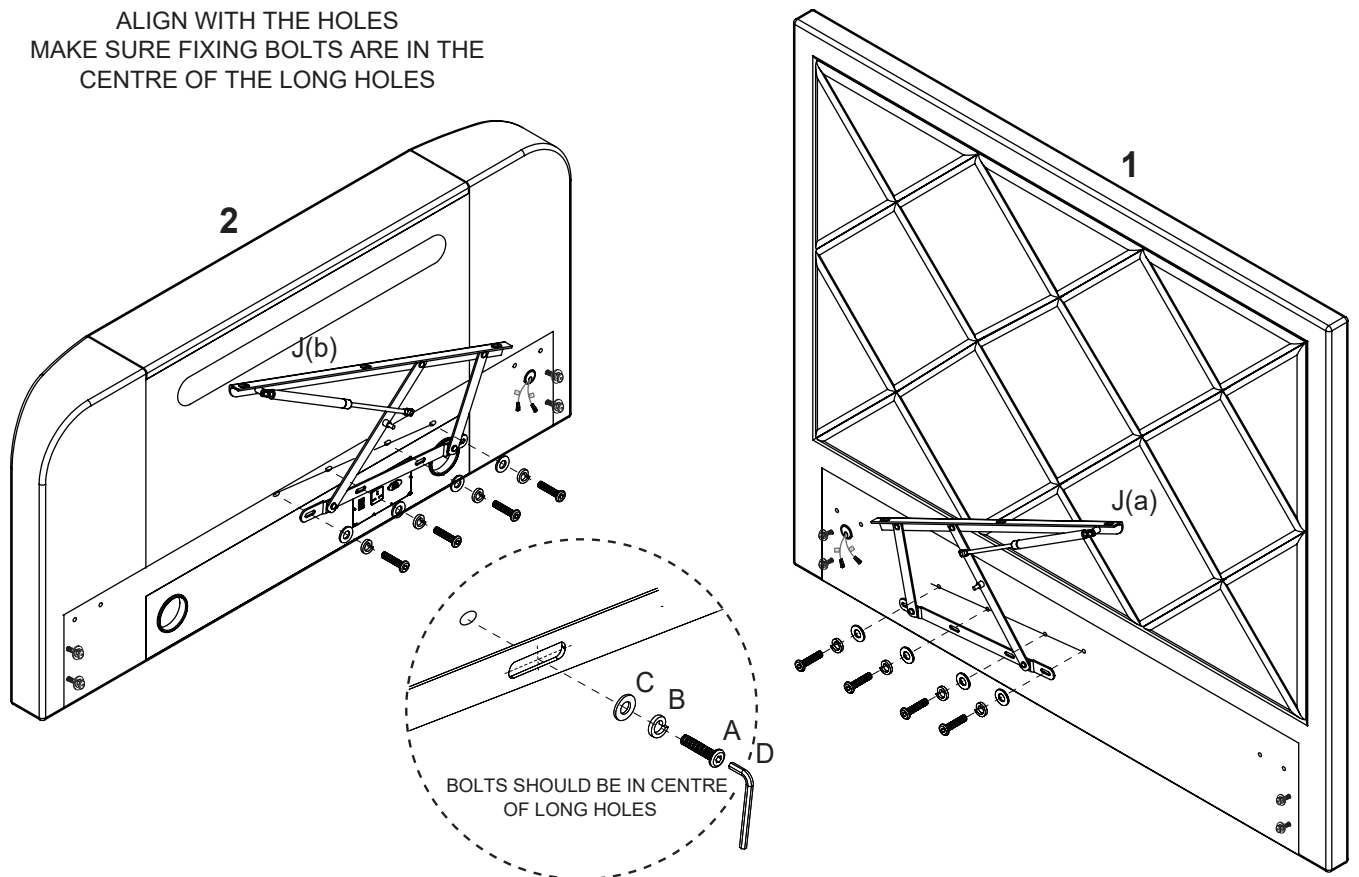



Step 3a

Choose which side you want the position the Media Equipment

 This example has Media Tray on Left Side

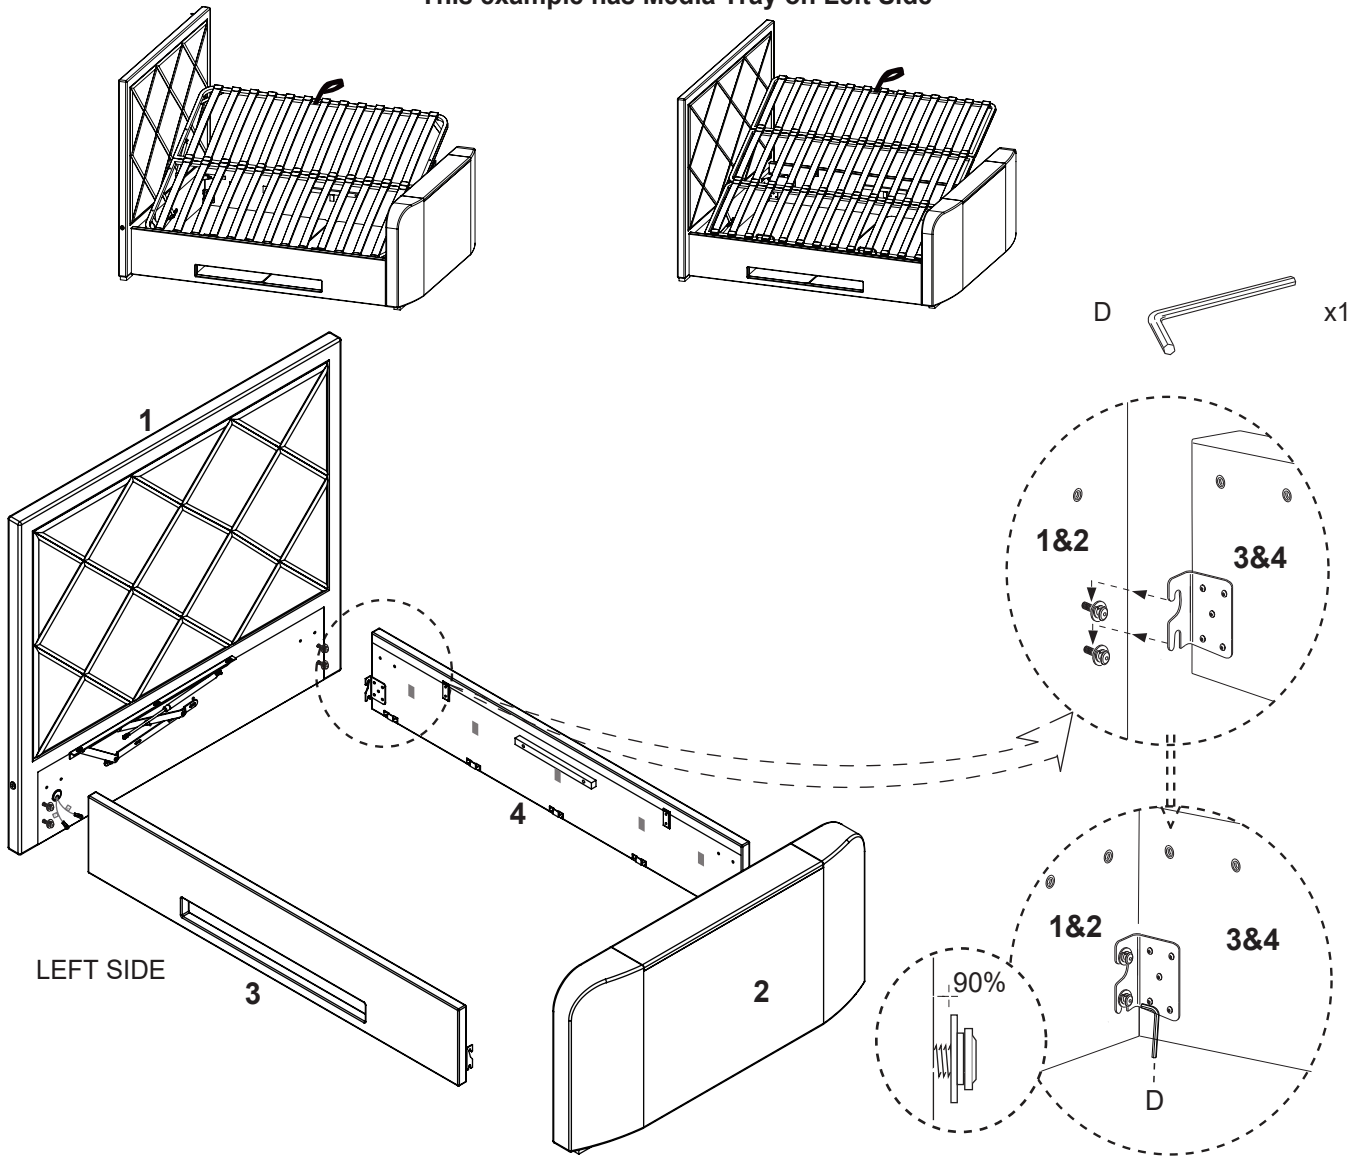

 
 
Step 3b

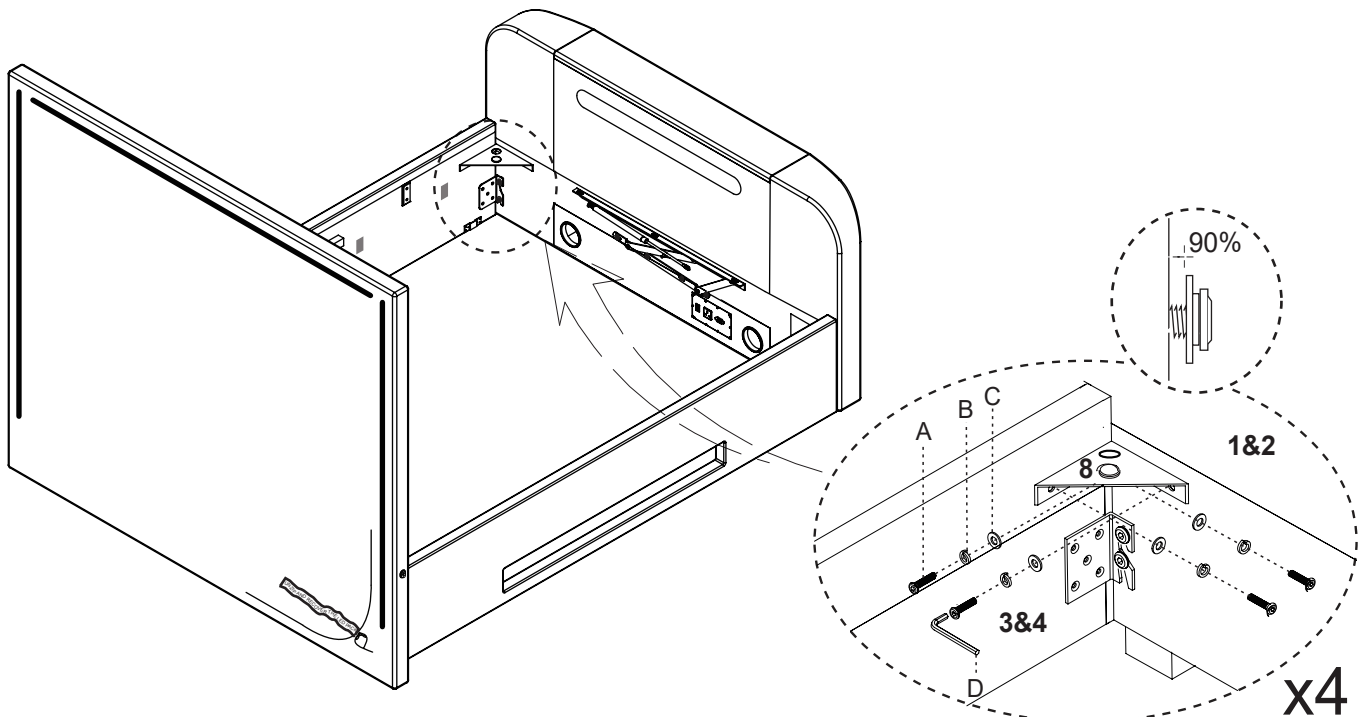


Step 4a

Choose which side you want the position the Media Equipment

  
This example has Media Tray on Right Side

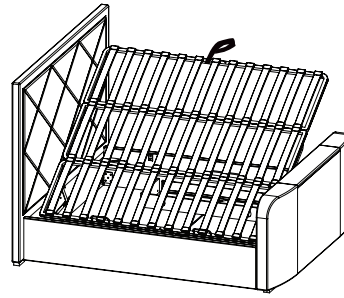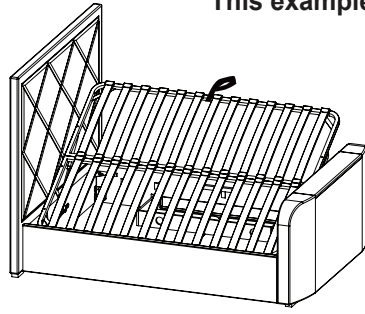

D  x1


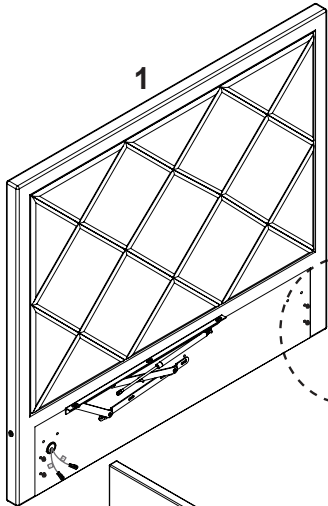 


RIGHT SIDE

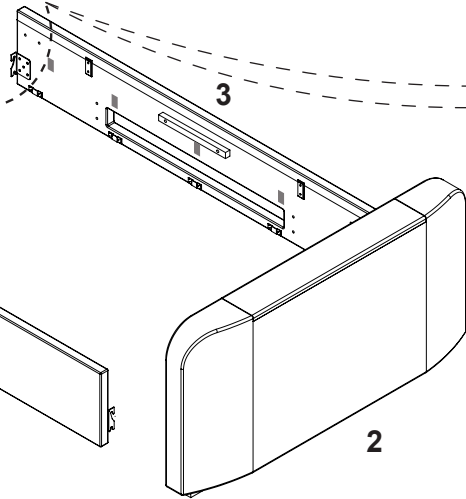 


4

  2

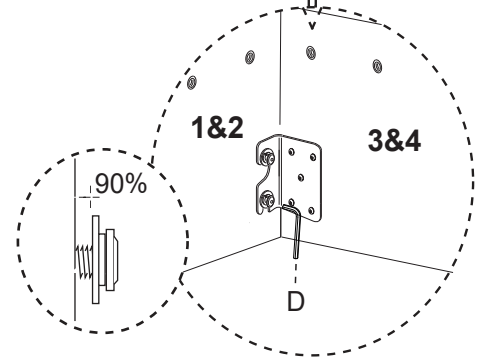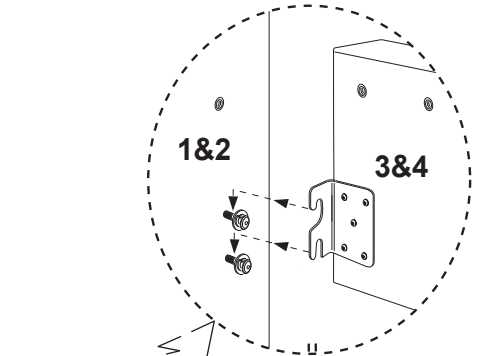


 
Step 4b

A  x16

B  x16


C  x16

  D  x1

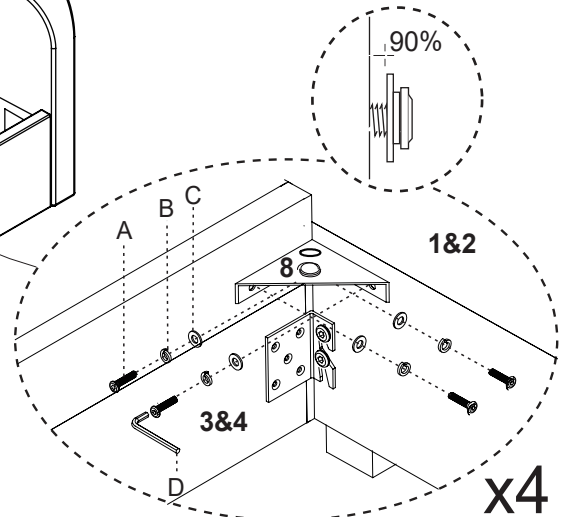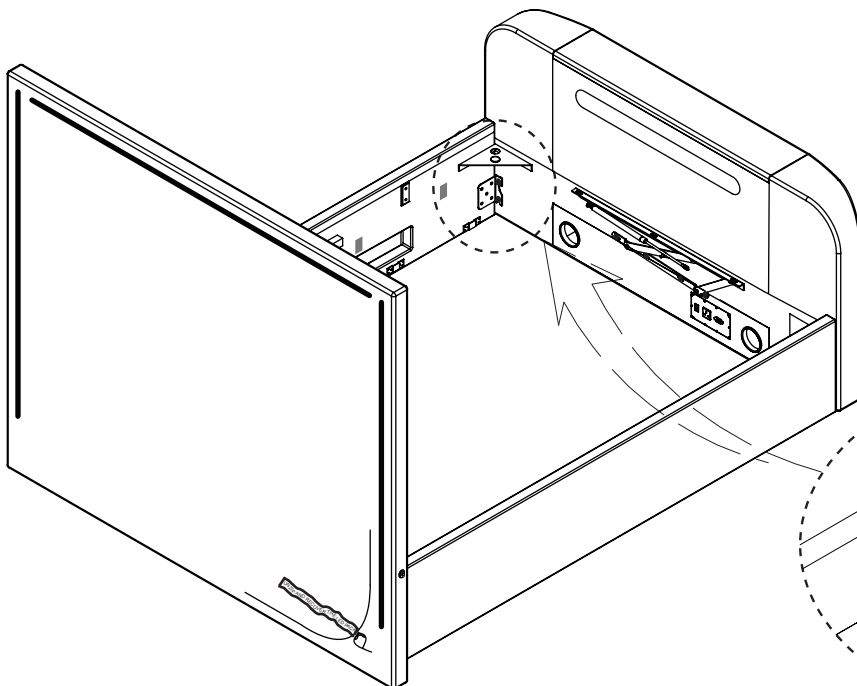

Step 5

 
Fit Headboard Speaker
Connection Cable (Z) only to Left Side
Rail following instruction in Step 6

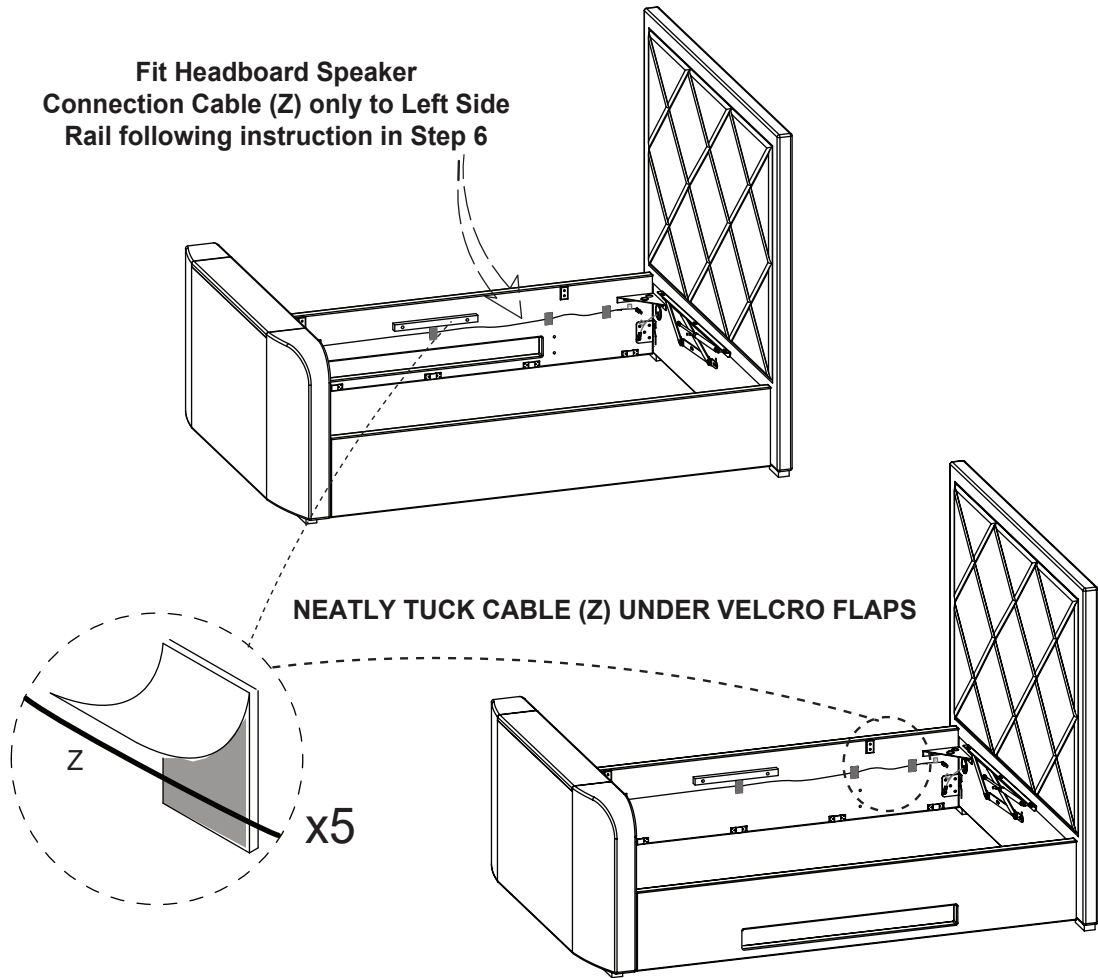

Step 6


Connect SOCKET at Footend
to PLUG on cable (Z)

 Connect PLUG at Headend
to SOCKET on cable (Z)

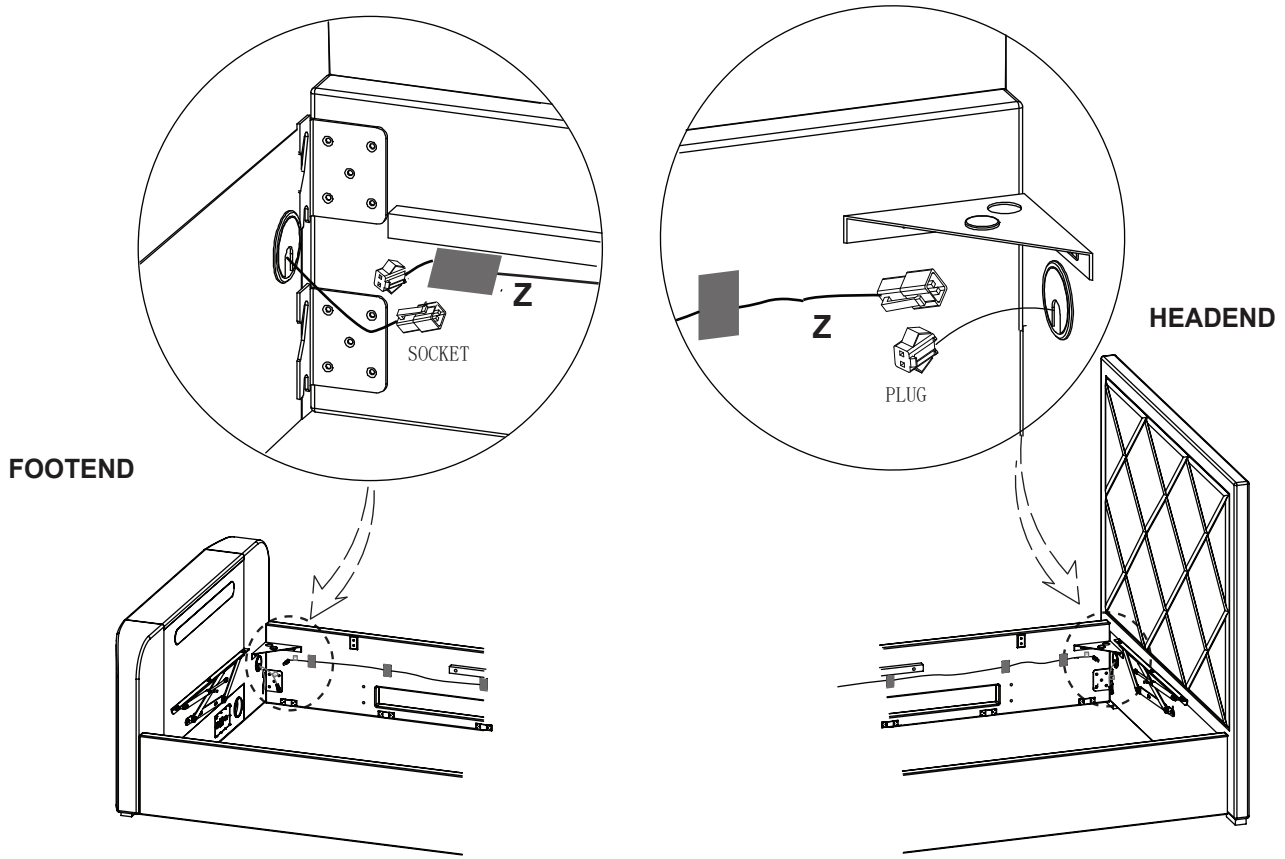


Step 7

 Assemble Media Tray

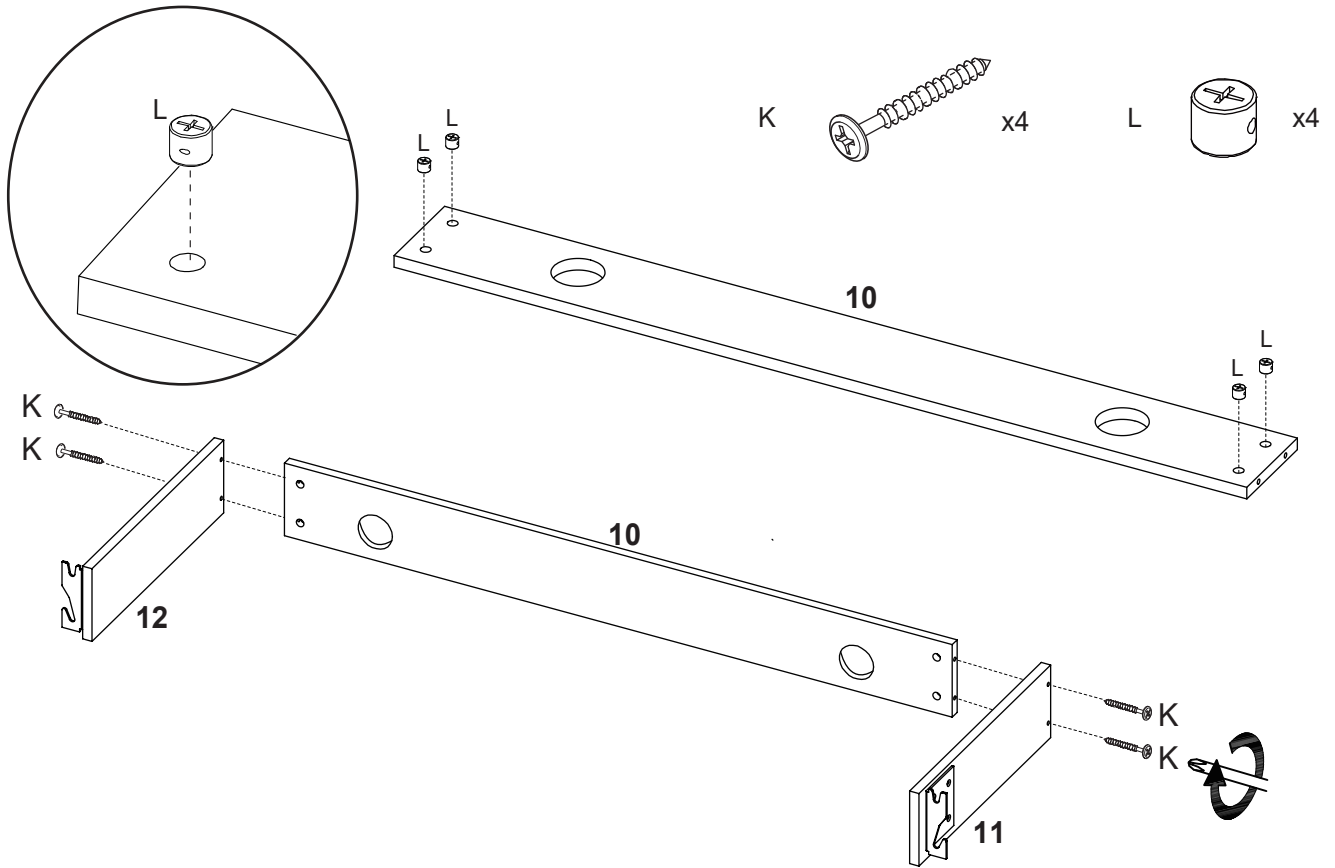



Step 8

 Connect Main Power Lead (S) to your wall socket - for safety there must be an earthed power supply.

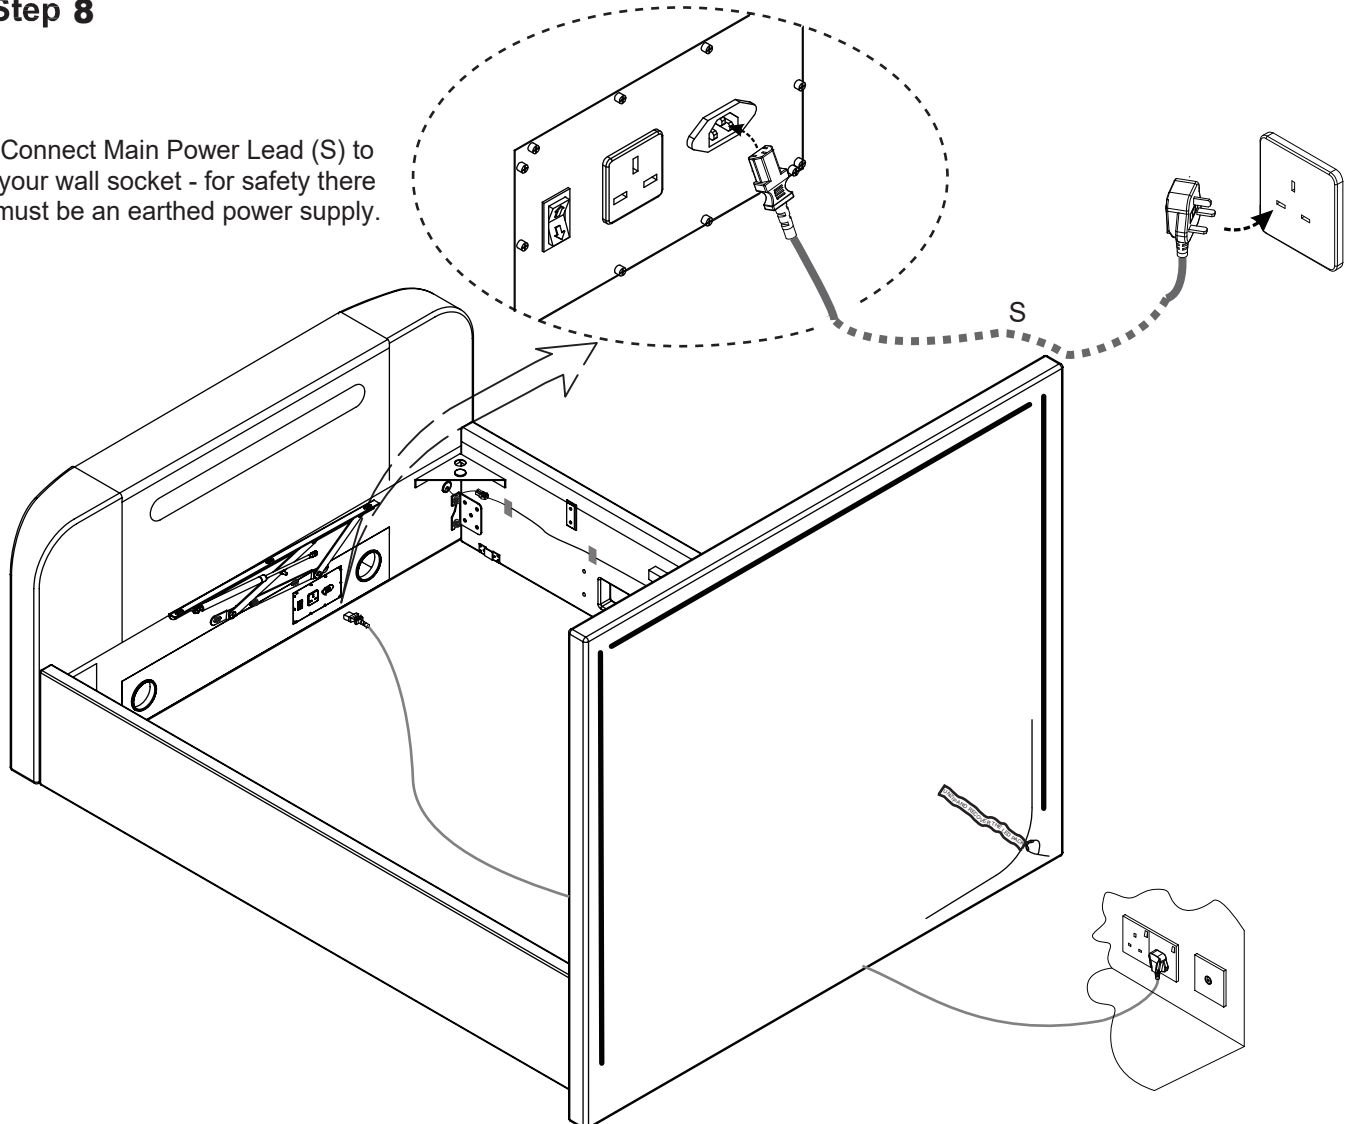

Step 9

  Press the "UP" button to raise the TV lift.

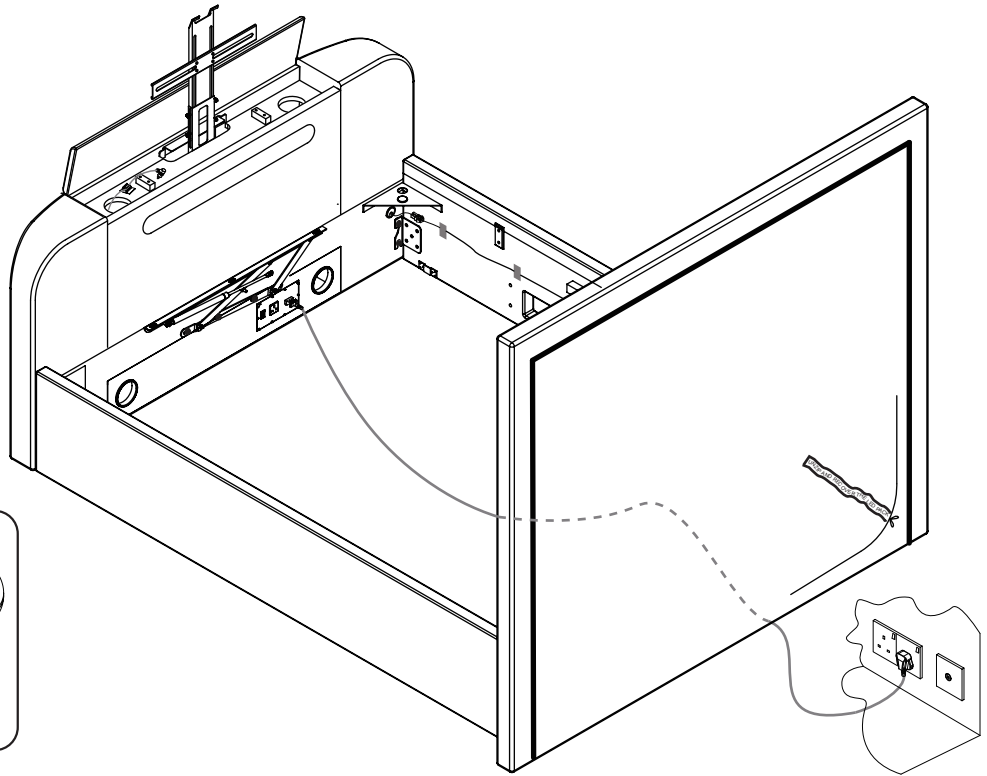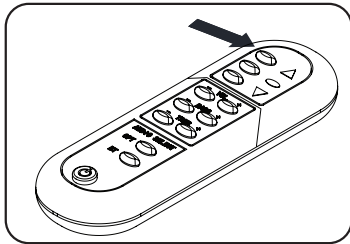


Step 10

Note: For illustration purposes only, TV connections may vary.

TIP:
BEFORE FITTING THE TV, PUSH CABLES THROUGH EACH DUCT FROM THE TOP. CHOOSE THE BEST SIDE TO USE DEPENDING ON WHERE THE CONNECTION PORTS ARE ON BACK OF YOUR TV. NEVER CROSS CABLES FROM ONE SIDE TO THE OTHER.

 TV Power Lead, supplied with your own TV.

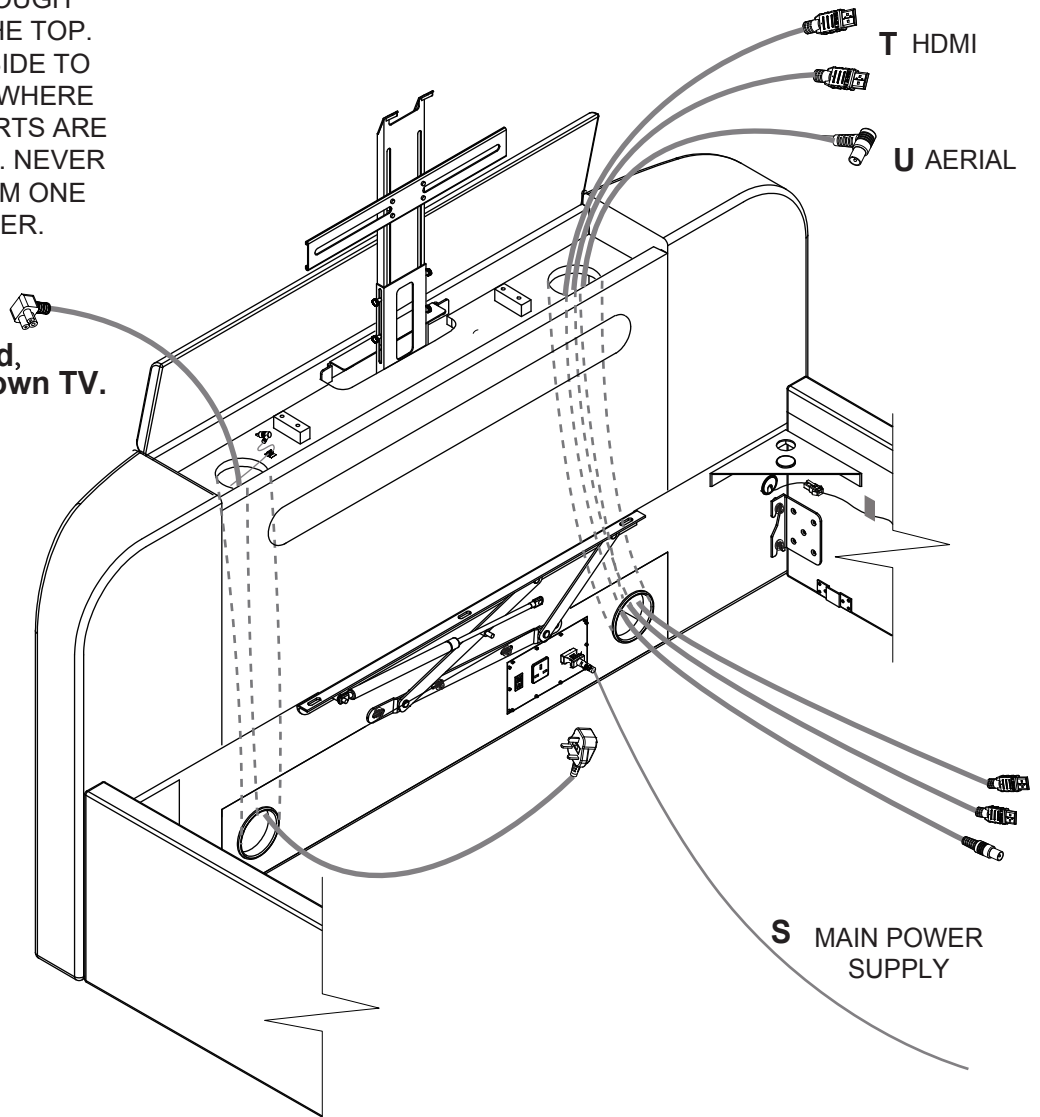

Step 11

Normal Vesa Fixing - Use TV Installation Kit from Pack (A)

N.B. IF SCREWS ARE SUPPLIED WITH TV, PLEASE USE THOSE IN PREFERENCE

 
 
 
 
 
 
 
 
 
P x2 Screw-Washer sets (M8x25mm)
Use 5mm Allen Key (D)

Counter-Sunk Screws (M6x12mm)

Counter-Sunk Screws (M4x12mm)



Q x2 Allen Key (4mm)

Allen Key (2.5mm)

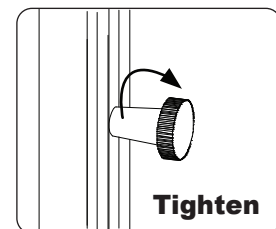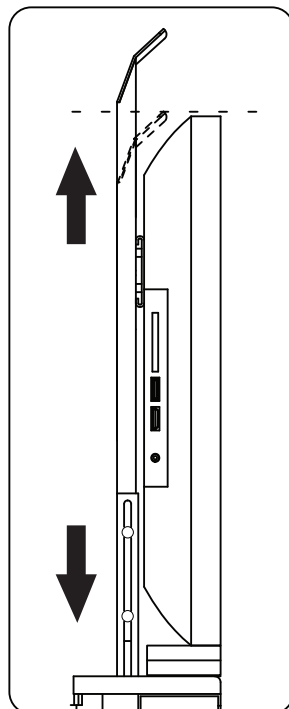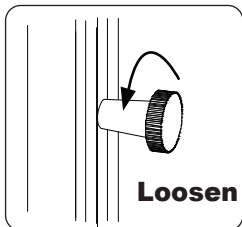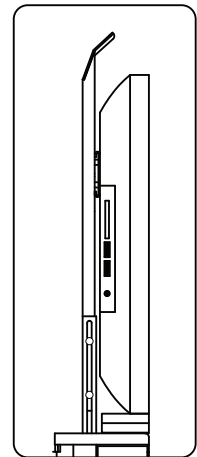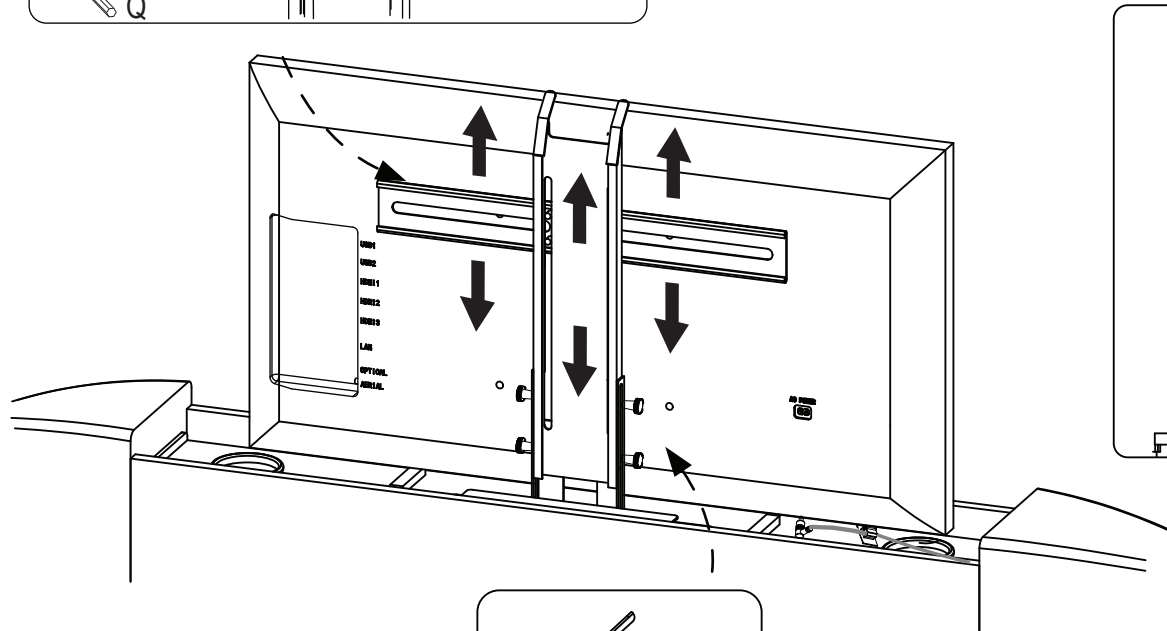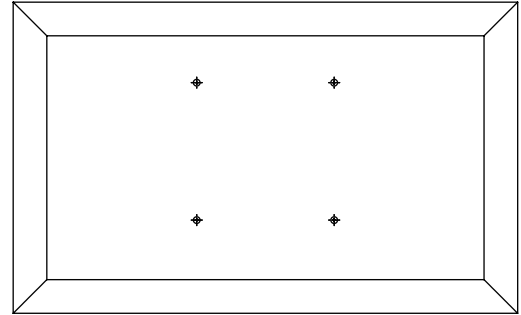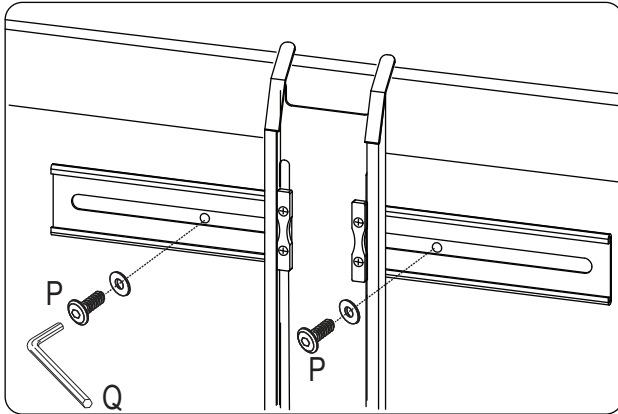






Step 12a 100x100 Vesa Fixing - Use TV Installation Kit from Pack (A)

  
REMOVE CROSS-BRACKET
AND FIX DIRECTLY TO BACK OF TV

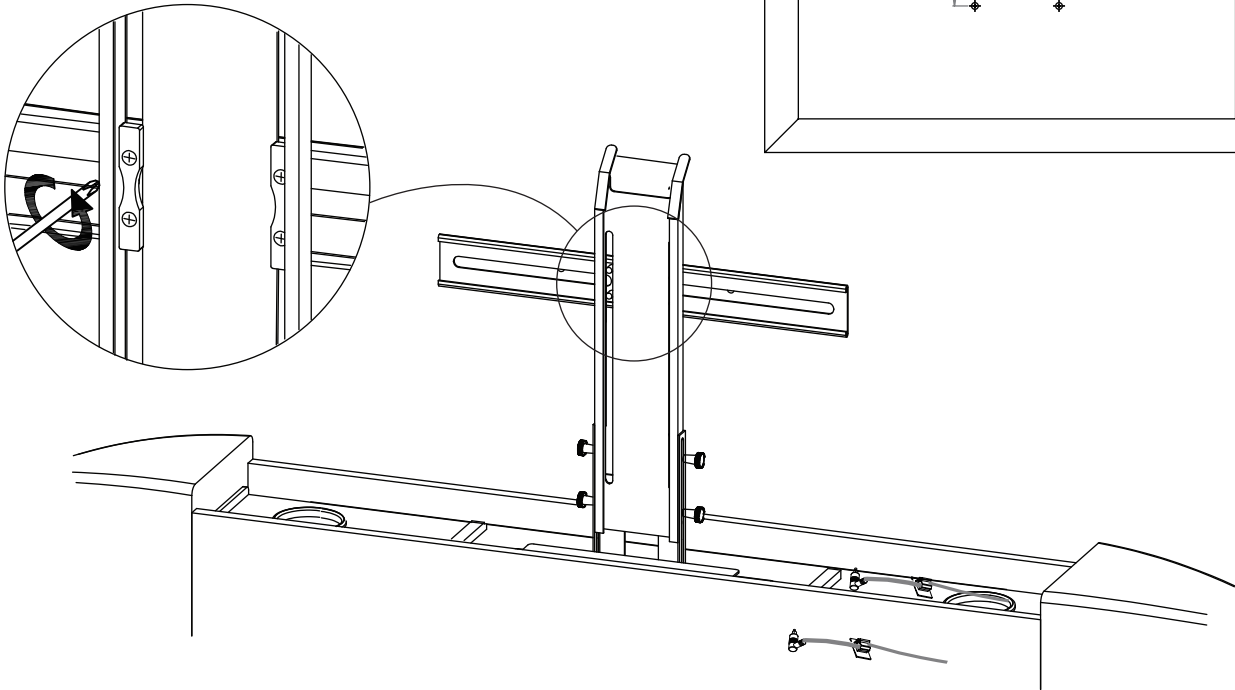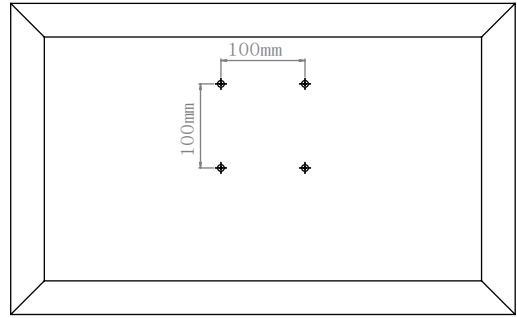



Step 12b

     N.B. IF SCREWS ARE SUPPLIED WITH TV, PLEASE USE THOSE IN PREFERENCE




- | | | | | | | |
|------|---|---|----------------------------------|--|----------------------------------|---|
| P x2 | Screw-Washer sets
(M8x25mm)
Use 5mm Allen Key (D) |  | Counter-Sunk Screws
(M6x12mm) |  | Counter-Sunk
Screws (M4x12mm) |  |
| Q x2 | Allen Key (4mm) |  | Allen Key (2.5mm) |  | | |

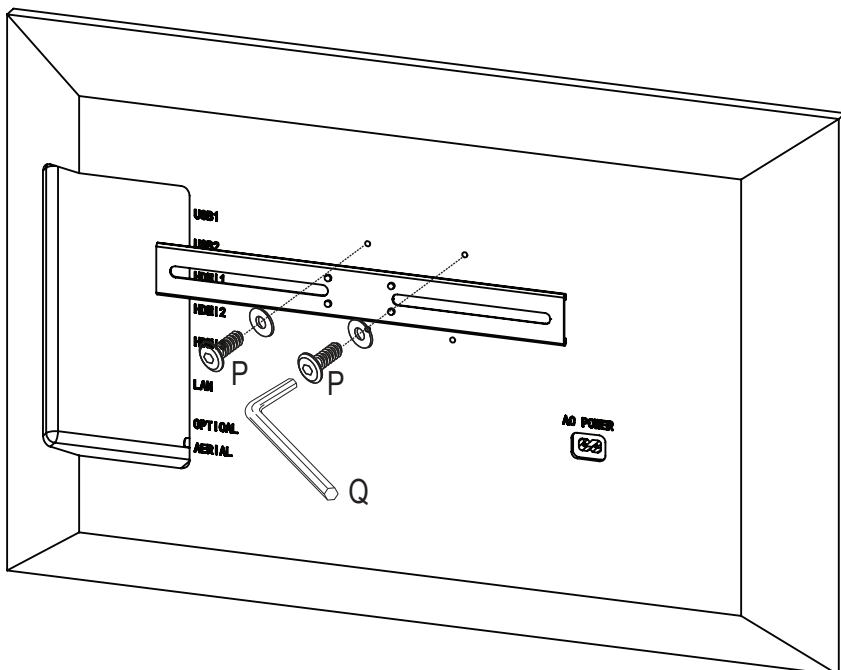 

  
Step 12c

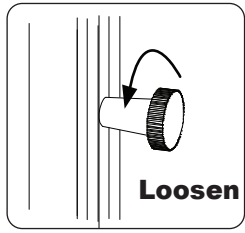

i.

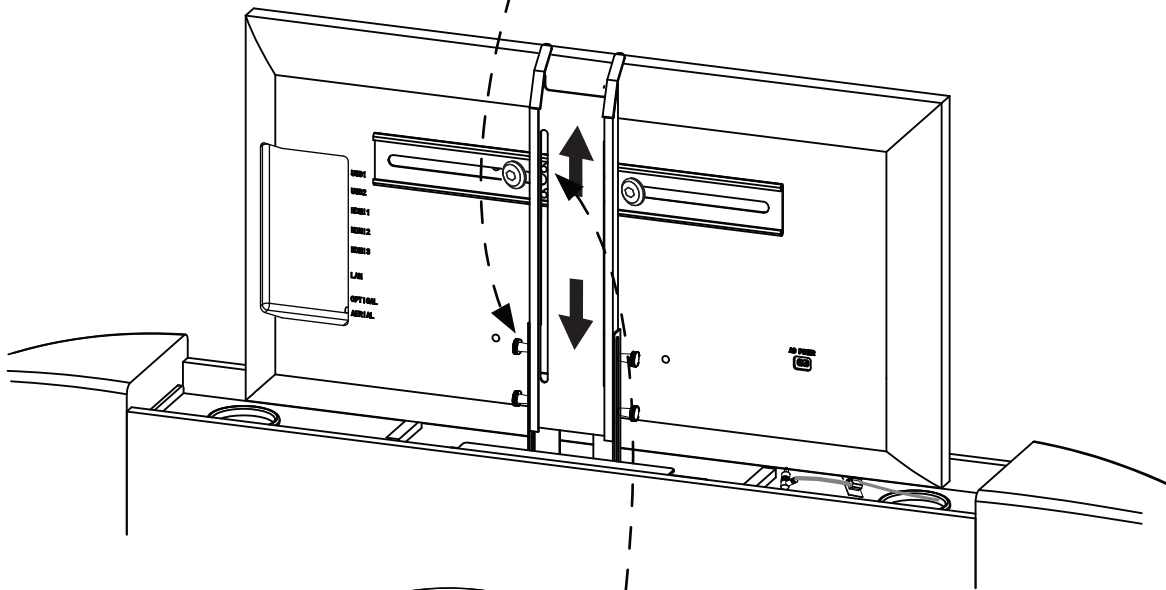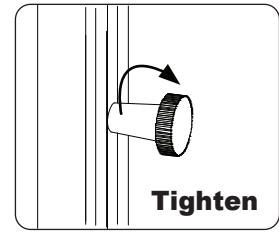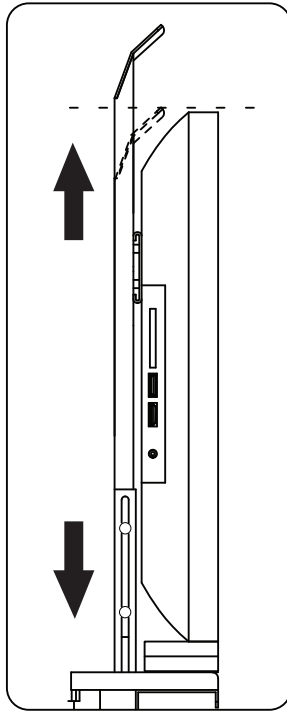   



ii.

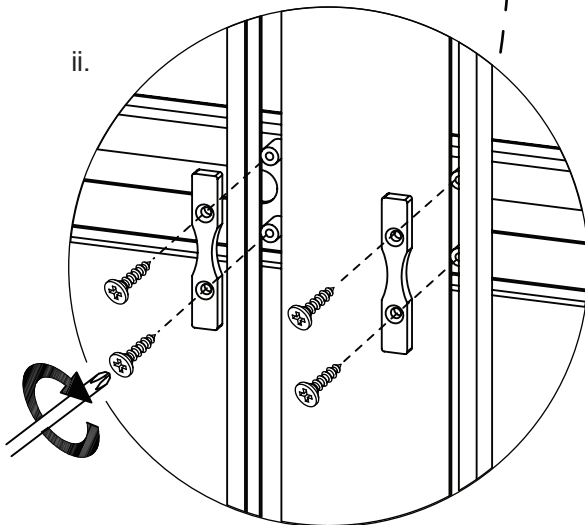 


Step 13

Note: For illustration purposes only, TV connections may vary.


 
 
TV Power Lead supplied with your own TV

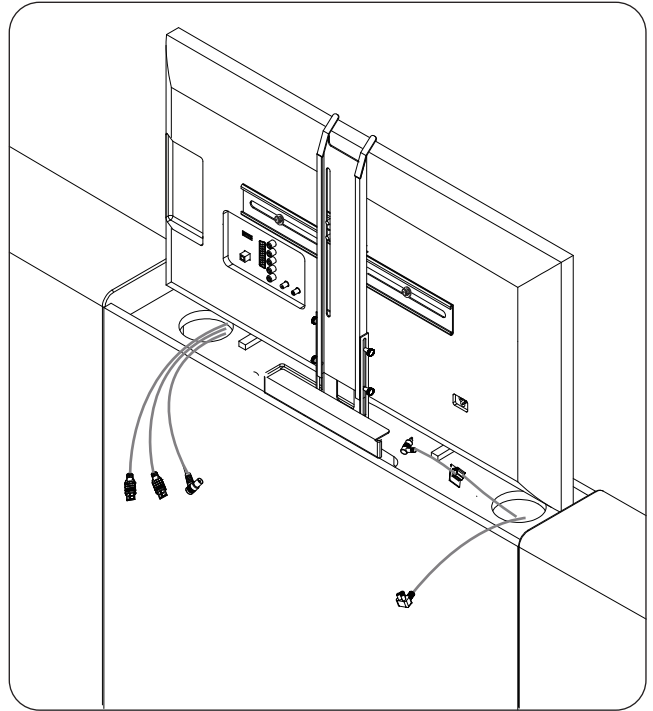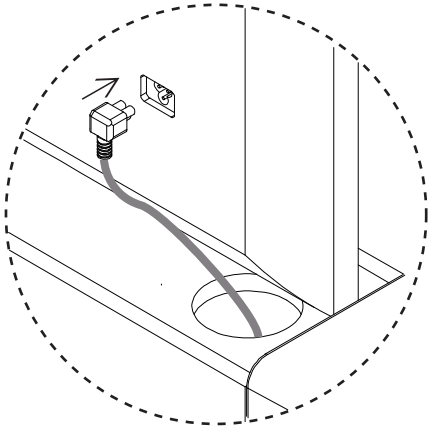



90° ADAPTOR

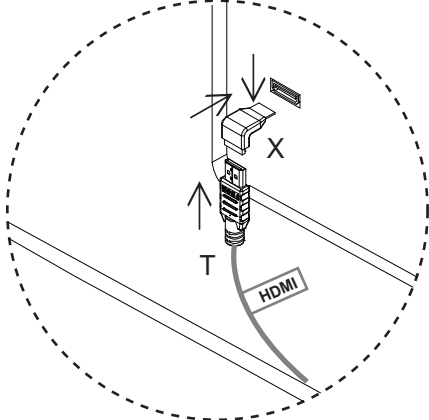 

REMOVE DUST-CAP

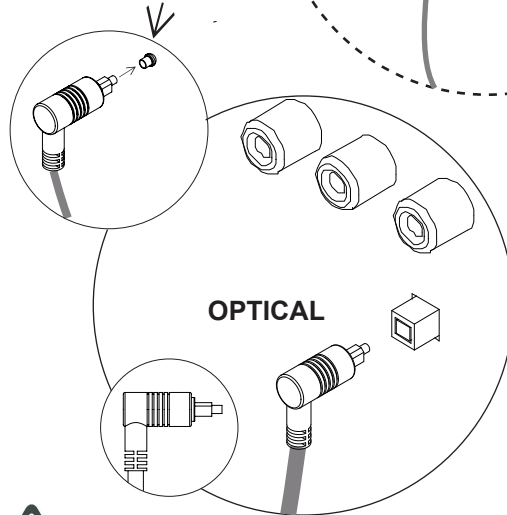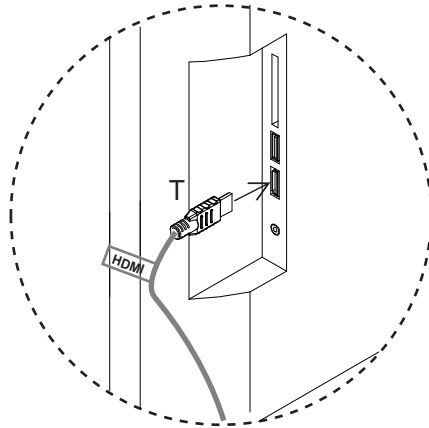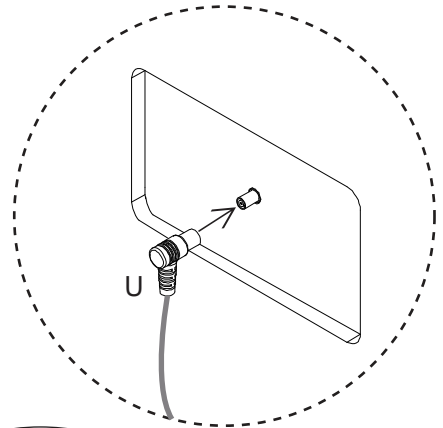   


PLUG IN - KEEP ALL CABLES TIGHT - USE CLIPS & TIES PROVIDED.

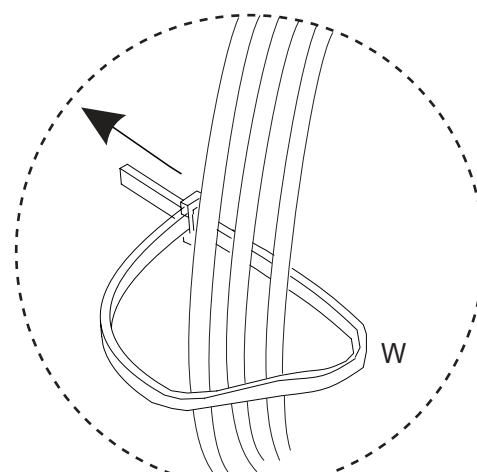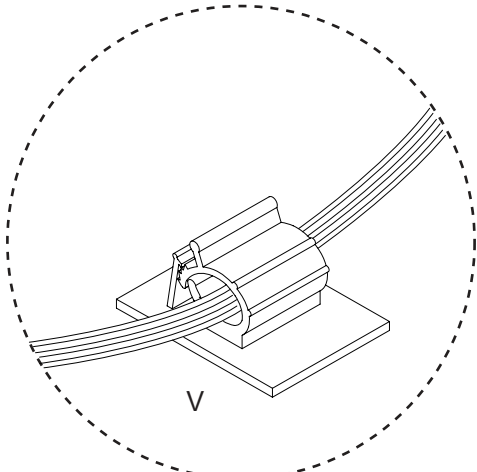  


Keep wires tight - peel off cover from cable clips & adhere to back of TV.

N.B. BEFORE PUTTING BED IN FINAL POSITION, FIT LED SET TO REAR OF HEADBOARD

 Step 14

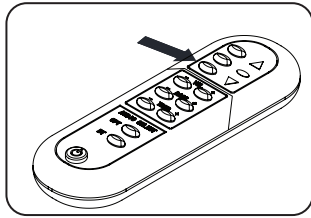

 Press the "DOWN" button to lower the TV lift.

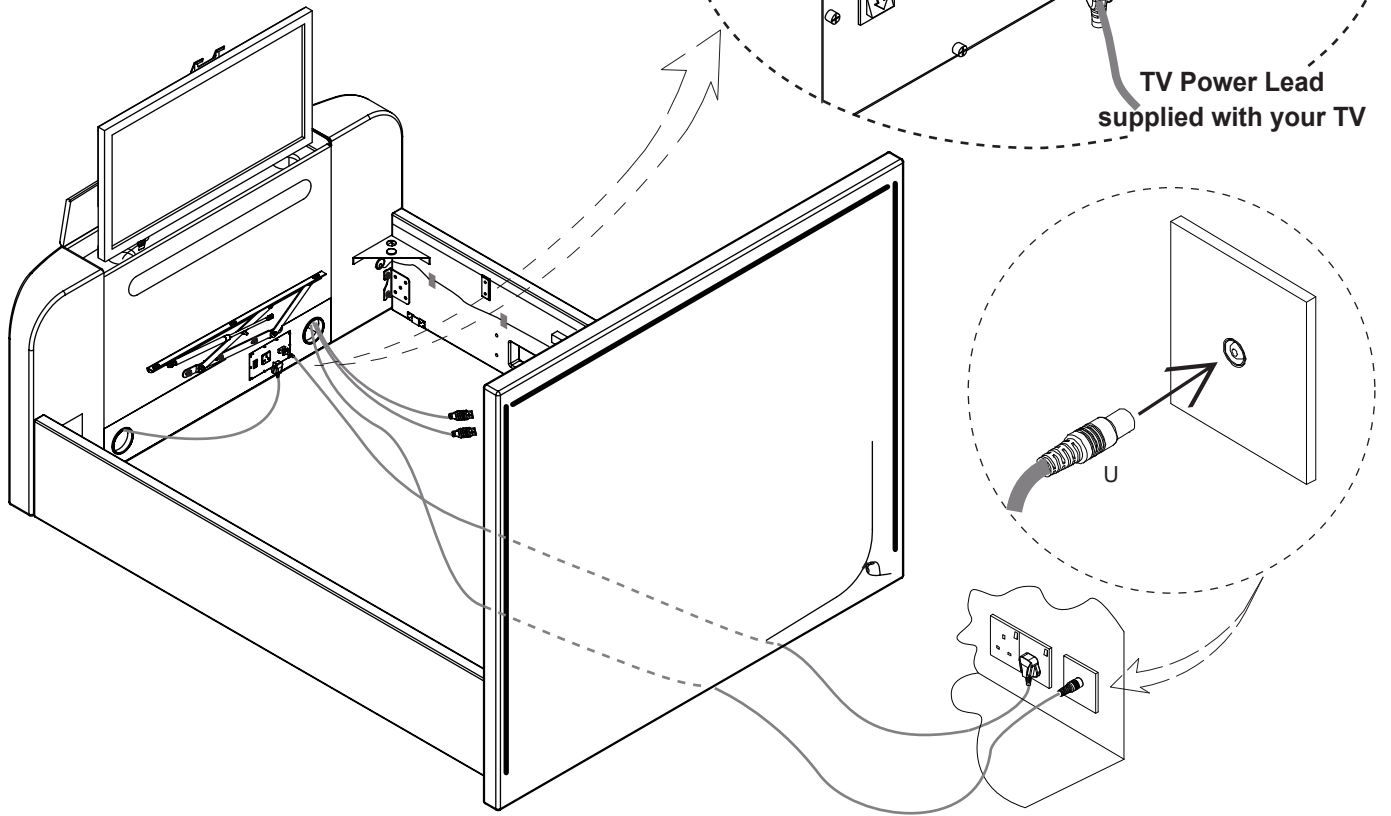


TV Power Lead supplied with your TV

Step 15

- c x1
- b x1
- a x1


 
N.B. - DOUBLE, KING OR SUPER-KING LED PACK

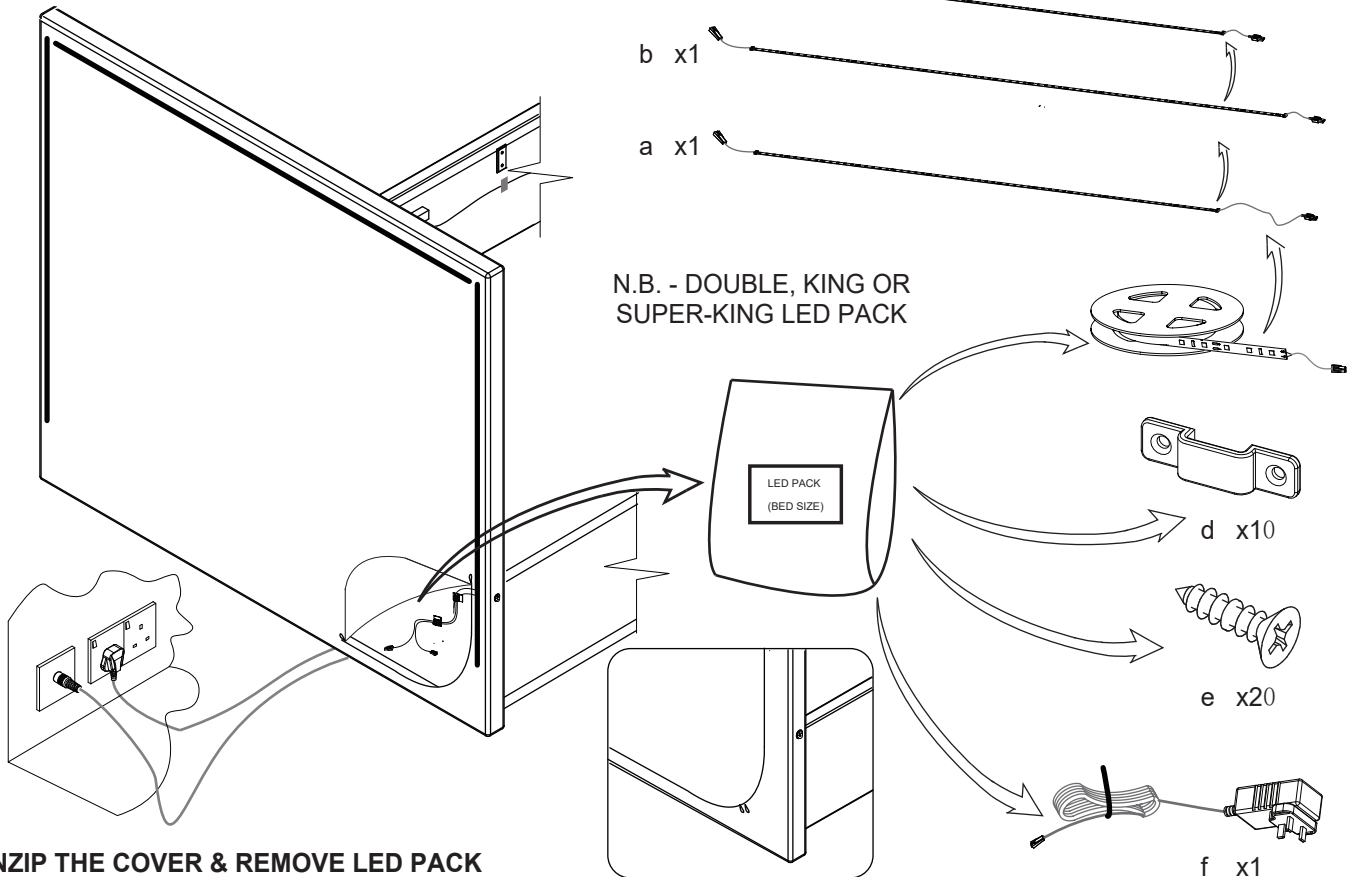

UNZIP THE COVER & REMOVE LED PACK





Step 17

  NOTE: DO NOT ALLOW THE LED LIGHTS TO TOUCH THE WALL: KEEP 1.5 CM CLEARANCE.

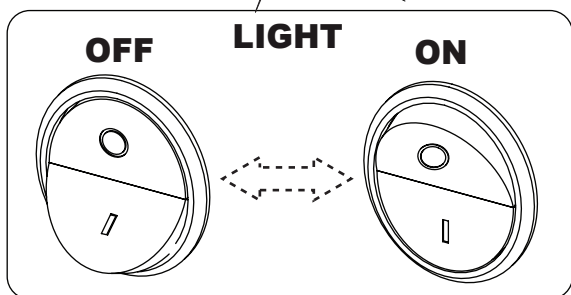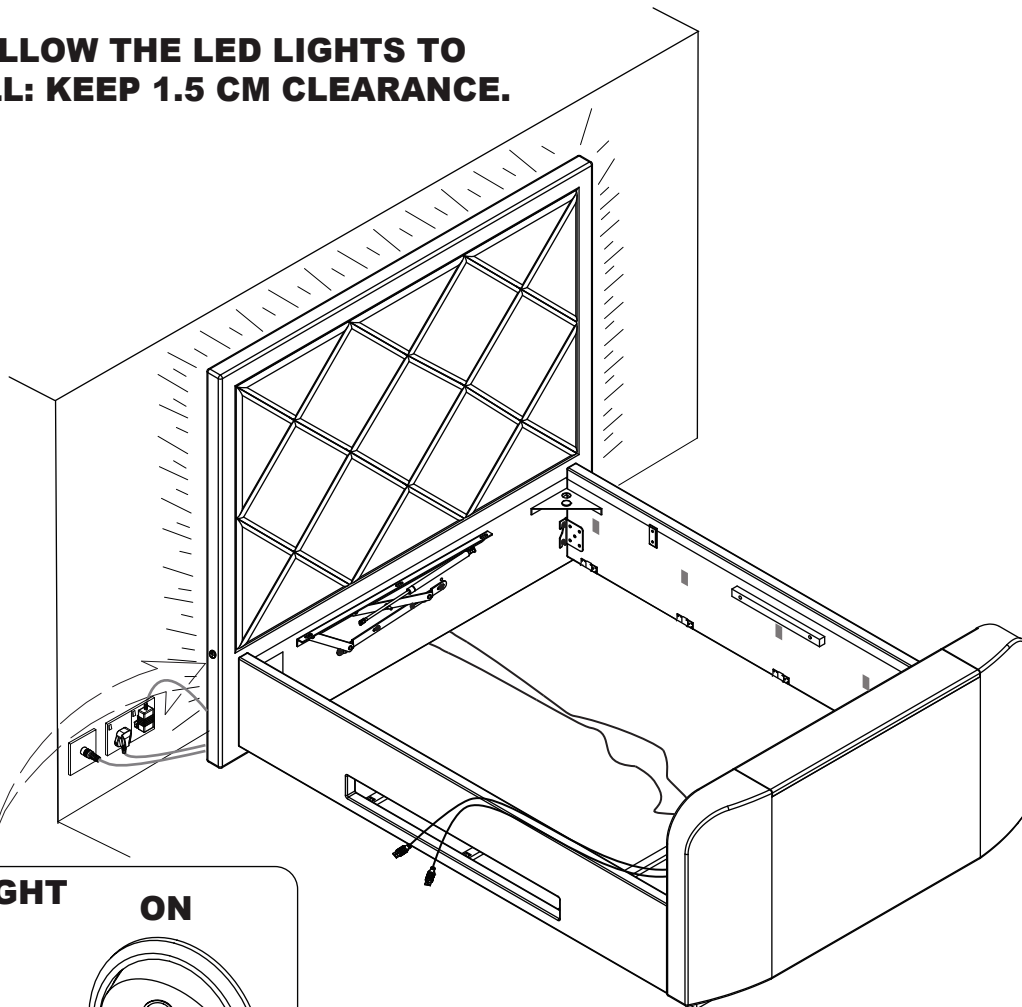


Step 18

    IMPORTANT: Be careful not to scratch the leather or fabric when slotting the wooden supports into the side panel brackets.

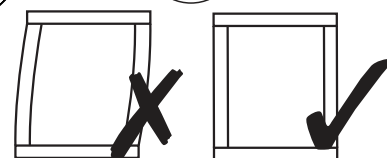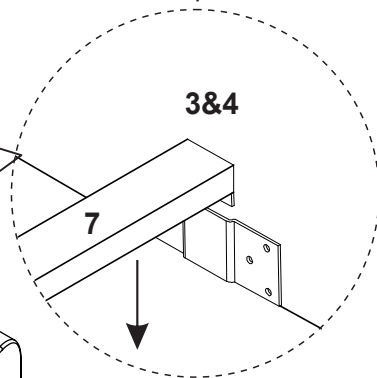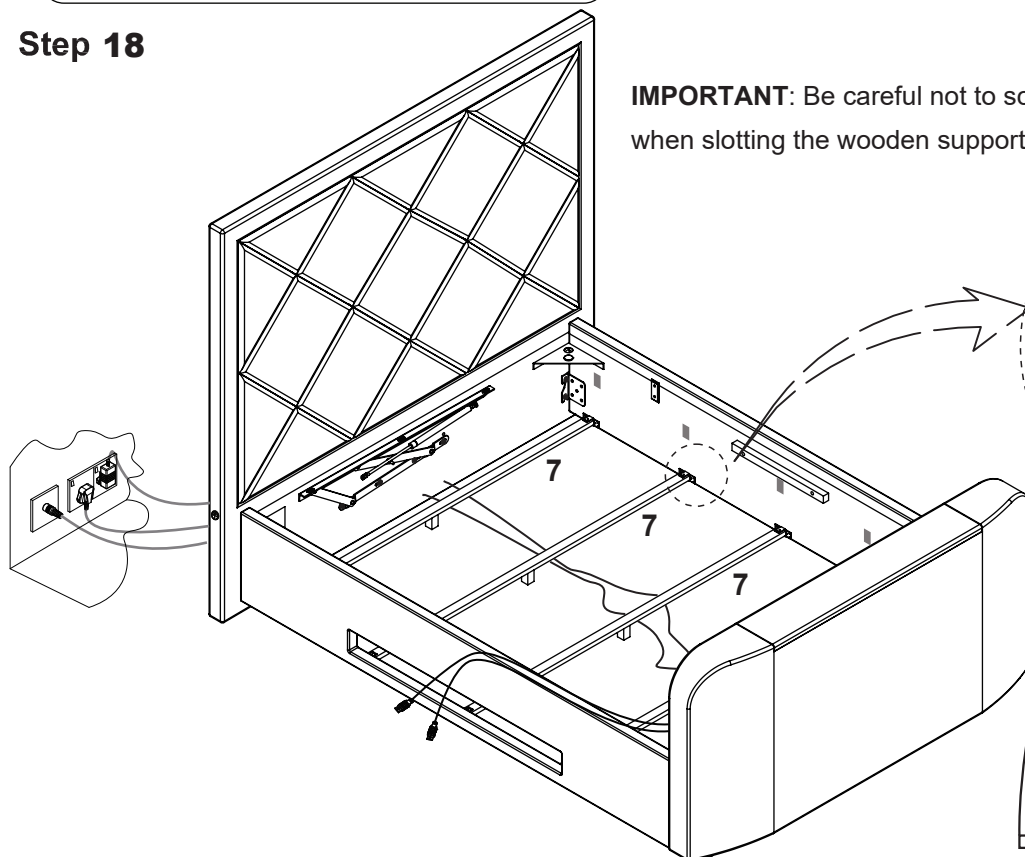


N.B. SQUARE UP BED AND TIGHTEN ALL BOLTS 100%

 
Step 19

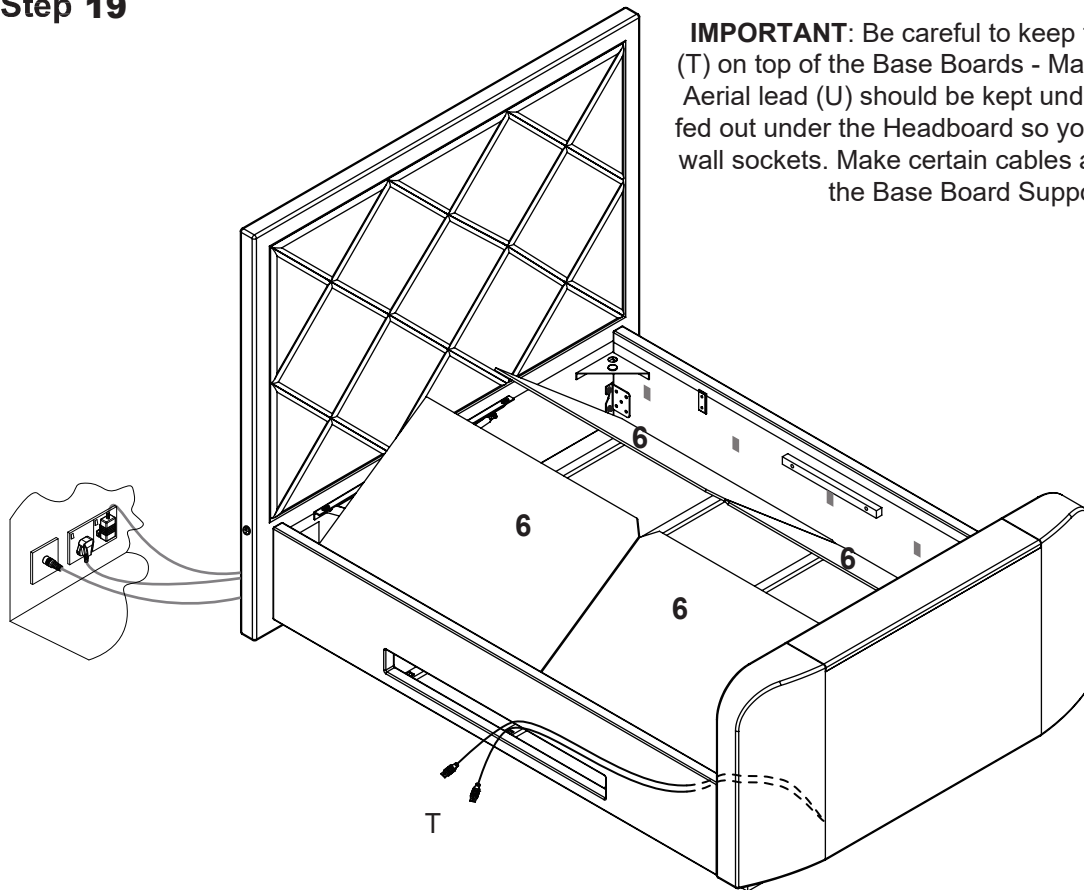


 
Step 20

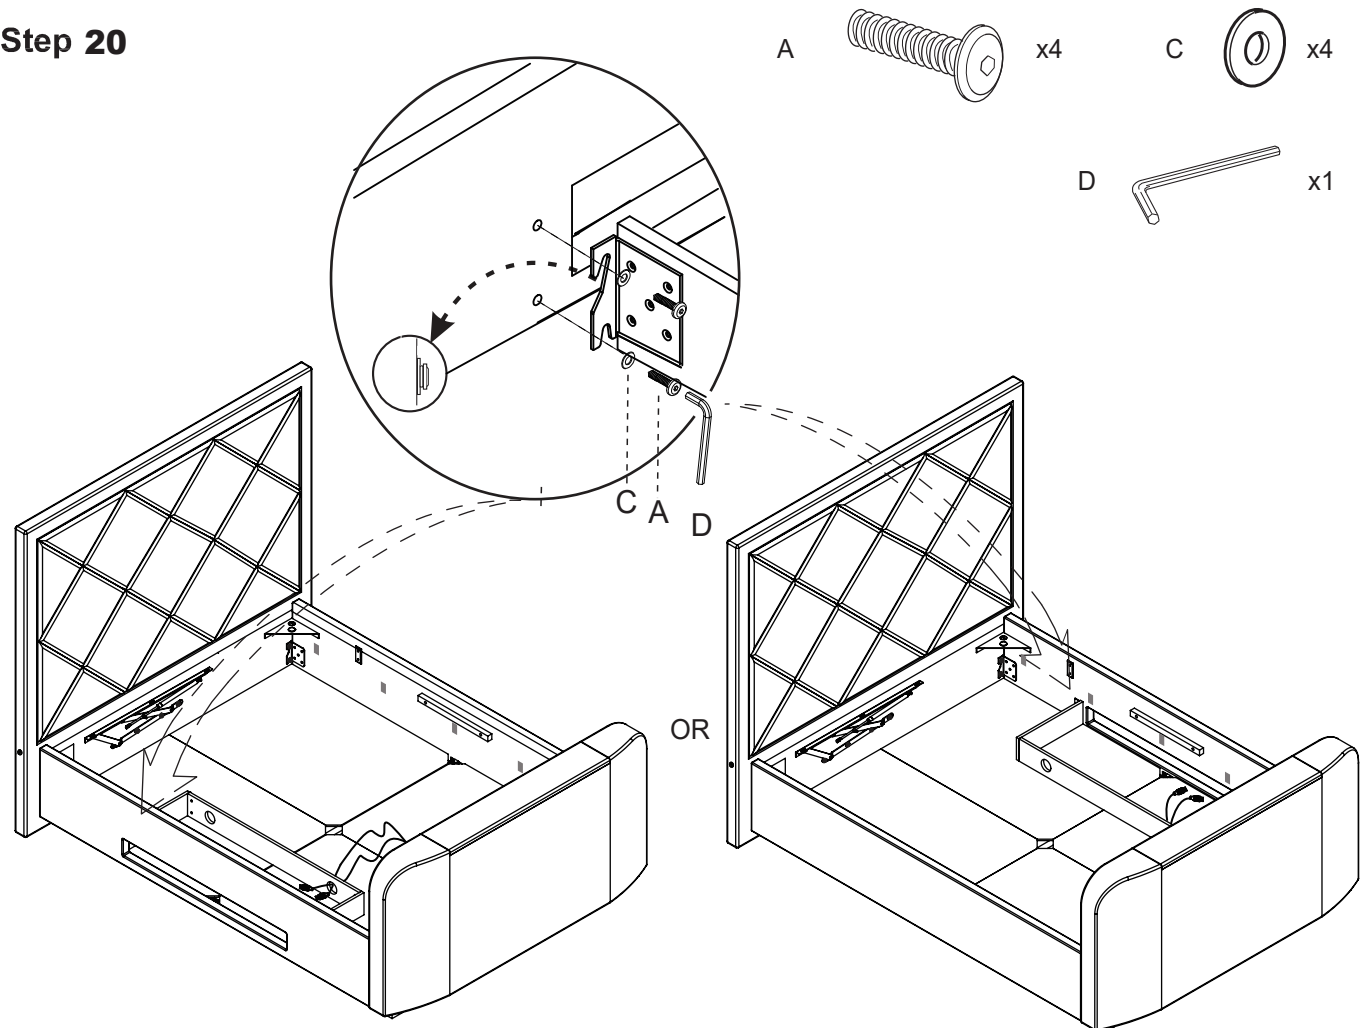

 Step 21



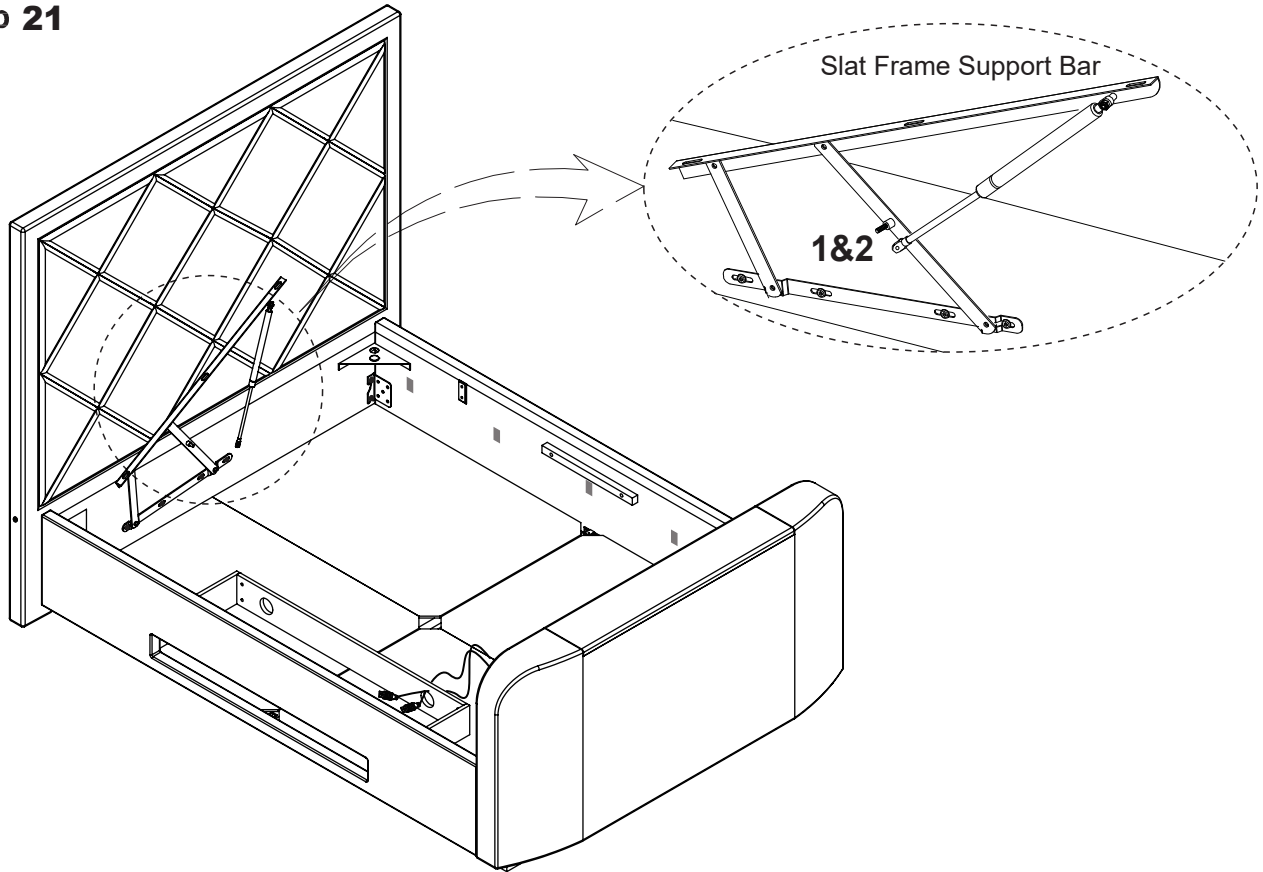


  Step 22

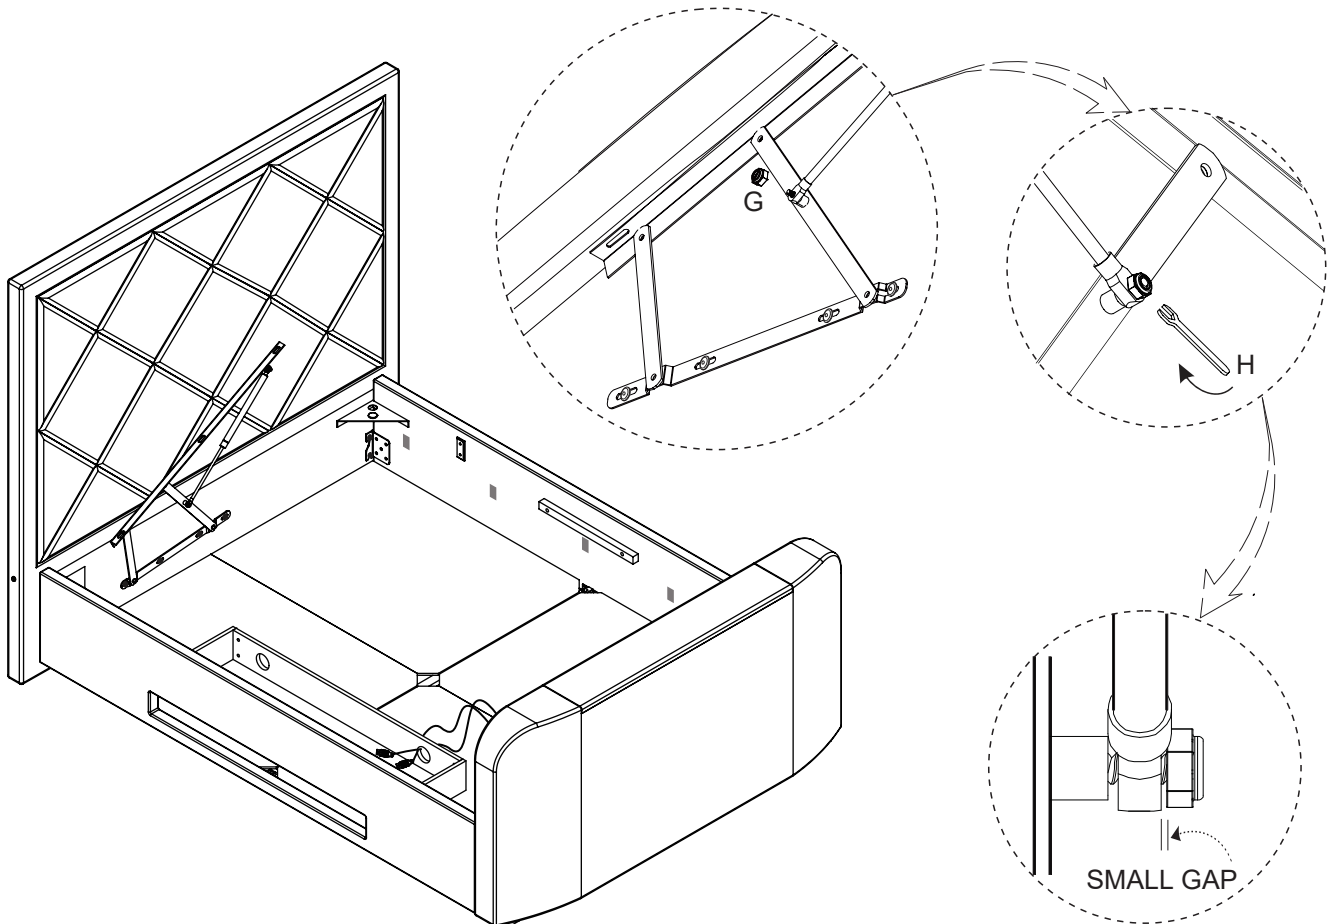


Step 23 If you purchased Double or King size, unfold slat frame and then follow Step 25 onwards.

   Step 24 If you purchased Super King size, first un-fold metal slat frame (13), fit the cross bar (14) then follow step 25 onwards.

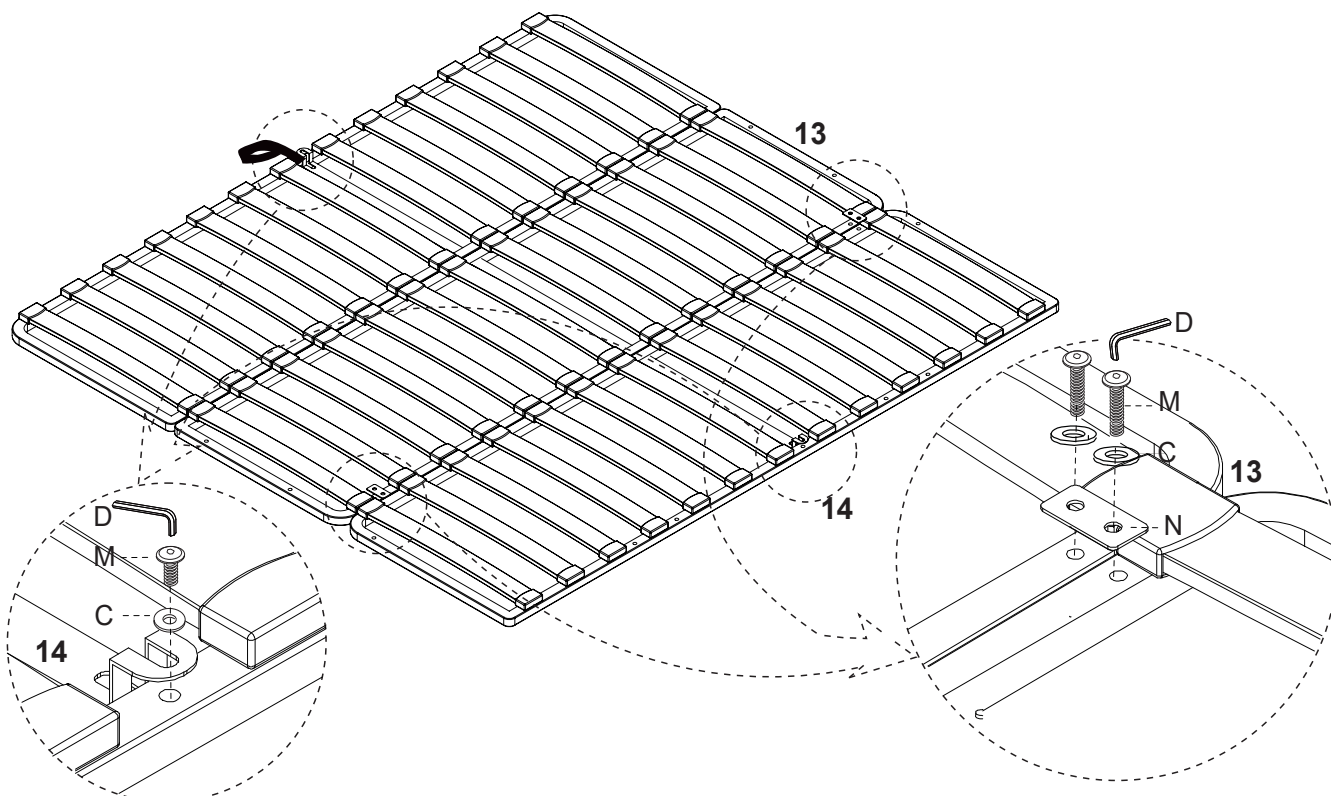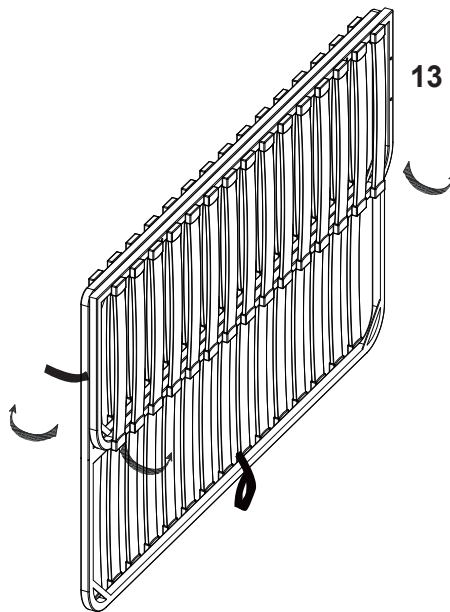


CAREFULLY FIT CROSS BAR (14)
FOR ADDITIONAL STRENGTH

 Step 25

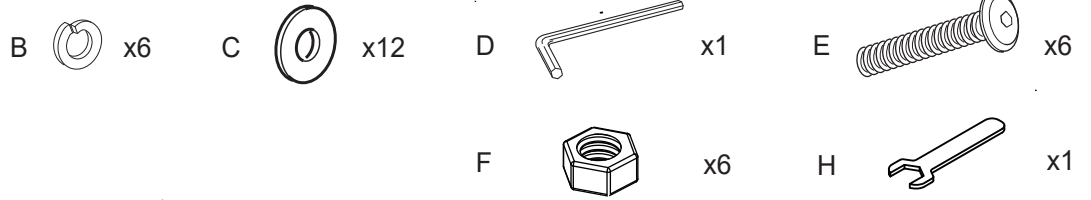




Double & King

 5

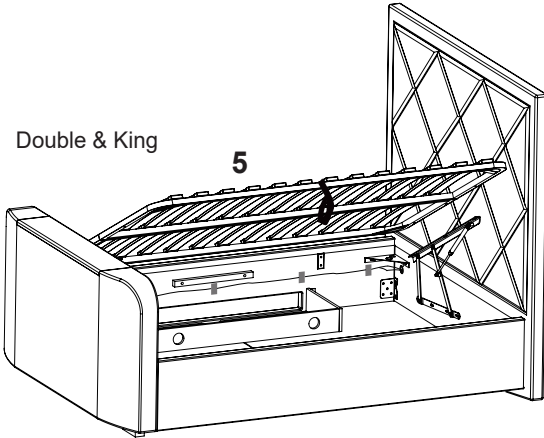

Super King

   
13

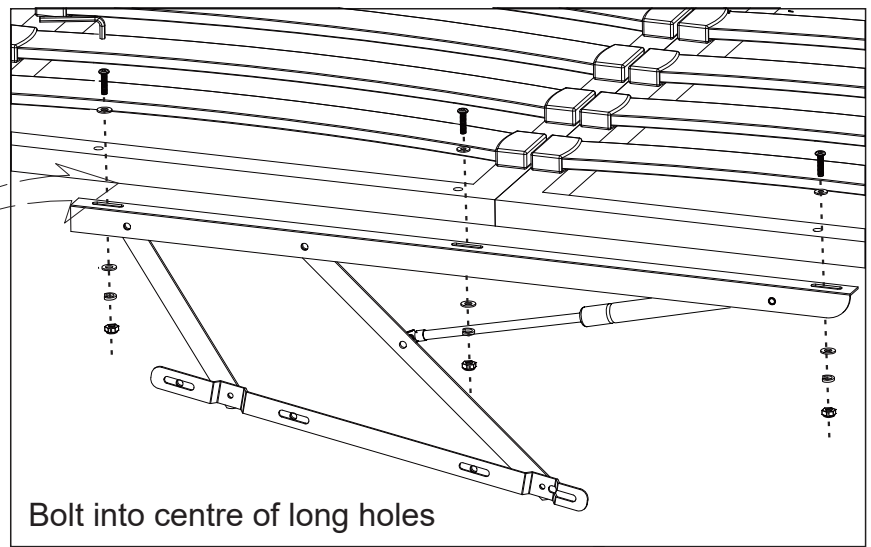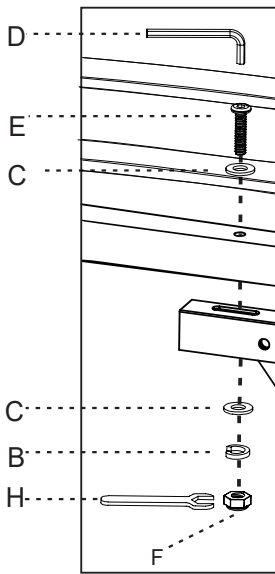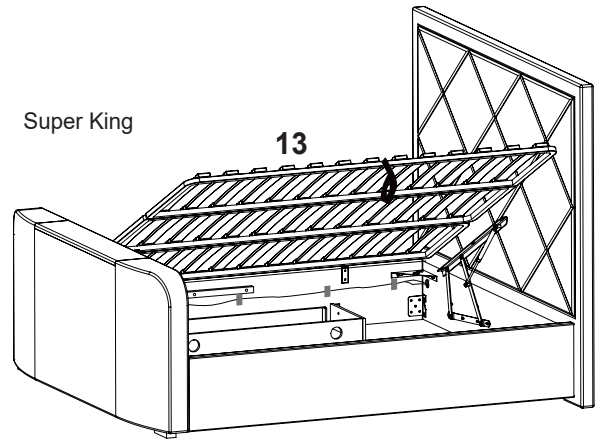

Step 26






 Double & King

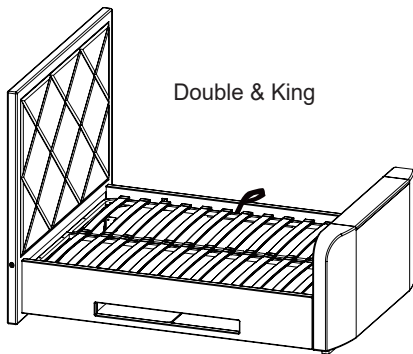

Carefully lay frame down. Make sure there is an even gap each side of about 10mm as in the sketch and that the frame sits firmly on each support, on each side rail (3 & 4).

   
Super King

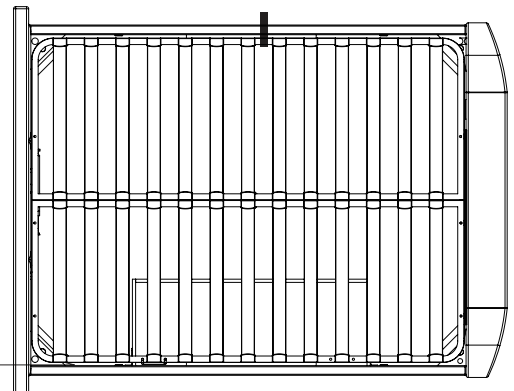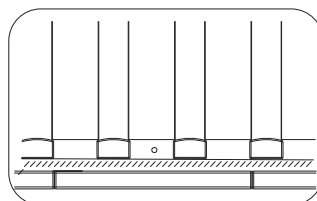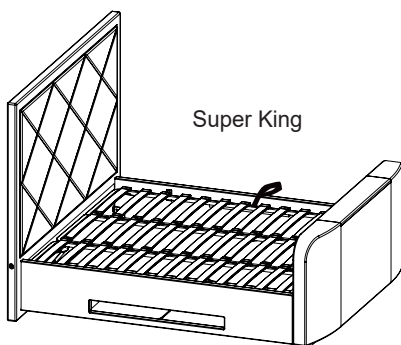


Hold frame then tighten all six bolt sets 100% using spanner (H) & Allen key (D).

Step 27

 Double & King


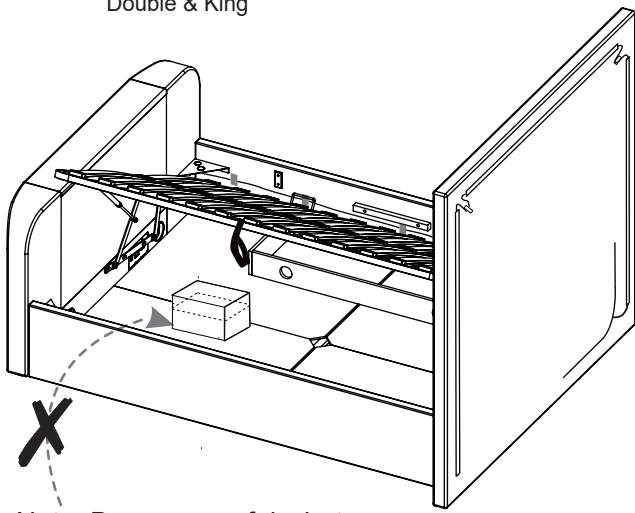


Super King

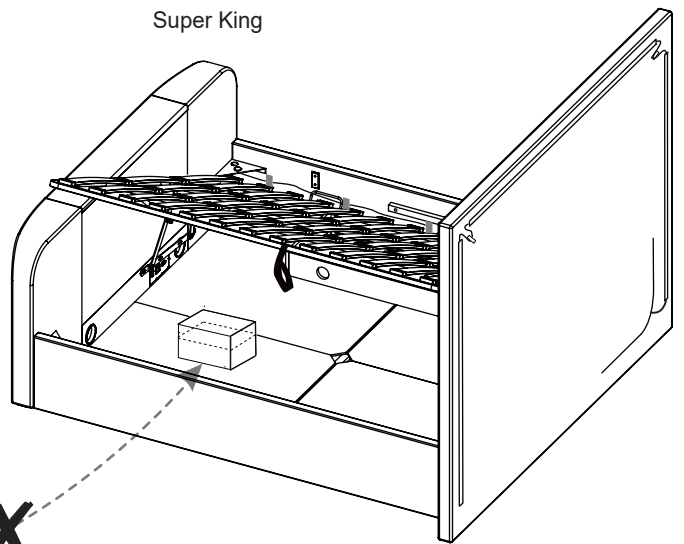 


Note: Be very careful what you store under the bed - the top of an item, like a suitcase or a box, must not touch the slats or they shall be damaged. Maximum storage height is 260mm.

  Step 28

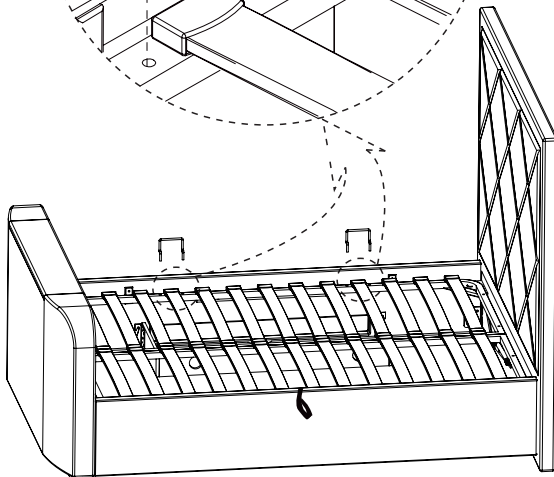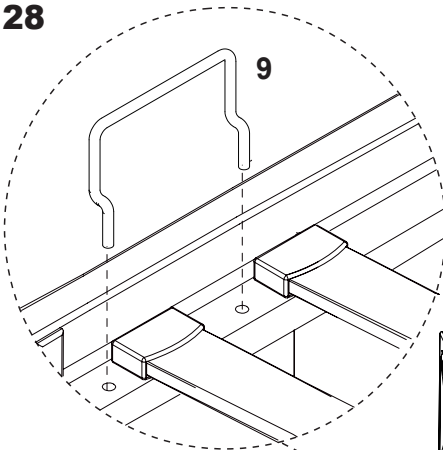

Double & King

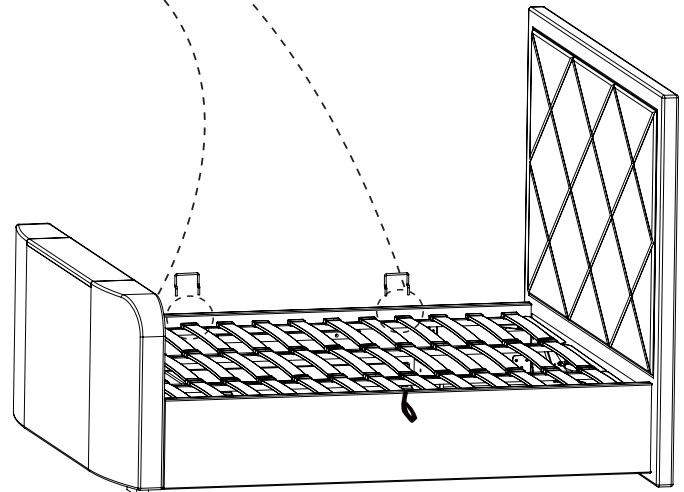 


Super King



NOTE: Before moving the slat frame, mattress must be placed on the slats as the speed of upward movement is very high and may cause injury. Lift frame with the hand-strap then slowly push down ensuring the edges are aligned with the side panels. If not aligned, check bed is still square (see Step 4). Depending on the weight of the mattress, the speed of the lift will vary so be careful until you get used to the speed. Always use the strap to lift or lower the frame - keep fingers well away from the moving parts.

NOTE: With mattress in place, move the frame up & down five times to lubricate the pistons.

 
Occasionally you may find the radio wave connection between remote control and TV Lift is lost, probably due to atmospheric conditions. In that case please follow these simple instructions:

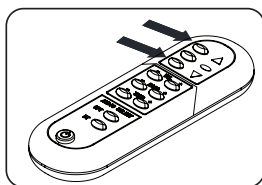

- ①. Disconnect all mains electric power to the bed, for at least 60 seconds.
- ②. Press UP or DOWN Button on Remote Control and keep holding button down, simultaneously re-connect mains electric power to bed keeping button down for at least a further 5 seconds. TV Lift unit receives signal from Remote Control and lift will begin to move UP or DOWN whichever direction is appropriate.
- ③. Re-connection is now completed.

Overall Dimensions

 DOUBLE: W165cm X L221.5cm X H161/82.5cm
 KING: W180cm X L230.5cm X H161/82.5cm
 SUPER KING: W210cm X L230.5cm X H161/82.5cm

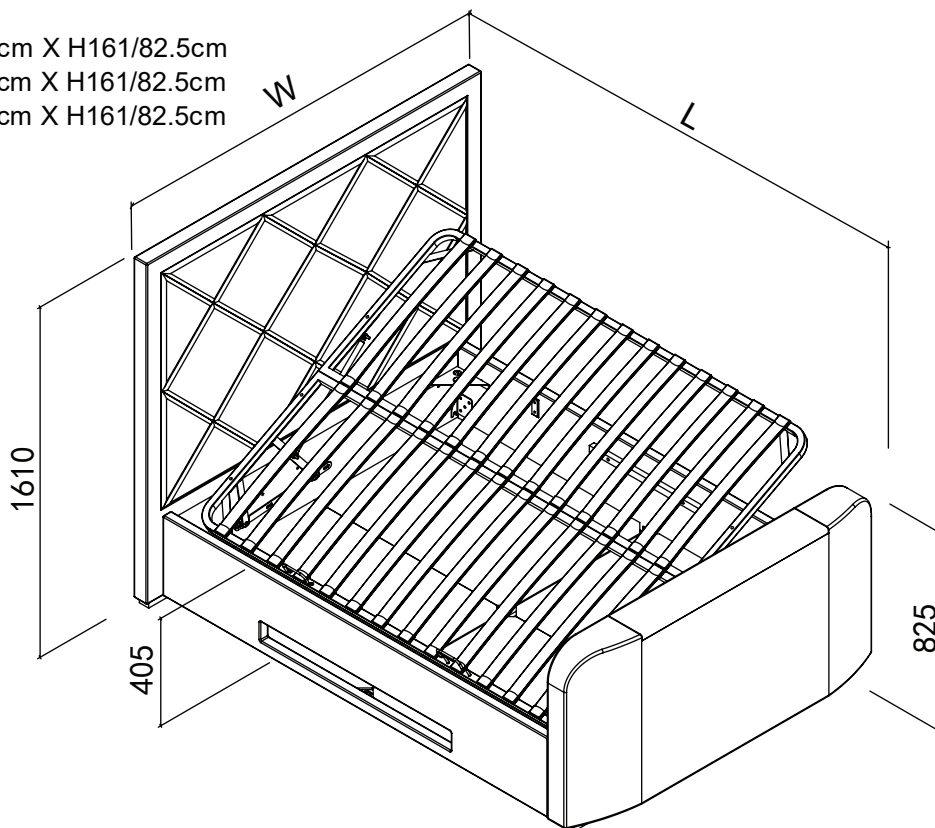


Product Information

- Upholstered Bed Using Polyester Fabric. Bed conforms to BS EN 1725 & BS 5852.
- TV Lift system has a maximum load capacity of 14 Kg
- Compatible with slimline LED television with a screen size of 42".
- Maximum TV dimensions: W97 x H54 x D8cm

Care Instructions

- Avoid exposing the furniture to excessive heat or direct sunlight as this can cause cracking and deterioration of the colour.
- Periodically check & re-tighten any fastener.
- Periodically dust lightly with a light vacuum cleaner or wipe with a clean soft cloth.
- Do not use silicone based furniture polish.
- Any spills should be removed immediately with a soft damp cloth.
- TAKE CARE WHEN MOVING THE FURNITURE AND NEVER DRAG THE PIECES ACROSS THE FLOOR, AS THIS WILL CAUSE DAMAGE TO THE JOINTS.

 We cannot be held responsible for any damage caused to the TV, TV cabling or the TV Bed itself due to incompatibility of any additional equipment installed by the end-user or due to loose and poorly installed cables (see Steps 10 & 13). Please read this Assembly Instruction carefully and follow the recommendations.

 TV LIFT REF: LA08 CONFORMS TO STANDARD FOR UK & LED CONFORMS TO STD FOR UK (EMC, LVD & ROHS)

TV LIFT: EN 60335-1:2012+A11: 2014	LED LIGHT STRIP: FDL037-60	
EN 60950-1:2006+A11:2009+A1:2010	EMC CERT NO. HTT170911240E	DIRECTIVE: 2014/30/EU
+A12:2011+A2: 2013	LVD CERT NO. HTT170911240L	DIRECTIVE: 2014/35/EU
EN 301 489-1 V2.2.0: 2017	ROHS CERT NO. HTT170911240R	DIRECTIVE: 2011/65/EU
EN 301 489-3 V2.1.1: 2017	POWER SUPPLY: FDD-009	
EN 55014-1:2006+A1:2009+A2:2011	EMC CERT NO. BST14010531Y-1EC-1	DIRECTIVE: 2004/108/EC
EN 61000-3-2: 2014 EN 61000-3-3: 2013	LVD CERT NO. BST14010531Y-1SC-2	DIRECTIVE: 2006/95/EC
EN 62233: 2008 EN 55014-2: 2015	ROHS CERT NO. BST14010531Y-1RC-4	DIRECTIVE: 2011/65/EU
EN 300 440 V2.1.1: 2017 EN 301 489-3		
V2.1.1: 2017 EN 62479: 2010		



GENERAL INFORMATION

It is very important not to place any vessel containing liquids, e.g. drinks or vase of flowers, on top of the TV footboard which may accidentally spill and enter the TV compartment as this could cause damage to the TV and/or the TV lifting equipment.

If this happens, please contact your retailer.

Do not expose the bed to an undue level of heat - keep away from radiators.

Never allow anyone to sit on the foot end of the bed - keep children well away from moving parts.

To keep bed clean, we recommend that it be wiped over with a slightly dampened cloth or if fabric, use a light vacuum cleaner; disconnect power before cleaning.

Supplied with the bed is a remote control to operate the TV Lift and when you fit your own TV there is a remote control to operate it as well. Both these remotes use batteries - there are no batteries in the rest of the equipment.

There are strict controls for disposal of batteries - your local council can advise on how to safely dispose of them.

Never burn batteries on an open fire as they could explode.

IMPORTANT POWER INFORMATION

It is essential that the Mains Power Lead (S) is connected to an earthed socket be it a wall socket or extension lead - otherwise there is risk of damage or even electric-shock.

The socket providing the power must be accessible at all times in case you need to switch off the power quickly.

During an electrical or lightening storm - disconnect the power completely as a precaution.

Always un-plug the power when going on holiday or when the bed is not used for an extended period.

If you have young children in the home always disconnect the power at the wall socket for extra safety.

Power outlets, extension leads or adapters must not be overloaded beyond their limit - this can result in fire or electric shock. Leads supplied with this bed, or other approved mains powered extension leads used to power the equipment, must not be placed where they can be walked on - this is dangerous and could lead to accidents.

Do not interfere with or modify any cables already fitted and do not add any extra media leads unless they are routed through the ducts as shown in Stage 10. All leads must be tightly connected to back of TV, never hanging loose.

Never touch moving parts or any part of the equipment - if something needs to be checked, disconnect the power first.

Do not insert anything into the footboard as this could seriously damage the TV and/or the TV lifting equipment and could, if done carelessly, cause serious damage or injury.

If the equipment doesn't operate normally or if there is any unusual noises, disconnect the power.

IMPORTANT: Care should be taken when connecting electrical items. If you are in any doubt about the connections please consult an approved electrician. If you still have a problem please contact your retailer for advice.

TELEVISION INSTALLATION

Before fixing the slats frame to the bed, please follow the television installation instructions below

Raise the TV Lift by pressing the TOP button of the remote control.

Connect the TV using the TV Installation Kit packed in the accessory box in carton 2. If screws are supplied with your TV, use these in preference.

Connect the TV to the mounting bracket plate as in Step 11 or 12.

If necessary mounting plate can easily be adjusted to move TV up or down.

Connect the TV Power Lead (supplied with TV) by passing plug down one of the ducts, plugging it into the adapter if required then into the TV power socket which is on the face of footboard - see Step 8.

Note that this socket is only to be used for the TV, power output is not constant.

Arrange the Aerial & HDMI cable (T&U) by passing down the appropriate duct - see Step 10.

If required, connect your own media cables through either of the ducts then connect your media equipment.

Please use the cable clips & cable ties to make certain there are no loose wires to snag.

The TV can now be operated following the TV Operation Guide supplied with your TV.

When finished viewing lower the TV back into the footboard by pressing DOWN button of the remote control.

The TV will retract into the footboard automatically - power shall be turned off when TV reaches the bottom.

When the UP button is pressed - the TV Lifting Column rises and power to the TV turns back on automatically.

TROUBLE SHOOTING

If your equipment does not operate please check all the power connections to the wall and to the socket in the footboard.

Make sure TV is switched on. (Note: TV will only work when it is in the up position).

Follow instruction at the top of Page 22 to make certain pairing of Remote Control has not been lost.

If the television or TV Lift still fails to operate contact your retailer.

IMPORTANT: Care should be taken when connecting electrical items. If in any doubt please consult an approved electrician to advise you on the electrical supply to achieve safe connections, to the electrical equipment of the TV Bed.