



※ Please register your product at
www.vovo-us.com/pages/register
★ to receive full warranty benefit.★

ENGLISH
FRENCH
SPANISH

VOVO
Air Care



Foot & Body Dryer User Guide

BD-7700W / BD-7700B / BD-7700G

IMUNSEN

FOOT&BODY DRYER

READ THESE INSTRUCTIONS

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

when the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off -for additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

If the SUPPLY CORD is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

WARNING Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

- Please read carefully through the user manual for safe and proper use.
- Do not use this item in humid places such as bathroom, shower, etc.
- Do not immerse in water.
- Exterior of the product may be altered for quality assurance without pre notice.
- The exterior of the product can be changed without a notice for quality assurance.
- The photo may be different from the actual product.
- Do not use it except for drying the user's body.
- This appliance has a polarized plug.
(one blade is wider than the other)
- To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way.
- If the plug does not fit fully in the outlet, reverse the plug.
- If it still does not fit, contact a qualified electrician.
- Do not modify the plug in any way.
- The product is for indoor use only. Do not use the product in outdoor.

SAVE THESE INSTRUCTIONS

IMUNSEN

FOOT&BODY DRYER

LISEZ CES INSTRUCTIONS

Cet appareil n'est pas destiné à être utilisé par des personnes (y compris des enfants) dont les capacités physiques, sensorielles ou mentales sont réduites, ou qui manquent d'expérience et de connaissances, à moins qu'elles ne soient supervisées ou n'aient reçu des instructions concernant l'utilisation de l'appareil par une personne responsable de leur sécurité. Les enfants doivent être surveillés afin de s'assurer qu'ils ne jouent pas avec l'appareil.

lorsque l'appareil est utilisé dans une salle de bains, débranchez-le après usage car la proximité de l'eau présente un danger même lorsque l'appareil est éteint - pour une protection supplémentaire, il est conseillé d'installer un disjoncteur différentiel (DDR) dont le courant résiduel nominal de fonctionnement ne dépasse pas 30 mA sur le circuit électrique alimentant la salle de bains. Demandez conseil à votre installateur.

Si le CORDON D'ALIMENTATION est endommagé, il doit être remplacé par le fabricant, son représentant ou des personnes de qualification similaire afin d'éviter tout danger.

AVERTISSEMENT N'utilisez pas cet appareil à proximité d'une baignoire, d'une douche, d'un lavabo ou de tout autre récipient contenant de l'eau.

- Veuillez lire attentivement le manuel d'utilisation pour une utilisation sûre et correcte.
- N'utilisez pas cet article dans des endroits humides tels que la salle de bain, la douche, etc.
- Ne pas l'immerger dans l'eau.
- L'extérieur du produit peut être modifié sans préavis pour des raisons de qualité.
- La photo peut être différente du produit réel.
- Ne l'utiliser que pour sécher le corps de l'utilisateur.
- Cet appareil est équipé d'une fiche polarisée (une lame est plus large que l'autre).
- Afin de réduire le risque d'électrocution, cette fiche est conçue pour être insérée dans une prise polarisée dans un seul sens.
- Si la fiche ne s'insère pas complètement dans la prise, inversez-la.
- Si elle ne rentre toujours pas, contactez un électricien qualifié.
- Ne modifiez pas la fiche de quelque façon que ce soit.
- Le produit est destiné à un usage intérieur uniquement. N'utilisez pas le produit à l'extérieur.

VEUILLEZ CONSERVER CES INSTRUCTIONS

Table of Contents

1	Precautions	05
2	Product Introduction	08
3	User Guide	10
4	Maintenance	22
5	Troubleshooting	23
6	VOVO IMUNSEN Customer Service Center	24
7	Warranty	25

Please read before using.

- Do not use this item in humid places such as bathroom, shower, etc.
- Please read carefully through the user manual for safe and proper use.
- Exterior of the product may be altered for quality assurance without pre notice.
- The exterior of the product can be changed without a notice for quality assurance.
- The photo may be different from the actual product.
- Do not use it except for drying the user's body.
- The product is for indoor use only. Do not use the product in outdoor.

Precautions

Precautions for safe usage

The following instructions are to use the product safely and accurately to prevent unexpected risks or damage, so be sure to follow the instructions below.

Please read the manual after understanding the marking below and its contents.



Warning

If you ignore this mark and use it incorrectly, the user could result in death or serious injury. You may also experience fire and electric shock when failed to follow the instructions.



Caution

If you ignore this mark and use it incorrectly, the user could result in death or serious injury. You may also experience fire and electric shock when failed to follow the instructions.

Precautions

When installing



DANGER

- **If the power cord or plug is damaged, stop using the product and contact the A/S center for repair.**
It can cause an electric shock or fire.
- **Do not plug multiple products into one outlet.**
It can cause short circuits or fires.
- **Do not handle plugs with wet hands.**
It can cause an electric shock.
- **Do not bend or twist the power cord forcibly**
It causes fire or electric shock.
- **Please do not install the product in places with water. Do not use the product in humid places such as bathroom or showers, etc.**
It causes fire or electric shock.
- **Do not disassemble or modify the product**
If handled incorrectly, there is a risk of electric shock or injury.
If you need to dismantle the product, please contact the manufacturer to handle it.
- **Don't install it near the flammable objects.**
The product can be deformed, or the sheath can melt, causing the fire.



WARNING

- **Do not install in sloping or unstable areas.**
The product can be damaged or cause noise.
- **Do not install it in sub-zero temperature environments.**
The reliability of electronic control parts can be reduced, which can lead to product failure.

Safety Precautions

When using



DANGER

- If there is a strange sound, smell, or smoke from the product, unplug the power and contact the A/S center.
- Do not submerge the product in water.
- Do not jump on, or shock the product.
- Be careful not to let children or pets go up without their guardian's instructions.
- Do not block the air inlet or outlet.
- Do not put heavy objects on the power lines.
- If you don't use the product for a long time or if there is thunder and lightning, make sure to unplug the power.
- Do not wipe the product with flammable spray and flammable materials.



WARNING

- Please use it one person at a time.
- Please check the maximum allowable load and use the product.
- Do not put any objects or things on the device.
- Please clean the inlet regularly.
- After the operation is over, cool down the product enough and clean it up.

 
Product Introductions

Package Contents

The numbers in () represent quantities.





Main Body (1)

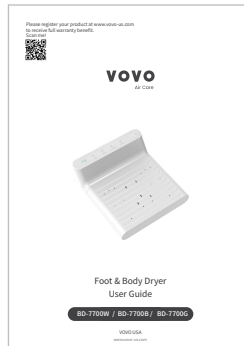

Manual Guide (1)

Product Introductions

  Parts Name

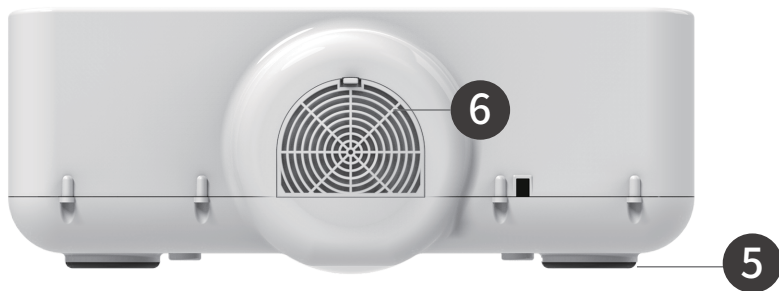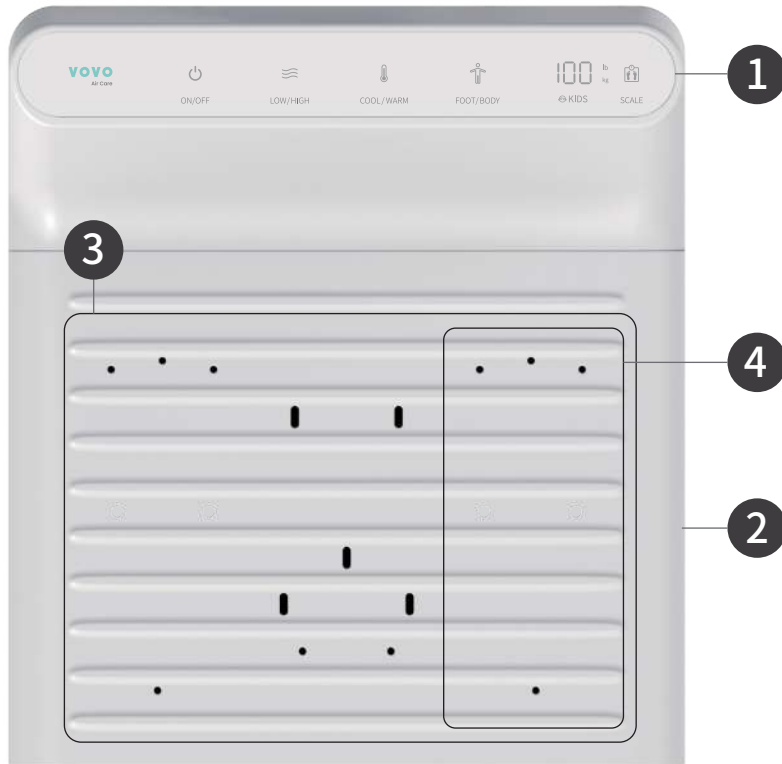

Parts Name

 
- 1. Main Control Panel
- Main Body Part
- Water Leak Sensor
- 2. Scaffolding
- 3. Body Dryer Area

- 4. Foot Dryer Area
- 5. Anti-slip Rubber, Weight Sensor
- 6. Air Inlet and Product Cover

User Guide

Operation Part Name and Function

※ Please plug in 10 seconds before using the WARM temperature Function.

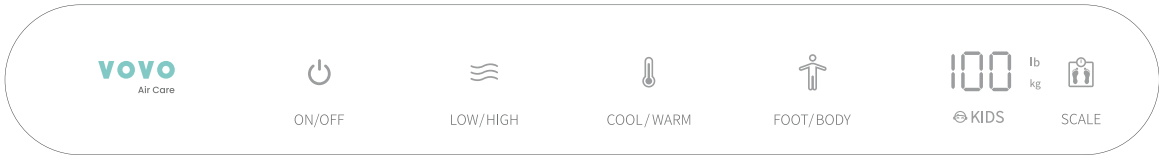

POWER

Power

Connect power and Power LED will turn on at the same time.

- Auto Mode : When the weight above 10kg is detected, the dryer will operate automatically.

+ Manual Mode : Please touch the power button for more than 3 seconds while not standing on the scaffolding.



LOW/HIGH

Wind Volume Control

Touch the icon to turn the scale mode on/off



COOL/WARM

Temperature Control

Touch the icon to change the wind temperature from cool to warm.

When the warm air function is initially turned on, the wind temperature will gradually increase.



FOOT/BODY

Dryer Mode Control

Touch the icon to change the dryer mode from Foot dryer to Body dryer.



SCALE

Scale Mode

Touch the icon to turn the scale mode on/off

- When the weight is below 10kg, please use the manual mode.



Scale Display (kg, lb)

To change the measurement unit, touch the scale icon for more than 3 seconds.



KIDS

Kids Mode

 
When the device detects children under 20kgs, it will automatically start with Low setting.

Water Leak Sensor

The product will shut off automatically when the sensor detects the leakage.

User Guide


How to Use Properly

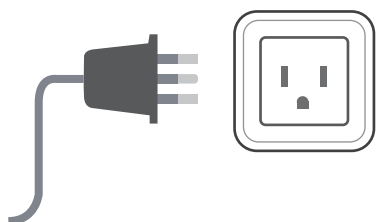

1. Connections

Please connect the power plug.

 - This product is 120 V~, 60 Hz.
- Do not touch the product with wet hands.
- Please check if the power cord or plug are not damaged.
- If there is water nearby, make sure to unplug the power cord.
- Please check if the LED light is on the LED Display.

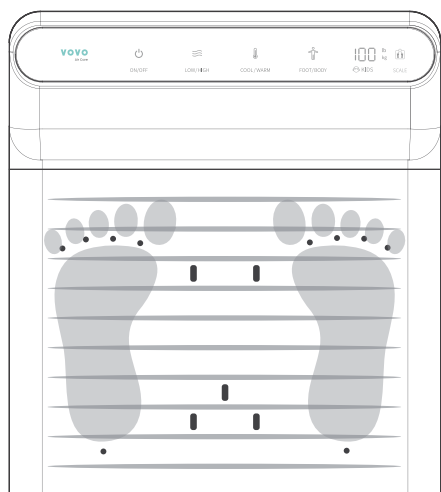

2. Operation

Please step on the product.

- Product will start in cool, low, scale-on, foot dryer mode.
- Automatically stops after 5 cycles of 2 minutes' operation and 5 second pauses in each operation.
- When the product automatically stops, step down from the product and step on it again to resume its operation.

Please use the device one person at a time.

Please use the device after removing most of the water.

The maximum weight for the device is 220 kg, 485 lbs.

Please do not dry any object with the device.

Please do not put any object on top of the device.



3. Wind Volume Control

 
Please touch the wind shaped icon on the product control part.

- You can check whether you adjusted the wind volume with the sound of a beep.
- You can adjust the Low/High setting as the product starts in Low setting.
- White LED light does not turn on when using Low wind setting.
- White LED light does turn on when using High wind setting.



User Guide


How to Use Properly

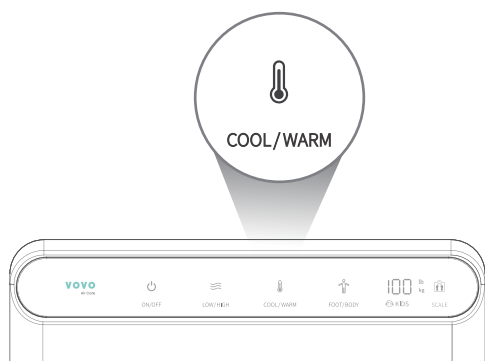

4. Temperature Control

Please touch the thermometer shaped icon on the product control part.

 
- You can check whether you adjusted the temperature with the sound of a beep.
- White LED light turns on when using cool temperature setting.
- Red LED light turns on when using warm temperature setting.

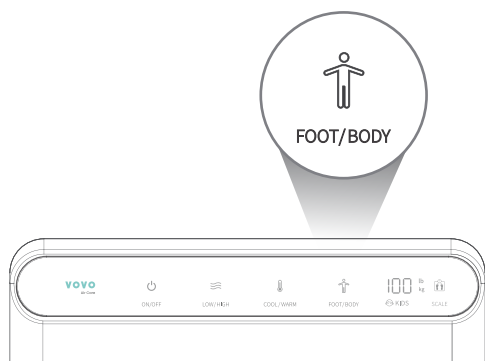

5. Dryer Mode Control

Please touch the human figure shaped icon on the product control part.

 - You can check whether you adjusted the Dryer mode with the sound of a beep.
- In foot dryer mode, it will operate for 2 minutes and stop for 5 seconds in repeated cycle.
- In body dryer mode, it will operate for 2 minutes and stop for 5 seconds in repeated cycle.
- When the product automatically stops, step down from the product and step on it again to resume its operation.
- When the device is used as a foot dryer, the LED light will not turn on.
- When the device is used as a body dryer, the LED light will turn on.

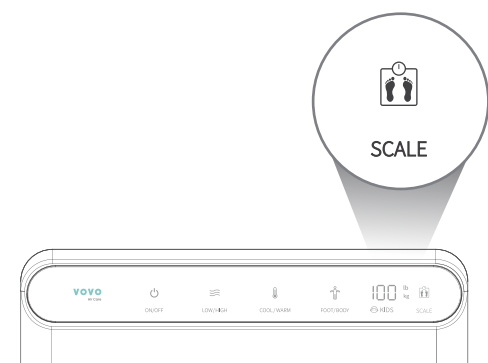


6. Scale Mode

Please touch the scale shaped icon on the product control part.

- You can check whether you turned on the scale mode with the sound of a beep.
- In scale mode, you can check the weight by stepping on the product for 10 seconds and it will automatically turn off.
- White LED light turns on when using scale mode.
- LED light does not turn on when scale mode is not operational.
- The scale function can be turned on and off by pushing the button.

User Guide

 
How to Use Properly

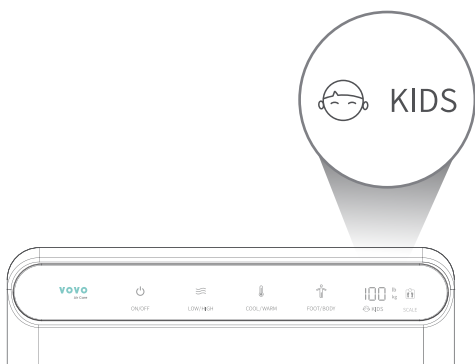

7. Kids Mode

When the device detects children under 10~20kg, it will automatically start with Low setting.

 - When the High wind volume setting is necessary, please touch the wind volume control button to change the mode.
- In Kids mode, white LED light will be turned on.
- When person over 20 kg is using the device, white LED light will not be turned on.
- When the weight is below 10kg, please use the manual mode.

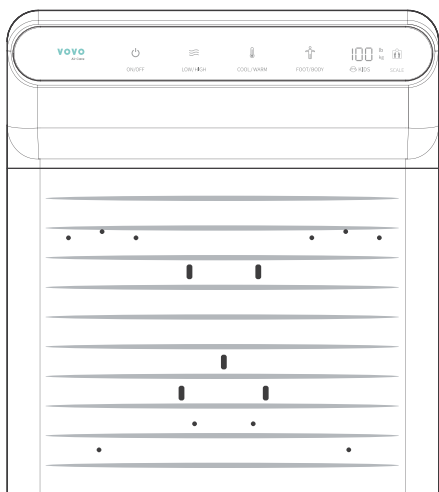

8. End of Operation

Please step down from the product to end the operation.

- Touch the power button of the product to end the operation.
- Step down from the product to terminate the operation.
- You can restart the product by touching the power button or stepping on the product after end of operation for 5 seconds.
- If no one steps on the product for 10 seconds after touching the power button to start the operation, it will automatically end its operation.

Please unplug the device after use.

Please clean the scaffolding periodically.

 
(Please wipe the remaining water from the scaffolding.)

Please clean the air inlet filter periodically.


Guide d'utilisation

Nom et fonction des parties d'opération

※ Veuillez brancher 10 secondes avant d'utiliser la fonction de température CHAUDE.

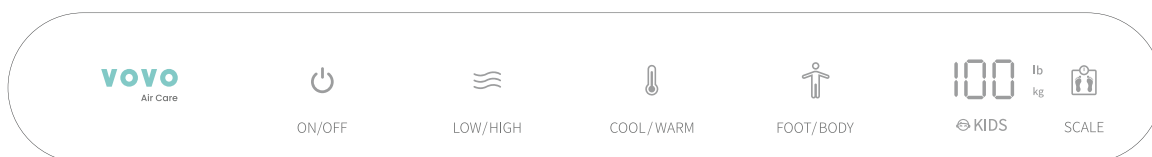


Alimentation

 POWER


Branchez l'alimentation et le LED d'alimentation s'allumera en même temps.

- Mode Auto : Lorsqu'un poids au delà de 10 kg est détecté, l'appareil se mettra en marche automatiquement.
- + Mode manuel : Pressez le bouton d'alimentation pendant plus de 3 secondes sans vous tenir sur l'appareil.

 LOW/HIGH


Contrôle de la puissance du vent

Touchez l'icône pour allumer le mode balance.

 COOL/WARM


Contrôle de la température

Touchez l'icône pour changer la température du vent de Frais à Chaud. Lorsque la fonction Air Chaud est activée, la température du vent augmentera progressivement.

 FOOT/BODY

Contrôle du Mode Séchoir


Touchez l'icône pour changer le Mode Séchoir soit en Mode Pied, soit en Mode Corps.

 SCALE


Mode balance

Touchez l'icône pour allumer le mode balance.

- Lorsque le poids est en dessous de 10 kg, veuillez utiliser le Mode Manuel.

 **Affichage du poids (kg, lb)**

Pour changer l'unité de mesure, pressez l'icône Balance pendant plus de 3 secondes.

 KIDS

Mode enfant

 
Lorsque l'appareil détecte un enfant en dessous de 20 kg, il démarrera automatiquement en mode Faible.

Capteur de fuite d'eau

L'appareil s'éteindra automatiquement si le détecteur détecte une fuite.

Guide d'utilisation


Comment bien l'utiliser

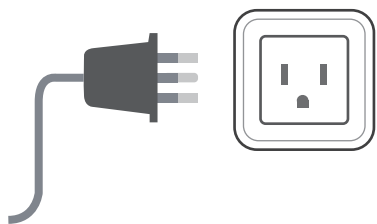

1. Connexions

Branchez le câble d'alimentation.

 - Ce produit est de 120 V~, 60 Hz.
- Ne touchez pas le produit avec des mains mouillées.
- Vérifiez que le câble d'alimentation ou la prise ne soient pas endommagés.
- S'il y a de l'eau autour, débranchez le câble d'alimentation.
- Vérifiez que la LED soit sur l'affichage LED.

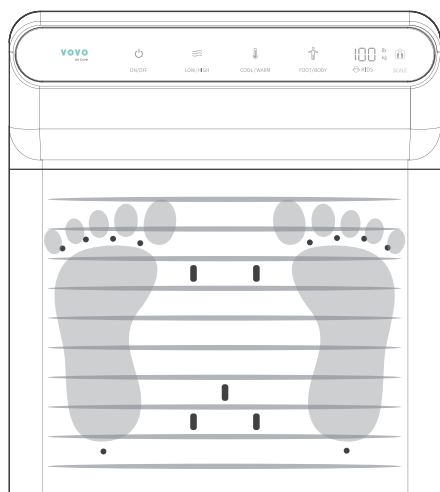

2. Mode de fonctionnement

Montez sur l'appareil.

- Le séchoir commencera en Frais, Faible, Balance Activée, Mode Pied.
- S'arrêtera automatiquement après 5 cycles de 2 minutes de fonctionnement et une pause de 5 secondes à chaque opération.
- Lorsque l'appareil s'arrête automatiquement, descendez de l'appareil et remontez-y pour recommencer.

Veuillez utiliser l'appareil seulement une personne à la fois.

Utilisez l'appareil après avoir essuyé une grande partie de l'eau.

Le poids maximum de l'appareil est de 220 kg, 485 lb.

N'utilisez pas l'appareil pour sécher quelconque objet.

 
Ne posez aucun objet sur l'appareil.



3. Contrôle de la puissance du vent


Appuyez sur l'icône en forme de vent situé sur la partie contrôle du produit.

- Lorsque vous changez la puissance du vent, vous pouvez entendre un bip sonore.
- L'appareil démarrant en mode Faible, vous pouvez changer la puissance de Faible à Fort.
- La LED blanche ne s'allume pas en mode Faible.
- La LED blanche s'allume en en mode Fort.

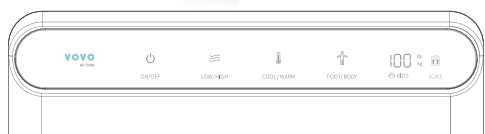

Guide d'utilisation

 Comment bien l'utiliser

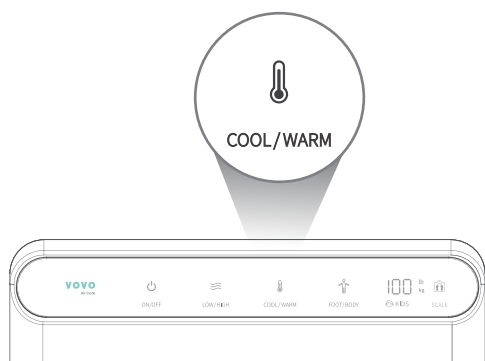


4. Contrôle de la température

Appuyez sur l'icône en forme de thermomètre situé sur la partie contrôle du produit.

- Lorsque vous changez la température, vous pouvez entendre un bip sonore.
- La LED blanche s'allume en mode Frais.
- Une LED rouge s'allume en mode Chaud.

5. Contrôle du Mode Séchoir

 
Appuyez sur l'icône en forme d'humain situé sur la partie contrôle du produit.

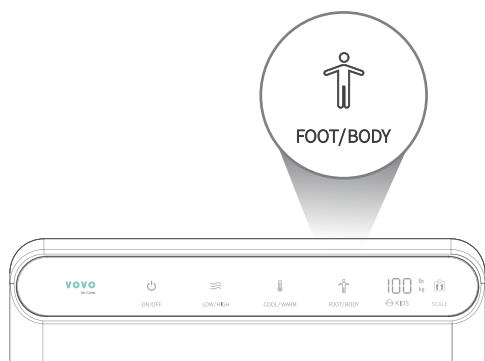

- Lorsque vous changez le Mode Séchoir, vous pouvez entendre un bip sonore.
- En mode Pied, l'appareil fonctionnera pendant 2 minutes et s'arrêtera pendant 5 secondes en cycle répété.
- En mode Corps, l'appareil fonctionnera pendant 2 minutes et s'arrêtera pendant 5 secondes en cycle répété.
- Lorsque l'appareil s'arrête automatiquement, descendez de l'appareil et remontez-y pour recommencer le fonctionnement.
- Lorsque l'appareil est en mode séchoir Pieds, la LED ne s'allumera pas.
- Lorsque l'appareil est en mode séchoir Corps, la LED s'allumera.

6. Mode balance


 
Appuyez sur l'icône en forme de balance situé sur la partie contrôle du produit.

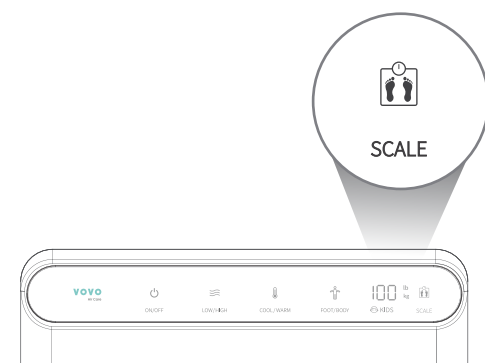

- Lorsque vous allumez le mode Balance, vous pouvez entendre un bip sonore.
- En mode Balance, vous pouvez voir votre poids en montant sur l'appareil pendant 10 secondes et il s'éteindra automatiquement.
- La LED blanche s'allume en mode Balance.
- La LED blanche ne s'allume pas lorsque le mode Balance n'est pas allumé.
- Le mode Balance peut être éteint et rallumé en pressant le bouton.

Guide d'utilisation

  Comment bien l'utiliser

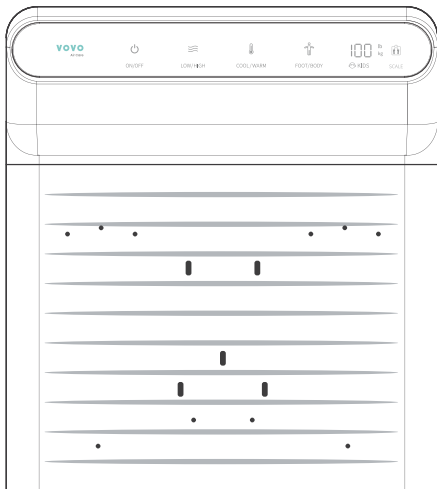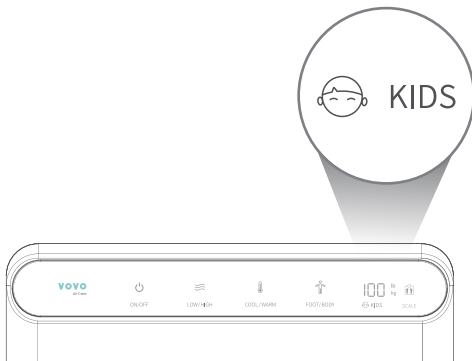

Débranchez l'appareil après utilisation.
 Nettoyez la grille d'aération de manière régulière.
 (Essuyez l'eau restante sur la grille d'aération.)
 Nettoyez le filtre à entrée d'air régulièrement.

7. Mode enfant

Lorsque l'appareil détecte un enfant de moins de 10~20kg, il se mettra automatiquement en mode Faible.

- Si le mode Fort est nécessaire, vous pouvez appuyer sur le bouton de contrôle du vent pour changer le mode.
- En mode enfant, une LED blanche s'allumera.
- Lorsqu'une personne de plus de 20 kg utilise l'appareil, la LED blanche ne s'allumera pas.
- Lorsque le poids est en dessous de 10 kg, veuillez utiliser le Mode Manuel.

8. Fin de fonctionnement

 
Veuillez descendre de l'appareil pour l'arrêter.

- Appuyez sur le bouton d'alimentation pour éteindre l'appareil.
- Descendez de l'appareil pour arrêter son fonctionnement.
- Vous pouvez rallumer l'appareil en appuyant sur le bouton d'alimentation ou en remontant dessus pendant 5 secondes.
- Si personne ne remonte sur l'appareil 10 secondes après avoir appuyé sur le bouton d'alimentation, il s'éteindra automatiquement. Veuillez descendre de l'appareil pour l'arrêter.
- Appuyez sur le bouton d'alimentation pour éteindre l'appareil.
- Descendez de l'appareil pour arrêter son fonctionnement.
- Vous pouvez rallumer l'appareil en appuyant sur le bouton d'alimentation ou en remontant dessus pendant 5 secondes.
- Si personne ne remonte sur l'appareil 10 secondes après avoir appuyé sur le bouton d'alimentation, il s'éteindra automatiquement. B92

Guía del usuario

Operación, nombre de las partes y funciones

※ Conecte el producto 10 seconds antes de usar el ajuste CÁLIDO de la temperatura del viento, por favor.

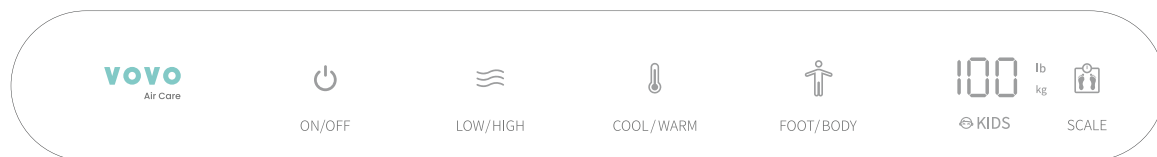

POWER

Encendido

Conecte la alimentación y el LED de encendido se activará de manera simultánea.

- Modo automático : Cuando el producto detecta un peso superior a 10 kg, la secadora operará de manera automática.

+ Modo manual : Toque el botón de encendido durante más de 3 segundos sin subirse a la estructura, por favor.



LOW/HIGH

Control de fuerza del viento

Toque el icono para encender o apagar el modo báscula.



COOL/WARM

Control de temperatura

Toque el icono para cambiar la temperatura del viento de fresco a cálido.

Cuando se enciende por primera vez el ajuste cálido del viento, la temperatura aumentará de forma gradual.



FOOT/BODY

Control del modo de secado

Toque el icono para cambiar el modo de secado de secador de pies a secador de cuerpo.



SCALE

Modo báscula

Toque el icono para encender o apagar el modo báscula.

- Si el peso del usuario es inferior a 10 kg, utilice el modo manual, por favor.



Indicador de la báscula (kg, lb)

Toque el icono de la báscula durante más de 3 segundos para cambiar la unidad de medida.



KIDS

Modo niños

 
Cuando el producto detecta niños con un peso inferior a 20 kg, iniciará de manera automática con el ajuste bajo.

Sensor de fuga de agua

El producto se apagará de manera automática cuando el sensor detecte la fuga.

Guía del usuario


Uso correcto

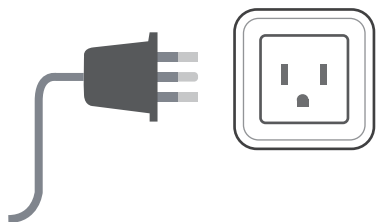

1. Conexiones

Conecte el enchufe de alimentación, por favor.

 - Este producto es de 120 V~, 60 Hz.
- No toque el producto con las manos mojadas.
- Compruebe que el cable de alimentación y el enchufe no estén dañados.
- Si hay agua cerca, asegúrese de desconectar el cable de alimentación.
- Compruebe si la luz LED está encendida en la pantalla LED, por favor.

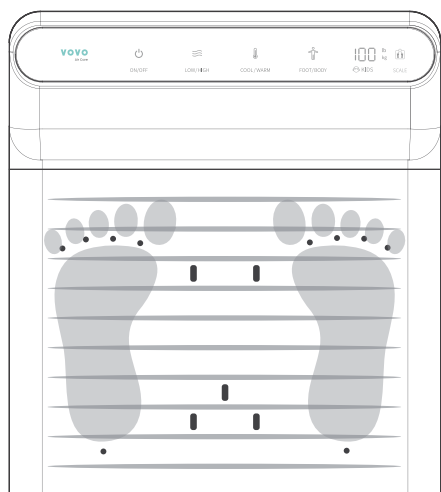

2. Operación

Súbase al producto, por favor.

- El producto arrancará en el ajuste fresco, bajo, con la báscula encendida y en el modo secador de pies.
- Se detiene de manera automática tras 5 ciclos de 2 minutos de uso y 5 segundos de pausa en cada operación.
- Cuando el producto se detenga de manera automática, bájese y súbase de nuevo en él para reanudar su operación, por favor.

El producto solo puede ser utilizado por una persona a la vez. Utilice el producto después de haber limpiado la mayor cantidad de agua posible, por favor.

El peso máximo que soporta el producto es de 220 kg o 485 lb.

No seque ningún objeto con el producto, por favor.

No ponga ningún objeto encima del producto, por favor.



3. Control de fuerza del viento

 
Toque el icono con forma de viento en la parte de control del producto, por favor.

- Puede comprobar si ha ajustado la fuerza del viento si escucha un pitido.
- Puede cambiar el ajuste bajo o alto del viento ya que el producto inicia en el ajuste bajo.
- La luz LED blanca no se enciende cuando se utiliza el ajuste bajo del viento.
- La luz LED blanca se enciende cuando se utiliza el ajuste alto del viento.



Guía del usuario

Uso correcto

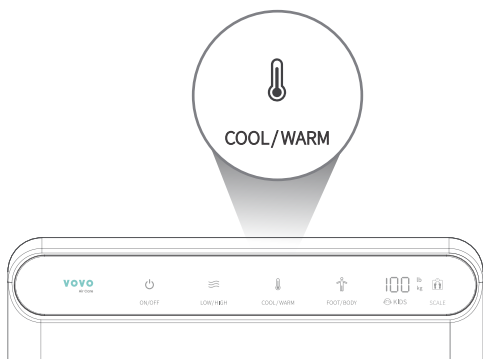


4. Control de temperatura

Toca el icono con forma de termómetro. en la parte de control del producto.

- Toque el icono con forma de humano en la parte de control del producto, por favor. Toque el icono con forma de termómetro en la parte de control del producto, por favor.
- Puede comprobar si ha ajustado la temperatura si escucha un pitido.
- La luz LED blanca se enciende cuando se utiliza el ajuste fresco de la temperatura.
- La luz LED roja se enciende cuando se utiliza el ajuste cálido de la temperatura.

5. Control del modo de secado

 
Please touch the human figure shaped icon on the product control part.

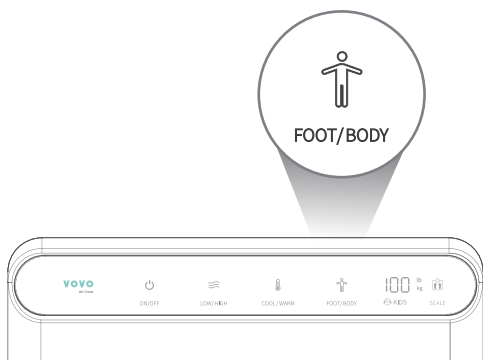

- Toque el icono con forma de humano en la parte de control del producto, por favor.
- Puede comprobar si ha ajustado el modo de secado si escucha un pitido.
- En el modo secador de pies, funcionará durante 2 minutos y se detendrá durante 5 segundos repitiendo el ciclo.
- En el modo secador de cuerpo, funcionará durante 2 minutos y se detendrá durante 5 segundos repitiendo el ciclo.
- Cuando el producto se detenga de manera automática, bájese y súbase de nuevo en él para reanudar su operación, por favor.
- Cuando el producto se utiliza en el modo secador de pies, la luz LED no se encenderá.
- Cuando el producto se utiliza en el modo secador de cuerpo, la luz LED se encenderá.


6. Modo báscula

 Toque el icono con forma de báscula en la parte de control del producto, por favor.

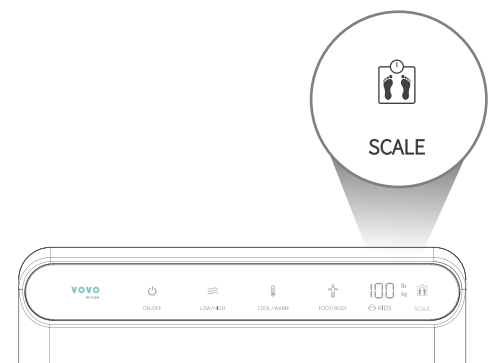

- Puede comprobar si ha encendido el modo báscula si escucha un pitido.
- En el modo báscula, puede comprobar el peso subiéndose en el producto durante 10 segundos, y luego se apagará de manera automática.
- La luz LED blanca se enciende cuando se utiliza el modo báscula.
- La luz LED blanca no se enciende cuando el modo báscula está apagado.
- La función de báscula puede ser encendida o apagada tocando el botón.

 
Uso correcto

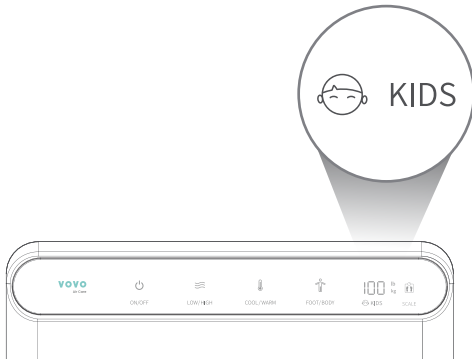

7. Modo niños

Cuando el producto detecta niños con un peso inferior a 20 kg y superior a 10kg, iniciará de manera automática con el ajuste bajo.

 - Cuando requiera el ajuste alto para la fuerza del viento, toque el botón de control de fuerza del viento para cambiar el ajuste, por favor.
- La luz LED blanca se enciende cuando se utiliza el modo niños.
- La luz LED blanca no se enciende cuando una persona de más de 20 kg está utilizando el producto.
- Si el peso del usuario es inferior a 10 kg, utilice el modo manual, por favor.

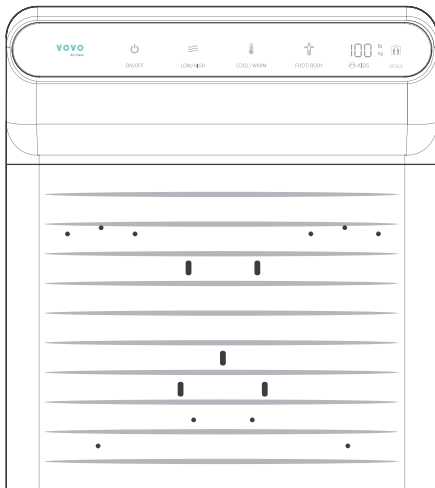

8. Fin de la operación

Bájese del producto para finalizar su operación, por favor.

- Toque el botón de encendido del producto para finalizar su operación, por favor.
- Bájese del producto para finalizar su operación, por favor.
- Puede reiniciar el producto tocando el botón de encendido, o subiéndose en el producto durante 5 segundos una vez finalizada su operación.
- Si el usuario no se sube al producto durante 10 segundos después de haber tocado el botón de encendido, el producto finalizará su operación de manera automática. Bájese del producto para finalizar su operación, por favor.

Desconecte el producto después de usarlo, por favor.

Limpie la estructura con regularidad, por favor.

(Limpie los restos de agua en la estructura, por favor).

Limpie el filtro de entrada de aire con regularidad, por favor.

Maintenance

How to Clean the Air Inlet Product Cover

1. Precautions before cleaning the Product Cover

- Too much dust on the Product Cover can reduce the wind volume and increase noise.
- Clean the Product Cover about once to twice a month.
- Do not disassemble the product except when cleaning the Product Cover.
- If the Product Cover is torn or damaged, replace it with a new one.
- Do not disassemble, repair or modify the product except from our service center.



2. Detach the Product Cover case

- Lower the hook on the Product Cover case with your finger and pull it out toward your body.
- You may need some force when you detach it for the first time.

3. Disconnect inlet Product Cover

The inlet Product Cover is consisted of a filter case and a filter.

4. Clean the inlet Product Cover

- It is recommended to clean the Product Cover outdoors because it can cause a lot of dust.
- As the Product Cover is made of sponge material, please remove the dust first and then wash it with water.
- Please use the Product Cover when it is completely dry.



When cleaning with water, please do not use any detergent.

5. Above cleaning method

- Please wipe the remaining water with a dry towel.

Troubleshooting

Please check if the following symptoms appear before requesting any assistance or service. It may not be a malfunction of the product.

Issues	Check point	Solution
<ul style="list-style-type: none"> The power is not turned on. 	<ul style="list-style-type: none"> Is the power plug connected? Is the power too low? Did you step on the product? Did you touch the power button of the product? 	<ul style="list-style-type: none"> Please plug it into the outlet correctly. Check if it is 120 V~ Please step on the product. Press the power button of the product.
<ul style="list-style-type: none"> The sound of the wind is loud. 	<ul style="list-style-type: none"> Is there dust in the air hole? Is there dust on the inlet filter? Is the wind level on the High setting? 	<ul style="list-style-type: none"> Please remove the dust in the air hole. Please remove the dust on the inlet filter. Please change wind level to Low setting.
<ul style="list-style-type: none"> The product won't stop. 	<ul style="list-style-type: none"> Is there any object or thing on top of the product? 	<ul style="list-style-type: none"> Please remove the object or thing on top of the product.
<ul style="list-style-type: none"> There is a strange odor from the wind. 	<ul style="list-style-type: none"> Is this your first time using the product? Did you dry it completely after cleaning the filter? Did you use it in a place where there is a lot of smoke or smell? Is there any foreign substance stuck in the wind hole? 	<ul style="list-style-type: none"> The smell might be from the early stages of the product as the heater heats up. Dry the filter completely before using the product. Use the product after ventilating the surroundings. Remove foreign substances from the product.
<ul style="list-style-type: none"> The LED light keeps blinking. 	<ul style="list-style-type: none"> The product is currently on pause for 5 seconds after operation. 	<ul style="list-style-type: none"> When the LED lights up after 5 seconds, the product will operate normally.
<ul style="list-style-type: none"> The control unit LED flashes. 	<ul style="list-style-type: none"> If a leak is detected, an error code will appear on the display. <E01> 	<ul style="list-style-type: none"> Tilt the product to drain water from the inside to remove leaks. If the error code continues to occur, please apply for A/S.
	<ul style="list-style-type: none"> If a temperature sensor fault is detected, an error code will appear on the display. <E02> 	<ul style="list-style-type: none"> If the error code continues to occur, please apply for A/S.
	<ul style="list-style-type: none"> If overweight (220Kg) is detected, an error code will appear on the display. <C01> 	

Product Specification



Product Name	BD-7700W, BD-7700B, BD-7700G
Product Size	W 460 x D 530 x H 175 (mm)
Product Weight	8.6kg (18.9lbs)
Maximum Allowable Loads	220Kg (485lbs)
Rate Maximum Power Input	1300 W
Rated Power Consumption	630 W
Power Consumption	120 V~, 60 Hz
Cable Length	AC - 2m (6.5ft)
Safety device	Self-returning bimetal body Water leak detection sensor body
Color	Snow White / Matte Black / Matte Coffee Brown
Filter Replacement Cycle	1 year
Country of Origin	Republic of Korea

VOVO IMUNSEN Customer Service Center

IMUNSEN Customer Service (For more information regarding the products and further consultation)

Hours of Operation: 8:00–17:00 PDT (excluding Saturday, Sunday, and holidays)

Product inquiry 888-601-0177
support@imunsen.com

Customer Service Center

Hours of Operation: 8:00–17:00 PDT (excluding Saturday, Sunday, and holidays)

Customer Service Center 888-601-0177
support@imunsen.com

Warranty

Model	<input type="checkbox"/> BD - 7700W <input type="checkbox"/> BD - 7700B <input type="checkbox"/> BD - 7700G
Serial No.	
Date of Purchase	Year Month Day
Warranty Period	1 year from date of purchase
Customer Address	
Customer Name	
Phone Number	
Notes	

Warranty Content

1. Please visit the location of purchase if the product defects within the warranty period.
2. Even during the warranty period, repairs will be charged if:
 - If Customer loses the warranty.
 - If The warranty does not correctly display purchase date, nor the copy of the invoice.
 - Defect caused by customer's fault.
 - Defect caused by natural disasters such as fire, gas, electricity defect and more.
 - Defect caused by misplacement or assemble.
 - Cost for engineer visit.
 - Cartridge, filter or accessory defect.
3. Please note that all parts removed for repair will be taken by our team.
4. This warranty will not be reissued.

Thank you for your understanding.

WEEE Directive



This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the and conditions of the purchase contract.
 This product should not be mixed with other commercial wastes for disposal.

MEMO

VOVO
Air Care

MEMO

VOVO
Air Care



Product inquiry 888-601-0177

VOVO CORPORATION