NetumScan


QUICK START GUIDE

NT-LP110C THERMAL LABEL PRINTER

Congratulatons on your label printer purchase.

The NetumScan printer you have purchased is a high-effciency thermal printer and does not require any ink or toner. Prints will be made by instantly heating compatble labels. Please take a moment to thoroughly review this user guide. Incorrect operation may result in damage or injury.

QUICK START

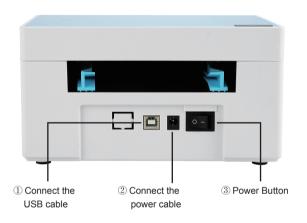

You can also download the latest driver here:

Windows:


https://cdn.shopify.com/s/files/1/2144/8019/files/LabelPrinter20210603.exe?v= 1628670954

Mac:

https://cdn.shopify.com/s/files/1/2144/8019/files/MACOS.zip?v=1628671000




Browse support CD, You can choose Windows or MacOS driver for label printer. Note: Your computer may prompt that there is a virus in the driver installation, but this is safe, please don't worry

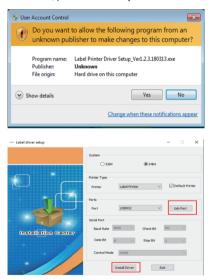

If the printer is USB interface, click the "Get USB Port" to automatically identifythe USB port other interfaces, click "Install Driver"

If Label printer driver installation is successful, it will automatically pop up printer properties interface as shown below:

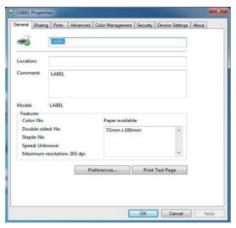


Click "Print Test Page", ifthe printer prints a nommal page, itindicates that the installation was ucessul.

Note: If the printer prompts "Printing Error", return to the "Port" option, select USB0001, or USB002, or USB003... and test it again.

How to use the LAN port of printer

Get the local IPaddress from Self-test page. The method of printing Self-test page: Hold down the FEED button in the shutdown state, and then press and hold the POWER button to power on, when you see the "ERROR" Red right is ON, then release the FEED button. You can get the IPaddress from the self-test page (Default IPaddress:192.168.1.100)

Open the printer properties interface and select"port", as shown in the figure below Select "Add Port', as shown below:

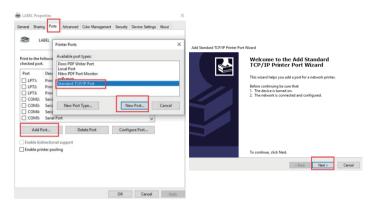

Add Standard TCP/IP Printer Port Wizard

Add port

For which device do you wart to add a port?

Enter the Printer Name or IP address, and a port name for the desired device.

Printer Name or IP Address:

192.168.1.100

192.168.1.100_1

192.168.1.100_1

192.168.1.100_1

192.168.1.100_1

193.168.1.100_1

193.168.1.100_1

193.168.1.100_1

193.168.1.100_1

193.168.1.100_1

193.168.1.100_1

193.168.1.100_1

193.168.1.100_1

193.168.1.100_1

193.168.1.100_1

193.168.1.100_1


Select Standard "Generic Nextwork Card"and Next

Additional port information required The device could not be identified.







Add Standard TCP/IP Printer Port Wizard

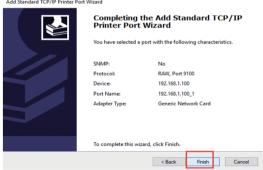

After"Finish", and then click"Apply:

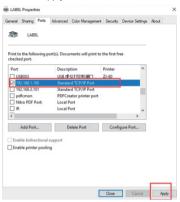


You can click the "Print Test Page" to have a test:

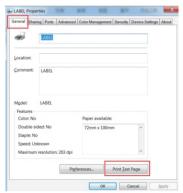




How to install LABEL driver

 
- 1.Double click the LABEL .dmg
- 2.Double click LABEL V1.0 signed .pkg to install the driver.



3 Click "continue" button

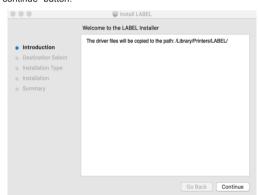


4.click "Install"

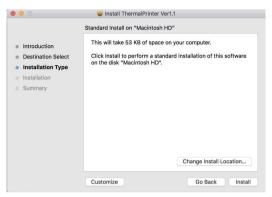

5.Use Touch ID or Enter your password.



6.Click "Close" to finish.

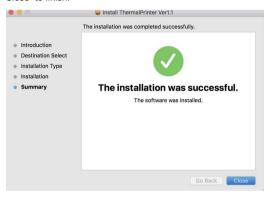

7. Open "System Preferences", and click "Printers and Scanners".



8.click "+" to add a new printer.




9. Turn on your printer, and choose "LABEL", select "Select Software" under "Use" drop down menu.



10.Click "Add"

11.Use Touch ID or enter your password.

12.Finish.

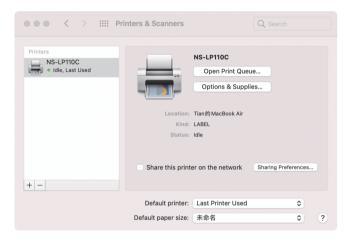

How to change the setting of the printer, and how to define label size(Priview)


1. Open a PDF file(any docment file is ok), Select "File"-->"Print".




2. Choose "Manage Custom Sizes" under "Paper Size" drop down menu.




3.Click "+" to define a new label size.click "OK" to save.

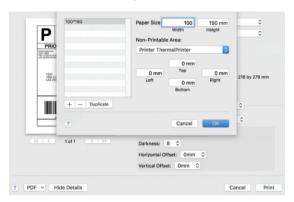

4. You can select the new Label "100*190" now.

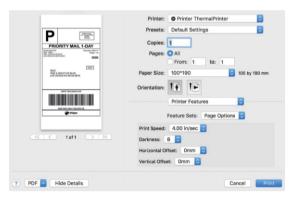

5.Select "Printer Features", then you can change the setting of printer, for example: Speed, Darkness.

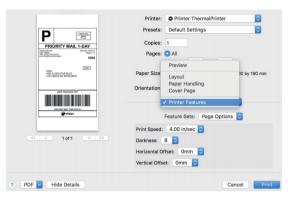

6 Click "Print"



The printer head is a sensitive part of the printer and can be found on the upper part of the printer when open.

Caution: While the printer is running the printer head can be very hot.

1.Ensure that the power switch is OFF, remove the power cord, and open the cover as outlined above in step 4. wait several moments to ensure that the printer head cools down.

- 2.Completely clean the printer head using an alcohol swab . Any 70% Isopropyl Alcohol pad would work. Please do not use water.
- 3.Ait 2-3 minutes until the alcohol has completely dried, then close the cover.
- 4. Connect the power cord and print a test page to check if it is clean.



- Anytime you'd like to change your label size, run the automatic label identification by pressing and holding the feeder button until you hear one short beep.
- Press the orange feeder button on the printer to skip a blank label.
- To run a self-test, press and hold the feeder button until you hear two shor beeps.
- Avoid using poor quality labels as they can damage the printer.
- Regularly clean the printer head as outine above, under MAINTENANCE.
- If paper is jammed, turn off the printer, and allow the printer head to cool down. Open the cover and ensure that the rubber is clean. If it is dirty, use alcohol pad to clean it. Allow the area to dry before turning the printer back on.
- Insert the printer's USB into the USB port on your computer every time you plug it in. This will avoid creating duplicate copies of the printer on your computer.



- The printer head can become very hot after printing labels. Do not touch the printer head until it has cooled.
- Do not bend the power cord excessively or place objects on the cord. This could result in fire or electrocution.
- · Keep the printer out of reach of children.
- Use only approved accessories and do not try to disassemble or repair the unitby yourself.
- Keep the printer away from water and other objects that may destroy or damage the device.
- Printer should remain unplugged when not in use for long periods of time.

NetumScan SUPPORT

Your NetumScan label printer is covered by warranty.

In the unlikely event that you experience any issues with your printer, please contact service@netumscan.com for customer service to promptly help with any troubleshooting tips or a replacement.

For any questions and/or suggestions, please email the NetumScan team at: service@netumscan.com or visit https://netumscan.com/ and click on support. For how-to videos,parts and full warranty details please visit https://netumscan.com/.

Happy Printing!