

# HEATED SOCKS

## USER MANUAL

Please carefully read the user manual before using the product and keep it well for future reference.

## SAFETY INSTRUCTIONS AND WARNINGS

To reduce the risk of burns, electric shock, and fire, the products must be used in accordance with the following instructions.

 
1. Do not use the products while sleeping if they are connecting to the batteries.
2. Not recommended for infants or babies.
3. The products are not to be used by a person with poor blood circulation unless he/she is carefully attended.
4. Do not use products on the skin that is insensitive to heat.
5. Never pull the socks to unplug them from the batteries.
6. Do not use the cords in the socks as handles.
7. Never use the products if the cords show any sign of damage.
8. Only use the original batteries provided by us.
9. Do not attempt to disassemble or alter any part of the products.
10. Do not expose the products to high temperatures.
11. Always remove the batteries from the socks when they are not in use.
12. Do not wring out the socks as this may cause damage to the heating elements or wire hardness.
13. It is not recommended to use the heated socks for more than 3 years, or 400 washing cycles.
14. Dispose of the batteries according to the local environmental regulations. Do not treat them as household waste.

## WHAT'S INCLUDED


|               |                                     |
|---------------|-------------------------------------|
| Socks x1 Pair | Charging Cable for the Batteries x1 |
| Battery x2    | Carrying Bag x1                     |
| Remote x1     | User Manual x1                      |

## PRODUCT OVERVIEW


### Sock

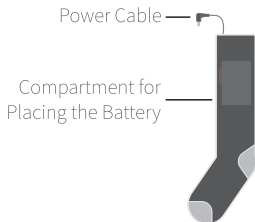

### Remote

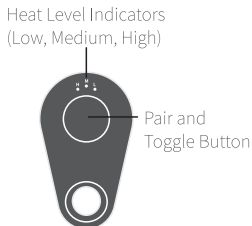 


## Battery

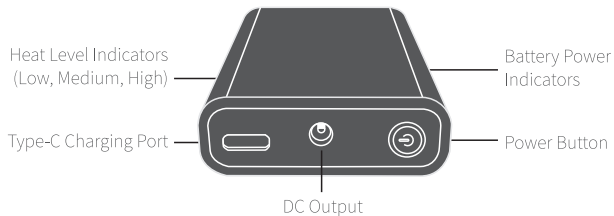 

## CHARGE

Please fully charge the batteries at your first use because the battery power may be drained due to long-term transportation.

 Properly connect the **Charging Cable** with two batteries and a compatible adapter, then connect the adapter to a rated AC outlet(110V-220V).

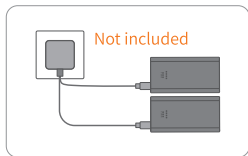

## • A guide to the Battery Power Indicators

Charging: Flash Green

Fully Charged: Solid Green

### Notes:

- ① One indicator stands for 25% power.
- ② When the battery power is too low, the Battery Power Indicator flashes 10 times and then the battery shuts down.

## • Battery warnings

1. Do not store the batteries below -4°F(-20°C)
2. Do not allow the batteries or charging cable to come in contact with water or other liquids. If water or liquid is entering into the batteries, immediately unplug them from the socks.
3. Do not expose the batteries to direct sunlight or heat source as this may cause an explosion.
4. Do not charge the batteries when they are hot. Let them cool down first.
5. Do not charge the batteries next to flammable materials or on electrically conductive surfaces.
6. Do not allow any impact on the batteries.

7. Do not dispose of the batteries in a fire. Do not cut or mechanically crush the batteries. These may cause an explosion.



BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY

 
## PAIR THE REMOTE WITH THE BATTERIES

The products come with a remote, which allows you to adjust the heat level of batteries via this remote. Generally, the batteries and the remote were paired with each other by default.

If the remote cannot control the heat level of batteries after the batteries are powered on, please re-pair them following the instructions below.


### Step 1:

Long press the power button on one battery to power it on.

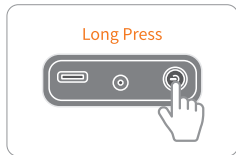

### Step 2:

 Within 1.5 seconds after powering on, quickly press the **Power Button** 3 times and the **Heat Level Indicators** flash red, green and blue simultaneously.

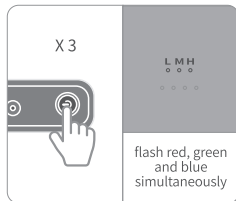

### Step 3:

Press the **Pair and Toggle Button** on the remote to finish the pairing.



### Step 4:

Repeat the same steps from 1 to 3 for another battery.

 
### Tips:

- ① The effective distance of the remote is about 3 meters.
- ② You can pair the remote with the batteries for once and use it to control all the time due to the smart memory function of it.

## WEAR YOUR SOCKS


### Step 1:

After pairing, please connect the **Power Cables** in the socks with the batteries.

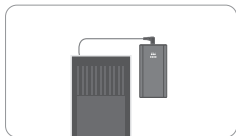


### Step 2:

 Power on the batteries.

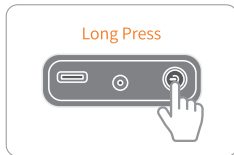

### Step 3:

 Put the batteries into the compartments and wear the socks.

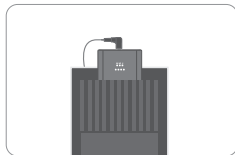



# HEAT LEVELS ADJUSTMENT

## 1. Via the Remote

Press the **Pair and Toggle** button to toggle the heat levels among **Low**, **Medium** and **High**.

## 2. Via the Battery

After powering on, press the **Power Button** on the battery to toggle among low heat level, medium heat level, high heat level and standby mode.

| Heat Level        | Temperature            | Heating Duration |
|-------------------|------------------------|------------------|
| Low(Blue LED)     | 110°F-115°F(43°C-46°C) | 7-7.5 Hours      |
| Medium(Green LED) | 130°F-135°F(54°C-57°C) | 5.5-6 Hours      |
| High(Red LED)     | 140°F-150°F(60°C-65°C) | 4-4.5 Hours      |

## OUTPUT PROTECTION

When the batteries are not connected to the socks to supplying any power or a short circuit occurs, the batteries will enter standby mode.

## WASH INSTRUCTIONS

Important:

Remove the batteries from the socks before washing. ⚠

Hand wash or machine wash on a gentle cycle in cold or warm water (below 86°F/30°C).

Please air dry the socks after washing.



Wash at or below 30°C



Do not bleach



Do not tumble dry



Do not wring



Do not iron



Do not dry clean

## SPECIFICATIONS

|                                 |                               |
|---------------------------------|-------------------------------|
| Battery Capacity                | 4000mAh                       |
| Heating Duration of One Battery | 4-7.5 Hours for Heating Socks |
| DC Output Voltage               | 3.7 V                         |
| Heat Level                      | 3 Levels(Low, Medium, High)   |
| Type-C Input                    | 5V/1A                         |

**Thank you for purchasing our product.**

If you have any questions or need any assistance,  
please contact us at  
[support@neberon.com](mailto:support@neberon.com).