 Notice


PLEASE READ ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION

- To prevent personal injury or product damage only licensed electricians should install.
- To avoid electric shock or component damage disconnect power before attempting installation or servicing.
- This product must be installed in accordance with the national electric code (NEC) and all applicable federal, state and local electric codes and safety standards.
- Disconnect product and allow cooling prior to servicing.
- Any alteration or modification of this product is expressly forbidden as it may cause serious personal injury, death, property damage and/or product malfunction.
- To prevent product malfunction and/or electrical shock this product must be properly grounded.
- This luminaire is designed to operate in ambient temperatures ranging from -30°C to 45°C and to be horizontally mounted with the LEDs facing down.

1. Unpacking



Thoroughly check the damage to the fixture. Damage to the goods shall be reported to the carrier

1. install

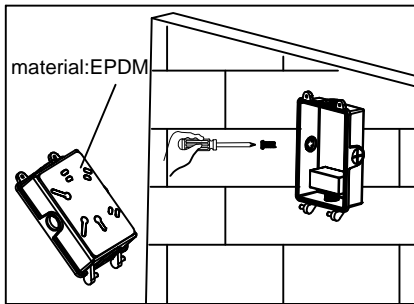

1. Drill the hole on the luminaire for mounting and power lead through, then pull the power lead out of the luminaire and connect it to branch circuit on outlet box. Stick the waterproof cotton on the bottom of the lower cover, and the lower cover is fixed on the wall with screws. The light control is assembled to the lower cover of the power supply box. (as shown in the picture)

2 the upper cover and the radiator (assembly) are assembled into the shaft hole through the rotating shaft.

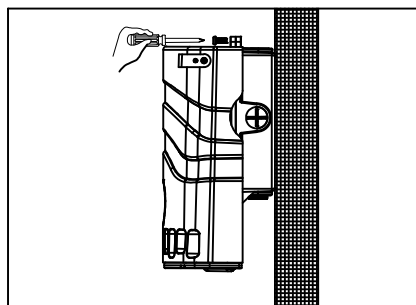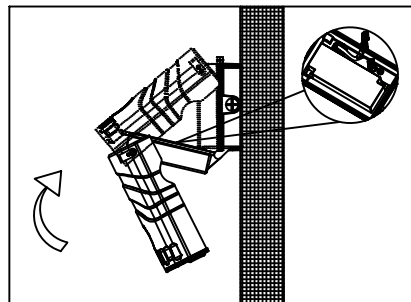

3 the upper cover and the lower cover are locked by screws (as shown).

4, the customer adjusts the two adjusting screws of the lamps and lanterns according to their own needs. Determine the angle of the lamp (as shown in the picture).

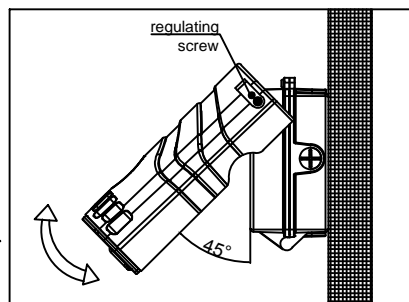


Diagram of connection

