


CHAFING DISH SET

Product Diagram

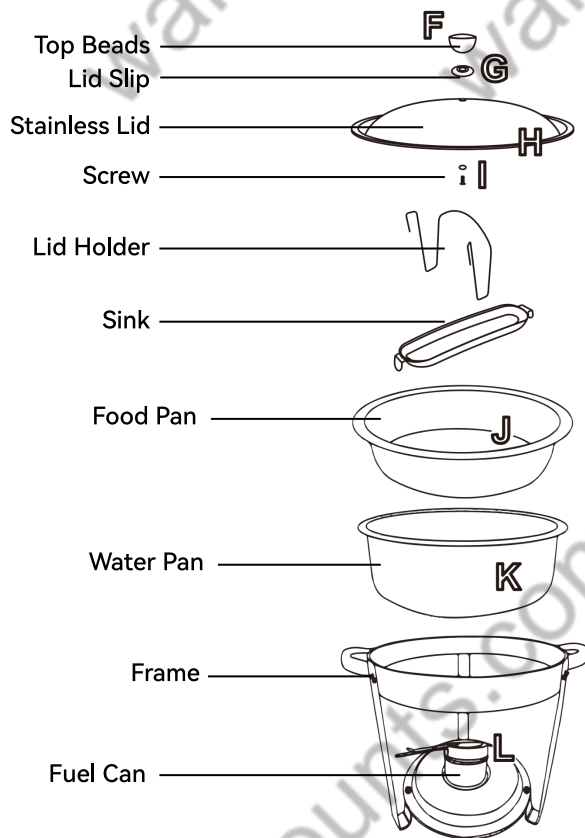

⚠ Warning!

- Read instructions before using and keep it for future reference. Only use this product for its intended purpose, keeping food warm or cold.
- Only use this product on stable and level surfaces. Ensure all fasteners and components are intact and securely tightened before each use.
- Do not operate near other flammable or explosive gases, liquids, or dust.
- Do not leave a flame unattended during use. Handle with care to avoid burns during and after use.
- Do not place any other object against heated surfaces. Do not use it if this product becomes worn or damaged. Repair or replace damaged components before further use.

Operation

1. Fill one water pan (K) with warm water until approximately 75% full. Place the water pan on the round frame and release it carefully, making sure the frame holds it securely.
2. Fill the food pan (J) with the dishes to be heated or kept warm. Place it over the water dish, covering it completely so that the steam cannot escape during the heating process.
3. Fit the top beads (F) to a lid slip (G) and fit them to the top of a lid (H), using a set screw (I) to tighten it. Put the sink on the lid holder, hang it on the frame, and put the assembled stainless lid on the lid holder.
4. Open the fuel can and adjust the handle on its cap, fill the fuel can with solid methanol or ethanol gel (do not use liquid fuel), and light it. Wearing gloves, carefully lower the fuel can into the center platform of the floor.
5. Adjust the food pan heating heat as needed. Opening the cap on the fuel cartridge further allows faster heating but shortens the life of the solid fuel. Shrinking the can mouth will heat the water more slowly, but will extend the life of the fuel.
6. Close the lid of the fuel can to stop heating directly or automatically stop heating when the fuel is allowed to burn out.

Maintenance

- Make sure the flame is put out after each use. Allow all surfaces to cool before performing cleaning or any other maintenance.
- Clean this chafing dish and its components with standard detergents and dry completely. Do not use abrasive cleaners or caustic chemicals.
- Periodically check the components of this dish for any looseness, wear, or damage. Tighten, repair, or replace any problematic parts before further use.
- If this product will not be used for an extended period of time, clean and dry all items before storing them in a cool dry place inaccessible to children.
- Made in china.

Name	Stainless Steel Chafing Dish
Brand	Warmounts
Model	DBS-R-07/DBS-R-08/DBS-R-09 /DBS-R-10
Volume	5 Quart/4.73L
Material	Stainless Steel
Food Pan Size	13.00"*3.74"
Water Pan Size	13.58"*2.60"
Fuel Can Size	3.54"*2.44"
Recommend Fuels	Methanol Gel or Ethanol Gel
Package Included	Frame*1 Water Pan*1 Food Pan*1 Fuel Can*1 Stainless Lid*1 Lid Holder*1 Sink*1