

GOLDEN OAK LOG PLACEMENT INSTRUCTIONS

CAUTION.....WARNING.....IMPORTANT

USE ONLY PETERSON REAL FYRE BURNERS AND VALVES WITH THIS REAL FYRE LOG SET.



R-24 shown



LOG SET IMPORTANT INFORMATION

This instruction contains recommended log placement for these Real Fyre logs which will promote good combustion and provide superior flame pattern and appearance. **Use these logs only with a Peterson burner system.**

Adequate ventilation is absolutely necessary! Provided significant, noticeable sooting **does not** occur, some flexibility is possible in log placement to suit your individual preference (see Important below). If you experience a continued accumulation of black carbon (soot) on your logs it is an indication of incomplete combustion and you should move the effected log(s) so as to minimize the flame contact on the effected log(s). If significant sooting continues, stop using this gas log set.

Please read these instructions completely and carefully.

Important: Adequate ventilation is absolutely necessary. Adequate spacing between the logs is **NECESSARY** and **MUST** be maintained. Some carbon build up (sooting) may occur where flames strike the logs. If carbon build up (sooting) continues, rearrange top logs to allow more opening(s) for flame(s) before sooting becomes worse. **If any sooting occurs outside of the firebox (i.e. on the walls), turn off unit immediately and contact a qualified professional service technician.**

WARNING: Use **ONLY** Peterson Real Fyre burners and valves with this Real Fyre gas log set. **Failure to do so may result in property damage or personal injury, and will void listings, certifications, and invalidate claims made to RHP.** Contact your local Real Fyre dealer if you need more information.

This product is only warranted when used as part of a Robert H. Peterson Co. vented burner system.

 
WARNING: This gas log set is for use with R.H. Peterson Co burners (and parts) ONLY.

CAUTION: Burn hazard! Logs will remain hot for some time after use.
If you need to reposition any log to maintain the proper layout, use heat resistant gloves or allow logs adequate time to cool before handling.

Failure to use Peterson burners and valves may result in a **DANGEROUS** situation and in property damage, personal injury or even death; will void listings and certifications; and will void any insurance coverage by R.H. Peterson Co or our insurers.

Golden Oak Log Placement Instructions (12" model)

R-12 PARTS LIST

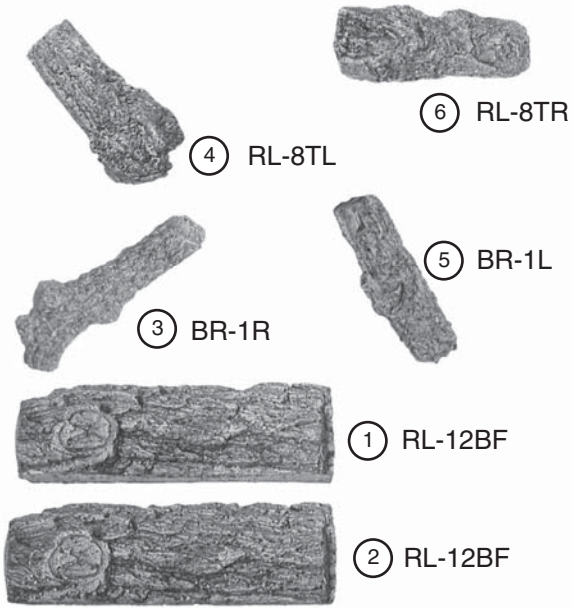


CAUTION: Burn hazard! Logs will remain hot for some time after use.

All items for this log set are included in one (1) box.

I



 
II

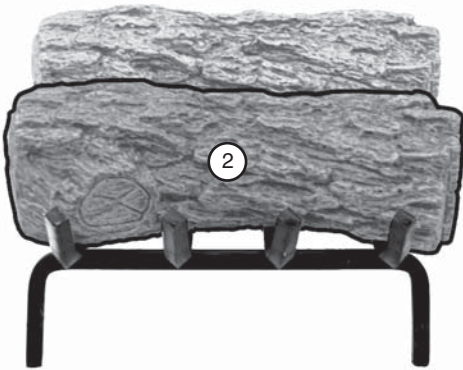

III



 IV

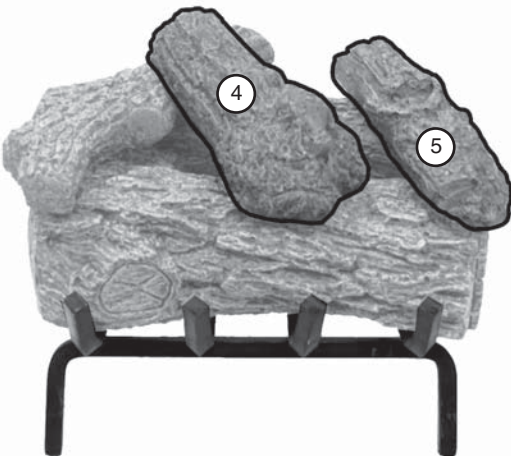

Final Log Placement

V



Golden Oak Log Placement Instructions (16" & 19" models)

R-16 and R-19 PARTS LIST



⑤ RL-7T



⑥ RL-8TY



③ RL-10TL



④ RL-11TR



① RL-12BR



② 16" - RL-16BF
19" - RL-19BF

19" log set shown

 
CAUTION: Burn hazard! Logs will remain hot for some time after use.

All items for this log set are included in one (1) box.


I



II

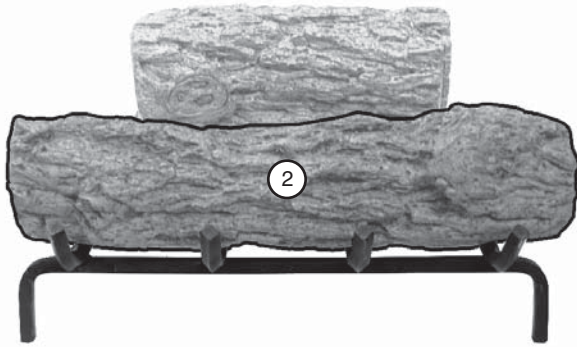


III

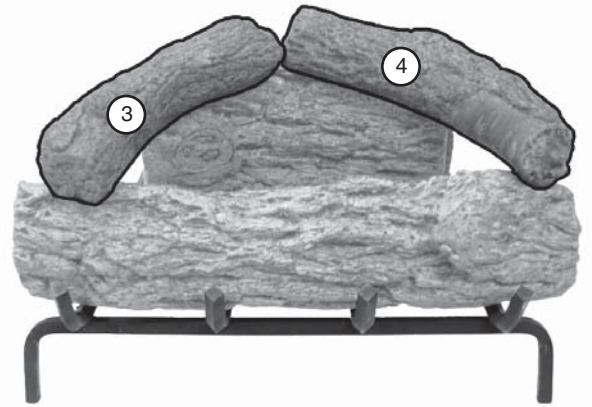 


Final Log Placement

 IV

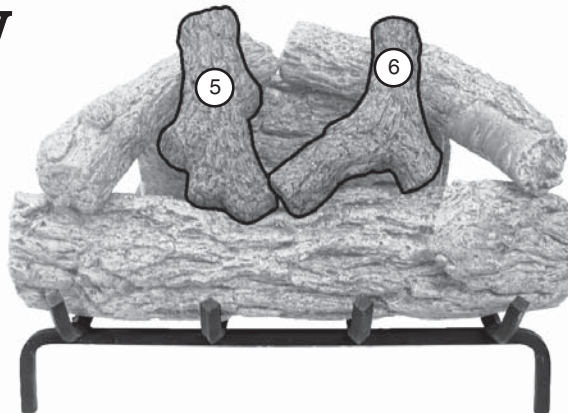

Golden Oak Log Placement Instructions (18" & 20" models)

 R-18 and R-20 PARTS LIST

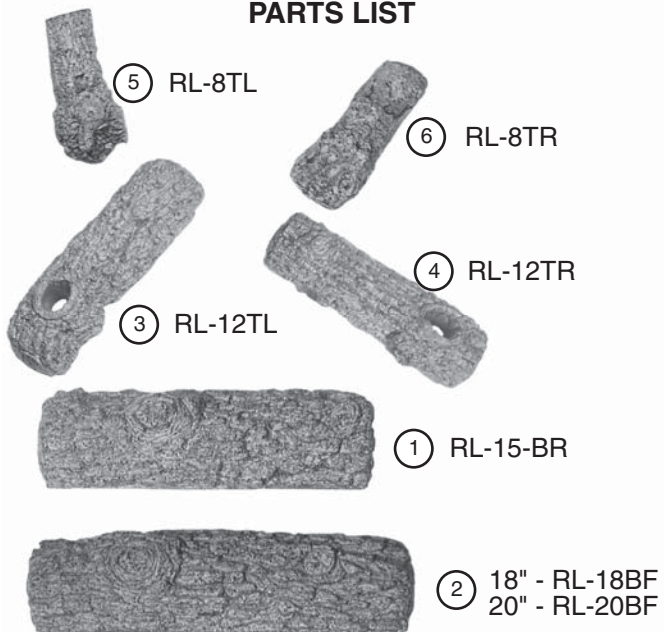


18" log set shown


CAUTION: Burn hazard! Logs will remain hot for some time after use.

All items for this log set are included in one (1) box.

 
I

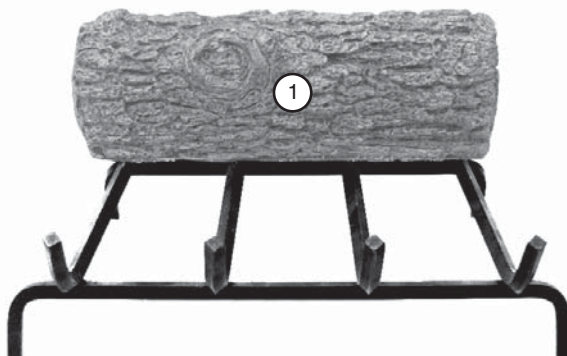

II

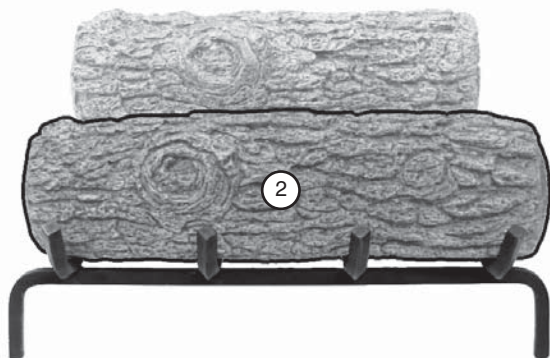 


III

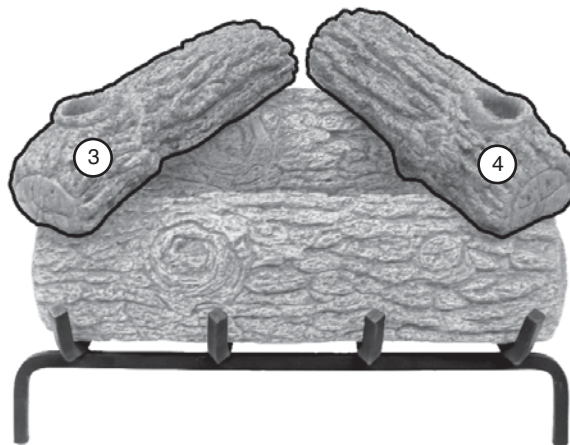 


Final Log Placement

 IV

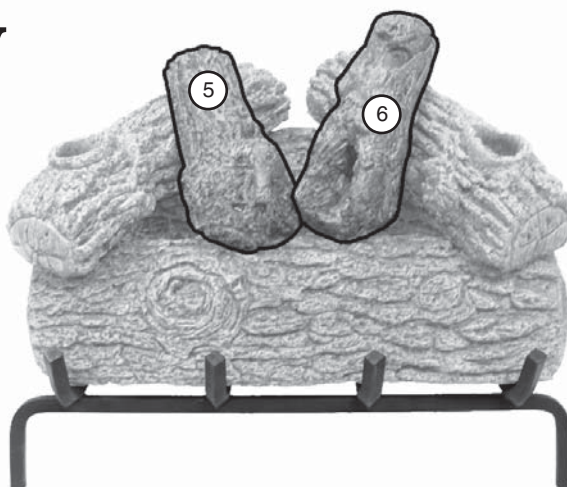

Golden Oak Log Placement Instructions (24" & 30" models)

 R-24 and R-30 PARTS LIST

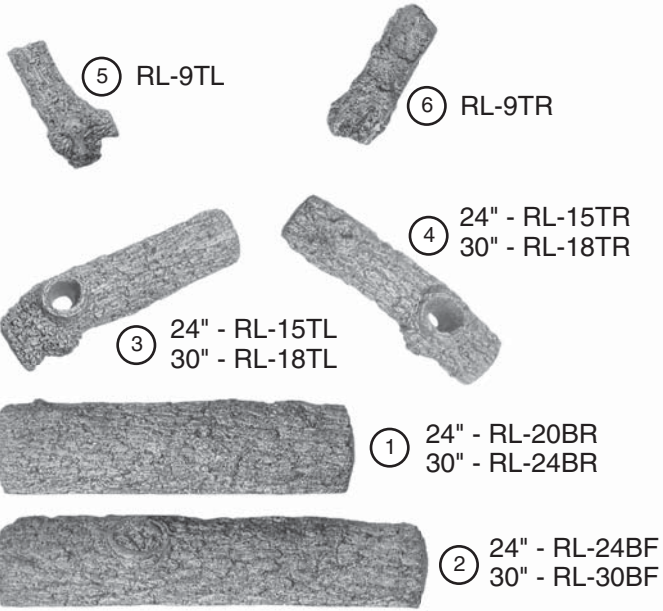


24" log set shown


CAUTION: Burn hazard! Logs will remain hot for some time after use.

All items for this log set are included in one (1) box.

 
I

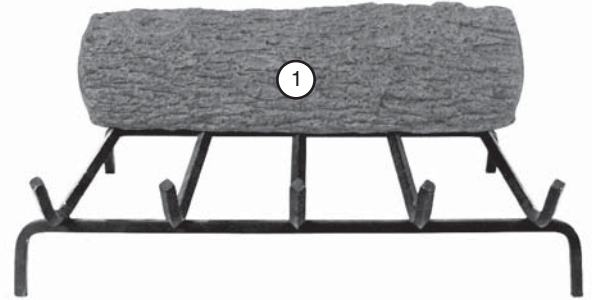

II

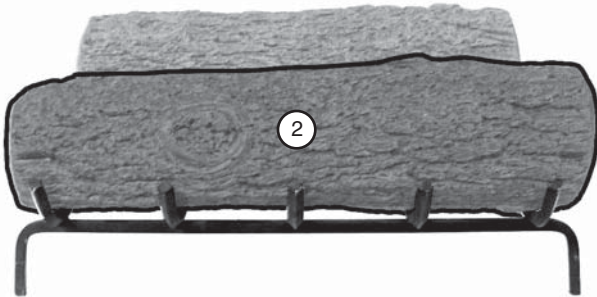 


III

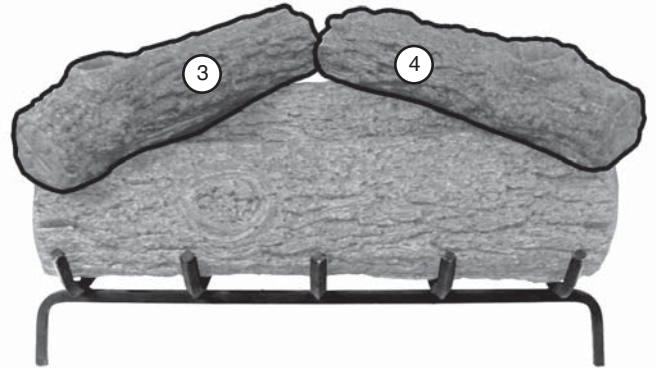 


IV

 Final Log Placement

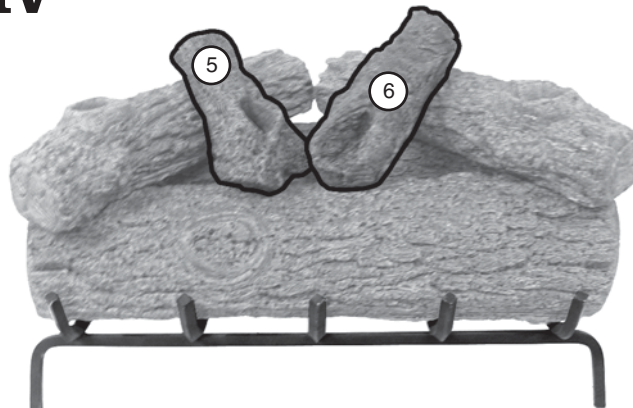

Golden Oak Log Placement Instructions (36" model)

 
R-36 PARTS LIST

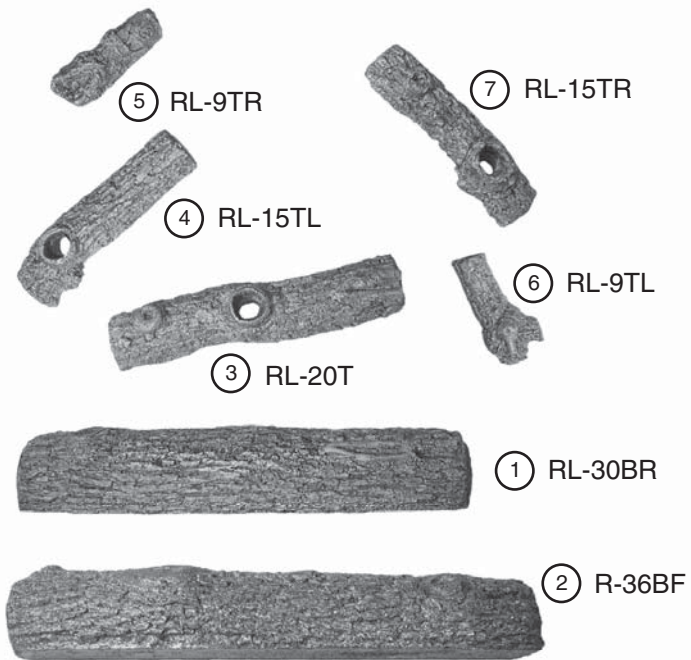


CAUTION: Burn hazard! Logs will remain hot for some time after use.

2 Boxes	Items
R-36BF	R-36BF
R-36T/R	RL-15TL, RL-15TR, RL-20T, RL-30BR, RL-9TL, RL-9TR

 
I

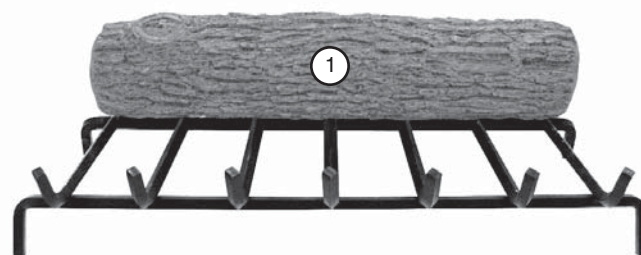


II

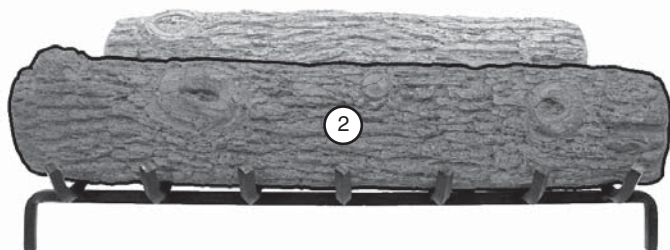 

III

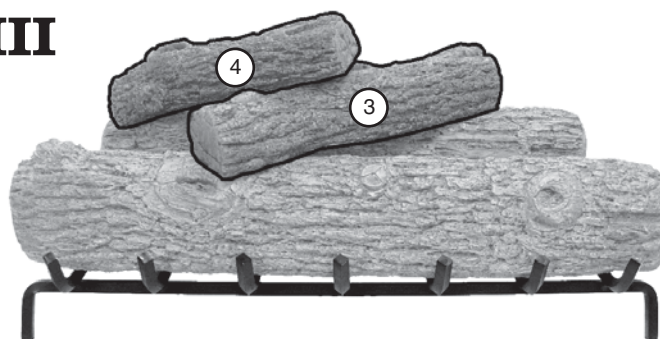 

IV

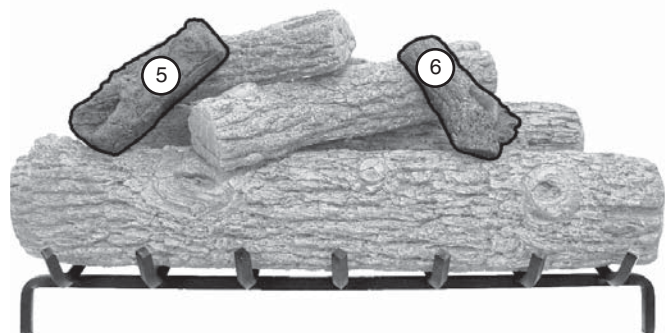 


V

Final Log Placement







Golden Oak Log Placement Instructions (42" model)

 R-42 PARTS LIST

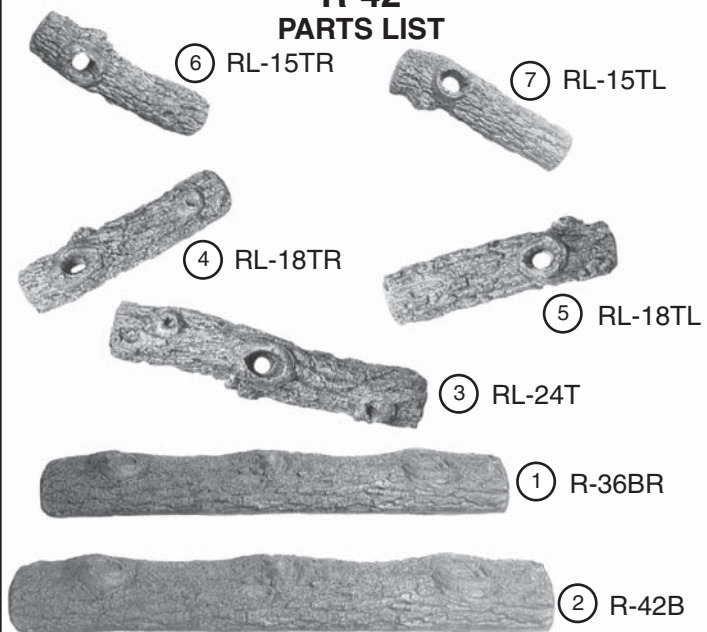


CAUTION: Burn hazard! Logs will remain hot for some time after use.

3 Boxes	Items
R-36BR	R-36BR
R-42B	R-42B
R-42T	RL-15TL, RL-15TR, RL-18TL, RL-18TR, RL-24T

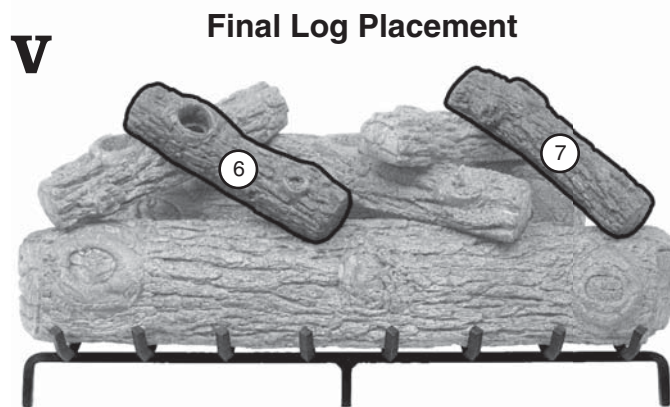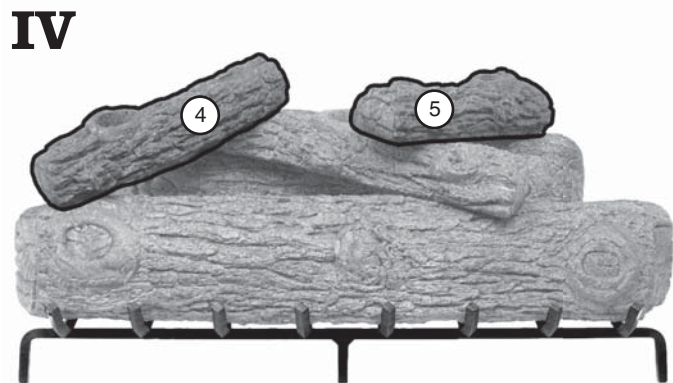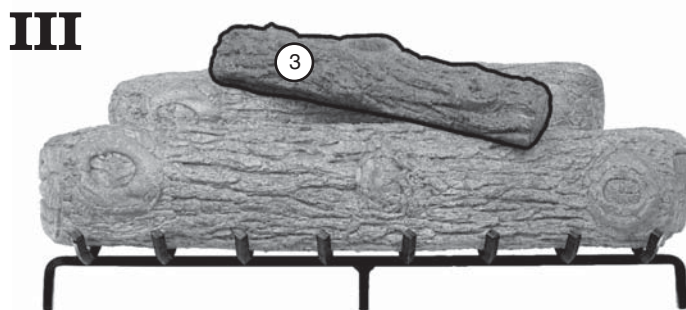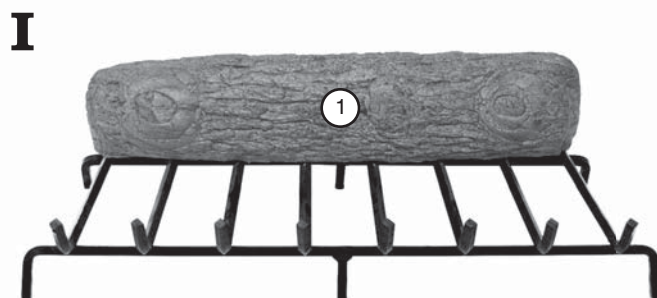    

Golden Oak Log Placement Instructions (48", 54", & 60" models)

 R-48, R-54, and R-60 PARTS LIST

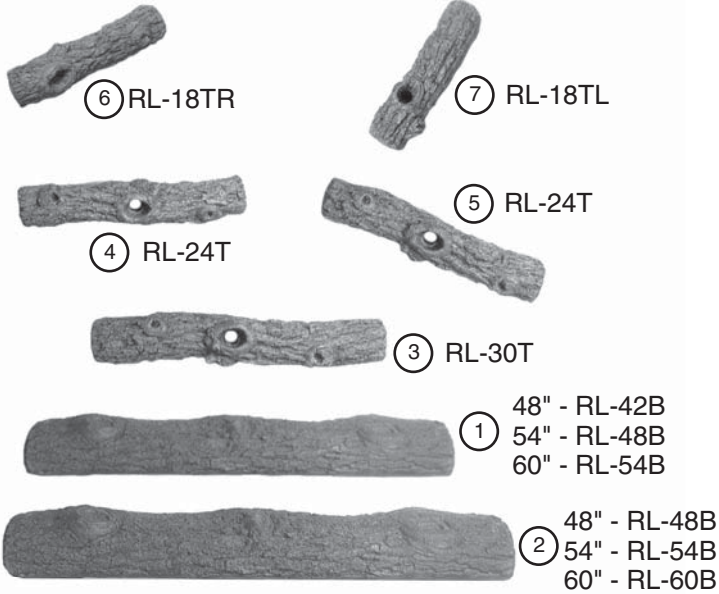

54" log set shown

CAUTION: Burn hazard! Logs will remain hot for some time after use.

R-48 box details

3 Boxes	Items
R-42B	R-42B
R-48B	R-48B
R-48T	RL-18TL, RL-18TR, RL-24T, RL-24T, RL-30T


R-54 box details

3 Boxes	Items
R-48B	R-48B
R-54B	R-54B
R-48T	RL-18TL, RL-18TR, RL-24T, RL-24T, RL-30T


R-60 box details

3 Boxes	Items
R-54B	R-54B
R-60B	R-60B
R-48T	RL-18TL, RL-18TR, RL-24T, RL-24T, RL-30T

 
I

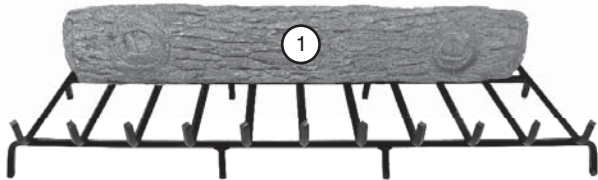


II

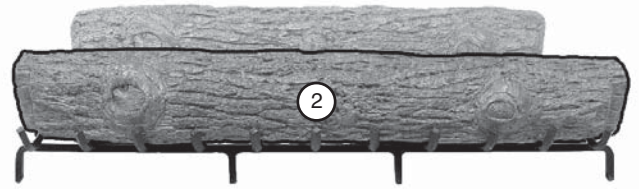 

III

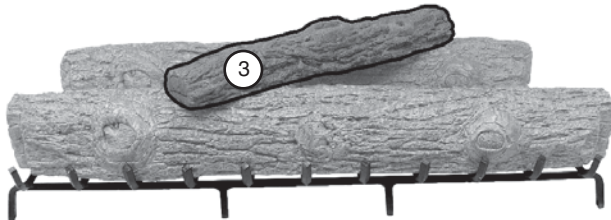 


IV

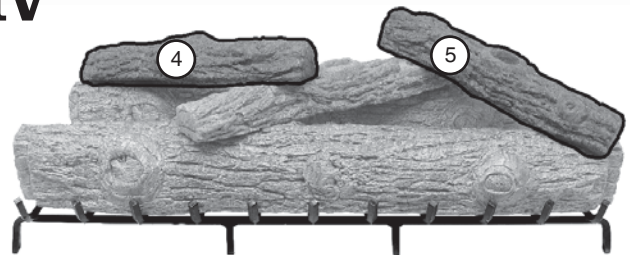 

V

 Final Log Placement

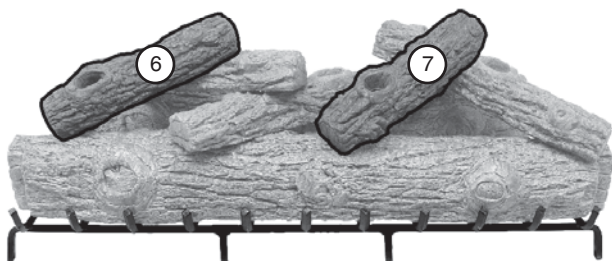

NOTES PAGE

Please use this page to record any information that you may want to have at hand.