

The Flood Sensor is used with the TrickleStar Water Heater Controller to detect moisture levels and alert you if your water heater is leaking.

Installing the Flood Sensor


1. Peel off the double-sided tape from the Flood Sensor
2. Attach the Flood Sensor to the bottom of your water heater



Caution

Please ensure that the metal probes are:

- I. Pointing down
- II. Not in contact with any metal parts
- III. About 1/8 in. above the surface of the drain pan

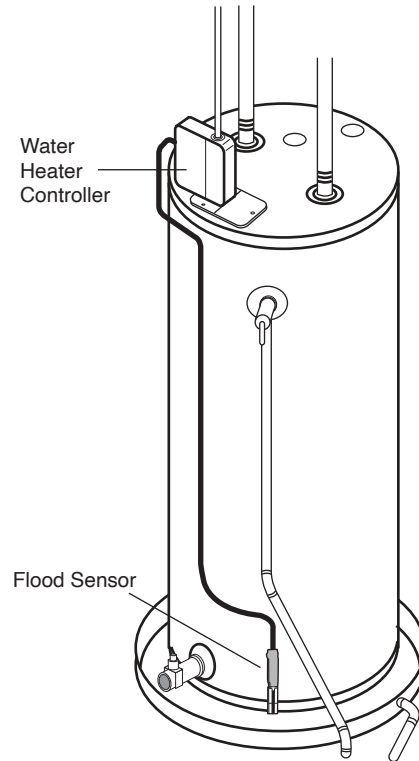

3. Connect the Flood Sensor wire to either terminals of sensor 1 or sensor 2 on your Water Heater Controller.

