 
 


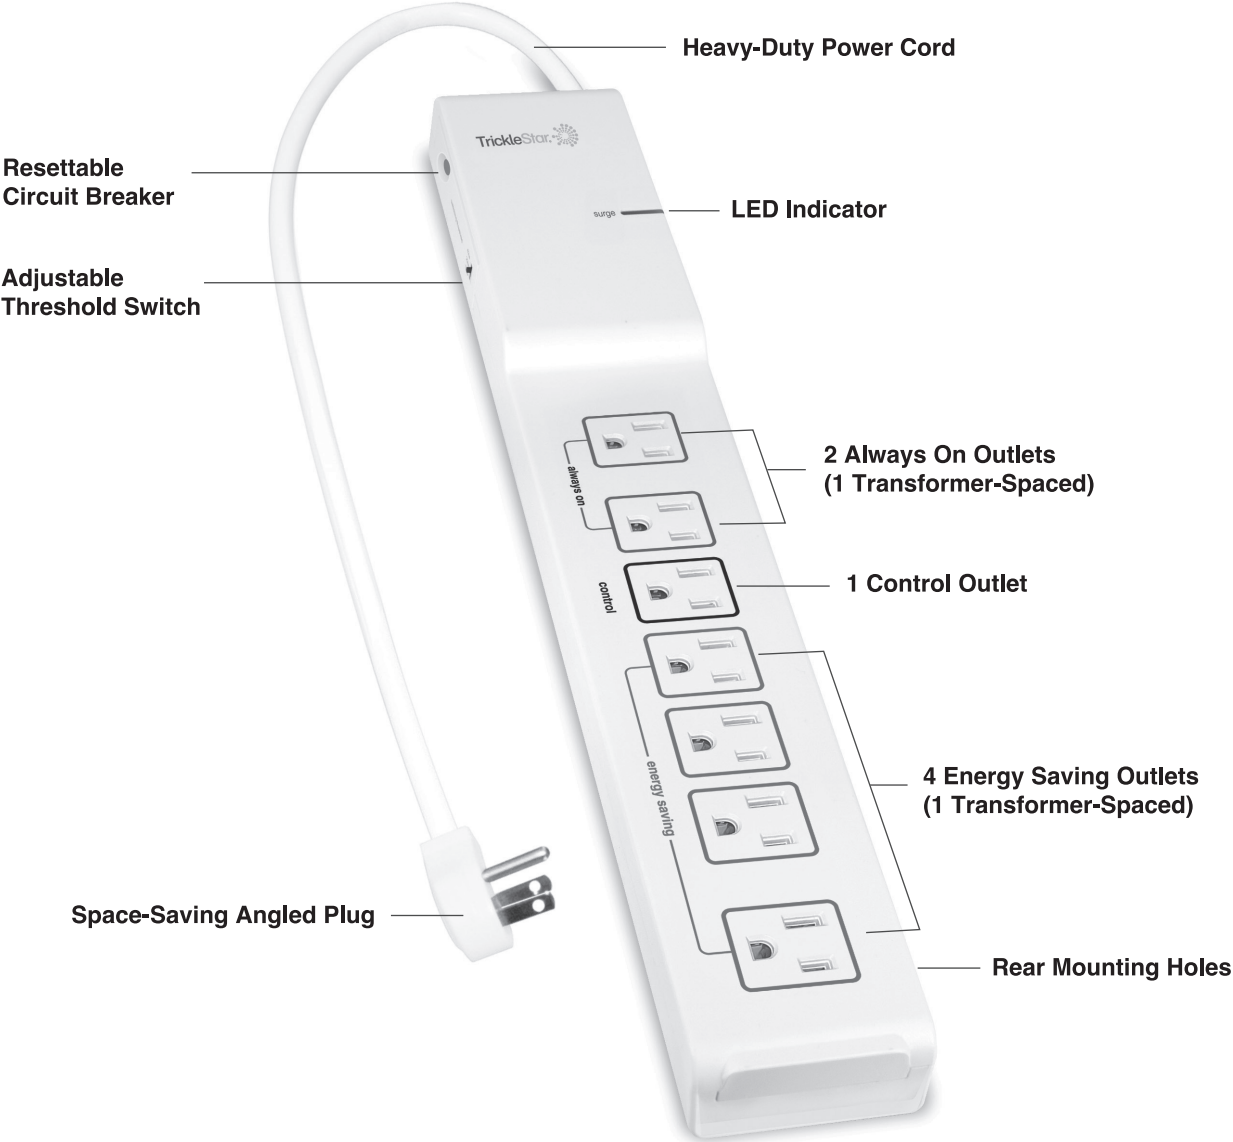


HOW IT WORKS
The TrickleStar 7-Outlet Advanced PowerStrip works on a simple control/energy saving basis. When the TV or PC is plugged into the control outlet and turned on, the energy saving outlets will turn on and items plugged into them can be used. When the TV or PC is turned off, the items in the energy saving outlets will turn off and no longer draw any standby power.

The easiest way to think of it is that the device in the control outlet **controls** the energy saving outlets.

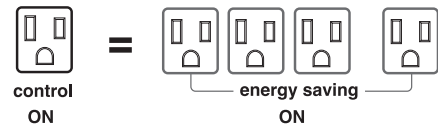


 Device in control outlet on = energy saving outlets on

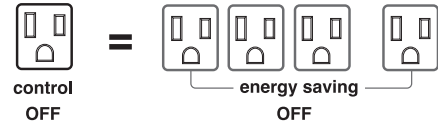

Device in control outlet off = energy saving outlets off

 PREMIUM FIREPROOF SURGE PROTECTION

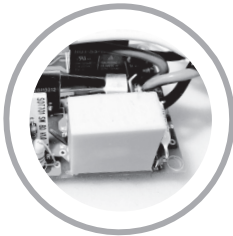





Traditional surge suppression products use standard Metal Oxide Varistors (MOVs). The TrickleStar 7-Outlet Advanced PowerStrip (APS) uses ceramic-encased MOVs, which suppress more energy and dissipate heat faster than traditional MOVs. This makes the APS fireproof during most surges.



INSTALLATION REQUIREMENT

The Advanced PowerStrip (APS) must be plugged into a grounded outlet for surge protection to operate correctly. Use of an extension cord, adaptor or other power strip in conjunction with the APS will void all warranties.

    PRODUCT OVERVIEW

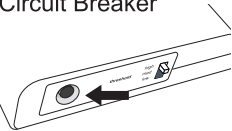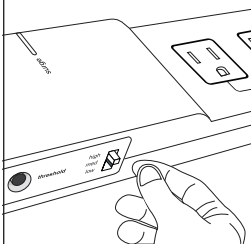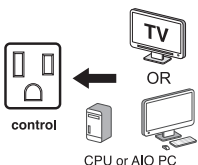Surge LED Indicator 	When illuminated, it indicates that the surge protection is functioning normally. If this LED does not illuminate, it indicates that the surge protection function has been damaged while protecting your devices, and the product must be replaced.						
Resettable Recessed Circuit Breaker 	In case of an overload, it will automatically pop out. If no devices are powered or LEDs are lit, simply press the circuit breaker to restore power. It won't override energy-saving features.						
Always On Outlets 	The always on outlets function like a regular outlet and have power all the time. Devices that require continuous power should be plugged into them.						
Energy Saving Outlets 	The energy saving outlets will have power when the device plugged into the control outlet is turned on. When the device in the control outlet is turned off, the items in the energy saving outlets will turn off.						
Threshold Switch 	Adjust the threshold switch based on the device plugged into the control outlet. <table><tr><td>TV</td><td>Tube/CRT TV LED/LCD TV 50" or Larger LED/LCD TV Less than 50"</td><td>High High Med</td></tr><tr><td>PC</td><td>Desktop Laptop</td><td>Med Low</td></tr></table>	TV	Tube/CRT TV LED/LCD TV 50" or Larger LED/LCD TV Less than 50"	High High Med	PC	Desktop Laptop	Med Low
TV	Tube/CRT TV LED/LCD TV 50" or Larger LED/LCD TV Less than 50"	High High Med					
PC	Desktop Laptop	Med Low					
Control Outlet 	This should be your main device - a television or a CPU/AIO (All-In-One) PC.						

FOR TECHNICAL SUPPORT

Toll free : 1-888-700-1098

www.tricklestar.com

Devices that should never be connected to any powerstrip.

Scan QR code here to learn more

10-YEAR PRODUCT LIFETIME WARRANTY
The Product Warranty is 10 years (hereafter referred to as Product Warranty).

TrickleStar warrants to the original purchaser that for the Product Warranty, it shall be free of defects in design, assembly, material, or workmanship, and will repair or replace, at its option, any defective product free of charge.

CONNECTED DEVICE WARRANTY
TrickleStar will repair or replace, at its option, any devices which are damaged by a transient voltage surge/spike or lightning strike, (an "Occurrence"), while properly connected through the Product to a properly wired AC power line with protective grounding.

This Connected Device Warranty is a Limited Warranty, subject to the limitations and exclusions set forth herein. TrickleStar will repair or replace the damaged connected devices, at TrickleStar's option, an amount equal to the fair market value of the damaged devices or the original purchase price of the devices, whichever is less, up to the maximum of \$20,000.

The fair market value of the devices shall be the current value of the devices specified in the most recent edition of the Orion Blue Book online by UsedPrice.com.



TrickleStar reserves the right to review the damaged Product, the damaged devices, and the site where the damage occurred. All costs of shipping the Product and the damaged devices to TrickleStar for inspection shall be borne solely by the purchaser. TrickleStar reserves the right to negotiate the cost of repairs. If TrickleStar determines, in its sole discretion, that it is impractical to ship the damaged devices to TrickleStar, TrickleStar may designate, in its sole discretion, a repair facility to inspect and estimate the cost to repair such devices. The cost, if any, of shipping the devices to and from such repair facility and of such estimate shall be borne solely by the purchaser.

Damaged devices must remain available for inspection until the claim is finalized. Whenever claims are settled, TrickleStar reserves the right to be subrogated under any existing insurance policies the claimant may have. All above warranties are null and void if:

- The Product in use during the occurrence is not provided to TrickleStar for inspection upon TrickleStar's request at the sole expense of the purchaser.
- TrickleStar determines that the Product has not been installed in accordance with the installation requirement, altered in any way or tampered with.
- TrickleStar determines that the damage did not result from the occurrence or that no occurrence in fact took place, the repair or replacement of the damaged devices is covered under a manufacturer's warranty.
- TrickleStar determines that the connected devices were not used under normal operating conditions or in accordance with any labels or instructions.
- The Product is not plugged directly into a receptacle.
- The Product is "daisy-chained" together in serial fashion with other power boards, UPS', other surge protectors or extension cords.
- A three- to two-prong adapter is used.
- The Product is not used indoors.

There are many devices that should only be connected directly to a wall outlet based upon their manufacturer's guidance. Please check owner's manual when in doubt. This Product is not for use with aquariums and all other water-related products. Use only indoors and in dry locations.

The Connected Device Warranty only protects against damage to properly connected devices where TrickleStar has determined, in its sole discretion, that the damage resulted from an occurrence, and does not protect against acts of God (other than lightning) such as flood, earthquake, war, vandalism, theft, normal-use wear and tear, erosion, depletion, obsolescence, abuse, damage due to low voltage disturbances (i.e. brownouts or sags), non-authorized program, or system devices modification or alteration.

This warranty contains the sole warranty of TrickleStar, there are no other warranties, expressed or, except as required by law, implied, including the implied warranty or condition of quality, merchantability or fitness for a particular purpose, and such implied warranties, if any, are limited in

duration to the term of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

In no event shall TrickleStar be liable for incidental, special, direct, indirect, consequential or multiple damages such as, but not limited to, lost business or profits arising out of the sale or use of any Product, even if advised of the possibility of such damages. This warranty gives you specific legal rights, and you may also have other rights, which may vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damage, so the above limitations may not apply to you.

This warranty is valid only for the original purchaser of the product. All damage claims against the product must be made within 30 days from the date of the occurrence and must be accompanied by a receipt for the damaged devices or the warranty is void.

Warranty is valid in United States and Canada.

MAKING A WARRANTY CLAIM

Go to: www.tricklestar.com and print our claim form and email it to warranty@tricklestar.com

Provide the following information:

- Product part number of the Product.
- A list of the devices that was connected to the Product at the time of the occurrence.
- A list of the devices that were damaged during the occurrence and the extent of the damage.
- The date of the occurrence.
- Where you purchased the Product.
- When you purchased the Product.
- A copy of original receipt.

A customer service representative will then instruct you on how to forward your devices, receipt and Product in use during the "occurrence" and how to proceed with your claim.



COPYRIGHT & DISCLAIMER

© 2024 TrickleStar Inc. All rights reserved.

 
TrickleStar® is a registered trademark of TrickleStar.

Any typographical, clerical or other error or omission in this document or other documents or information issued by TrickleStar shall be subject to correction without any liability on the part of TrickleStar without notice.


www.tricklestar.com




TV Set Up

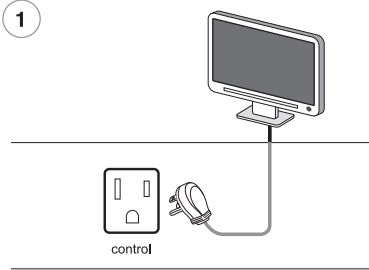

 
Plug the TV into the outlet labeled "control."

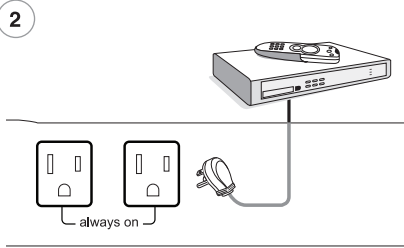

 Plug in electronics requiring continuous power, such as a cable box and DVR, into the outlets labeled "always on."

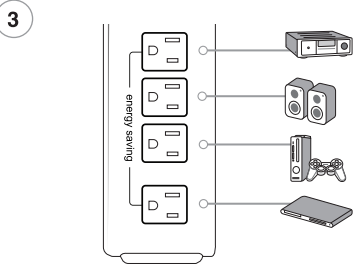


 Plug TV peripherals, such as a receiver, speakers, game console (No HDD) or DVD player, into the outlets labeled "energy saving."

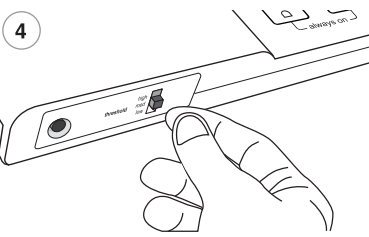


Adjust the threshold switch to the suggested setting based on the device plugged into the control outlet.

Tube/CRT TV	High
LED/LCD TV 50" or Larger	High
LED/LCD TV Less than 50"	Med

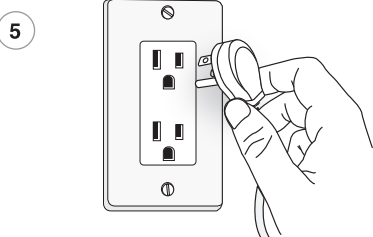 

 Plug the power strip into a grounded outlet.

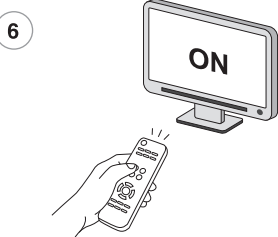


Turn the TV on. Within a few seconds, the energy saving outlets will have power and the devices plugged into them can be used.




If you turn on your TV and the energy saving outlets don't turn on, turn everything off and adjust the threshold switch to a lower setting.

 
PC Set Up

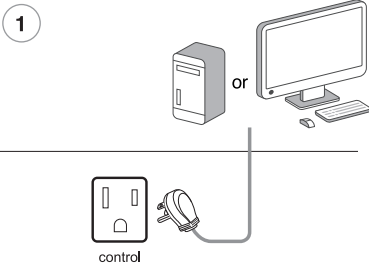

 
Plug the CPU or AIO (All-In-One) PC into the outlet labeled "control."

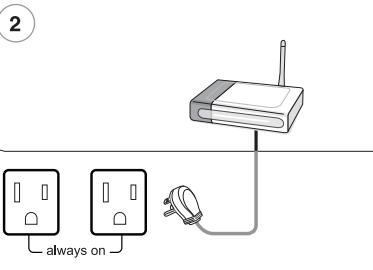

 Plug in electronics requiring continuous power, such as a router and modem, into the outlets labeled "always on."

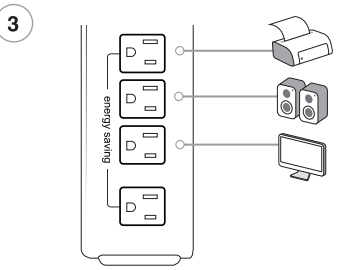


 Plug any peripheral electronics, such as a printer, speakers, or monitor, into the outlets labeled "energy saving."

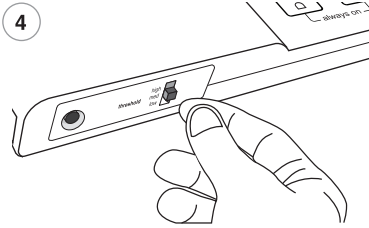


Adjust the threshold switch to the suggested setting based on the device you plug into the control outlet.

Desktop	Med
Laptop	Low

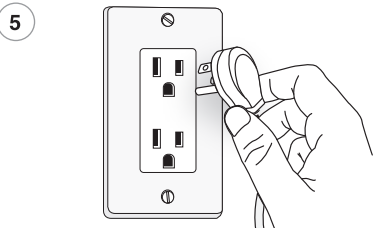 

 Plug the power strip into a grounded outlet.

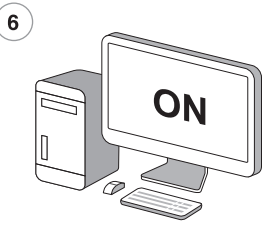

Turn the computer on. Within a few seconds, the energy saving outlets will have power and the devices plugged into them can be used.



If you turn on your computer and the energy saving outlets don't turn on, turn everything off and adjust the threshold switch to a lower setting.