


Water and electricity can create a dangerous environment. If a power strip gets wet, discontinue use immediately and discard/recycle.



Devices that should never be connected to any power strip.




Blenders

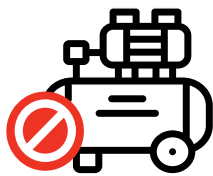

Air-Compressors



Air-Conditioners

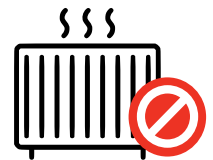


Power Heater/
Electric Fireplace




Toasters




Coffee Makers

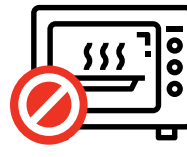

Microwaves

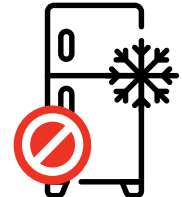

Fridge

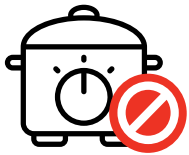


Slow Cookers



Washing Machine



Extension Cord

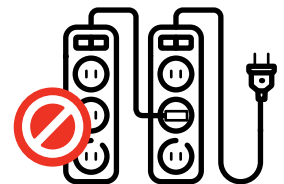

Another powerstrip

There are many unique devices that should not be connected to a power strip. Always follow the directions of each device's owner's manual. The examples above are not a complete list.



www.bobvila.com



www.fixmyhome.com



www.myelectricworks.com



www.energynewsroom.com