
TIME & STYLE


Assembly instructions

 
Components

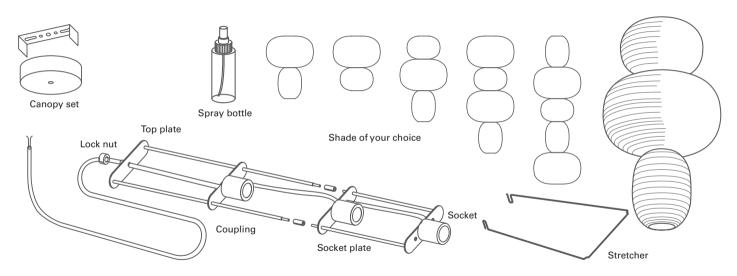

1

- 1. Place the body frame on a flat surface and connect the rods.
- 2 shades type does not need to be connected.
- 3 shades type require 2 connections.
- 4 shades and 5 shades type require 4 connections.

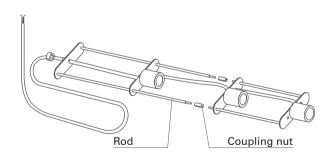



1. Screw the couplingting nut to the end of the rod on the upper side (about 2 cm).




2. Insert coupling the connecting nut to the lower rod and screw it in to the end (about 1 cm).



3. Complete when the upper and lower rods are screwed into the coupling nut by about 1 cm each.

Adjust the length of the cord and mount it on the ceiling X Please install with the power switch turned off.

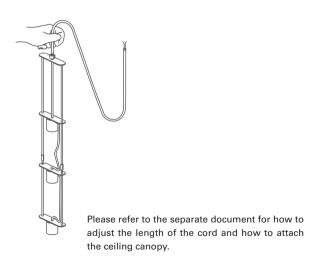


Install the shade Pass the frame through the notch on the round plate at the top of the shade.


Keep the shade folded and raise it carefully so that

Keep the shade folded and raise it carefully so that it will not be scratched by touching the socket plate.

4 Fix the shade

 5 Install shade expansion / Stretcher

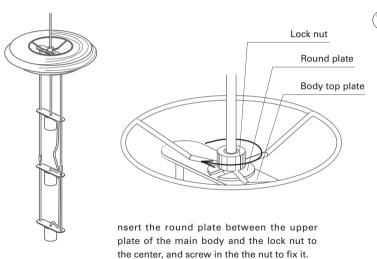






Slide it into the bottom plate from the front and back to fix it.

Install the light bulb (not included)

and screw it in securely.

assembly.

Stretch the shade down

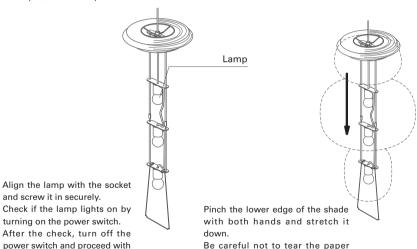

with the socket plate or nails.

If it is dry and has strong folds and wrinkles, and the shade does not extend to the bottom, pour water into the attached spray bottle and spray the entire shade with mist


The shade will start to stretch immediately, but the paper tear easily when the paper is wet, so please wait the assembly until it gets dry.

If the paper is stretched forcibly while it is wet, the shade may be torn. Do not allow water to come in


contact with anything other than the shade, such as electrical equipment.

If the paper is not shrunk, you do not need to spray water.

8 Pass the stretcher through the shade

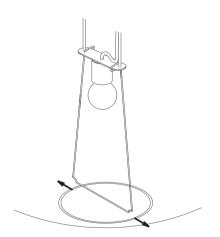

Push the opening of the shade from the inside and let the parts pass through

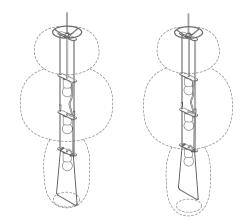

Washi (Japanese paper) expands and contracts due to humidity.

If the washi paper shade shrinks, it will be fixed with stretcher. If the washi paper shade is stretched, the stretcher parts will be in a floating state, but this is not a malfunction.

9 Finish

Make sure that it is installed correctly, turn on the power switch, and when all the lamps light up, it is complete.

When the installation is finished, you can turn on the main powr and the light will turn on.



Note: Please handle the shade carefully.

Attention

instructions, there is a risk of injury due to fire, electric shock, or damage. - If you feel any abnormality, turn off the power immediately. After confirming that the abnormality has subsided, contact an electrical contractor / dealer or customer service. - If you use a lamp with a specified wattage (W) or more, there is a risk of

-If you do not install the equipment properly according to the

- fire or malfunction.
- Do not improve the equipment or replace parts. There is a risk of fire, electric shock, malfunction, etc.

Tel +81 (0)3 5464 3208

Prestige Japan Inc. / Customer service

E-mail int-info@timeandstyle.com