



OWNER'S MANUAL

For Keyboard VGK6101



LANGUAGES



EN

If you need to access the manual in English, please visit our website.

ES

Si necesita acceder al manual en español, visite nuestro sitio web.

ES

Si vous avez besoin d'accéder au manuel en français, veuillez visiter notre site Web.

IT

Se è necessario accedere al manuale italiano, visitare il nostro sito Web.

DE

Wenn Sie auf das Handbuch des Deutschen zugreifen müssen, besuchen Sie bitte unsere Website.

Made in China

Thank you for purchasing "Vangoa" VGK6101 intelligent electronic keyboard, which is rich in expressiveness, versatile, elegant, easy to learn, and use. It is an ideal instrument for beginners, music education, and entertainment. In order to make better use of its functions, please read this manual carefully before using.


Feature functions

- 61 keys piano style keyboard/ Lighting keys/ LED display
- 600 timbres/ 400 rhythms
- With USB music player
- USB player volume control/ Pre & next selection/ EQ mode/ Start/ Stop
- 61 keyboard percussions/ 50 demos/ 3 teaching modes
- Master volume control/ Accompaniment volume control/ Transposition/ Tempo
- Sustain/ Vibrato/ Metronome/ Split/ Record/ Program/ play/ Demo one/ Demo all
- Sync/ Start/ Stop/ Insert/ Single Finger & Multi-Finger chord/ Bass chord/ Chord off
- Power/ Earphones jack/ Microphone jack/ Audio in

I Panel controlling button and external terminal ports


1. Panel controlling button

- | | | | |
|------------------------|----------------------|------------------------|-----------------------------|
| 1)Power on/Off | Music player control | 18)Sync | 27)Teaching1: Single finger |
| 2)Tempo | 9)Play/Pause | 19)Fill-in | 28)Teaching2: Follow |
| 3)Chord volume | 10)Volume adjustment | 20)Single finger chord | 29)Teaching3: Concert |
| 4)Accompaniment volume | 11)Previous song | 21)Multi-finger chord | 30)Split |
| 5)Master volume | 12)Next song | 22)Bass chord | 31)Record/Program |
| 6)Transpose | 13)EQ mode | 23)Chord off | 32)Metronome |
| 7)Sustain | 14)Timbres | 24)Lighting keys | 33)Playback |
| 8)Vibrato | 15)Rhythms | 25)Demo one | 34)USB jack |
| | 16)Numeric panel | 26)Demo all | |
| | 17)Start/Stop | | |

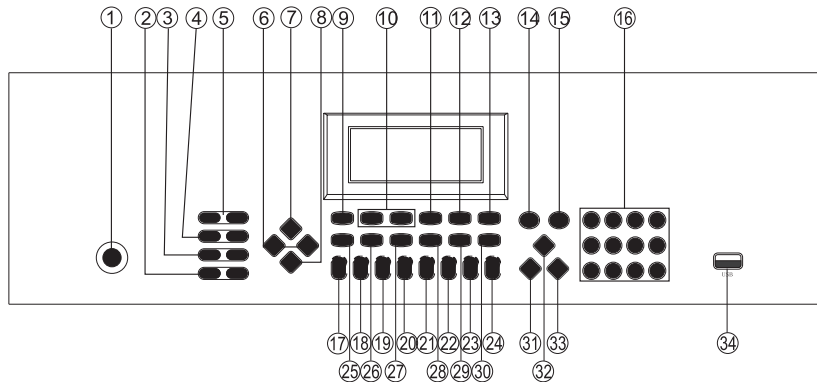

2. Backside external jack

- 35)AUDIO INPUT
- 36)MIC: External Microphone
- 37)PHONES: External Earphone
- 38)DC JACK

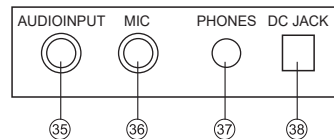

3. Power supply

■ Battery

This keyboard use 6 pieces of AA battery. Battery jar is in the backside of the keyboard. Please make sure the battery is right put inside. When the battery power runs out, the keyboard will not pronounce or the tone will be distorted. Please replace a new set of batteries. Please remove batteries when not using for a long time.

■ AC adapter

You must use the adapter packed with this keyboard. Please note that the input voltage must be the same as the mains voltage when using the power adapter! ! Unplug the AC plug when you are not using the keyboard.

4. External jack use

MIC: Insert the microphone plug into the MIC jack to sing.

PHONES OUTPUT: Insert the earphone plug into the PHONES OUTPUT Jack to avoid affecting others during personal practice.

AUDIO INPUT: This keyboard has stereo audio input function, which support audio signals playing from mobile phones, music players, and computers to the keyboard.

First turn off the power, then connect the audio device and AUDIO INPUT jack by audio cable, and then turn on the power.

II Function operation

Pressing the [Power] switch, the LED screen will illuminate and the keyboard is on working.

1. Timbres selection

Pressing [Timbres] button to enter timbres selection mode, and choose the timbre you need by numeric panel. Under chord mode, the 19 keys on the left of the keyboard are chord tones, instead of corresponding tones.

2. Sustain & Vibrato

Sustain: automatic extension of the end of a note played

Vibrato: the pitch of a note quivers in a small range

Sustain and Vibrato are only effective for playing mode.

3. Automatic accompaniment function

Rhythms selection: Pressing [Rhythms] button to enter rhythms selection mode, and choose the rhythms you need by numeric panel. Pressing [Start/Stop] button to stop.

Accompaniment selection: It can be divided into single- finger chord and multi-finger chord. Without rhythm playing, the chord will be manual chord playing. With rhythm playing, the chord will be automatic chord of the corresponding rhythm.

Single- finger chord: Pressing [Single finger] button to turn on/off.

See below single finger chord playing:

Major triad: Root playing

Minor triad: Pressing root and one black key on its left at the same time

Dominant 7th: Pressing root and one white key on its left at the same time

Minor seventh chord: Pressing root and one white key and one black key on its left at the same time

Multi-fingered chord: Pressing [Multi finger] button to turn on/off.

See below single finger chord playing:

Chord type	Chord finger-method
C	1, 3, 5
Cm	1, b3, 5
C7	1, 3, (5), b7
Cm7	1, b3, (5), b7

Under rhythm playing mode, turn on single finger or multi-finger chord, and the corresponding accompaniment will be added automatically when playing chord. Turn off single finger or multi finger or chord off, the accompaniment will stop, but the rhythm will continue.

If pressing [Chord off] button, chord functions or accompaniment are off. All keys will back to normal.

Chord timbres selection: Pressing [Bass chord] to change chord timbres.

Automatic accompaniment control

Under rhythm playing, pressing [Insert] button to insert a interlude. Keep pressing [Insert] button can replay this interlude.

Sync: Pressing [Sync] button to enter sync function. The automatic rhythm or accompaniment starts when pressing keys in accompaniment area first time. Pressing this key during the rhythm will stop the rhythm and enter the synchronization state.

Tempo: [Tempo] button is effective for demos and rhythms. Pressing [+][-] at the same to the default speed.

4.Volume control

Master volume control:11 levels in total. The default volume is level 8. Pressing [+][-] to adjust.

Chord volume control: 8 levels in total. Pressing [+][-] to adjust chord volume.

Accompaniment volume:11 levels in total. Pressing [+][-] to adjust percussion volume.

Keep pressing [+] or [-] button to speed up the volume adjustment.

Pressing the [+] and [-] button of the corresponding volume at the same time for about 2 seconds, and the corresponding volume will restore the default value.

5.Percussion

There are 61 percussions. Pressing [Timbres] button, then typing 128, the keyboard will convert into keyboard percussion keys. Each key corresponds to a percussion instrument.

6.Metronome

Pressing [Metronome] button to start the metronome. The metronome effect will be added when playing. Continuous pressing are : 1/4 beat 2/4 beat; 3/4 beat; 4/4 beat: stop.

7.Split

Pressing [Split] button, 61 black and white keys are divided into two keyboard areas. Then 24 keys on the left are separated from the original keyboard, which the pitch raised 8 degrees, and keep original timbre.

The pitch of the right part decreases 8 degrees, which is consistent with the left one. The right part timbres can be selected as required, and the left and right part can play different timbres at the same time.

8.Transposition control

Pressing [Transpose +] or [Transpose -] to change the playing method, which the entire keyboard pitch change in semitones. The adjustment range is between "+6" and "6".

9.Record and program

Maximum 150 notes.

Pressing [Record] button to enter the recording mode. Under recording mode, pressing keys to record notes. Chord and percussion cannot be recorded when full and notes recorded will not be affected.

Pressing [Play] button to play recorded notes successively. Pressing again to stop.

Under recording mode, pressing [Record] or [Stop] button to exit recording function.

Maximum 32 percussions can be edited.

Pressing [Program] button enter program mode. Under the program mode, pressing the keys to edit drum sounds (percussion). Percussions can't be programmed when it's full. After finishing programming, pressing [PLAY] button to play percussion successively. Pressing again to stop. New programming can be continued while playback is stopped.

Under programming mode, pressing [Program] or [Stop] button to exit program function.

10.Demos

Demo one: Press [DEMO ONE] button, demos will play in single cycle mode, and repeat automatically after playing finished. Press [DEMO ONE] again or [Start / Stop] button to exit.

Demo all: Press [DEMO ALL] button, demos will play in loop playing mode, and the next demo will be played automatically after last playing finished; Press [DEMO ALL] again or [Start / Stop] button to exit.

Under demos playing mode, you can select the corresponding song by numeric panel or [+] [-] numeric panel.

11.Lighting keys

This keyboard has the function of lighting keys. Keys will be lighting under playing, teaching function and demos. The system default is Lighting on. Pressing [Lighting] button to turn off/on.

12. Teaching mode & lighting keys

The intelligent teaching function is divided into three steps, guiding beginners to gradually learn. Beginners first learn the melody and rhythm of demos in Teaching 1, then enter the teaching 2. After being able to play correctly, then enter the teaching 3 to final performance.

Teaching 1: Pressing [Teaching 1] button to enter teaching mode. You can select the demo you want by numeric panel or [+] [-] numeric panel.

This teaching mode refers learning about demo duration, and does not require the pitch and correctness. You are allowed to play wrong while the keyboard is still playing with the correct notes, the keys will light and the correct note will be displayed on the screen. After learning a song, the current song will be automatically repeated.

Pressing [Teaching 1] again to exit.

Teaching 2: Pressing [Teaching 2] button to enter teaching mode. You can select the demo you want by numeric panel or [+] [-] numeric panel.

This teaching mode refers learning to follow the correct notes. Pressing [Teaching 2] to start the function, and the screen shows the status. The keyboard lights up according to the main melody note, prompting the current note to be played. You can follow the guidance of lighting keys to play or the guidance on LED screen. When wrong played, the melody will not continue until you play it right.

Pressing [Teaching 2] again to exit.

Teaching 3: Pressing [Teaching 3] button to enter teaching mode. You can select the demo you want by numeric panel or [+] [-] numeric panel.

This teaching mode refers instrumental ensemble performance. Teaching 3 is aimed at the correct comprehensive study of the time value and notes of demos. The main sound will be hid. You need to play the correct notes according to the original time value. If you don't play within 3s, the keyboard will automatically play the main notes. The keyboard lights up according to the main melody note, prompting the current note to be played. You can follow the guidance of lighting keys to play or the guidance on LED screen.

Pressing [Teaching 3] again to exit.

13. MP3 music player control

Volume [+] [-]: adjust MP3 songs volume

Pre / next song: MP3 songs selection. Keep pressing to fast forward or fast rewind

EQ mode: Pressing in proper order will be Jazziness, Classical, POP, Rock

Pause/ play: When the U disk has been inserted before starting or after, you need to press [play/ pause] button to play the song.

PS: Music file in U disk must be MP3 form.

600TIMBRES

000-015 The classical Musical	057 Electric Guitar	112 Electric Organ
000 Piano	058 Rhodes Guitar	113 Bright Organ
001 Vibraphone	059 Bright Guitar 2	114 Reed Organ
002 Reed Organ	060-077 Bass	115-127 Pad
003 Electric Guitar (muted)	060 Overdriven Bass 1	115 FX Lead
004 Electric Guitar (jazz)	061 Distortion Bass 1	116 Banjo
005 Synth Bass	062 Vibraphone Bass 1	117 Crystal Pad
006 Electric Bass (finger)	063 FX Bass 1	118 Newage Pad
007 Violin	064 Acoustic Bass 1	119 Pan Flute
008 Orchestral Harp	065 Rhodes Bass 1	120 Warw Piano
009 String Ensemble	066 Bright Bass 1	121 Newage Lead
010 Alto Sax	067 Electric Bass 1	122 Fifths Lead
011 Clarinet	068 Rhodes Bass 1	123 Bass Lead
012 Leed (sawtooth)	069 Bright Bass 2	124 Baritone Harp
013 Flute	070 Overdriven Bass 2	125 Synth String 1
014 Banjo	071 Distortion Bass 2	126 Synth String 2
015 French Horn	072 Vibraphone Bass 2	127 Warw Pad
016-026 Piano	073 FX Bass 2	128-175 Electronic music
016 Bright Acoustic Piano	074 Acoustic Bass 2	128 Percussion
017 Electric Grand Piano	075 Rhodes Bass 2	129 Church Organ
018 Rhodes Piano	076 Bright Bass 3	130 For the keyboard
019 Chorused Piano	077 Electric Bass 2	131 Church Piano
020 Harpsichord	078-084 Violin	132 Piano PAD
021 Synth Piano	078 Synth Violin	133 Double Bass
022 Acoustic Grand Piano	079 Bright Violin	134 Light rhythm Piano
023 Electric Grand Piano	080 Crystal Violin	135 synthesis Nylon Guitar
024 Choir Piano	081 Distortion Violin	136 Guitar organ
025 Dream Piano	082 Vibraphone Violin	137 electric Piano Pad
026 Electric Piano	083 Honky-tonk Violin	138 Bright Violin
027-037 Vibraphone	084 Acoustic Violin	139 Psychedelic Organ
027 Synth Vibraphone	085-090 Harp	140 Electronic Bagpipe
028 Electric Vibraphone (clean)	085 Synth Orchestral Harp	141 Wind Bagpipe
029 Electric Vibraphone (muted)	086 Bright Orchestral Harp	142 Double Kalimba
030 Overdriven Vibraphone	087 Synth Orchestral Harp	143 Fifths Lead
031 Distortion Vibraphone	088 FX	144 Western Pad
032 Vibraphone Harmonics	089 Queer Harp	145 Wind Bagpipe
033 FX Vibraphone	090 Crystal Orchestral Harp	146 high Bagpipe
034 Acoustic Vibraphone	091-095 Trumpet	147 Bright Guita
035 Rhodes Vibraphone 1	091 Synth Trumpet	148 (bass+lead)
036 Bright Vibraphone	092 Vibraphone Trumpet	149 Water Jean
037 Electric Vibraphone	093 FX Trumpet	150 Rock Electric Bass
038 Rock Organ	094 Acoustic Trumpet	151 Rhythm Electric Bass
038 Rock Organ	095 Rhodes Trumpet	152 Psychedelic Bass
039-059 Guitar	096-099 Sax	153 Atonic violin
039 Synth Jazz Guitar	096 Synth Sax	154 Muted Bass
040 Overdriven Jazz Guitar	097 Electric Sax	155 Bass Pad
041 Distortion Jazz Guitar	098 Crystal Sax	156 Chord Horn
042 Vibraphone Jazz Guitar	099 Bright Sax	157 Chord piano
043 FX Jazz Guitar	100-103 Lead	158 Chorus Guitar
044 Acoustic Jazz Guitar	100 Sawtooth Lead	159 Santur
045 Rhodes Jazz Guitar 1	101 Bright Lead	160 Purple Org
046 Synth Jazz Guitar	102 Upright Piano	161 Click Organ
047 Electric Jazz Guitar	103 Baritone Vibraphone	162 Bright Draw
048 Rhodes Jazz Guitar 2	104-114 Organ	163 Hyper Tines
049 Bright Jazz Guitar	104 Percussive Organ	164 Funk EP
050 Overdriven Guitar	105 Church Organ	165 Cool! Galaxy EP
051 Distortion Guitar	106 Electric Organ (muted)	166 Theater Organ
052 Vibraphone Guitar	107 Electric Organ (clean)	167 Clavi
053 FX Guitar	108 Synth Organ	168 Venasi Ep
054 Acoustic Guitar	109 Rhodes Organ	169 Tremolo Strs
055 Rhodes Guitar	110 Queer Organ	170 Harpsichord
056 Bright Guitar 1	111 Overcast Organ	171 Slow Strings

172 Syn Strings 1
 173 Pizz Strings
 174 CP80
 175 Atonic Marimba
 176-207 Synthetic electronic
 176 Synth Strings 1
 177 String Ensemble
 178 Traditional Accordion
 179 Synth Strings 2
 180 12 Strings Guitar
 181 Pipe Organ
 182 Lead 1 (charang)
 183 Lead 2 (fifths)
 184 Lead 3
 185 Lead 4 (bass+lead)
 186 Chamber Strs
 187 Lead 5 (chifflead)
 188 Pad 6 (bowed)
 189 Lead 7 (caliopo lead)
 190 Sine solo 1
 191 Sine solo 2
 192 Folk Guitar
 193 Classic Organ
 194 Finger Bass
 195 Aco Bass
 196 Clean Bass
 197 Banjo
 198 Octave Gtr
 199 Distortion Gtr
 200 Pick Bass
 201 Folks htring
 202 Fretless
 203 Folk Harmonica
 204 English Horn
 205 Synth Bass 1
 206 Synth Bass 2
 207 Synth Bass 3
 208-271 Modern Electric
 208 Crystal Gtr
 209 Jazz Organ 1
 210 Country Harmonica
 211 Honky Tonk
 212 Honky Gtr
 213 Custom guitar
 214 Santur
 215 12 String Gtr
 216 Jazz boy
 217 Mute Gtr1
 218 Detuned Strings
 219 Detuned Harmonica
 220 Detune Nylon Gtr
 221 Mute Gtr2
 222 Velocity Gtr
 223 Steel Gtr1
 224 Steel Gtr2
 225 Tango Accordion
 226 Detune Accordion
 227 Detuned Steel Gtr
 228 Velocity Steel Gtr
 229 Velocity Steel Gtr (Fx)
 230 Velocity Pedal Steel Gtr
 231 Chorus Steel Gtr
 232 Mellow Gtr
 233 Legato Strings
 234 Mellow Harmonica
 235 Clean Harmonica
 236 Clean Jazz Gtr
 237 Detuned Jazz Gtr
 238 Velocity Jazz Gtr
 239 Crystal piano
 240 Crystal music
 241 Synth Organ
 242 Synth Bass
 243 Light rhythm Bass
 244 Bright Bass
 245 Synth marimba
 246 electric Guitar Pad
 247 Distortion Guitar pad
 248 Melody guitar
 249 New Strings
 250 Synth Electric 1
 251 Synth Electric 2
 252 Synth Electric 3
 253 Synth Crystal
 254 Synth Vib
 255 Stereo Marimba
 256 Stero Muted Gtr
 257 Stero Organ
 258 An electric guitar
 259 Bright clean Guitar
 260 Harpsichord
 261 Guita organ
 262 Velocity piano
 263 Pick Bass 1
 264 Pick Bass 2
 265 Psychedelic Synth strings
 266 Metallic Crystal
 267 Psychedelic Synth Lead
 268 Vibraphone Synth Lead
 269 Crystal FX
 270 Synth Shamisen
 271 Electronic Shamisen
 272-319 Classic Synthesizer
 272 Clean Guitar Pad
 273 Orchestra Lead
 274 Glockenspiel Lead
 275 Atmosphere Lead
 276 Fifths Lead
 277 Double Celesta
 278 Double Xylophone
 279 Crystal Xylophone
 280 Resonant Gtr
 281 Sweet Reed Organ
 282 Slow Harpsichord
 283 Bass Marimba
 284 Celesta
 285 Glocken 1
 286 Tubular-bell
 287 Overdriven Guitar
 298 Slow Harmonic
 299 Soft Clarinet
 300 Banjo Pad
 301 Banjo Lead
 302 Karimba Pad
 303 Shamisen Pad
 304 Wooden Vibraphone
 305 Wooden Church Organ
 306 Wooden Reed Organ
 307 Wooden Guitar jazz
 308 Wooden Guitar muted
 309 Wooden Bass finger
 310 Wooden Synth Bass
 311 Wooden Violin
 312 Wooden Orchestral Harp
 313 Wooden String Ensemble
 314 Wooden Soprano Sax
 315 Wooden Clarinet
 316 Wooden Flute
 317 Wooden Lead
 318 Wooden Banjo
 319 Wooden Crystal FX
 320-349 Hit synthesizer
 320 Hit Pinao
 321 Hit Church Organ
 322 Hit Reed Organ
 323 Hit Guitar jazz
 324 Hit Guitar muted
 325 Hit Bass finger
 326 Hit Synth Bass
 327 Hit Violin
 328 Hit Orchestral Harp
 329 Hit String Ensemble
 330 Hit Soprano Sax
 331 Hit Clarinet
 332 Hit Flute
 333 Hit Lead square
 334 Hit Banjo
 335 Hit FX
 336 Rock piano
 337 Baritone Celesta
 338 Digital Organ
 339 Magic Guitar
 340 Diplophonia Guitar
 341 Bright bass
 342 Magic bass
 343 Fantasy violin
 344 Fast Harp
 345 Fantasy strings
 346 Sax magic
 347 Dynamic clarinet
 348 Magic Piccolo
 349 Magic Lead
 350 Banjo
 351 Dynamic Crystal
 352 Dynamic piano
 353 Magic Metallophone
 354 Digital Organ
 355 Regge Guitar
 356 Hawaii Guitar
 357 The bass
 358 National bass
 359 Solo Violin
 360 Heavy rock Harp
 361 Jump syn String Ensemble
 362 Jump Sax
 363 Distortion oboe

364 Digital flute
 365 Heavy Lead
 366 Mechanical Banjo
 367 Dynamic Crystal
 368-415 Science fiction
 electronic string
 368 Rock Clavichord
 369 Heavy metal Glockenspiels
 370 Clear Organ
 371 Baritone Organ
 372 Campus Jazz Guitar
 373 Hall electric guitar
 374 East bass
 375 Jumping Cello
 376 Jumping Harp
 377 Magic ensemble
 378 Baritone Sax synthesizer
 379 Electronic bar
 380 Heavy metal flute
 381 Electronic dance Pad
 382 Double Kalimba
 383 Electronic Crystal
 384 Rhythm electric Piano
 385 Marimba Harp
 386 Soft Pad n
 387 Rhythm Electric Guitar
 388 Fierce Organ
 389 The bass band
 390 The bass strings
 391 Bright Violin
 392 Pizzicato Violin
 393 Baritone Synth Contrabass
 394 high Trumpet
 395 Synth French Horn
 396 Diplophonia English Horn
 397 Psychedelic Synth Lead
 398 Koto Lead
 399 East Nation Pad
 400 Queer electric Piano
 401 Psychedelic electronic
 402 Electronic organ
 403 Synth accordion
 404 Psychedelic Guitar
 405 Bright Clean Guitar
 406 Rhythm Electric Bass
 407 Trill violin
 408 Harp ensemble
 409 Cello Lead
 410 rhythm Trumpet
 411 rhythm Trombone
 412 Bright English Horn
 413 Vibraphone Synth Lead
 414 Marimba Synth Lead
 415 Electronic FX
 416-463 Digital Synthesizer
 416 Classical piano
 417 electric Piano Pad
 418 Pick organ
 419 Organ Guitar
 420 Synth Electronic Guitar
 421 Synthesis Nylon Guitar
 422 Atmosphere Pad Bass
 423 Cello Lead
 424 Synth Harp
 425 Large violin
 426 Synth Trumpet
 427 high Trombone
 428 Synth Trombone
 429 Metal FX
 430 Bright Koto
 431 Japan Synth
 432 Clean Piano
 433 Baritone Xylophone
 434 Rhythm Accordion
 435 Organ ensemble
 436 Bright Guitar
 437 Crystal guitar
 438 Heavy metal bass
 439 Heavy bass orchestra
 440 Harp ensemble
 441 orchestral keyboard
 442 Trumpet Ensemble
 443 Trombone Ensemble
 444 French Horn ensemble
 445 Electronic String Ensemble
 446 Diplophonia Koto
 447 Environmental Lead
 448 Light rhythm Piano
 449 Crystal Kalimba
 450 Fierce Organ
 451 Soft Pad
 452 Bright Rhythm
 453 Crystal guitar
 454 Interactive Lead
 455 Heavy bass orchestra
 456 Bright Violin
 457 Orchestra Lead
 458 Hit Soprano Sax
 459 Metal Sax
 460 Bagpipes
 461 Magic lead
 462 Wooden Bells
 463 Atmosphere Lead
 464-511 Asian synthetic
 464 Electric Piano Pad
 465 Glockenspiel Lead
 466 Environmental Lead
 467 Wind Lead
 468 Clean Guitar Pad
 469 Atmosphere Lead
 470 Electric bass Pad
 471 Metal Sci-fi Pad
 472 East Nation Pad
 473 Western Pad
 474 Bright Lead
 475 Clarinet Pad
 476 Flute Pad
 477 Sci-fi Pad
 478 Banjo Pad
 479 Electronic dance Pad
 480 Rhythm electric Piano
 481 synthetic Kalimba
 482 Wind Bagpipe
 483 high Bagpipe
 484 Psychedelic Jazz Guitar
 485 Rhythm Electric Guitar
 486 Pan Flute Pad
 487 Electronic wind Pad
 488 Magic Metallophone
 489 Classical Electronic
 490 Synth Shanai
 491 Environmental Shanai
 492 Electronic Bagpipe
 493 Science Fiction Classic
 494 Bright Kalimba
 495 Special Echo FX
 496 Rock Clavichord
 497 Bright clavichord
 498 Church Organ
 499 Reed Organ
 500 Modern electric guitar
 501 Bar electric guitar
 502 Dynamic guitar
 503 Electric guitar reverb
 504 Heavy rock Harp
 505 Heavy rock Viola
 506 Solo synthesizer
 507 Heavy rhythm Alto Sax
 508 Digital flute
 509 Heavy rock lead
 510 Psychedelic flute
 511 Psychedelic flute
 512-687 New century music wind
 512 Ethereal crystal bagpipes 1
 513 Ethereal crystal bagpipes 2
 514 Ethereal crystal bagpipes 3
 515 Ethereal crystal bagpipes 4
 516 Ethereal crystal bagpipes 5
 517 Ethereal crystal bagpipes 6
 518 The synthesis of Piccolo 1
 519 The synthesis of Piccolo 2
 520 The synthesis of Piccolo 3
 521 The synthesis of Piccolo 4
 522 The synthesis of Piccolo 5
 523 Irish Audi
 524 Irish Flutes
 525 fidi
 526 tin whistle
 527 Six angle accordion
 528 Cosmic timbre 1
 529 Cosmic timbre 2
 530 Cosmic timbre 3
 531 Cosmic timbre 4
 532 Cosmic timbre 5
 533 Cosmic timbre 6
 534 Cosmic timbre 7
 535 Cosmic timbre 8
 536 Cosmic timbre 8
 537 Cosmic timbre 9
 538 Cosmic timbre 10
 539 Cosmic timbre
 540 Cosmic timbre
 541 Cosmic timbre
 542 Cosmic timbre
 543 Cosmic timbre
 544 Aluminum piano in the
 new century

400RHYTHMS

545 Tweeter	000 Mambo	060-079 Waltz
546 Alto aluminum organ	001 16-Beat	060 Cassical Waltz
547 Bass aluminum organ	002 Waltz	061 Lieder Waltz
548 Lyric aluminum organ	003 Rumba	062 New Waltz
549 Bright aluminum organ	004 Reggae	063 Viennese Waltz
550 Crystal aluminum organ	005 Rock	064 Polish Waltz
551 A lively piece of aluminum	006 Slow Rock	065 French Waltz
552 Soothing aluminum piece	007 BossaNova	066 Jazz Waltz1
553 Environment aluminum	008 Disco	067 Jazz Waltz2
piece piano	009 Tango	068 Christmas Waltz
554 Lyric aluminum organ	010 Country	069 Pop Waltz
555 Science fiction aluminum	011 Pop	070 Rock Waltz
556 The new century	012 Beguine	071 Elegant Waltz
557 Science fiction banjo	013 Latin	072 Country Waltz
558 SF three Nye	014 March	073 Modern Waltz
559 Science fiction Sanxian	015 Samba	074 Bohemian Waltz
560 Psychedelic piano	016 Swing	075 Mariachi Waltz
561 Psychedelic percussion piano	017 8-beat	076 German Waltz
562 Pipe organ	018 Cha cha	077 Christmas Waltz
563 Acid guitar	019 Salsa	078 English Waltz
564 Psychedelic guitar	020-039 Mambo	079 Highland Waltz
565 Psychedelic Bass	020 Brazil Mambo	080-099 Rumba
566 Psychedelic novelty bass	021 Pop 8-Beat	080 Europe Rumba
567 Psychedelic violin	022 Pop Mambo	081 hard Rumba
568 Acid Harp	023 Smooth Country	082 Mix Reggae
569 Psychedelic strings	024 Pop Reggae	083 lieder Rumba
570 acid brass	025 lieder Mambo	084 Jazz Rumba
571 Psychedelic clarinet	026 Hard 8-beat	085 lieder Bossanova
572 Acid flute	027 Country Bossanova	086 Slow Rumba
573 Ethereal quartz	028 Hhard Mambo	087 Mix Rumba
574 Ethereal dove	029 Bluegrass Tango	088 lieder Country
575 Ethereal organ	030 Country South Country	089 hard Pop
576 Alice piano	031 lieder Popse	090 Mix Beguine
577 Alice church organ	032 Bluegrass Beguine	091 Jazz Lation
578 Alice reed organ	033 Rock Lation	092 Ballad-Rumba
579 Alice Clean Guitar	034 Cool Jazz	093 Fusion Rumba
580 Alice electric guitar	035 Bebop	094 Mix Beguine
581 Alice OST Beth	036 Laff	095 Jazz Latin
582 Alice synthesis, Beth	037 Bhangra	096 Schlager Shuffle
583 Alice violin	038 Zouk	097 Schlager Pop
584 Alice Harp	039 Enka	098 Schlager Rumba
585 Alice Stings	040-059 16 Beat	099 Euro Pop Organ
586 Alice wind	040 Slow March-polka	100-119 Reggae
587 Alice clarinet	041 Europe Samba	100 Hard Swing
588 Alice flute	042 Jazz Swing	101 lieder 8-Beat
589 Alice Fang Bo	043 Pop 16-Beat	102 hard House
590 Alice Banjo	044 Country Pop	103 Bluegrass Salsa
591 Alice synthesis	045 Pattern Salsa	104 Smooth Mambo
592 Old tremolo	046 Mix 16-Beat	105 Bblues 16-Beat
593 60s music box	047 lieder 16-Beat	106 Modern Popse
594 60s reed organ	048 Hard 16-Bbeat	107 Reggae 1
595 60s Clean Guitar	049 Pop Rumba	108 Reggae 2
596 60s piano guitar	050 jazz Reggae	109 Blues Reggae
597 60 years mix Beth	051 Punk 16-Beat	110 Mix Punk
598 60 years of distortion bass	052 Mix Rock	111 lieder Punk
599 Neo classical violin	053 Pattern Bossanova	112 Trip-Hop
	054 Pop Ballad 1	113 Classical Soul
	055 Pop Ballad 2	114 Pop Reggae
	056 Modern Shuffle	115 Hard 8-Beat
	057 Blues Rock	116 Scand Country 1
	058 Dream Dance	117 Scand Country2
	059 US Chart Hit	118 Scand Shuffle

119 Worship Slow	178 Funky Disco	237 Modern R&B	296 Jazz Funk
120-139 Rock	179 Saturday Night	238 Hip Shuffle	297 Club Latin
120 Classical Rock	180-199 Disco	239 DiscoPop	298 Disco Chocolate
121 Pub Rock	180 Modern Disco	240-259 Pop	299 Disco Fox
122 Rap-Rock	181 Lieder Disco	240 Salsa	300-320 March
123 Detroit Rock	182 Merengue	241 Mix Pop Rock	300 Ober Polka
124 Hard Rock	183 Jazz Disco	242 Shuffle Boogie	301 Polka Pop
125 Instrumental Rock	184 Schlager	243 Twist	302 Blue Grass 1
126 Space Rock	185 Dance Schlager	244 jazz March-Polka	303 Blue Grass 2
127 Glam Rock	186 Straight rock	245 Malfoof	304 Blue Grass 3
128 Modern Rock	187 Rap Pop	246 Swing Lation	305 USA March
129 Aussie Rock	188 Latin Fusion	247 Modern Jazz	306 Hully Gully
130 Piano Rock & Roll	189 Bolero	248 Slow Big Band	307 Tarantella
131 Kraut Rock	190 Trance	249 Funk 8 Beat	308 Limbo Rock
132 Indie Rock	191 German March	250 Quickstep	309 Pub Piano
133 50'S Rock	192 Disco Soul	251 Stride Piano	310 Medium Jazz
134 Hard Rock	193 Pop Disco	252 West End	311 Show Tune
135 Ballad-rock	194 Polka Fox	253 Baroque	312 Polka
136 Mellow Hip Hop	195 Bachata	254 Funky Fusion	313 Party Polka
137 Classic Hip Hop	196 70's French Hit	255 Game Show	314 Classic Big Band
138 New Hip Hop	197 Italian Mazurka	256 Charleston	315 French Jazz
139 Duranguense	198 EuroBeat	257 DiscoSoul	316 Modern Country Pop
140-159 Slow Rock	199 Rave	258 DiscoTrot	317 Electro Pop
140 Rockabilly	200-219 Tango	259 Rap	318 Acoustic Ballad
141 50'S Rock	200 Polka Fox	260-279 Beguine	319 Piano Ballad
142 Britpop	201 Bachata	260 Bolivia Mambo	320 Blues Shuffle
143 Hard Rock	202 Russian Chanson 1	261 variety Mambo	321-339 Ballroom
144 Ballad-rock	203 Russian Chanson 2	262 Latin House	321 Reel
145 Soft Rock	204 Modern Tango	263 ballads Beguine	322 Chart Rock Shfl
146 60'S ROCK	205 Argentine Cumbia	264 classical Beguine	323 60's Pop Rock
147 Electronic Music 16-Beat	206 Punta	265 variety Reggae	324 60's Vintage Rock
148 Figure British Rock	207 Cuba Tango	266 Acid Rock	325 RockBilly
149 lively Rock	208 Brazil Tango	267 hard March-Polka	326 RockBoogie
150 Rock Ballad 1	209 Boogie-Woogie	268 Pasillo	327 RockChaCha1
151 Rock Ballad 2	210 Techno Pop	269 Beguine 1	328 RockClassical
152 Classical Mix Rock	211 Techno	270 Beguine 2	329 RockShuffle
153 Country Slow Rock	212 Jazz Tango	271 Jive	330 RockPop
154 Contemp Rock	213 Shuffle Rock 1	272 Soul Ballad	331 Cumbia
155 Acoustic Rock	214 Argentine Tango	273 Gypsy Swing	332 70's Chart Ballad
156 R&B Ballad	215 ItalianTango	274 Jazz Quartet	333 Romantic Ballad
157 Slow & Easy	216 Tango3	275 Soul Dance	334 90's Cool Ballad
158 Analog Ballad	217 Tango4	276 Disco Funk	335 Alp Ballad1
159 E-Ballad	218 Tango5	277 Disco Hands	336 Alp Ballad2
160-179 BossaNova	219 Tango6	278 Disco Party	337 Pop New Age
160 Country Punk	220-239 Country	279 Disco Samba	338 8 Beat Modern
161 Mix Hip Hop	220 Shuffle Rock 2	280-299 Latin	339 Country Ballad
162 Pop House	221 Pop Polka	280 Calypso	340-349 Ballad
163 Hard Electronic Music	222 Oldies Ballad	281 GuadDance	340 Love Song
164 Soft Bossanova	223 Bluegrass	282 Reggae 12Beat	341 Cool Pop
165 Punk Cha Cha	224 Oldies 8 Beat	283 Reggae 16Beat	342 Groovy Pop
166 Heavy Metal 16-Beat	225 Broadway	284 Cumbia	343 60's Vintage Pop
167 Trip-Hop 16-Beat	226 Hawaiian	285 Tijuana	344 80's Pop
168 Gangsta Rap	227 Fox Trot	286 Latin Party Pop	345 Rap Pop
169 Figure Electronic Music	228 16 Beat Ballad	287 Carnival	346 Pop Rock
170 Slow-16-Beat	229 classical Country	288 Parranda	347 60's Soul
171 16Beat Shuffle 1	230 House	289 Samba Rio	348 70's Soul
172 Rock Lation	231 Banda	290 Jazz Samba	349 Funk
173 Fusion	232 Country Shuffle 1	291 Pop Bossa 1	350 16 Beat Shuffle
174 80's EP Ballad	233 Country Shuffle 2	292 Pop Bossa 2	351 Twist
175 80's Boy Band	234 Country Ballad	293 PopChaCha	352 British Pop
176 70's Disco 1	235 Country Two Step	294 Pop Reggae	353 Hard Rock
177 70's Disco 2	236 Club Dance	295 Disco Latin 2	354 Fusion

DEMO SONGS

355 Funk Shuffl	00 Les premiers Sourires De Vanessa
356 Fusion Shuffl	01 Texas Yellow Rose
357 60's Rock N	02 Skip To My Lou
358 Standard Rock	03 Are You Sleeping
359 Brit Rock Pop	04 Little Brown Jug
360 Big Band Shuffle 1	05 When The Saints Go Marching In
361 Big Band Shuffle 2	06 Sweet Family
362 Big Band Shuffle 3	07 Merry Xmas
363 Fast Band 2	08 Swan Lake
364 Fast Band 3	09 Old McDonald Had a Farm
365 Frankly Soul	10 Cow Boy
366 Classic Big Band	11 London Bridge
367 French Jazz 1	12 Long Long Ago
368 Jump Jive	13 Spring
369 Country Ballad2	14 Greensleeves
370 Carnival	15 Old France
371 Organ Samba1	16 Fur Elise
372 Reel1	17 Chopin Nocturnes
373 Gay Gordons	18 Radetzky March
374 Pop Classics	19 Red River Valley
375 Live 8 Beat	20 Turkish March
376 Power Rock	21 Edelweiss
377 Acoustic Rock	22 Boogie Rock
378 Cool 8 Beat	23 "Carmen" Overture
379 Uptempo 8Beat	24 Sweet Bye And Bye
380 90's Rock Ballad	25 Island Of Capri
381 Chart Rock Shfl2	26 Turkey In The Straw
382 Brazilian Samba	27 La Paloma
383 Brit Pop Swing	28 Twinkle Twinkle Little Star
384 60's 8 Beat	29 Yankee Doodle Dandy
385 Fast Bossa	30 Humoresque
386 60's Guitar Pop	31 Sur Le Pont D'avignon
387 70's 8 Beat	32 Ten Little Indians
388 90's Guitar Pop	33 Little Red Nosed Reindeer
389 Soft Rock	34 Overture "William Tell"
390 Chart Guitar Pop	35 American Patrol
391 Gujjira	36 Camptown Races
392 Modern Pop Bld	37 Minuet In G
393 Soul R&B	38 Music Box Dancer
394 R&B Soul Ballad	39 She Wore A Yellow Ribbon
395 Euro Hip Hop	40 Small bees
396 Trip Hop	41 Johann Sebastian Bach
397 Ibiza 2004	42 Donna Donna
398 Mod Big Band Shfl	43 Joy To The World
399 Modern Big Band	44 Frohlicher Landmann
	45 Menuet from the "L'Arlesienne Suite"
	46 Marry Had A Little Lamb
	47 March From The Nutcracker
	48 Cuckoo Waltz
	49 Oh! Susanna

PRECAUTION

- The specified adapter is only used. Using the wrong adapter may result in instrument damage and overheating. If the A/C adapter cord or the plug becomes frayed or is damaged, there is a sudden loss of sound while the instrument is played and the unusual smells or adapter plug from the outlet, the instrument must be inspected by a qualified technician.
- After the power button is pressed, the power of the keyboard is turned off and the plug must be taken off in order to avoid burning the internal parts or arising fire because of a long connection with the power.
- The plastic packing bag must be kept in a safe place in order to avoid the suffocation when a kid amuses itself by putting its head into it.
- The keyboard surface should be kept clean to avoid the eye winkers into the instrument through the small openings of the switch or gaps between the keys cleaning the appearance of the keyboard with soft cloth is necessary at fixed time and the keyboard is kept away from water vapor.
- The instrument must not be exposed in the strong sunlight for a long time.
- The keyboard must be put in a dry place when it is not used. Strong vibration or collision is forbidden in order to avoid the damage of the frame or the internal parts.
- The instrument must be kept away from the acidity or alkaline places and it is forbidden to play the instrument under the eroding gas circumstance in order to prevent poor contact from circuitry oxidation.
- The electronic keyboard is a precise instrument any modification may result in malfunction. Once the failure happens, the keyboard must be taken to a professional after-sale service department or experienced technicians for maintenance. It is forbidden to dismantle or assemble the components inside the keyboard at will.

PRECAUTION

- Solo se utiliza el adaptador especificado. El uso del adaptador incorrecto puede provocar daños en el instrumento y sobrecalentamiento. Si el cable del adaptador de A / C o el enchufe se deshilachan o se dañan, hay una pérdida repentina de sonido mientras se toca el instrumento y los olores inusuales o el enchufe del adaptador de la toma de corriente, el instrumento debe ser inspeccionado por técnico calificado.
- Después de presionar el botón de encendido, se apaga el teclado y se debe desconectar el enchufe para evitar quemar las partes internas o provocar un incendio debido a una larga conexión con la corriente.
- La bolsa de plástico debe guardarse en un lugar seguro para evitar la asfixia cuando un niño se divierte metiendo la cabeza en ella.
- La superficie del teclado debe mantenerse limpia para evitar los parpadeos en el instrumento a través de las pequeñas aberturas del interruptor o los espacios entre las teclas. Es necesario limpiar la apariencia del teclado con un paño suave en un tiempo fijo y el teclado se mantiene alejado de vapor de agua.
- El instrumento no debe exponerse a la luz solar intensa durante mucho tiempo.
- El teclado debe colocarse en un lugar seco cuando no se usa. Se prohíbe una fuerte vibración o colisión para evitar el daño del marco o las partes internas.
- El instrumento debe mantenerse alejado de la acidez o de los lugares alcalinos y está prohibido tocar el instrumento bajo la circunstancia de gas erosivo para evitar un contacto deficiente de la oxidación de los circuitos.
- El teclado electrónico es un instrumento preciso, cualquier modificación puede provocar un mal funcionamiento. Una vez que ocurre la falla, el teclado debe ser llevado a un departamento de servicio postventa profesional o técnicos experimentados para su mantenimiento. Está prohibido desmontar o ensamblar los componentes dentro del teclado a voluntad.

PRECAUZIONE

- L'adattatore specificato viene utilizzato solo. L'uso di un adattatore errato può provocare danni allo strumento e surriscaldamento. Se il cavo dell'adattatore A / C o la spina si consumano o sono danneggiati, si verifica un'improvvisa perdita di suono durante la riproduzione dello strumento e gli odori insoliti o la spina dell'adattatore dalla presa, lo strumento deve essere ispezionato da tecnico qualificato.
- Dopo aver premuto il pulsante di accensione, l'alimentazione della tastiera viene disattivata e la spina deve essere rimossa per evitare di bruciare le parti interne o provocare incendi a causa del lungo collegamento con l'alimentazione.
- La busta di plastica deve essere conservata in un luogo sicuro per evitare il soffocamento quando un bambino si diverte mettendoci la testa.
- La superficie della tastiera deve essere mantenuta pulita per evitare che gli occhi sbattano le palpebre nello strumento attraverso le piccole aperture dell'interruttore o spazi vuoti tra i tasti. La pulizia dell'aspetto della tastiera con un panno morbido è necessaria a tempo fisso e la tastiera è tenuta lontana da vapore acqueo.
- Lo strumento non deve essere esposto alla luce solare intensa per lungo tempo.
- La tastiera deve essere riposta in un luogo asciutto quando non viene utilizzata. Forti vibrazioni o collisioni sono vietate per evitare danni al telaio o alle parti interne.
- Lo strumento deve essere tenuto lontano dall'acidità o da luoghi alcalini ed è vietato suonare lo strumento in circostanze di erosione del gas al fine di prevenire un contatto insufficiente dall'ossidazione dei circuiti.
- La tastiera elettronica è uno strumento preciso, qualsiasi modifica può causare malfunzionamenti. Una volta che si verifica l'errore, la tastiera deve essere portata a un servizio di assistenza post-vendita professionale o a tecnici esperti per la manutenzione. È vietato smontare o assemblare i componenti all'interno della tastiera a piacimento. È vietato smontare o assemblare i componenti dentro del teclado a voluntad.

VORSICHT

- Der angegebene Adapter wird nur verwendet. Die Verwendung des falschen Adapters kann zu Geräteschäden und Überhitzung führen. Wenn das A / C-Adapterkabel oder der Stecker ausgefranst oder beschädigt ist, tritt beim Spielen des Instruments plötzlich ein Tonverlust auf und die ungewöhnlichen Gerüche oder der Adapterstecker aus der Steckdose müssen von überprüf werden qualifizierter Techniker.
- Nach dem Drücken des Netzschalters wird die Tastatur ausgeschaltet und der Stecker muss abgezogen werden, um ein Verbrennen der Innenteile oder einen Brand aufgrund einer langen Verbindung mit der Stromversorgung zu vermeiden.
- Die Plastiktüte muss an einem sicheren Ort aufbewahrt werden, um Erstickungsgefahr zu vermeiden, wenn sich ein Kind amüsiert, indem es den Kopf hineinsteckt.
- Die Tastaturoberfläche sollte sauber gehalten werden, um zu vermeiden, dass durch die kleinen Öffnungen des Schalters oder durch Lücken zwischen den Tasten Augenzwinkern in das Instrument gelangen. Das Aussehen der Tastatur muss zu einem festgelegten Zeitpunkt mit einem weichen Tuch gereinigt werden, und die Tastatur wird ferngehalten Wasserdampf.
- Das Instrument darf nicht längere Zeit starkem Sonnenlicht ausgesetzt werden.
- Die Tastatur muss an einem trockenen Ort aufbewahrt werden, wenn sie nicht verwendet wird. Starke Vibrationen oder Kollisionen sind verboten, um Schäden am Rahmen oder an den Innenteilen zu vermeiden.
- Das Instrument muss von sauren oder alkalischen Stellen ferngehalten werden. Es ist verboten, das Instrument unter den Bedingungen des erodierenden Gases zu spielen, um einen schlechten Kontakt durch Oxidation der Schaltkreise zu verhindern.
- Die elektronische Tastatur ist ein präzises Instrument. Änderungen können zu Fehlfunktionen führen. Sobald der Fehler auftritt, muss die Tastatur zur Wartung zu einer professionellen Kundendienstabteilung oder erfahrenen Technikern gebracht werden. Es ist verboten, die Komponenten innerhalb der Tastatur nach Belieben zu zerlegen oder zusammenzubauen.

PRECAUTION

- L'adaptateur spécifié est uniquement utilisé. L'utilisation d'un mauvais adaptateur peut endommager l'instrument et surchauffer. Si le cordon de l'adaptateur A / C ou la fiche s'effiloche ou est endommagé, il y a une perte soudaine de son pendant que l'instrument est joué et les odeurs inhabituelles ou la fiche de l'adaptateur de la prise, l'instrument doit être inspecté par technicien qualifié.
- Après avoir appuyé sur le bouton d'alimentation, l'alimentation du clavier est coupée et la prise doit être retirée afin d'éviter de brûler les pièces internes ou de provoquer un incendie en raison d'une longue connexion avec l'alimentation.
- Le sac d'emballage en plastique doit être conservé dans un endroit sûr afin d'éviter l'étouffement lorsqu'un enfant s'amuse en y mettant la tête.
- La surface du clavier doit être maintenue propre pour éviter le clignotement des yeux dans l'instrument à travers les petites ouvertures de l'interrupteur ou les espaces entre les touches. Nettoyer l'apparence du clavier avec un chiffon doux est nécessaire à temps fixe et le clavier est tenu vapeur d'eau.
- L'instrument ne doit pas être exposé au soleil pendant une longue période.
- Le clavier doit être placé dans un endroit sec lorsqu'il n'est pas utilisé. Les fortes vibrations ou collisions sont interdites afin d'éviter d'endommager le cadre ou les pièces internes.
- L'instrument doit être tenu à l'écart de l'acidité ou des endroits alcalins et il est interdit de jouer de l'instrument dans des conditions d'érosion du gaz afin d'éviter un mauvais contact de l'oxydation des circuits.
- Le clavier électronique est un instrument précis, toute modification peut entraîner un dysfonctionnement. Une fois la panne survenue, le clavier doit être confié à un service après-vente professionnel ou à des techniciens expérimentés pour la maintenance. Il est interdit de démonter ou d'assembler les composants à l'intérieur du clavier à volonté.

