





Function Description

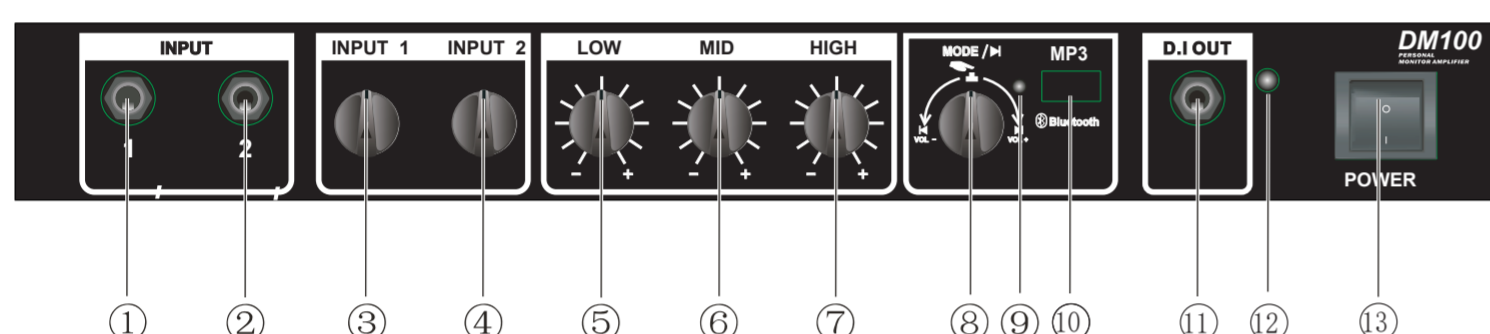

1. **INPUT 1**
Connecting musical instruments such as electronic drums or keyboards.
2. **INPUT 2**
Connecting musical instruments such as electronic drums or keyboards.
3. **INPUT 1 VOLUME**
This knob adjusts the volume of channel one.
4. **INPUT 2 VOLUME**
This knob adjusts the volume of channel two.
5. **LOW**
Adjust the amount of low frequency level.
6. **MID**
Adjust the amount of mid frequency level.
7. **HIGH**
Adjust the amount of high frequency level.
8. **BLUETOOTH / USB ADJUSTMENT SWITCH**
Long press: to turn on/off Bluetooth;
Click : to start/pause Bluetooth or USB song playback;
Left/Right Rotary Click: Used to switch the top/next song in Bluetooth or USB;
Continuous left/right rotation: Used to attenuate/boost the audio signal in Bluetooth or USB.
9. **BLUETOOTH / USB INDICATOR**
Shows whether Bluetooth/USB works.
10. **USB INPUT**
Insert U disk, play MP3 music.
11. **D.I OUT**
This socket provides a balanced low impedance output signal from pre amplifier taken before the Volume but after any tone correction,used for direct injection of amplifier signal to a mixing desk or additional power amplifier.

12. **POWER INDICATOR**
Indicator lights when power on.
13. **POWER SWITCH**
Switch ON/OFF the machine.

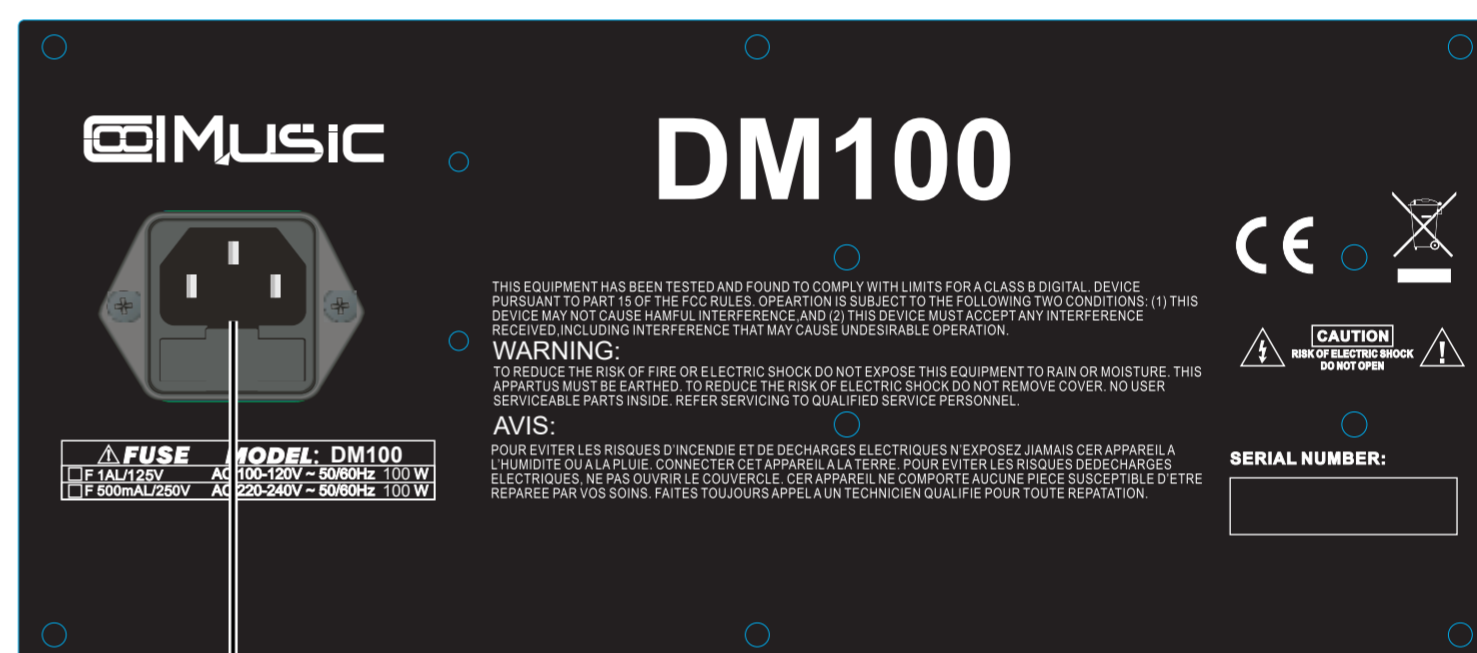

14. **AC INLET SOCKET**
Connect the included AC power cable to this inlet.

SPECIFICATION

Bluetooth and USB
Power Output: 100W RMS
Input Power: 100W, 50HZ/60HZ,110V/220V
Impedence
INPUT 1: 68k ohm
INPUT 2: 68k ohm
EQ
LOW: +/- 15dB@60Hz
MID: +/- 15dB@1kHz
HIGH: +/- 15dB@10kHz
Speaker: Coaxial (10 inch woof + 1 inch tweeter)
Dimensions: 410mm*360mm*340mm (H*W*D)
Net Weight: 13KG
Gross Weight: 15KG

WARNING!-IMPORTANT SAFETY INSTRUCTIONS BEFORE CONNECTING, READ INSTRUCTIONS

1. Use only the supplied power supply or power cord. If you are not sure of the type of power available, consult your dealer or local power company.
2. Never break off the ground pin on the power supply cord.
3. Never attempt to by-pass the fuses or fit ones of the incorrect value.
4. Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage points or other risks. Refer all servicing to qualified service personnel.
5. Refer all servicing to qualified service personnel.
Servicing is required when the apparatus has been damaged in any way, such as when the power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped.
6. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
7. Do not allow liquids of any kinds water, soft, drinks, etc. to penetrate the unit.
Never place objects filled with liquids, such as vases or glasses on the **DM100** this can cause electric shock.
Do not place naked flame sources, such as lighted candles, on the **DM100** as this can cause fire.
8. The power supply cord should be unplugged when the unit is to be unused for long periods of time.
9. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles and at the point where they exit from the apparatus.

Follow all instructions and heed all warnings
KEEP THESE INSTRUCTIONS!

Thank you for selecting the **DM100** personal monitor amplifier! Please take the time to read this manual carefully to get the most out of the unit. We recommend that you keep the manual at hand for future reference.