

The image is a promotional graphic for the Vangoa Advanced VGD882 Intelligent Folding Piano. It features a white background with a red vertical border on the right side. In the center, there's a black silhouette of a piano keyboard. Above the keyboard, several black musical notes (quarter notes and eighth notes) are scattered in the air. At the top left, the Vangoa logo is displayed, consisting of a red square with a white stylized 'G' or treble clef symbol, followed by the brand name 'vangoa' in red lowercase letters. To the right of the logo, the text 'New Generation of Intelligent Folding Piano' is written in bold black font, with 'Advanced VGD882' in a smaller font below it. On the far left, there's contact information: website (www.vangoa.com), email (cs@vangoa.com), Facebook (@vangoaofficial), Instagram (@vangoa_music), and YouTube (Vangoa Music). Below this info are two QR codes: one for 'vangoaofficial' and another for 'Vangoa Music User Group'. The bottom left corner contains the text 'Made in China'. On the far right, there's a vertical column of text in multiple languages: 'Installation', 'Precautions', 'Panel Function', 'Bluetooth Application', 'Tone Table', 'Rhythm Table', 'Vorsichtsmassnahmen', 'Précautions', 'Precauciones', and 'Precauzioni'.


Contents

Installation	01
Keyboard Diagram	02
Specifications	02
Panel Functions	07
Charging Instructions	09
Dimensions	10
Warranty (German)	11
Warranty (English)	11
Product Information	12
Customer Support	12

Installation Instruction

Components


Foldable Piano * 1
Snap-fit Attachment * 2

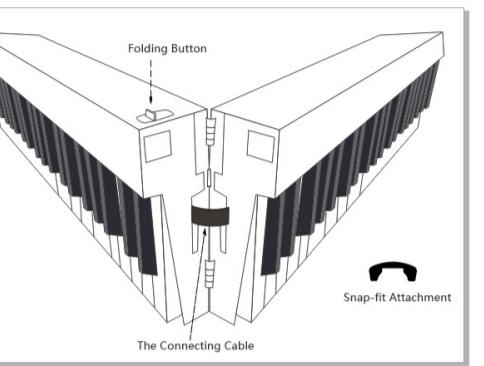

Kindly note that the woven "rope" on the folding joint is the connecting cable of 2 parts of the piano.
DO NOT pull it out or use it as a lifting handle.

Installation Guide

- Place it on a clean and stable surface, unfold the piano, slowly and carefully expands outwards.
- Unfold the piano to completely flat, and using the snap-fit attachment to lock the piano, make sure it is snapped into place.
- It is not suggested that using it when it is folded, there is not support on the connection side. It is unstable to use in this condition and might damage the piano.

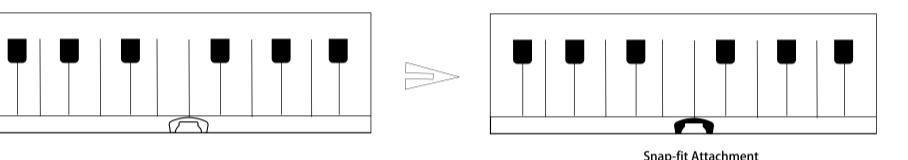

Detaching Guide

- Remove the snap-fit attachment from the piano.
- Turn the piano to place the folding button side upward, move the folding button to unlock the piano.
- Using 2 hands to fold the piano up slowly and carefully to avoid jamming the hand.
- Store it in the bag to protect the piano from dust.

Precautions

Please read it through carefully.

- Dedicated power adapter.
- The keyboard can only be used in a flat structure. In case of any damage, please send the keyboard to professional repairers.
- When connecting the keyboard to a computer, both the computer and the keyboard are powered off before connecting.
- Do not turn and keep the keyboard while performing.
- Keep the keyboard away from direct sunlight.
- Prevent liquid, dust, smoke, and other substances from entering the keyboard, for which may result in damage.
- Pull out the plug before cleaning.
- Please use dry and soft cloth to be used for cleaning, for example.
- Please pull out the plug before moving the keyboard.

Panel Functions

Please Charge Before Use

Charging Indicator

- TYPE_C interface
- It is not applicable to PD.
- The charging indicator is located on the left side of the piano.
- Battery: charging time is approximately 2 hours.
- Power adapter: 5V/2A.

proceeding.NOTICE
ed, and in case of adapter damage, replace it immediately
led by professionals, and no change can be made to the internal
nornormality during performance, stop performing immediately and
or maintenance.
ther device, ensure both the keyboard and the device to be connected
the maximum or to an uncomfortable degree for a long time when
ource to protect its parts from damage
d other foreign matters from entering the case of the keyboard,
circuit.
keyboard, and do not pull out the plug with wet hand.
n the keyboard. Paint, alcohol or other chemical solvents shall not
damage the keyboard surface.
ning or when the keyboard is left unused for a long time.

iagram

is green when it is full charged.
ease charge it more than 6H for the first use.

Low Voltage Prompt

When the lithium battery voltage is too low (below 3.6V), the symbol of low voltage isconstantly flashing on the display screen. Please charge it in time.

Interface

SUS : Sustain pedal
MP3 : MP3
MIC : Microphone
□ : Headphone / Speaker
USB : Tape C charging / MIDI interface

Function

Volume adjustment, Start and stop, Tone, Rhythm, Demo, Record/play, Metronome, Keyboard light (LED) switch, Tempo, Pitch, Split, Chord, Learn, Sustain, Vibrato, Drum kit, Velocity, low voltage display, Bluetooth connection successful, low voltage indicator.

Encoder

Tempo, Pitch, Split, Chord, Learn, Sustain, Vibrato, Drumkit, Velocity, Sleep Mode.

Volume

Rotate the encoder left and right to adjust the volume, the default boot volume is 12 (from 00-16).

Start/ Stop

Press the encoder gently to enter the rhythm playing mode. Rotate the encoder left and right to select the rhythm from 000 to 127 (see attached rhythm table).

The sequence number and rhythm name on the screen.

When turning on the rhythm and demo music, gently press the encoder to stop the rhythm and demo music.

Tone

Press and hold the tone button and rotate the encoder from left to right to select the tone from 000 to 127 (see the attached tone table). The serial number and the name of the adjusted tone will be displayed on the screen.

After releasing the tone key, return to the initial interface and rotate the encoder to adjust the volume.

2

3

no

Press the demo button to play the demo. Press the demo button again to stop the playback. During the playback of the demo and after stopping the playback, rotate the encoder left and right to select the demo from 000-020.

Press and hold the demo button and rotate the encoder from left to right to select the demo from 000-020 (see the attached demo table).

Note: Only choose not to play the demo and the serial number and the demo name of the adjustment will be displayed on the screen.

At this point, after releasing the demo button, and press the encoder twice to return to the initial interface and rotate the encoder to adjust the volume.

Record/ Play (long press is record, short press is play)

Press and hold the record/ Play button and then RECODE ON will appear on the screen. At this time, play the keyboard to record MIDI signals.

Then press the record/ Play button, and the display screen will display REC Play ON, that is, the last recorded signal can be played.

After the playback, go back to the initial interface and rotate the encoder left and right to adjust the volume.

Metronome & Keyboard Light (LED)

Press the metronome button and the metronome will display the beat selection of 1/4, 2/4, 3/4 and 4/4.

Long press the metronome button to control the keyboard light.

When you long press the metronome button, the display screen will display LED ON or LED OFF.

Function Selection

Long press the encoder switch and rotate the encoder to select function (TEMPO, PITCH, SPLIT, CHORD, ARN, SUSTAIN, VIBRATO, DRUM KIT, and VELOCITY).

After the selection, gently press the switch to select the function to be changed, such as TEMPO.

At this point the rotary encoder changes the TEMPO value.

After changing the function, gently press the switch or long press the switch to return to the higher level, and rotate the encoder selection function (TEMPO, etc.).

Press the switch again and return to the initial interface. Rotate the encoder left and right to adjust the volume. Double-click the switch in any state to return to the initial interface, and rotate the encoder left and right to adjust the volume.

Tempo

1. Long press the encoder switch and rotate the encoder to select the TEMPO.
2. Gently press the switch, then rotate the encoder left and right. The shift can be selected from -40 to 280, and the default is 120.

Pitch

1. Long press the encoder switch and rotate the encoder to select the PITCH.
2. Gently press the switch, then rotate the encoder from left to right. The shift can be selected from -6 to +6, and the default is +0.

Split

1. Long press the encoder switch and rotate the encoder to select the SPLIT.
2. Gently press the switch, and then rotate the encoder around, you can choose whether the SPLIT is on or off.

The diagram shows a standard 88-key piano keyboard. A vertical red line is positioned exactly at the central key, C. The keys to the left of this line are grouped together with a blue bracket and labeled "Host part". The keys to the right of the line are also grouped together with a blue bracket and labeled "Secondary part". Below each group, there are two sets of labels: "Before the split: A1~B4" and "After the split: A2~B5" for the host part, and "Before the split: C5~C9" and "After the split: C3~C7" for the secondary part. This visualizes how the keyboard is divided into two independent playing areas by the split function.

This function can divide the 88 keys into two vocal ranges for playing. Before segmentation, the left keyboard was A1-B4, and after segmentation, it was A2-B5. Before segmentation, the right keyboard was C5-C9, and after segmentation, it was C3-C7. When the split function is turned on, the host part can be used as a separate 44-key keyboard (the secondary part does not need to be connected). When connected to the secondary part, it can complete 88-key electric piano.

Chord

1. Long press the encoder switch and rotate the encoder to select CHORD.
2. Press the switch gently and rotate the encoder from left to right to select SINGLE, FINO, etc.

During the playing of rhythm, the system enters the chord mode.

Chord function:

Press the key in the area A1~F4# to play the chords that match the rhythm, and the tone changes with the pitch of the harp.

Learn

1. Long press the encoder switch and rotate the encoder to choose LEARN.
2. Gently press the switch, then rotate the encoder left and right to choose the teaching mode (teaching A, teaching B, and OFF).
Teaching A: Select different demo music and short press the Demo button to enter the teaching mode.
Playing any key can play the main melody of the demo song, keyboard lights with the main melody on and off.
- Teaching B: Select different demo music and short press the Demo button to enter the teaching mode.
Keyboard light with the main melody, the user press the right keys, light the next note of the lamp;
If the user does not press the right keys, they pause until they press the right keys to light the next note.

Sustain

1. Long press the encoder switch and rotate the encoder to choose SUSTAIN.
2. Gently press the switch, then rotate the encoder left and right to choose whether the sustain is on or off.
Turn on the sustain function, and make the tone produce the effect of continuance in performance.

Vibrato

1. Long press the encoder switch and rotate the encoder to select VIBRATO.
2. Gently press the switch, then rotate the encoder left and right to choose whether the vibrato is on or off.
Turn on the vibrato function to produce the tremolo effect in the performance.

Drum Kit

1. Long press the encoder switch and rotate the encoder to select DRUM KIT.
2. Gently press the switch, then rotate the encoder left and right to choose whether the drum kit is on or off.
When the drum kit is on, all the keys are turned on to become the percussion tone when the drum kit is off, the percussion tone is turned off.

Velocity

1. Long press the encoder switch and rotate the encoder to select VELOCITY.
2. Gently press the switch, then rotate the encoder left and right to choose whether the velocity is on or off.
When the velocity is on, press the key with greater force and the sound will be louder.
The default strength is on.

Sleep Switch

Long press the encoder switch, rotate the encoder to choose the sleep switch.
The default mode is sleep mode on. In the default mode, when the piano is not played after 10 minutes, the electric piano will turn off.
If you are in Sleep Mode off mode, it will always be on.

Demo

0. Castle in the Sky	7. Colorful Clouds Chasing The Moon	14. Snow Dream
1. Ode To Joy	8. In My Song	15. Bandari
2. Little Stars	9. Crystal Lake	16. Edelweiss
3. For Elise	10. Green Sleeves	17. Dance of Fireflies
4. Dancing Girl	11. Milk Song	18. My Soul
5. My Old Classmate	12. A comme Amour	19. Croatian Rhapsody
6. Ten Years	13. Les premiers sourires de Vanessa	20. Csikos Post

Bluetooth APP Functions

iPhone Connection

POPiano Connection

1. Search and download POPiano APP from App store of the iPhone.
2. Open the POPiano App after turning on the Bluetooth of the iPhone, select any song, and choose to start playing after entering.
3. Click on the upper right of the iPhone screen  , and then you can choose: connect to the piano through: Bluetooth - Confirmed, next - confirm to connect to the piano.
4. After confirming Bluetooth connection, the icon is displayed as blue check mark .

GarageBand Connection

1. Open GarageBand App.
2. Turn on Bluetooth on your phone.
3. Open GarageBand App and click the Settings icon in the upper right corner of the screen.
4. Connect the piano's Bluetooth through the: Song Settings - Advanced - Bluetooth MIDI Devices.

Appendix

1. Search and download POPiano APP from App store of the iPhone.

2. Turn on the Bluetooth of the iPhone.

3. Find the POPiano APP and open it.

4. Click the upper right of the iPhone screen to connect to the piano.

5. After confirming Bluetooth connection, the icon is displayed as blue check mark.

Connection

anoBar.

en they are connected successfully, then
ar can be used directly.

ection

n App store of the mobile phone.
phones need to turn on the phone location
ong, and choose to start playing after entering.
hone screen  , and then you can choose:
n - Confirmed, next - confirm to connect to
the icon is displayed as blue check mark .

Tone Table

Piano	42. Cello	85. Lead 6 (voice)
0. Acoustic Grand Piano	43. Contrabass	86. Lead 7 (fifths)
1. Bright Acoustic Piano	44. Tremolo Strings	87. Lead 8 (bass+lead)
2. Electric Grand Piano	45. Pizzicato Strings	Pad
3. Honky-Tonk Piano	46. Orchestral Harp	88. Pad 1 (newage)
4. Rhodes Piano	47. Timpani	89. Pad 2 (warm)
5. Chorused Piano	Choral Ensembles	90. Pad 3 (polysynth)
6. Harpsichord	48. String Ensemble 1	91. Pad 4 (choir)
7. Clavinet	49. String Ensemble 2	92. Pad 5 (bowed)
Percussion Instrument	50. SynthStrings 1	93. Pad 6 (metallic)
8. Celesta	51. SynthStrings 2	94. Pad 7 (halo)
9. Glockenspiel	52. Choir Ahhs	95. Pad 8 (sweep)
10. Music Box	53. Voice Oohs	FX
11. Vibraphone	54. Synth Voice	96. FX 1 (rain)
12. Marimba	55. Orchestra Hit	97. FX 2 (soundtrack)
13. Xylophone	Brass	98. FX 3 (crystal)
14. Tubular Bells	56. Trumpet	99. FX 4 (atmosphere)
15. Santur	57. Trombone	100. FX 5 (brightness)
Organ	58. Tuba	101. FX 6 (goblins)
16. Hammond Organ	59. Muted Trumpet	102. FX 7 (echoes)
17. Percussive Organ	60. French Horn	103. FX 8 (sci-fi)
18. Rock Organ	61. Brass Section	National Instrument
19. Church Organ	62. Synth Brass 1	104. Sitar
20. Reed Organ	63. Synth Brass 2	105. Banjo
21. Accordion	Reed Instruments	106. Shamisen
22. Harmonica	64. Soprano Sax	107. Koto
23. Bandoneon	65. Alto Sax	108. alimba
Guitar	66. Tenor Sax	109. Bagpipe
24. Acoustic Guitar (nylon)	67. Baritone Sax	110. Fiddle
25. Acoustic Guitar(steel)	68. Oboe	111. Shanai
26. Electric Guitar (jazz)	69. English Horn	Percussion Music
27. Electric Guitar (clean)	70. Bassoon	112. Tinkle Bell
28. Electric Guitar (muted)	71. Clarinet	113. Agogo
29. Overdriven Guitar	Tongue	114. Steel Drums
30. Distortion Guitar	72. Piccolo	115. Woodblock
31. Guitar Harmonics	73. Flute	116. Taiko Drum
Bass	74. Recorder	117. Melodic Tom
32. Acoustic Bass	75. Pan Flute	118. Synth Drum
33. Electric Bass(finger)	76. Bottle Blow	119. Reverse Cymbal
34. Electric Bass(pick)	77. Skakuhachi	FxPhone
35. Fretless Bass	78. Whistle	120. Guitar Fret Noise
36. Slap Bass 1	79. Ocarina	121. Breath Noise
37. Slap Bass 2	Soft Leads	122. Seashore
38. Synth Bass 1	80. Lead 1 (square)	123. Bird Tweet
39. Synth Bass 2	81. Lead 2 (sawtooth)	124. Telephone Ring
String Solo	82. Lead 3 (calliope lead)	125. Helicopter
40. Violin	83. Lead 4 (chiff lead)	126. Applause
41. Viola	84. Lead 5 (charang)	127. Gun shot

Rhythm Ta

0. Beguines Wing
1. Beguine_2
2. Beguine_3
3. Pop hit
4. Pop
5. Pop Malay
6. Bossa nova
7. Disco_1
8. Disco_2
9. Blue grass disco
10. Waltz_1
11. Waltz_2
12. True ballad waltz
13. Bossa Waltz
14. Easy Waltz
15. Shuffle Waltz
16. Reggae Waltz
17. Rumba Waltz
18. March_1
19. March_2
20. Rumba_1
21. Rumba_2
22. Slow_1
23. Slow_2
24. Disco cha cha
25. Guala cha
26. Char
27. Samba_1
28. Samba_2
29. Ubminimal
30. 8Bit_1
31. 8Bit_2
32. 16Bit_1
33. 16bit_2
34. Ballad_16T
35. Country_16T
36. Tango_1
37. Tango_2
38. Polka_1
39. Polka_2
40. Pop Swing
41. Easy Swing
42. Soft Swing

<h2>Vorsichtsmaßnahmen(German)</h2>	
43. Rock_1	86. R.roll_2
44. Rock_2	87. Fast Beat
45. Rock_3	88. Quick Beat
46. Airy Rock	89. Smooth Beat
47. Heart Rock	90. Square Beat
48. Rock & Roll	91. Euro Beat
49. Urban Rock	92. Alpha Dance
50. Ballad	93. Beta Dance
51. Jazz Ballad	94. Dream Dance
52. C.Ballad	95. Dance_1
53. J.Ballad	96. Dance_2
54. 60s Slow Ballad	97. Dance_3
55. Piano Ballad	98. RAP
56. 50s Ballad	99. The Country
57. Snake Base	100. Country Shuffle
58. Happy Blues	101. Electric Keys
59. Old Blues	102. Dark Keys
60. Blue Gras	103. Easy Walk
61. Boodie_1	104. Destiny
62. Boodie_2	105. Comedy
63. Boodie_3	106. Drive
64. Shuffle_1	107. Liquid Nova
65. Shuffle_2	108. Indonesian folk
66. Dream Shuffle	109. Absolute Music
67. Country Shuffle	110. Jamaica
68. Quick Shuffle	111. Synthesis
69. Reggae Shuffle	112. Feel
70. R&B	113. Accelerate
71. Reggae_1	114. Beach Night
72. Reggae_2	115. Irish
73. Reggae_3	116. Tarantella
74. Salsa _1	117. Big band
75. Salsa_2	118. Dan
76. Salsa_3	119. Fusion
77. Tecno_1	120. Horse
78. Tecno_2	121. Canon
79. Funky_1	122. Latin
80. Funky_2	123. Mambo
81. Dixie_1	124. New age
82. Dixie_2	125. Slow rc
83. Foxtrot_1	126. Soul
84. Foxtrot_2	127. Twist
85. R.roll_1	

<p>Le clavier éloigné de la source de chaleur pour protéger ses pièces contre les dommages.</p> <p>ez les liquides, la poussière, les petites particules et autres matières étrangères de pénétrer dans le boîtier, ce qui peut entraîner un court-circuit de l'élément.</p> <p>ne fiche avant de nettoyer le clavier et ne retirez pas la fiche avec les mains mouillées.</p> <p>utiliser un chiffon sec et doux pour nettoyer le clavier. La peinture, l'alcool ou d'autres solvants chimiques</p> <p>nt pas être utilisés pour le nettoyage, car cela pourrait endommager la surface du clavier.</p> <p>ébrancher la prise après avoir effectué ou lorsque le clavier est resté inutilisé pendant une longue</p> <h2 data-bbox="7670 2539 7973 2579">nuciones(España)</h2> <p>nidamente antes de continuar.</p> <p>rá un adaptador de corriente dedicado y, en caso de daños en el adaptador, reemplácelo inmediatamente.</p> <p>o solo puede ser desmontado por profesionales, y no se pueden realizar cambios en la estructura interna.</p> <p>de cualquier anomalía funcional durante el rendimiento, deje de hacerlo de inmediato y envíe el teclado a</p> <p>nales para su mantenimiento.</p> <p>tar el teclado a otro dispositivo, asegúrese de que tanto el teclado como el dispositivo a conectar estén</p> <p>os antes de la conexión.</p> <p>y mantenga el volumen al máximo o en un grado incómodo durante mucho tiempo cuando realice.</p> <p>a el teclado alejado de fuentes de calor para proteger sus partes de daños.</p> <p>e líquidos, polvo, partículas pequeñas y otras materias extrañas entran en la carcasa del teclado, lo que</p> <p>ovocar un cortocircuito en el elemento.</p> <p>enchufe antes de limpiar el teclado y no lo saque con las manos mojadas.</p> <p>n paño seco y suave para limpiar el teclado. No se utilizarán pintura, alcohol u otros solventes químicos</p> <p>mpieza, ya que pueden dañar la superficie del teclado.</p> <p>enchufe después de tocar o cuando el teclado se deje sin usar durante mucho tiempo.</p> <h2 data-bbox="7670 3221 7963 3261">nazioni(Italiano)</h2> <p>leggere attentamente prima di procedere.</p> <p>ario utilizzare un adattatore di alimentazione dedicato e, in caso di danni all'adattatore, sostituirlo</p> <p>tamente</p> <p>a può essere smontata solo da professionisti e non è possibile apportare modifiche alla struttura</p> <p>n caso di anomalie funzionali durante l'esecuzione, interrompere immediatamente l'esecuzione e</p> <p>g tastiera ai professionisti per la manutenzione.</p>	<ul style="list-style-type: none"> • Quando si collega la tastiera ad un altro dispositivo, assicurarsi che sia la tastiera che il dispositivo siano spenti prima della connessione. • Non girare e mantenere il volume al massimo o a un livello scomodo per lungo tempo durante l'esecuzione. • Tenere la tastiera lontana dalla fonte di calore per proteggere le sue parti da danni. • Impedire a liquidi, polvere, piccole particelle e altri corpi estranei di entrare nella custodia della tastiera, cui si potrebbe provocare un corto circuito dell'elemento. • Estrarre la spina prima di pulire la tastiera e non estrarre la spina con la mano bagnata. • Usare un panno asciutto e morbido per pulire la tastiera. Vernice, alcool o altri solventi chimici non devono essere utilizzati per la pulizia, per i quali si potrebbe danneggiare la superficie della tastiera. • Estrarre la spina dopo l'esecuzione o quando la tastiera non viene utilizzata per lungo tempo.
---	---