

## **Door Speakers** (with Chime Pushbutton) MODELS: IS-67 & IS-69 SERIES

Installs in NuTone Model: IR-6 Rough-In Housing.


FOR USE WITH NUTONE RADIO-INTERCOM SYSTEMS (except 2000 Series)


These Door Speakers feature "Hands-Free" operation.

- 1. Determine a location for the speaker near the door, at a convenient height for easy access to the door chime pushbutton.
- 2. **Refer to Figure 1.** Run appropriate wiring and mount Rough-In Housing (IR-6) in proposed location.
- 3. **Refer to Figures 2, 3 & 4.** Make wiring connections to speaker and pushbutton and mount the speaker to rough-in housing using the two (2) supplied.

## OWNER'S INFORMATION TO REPLACE PUSHBUTTON LIGHT BULB NOTE: Contact Nuione Parts Department for replacement bulb.


- 1. Remove speaker from wall by removing two screws.
- 2. Disconnect wiring connections from the pushbutton and remove the pushbutton from the Door Speaker. To gain access to the light bulb, twist the bottom of the pushbutton housing to unlock the assembly.
- 3. Grip light bulb with a pair of tweezers and pull it straight out.
- 4. Place new light bulb in socket, being sure that the two wires on the bulb touch the metal plates in the socket.
- 5. Reassemble the pushbutton assembly. Replace the pushbutton in speaker and reconnect the wiring as illustrated.

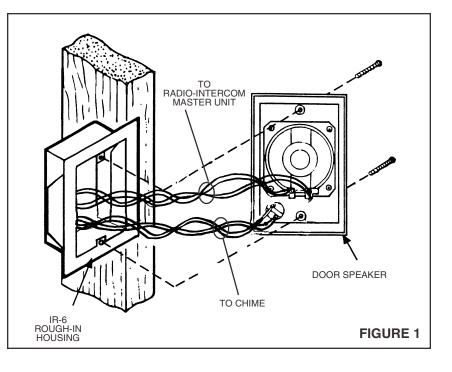


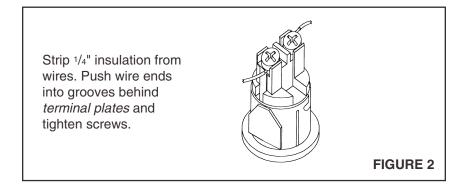


## **2 NOTE CHIME WIRING**

## CHIME MODULE/MUSICAL/8 NOTE CHIME WIRING

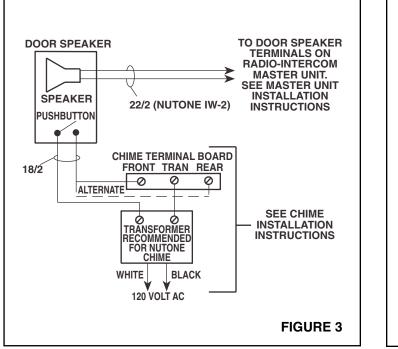

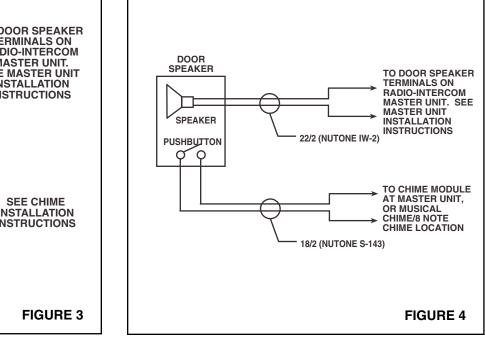

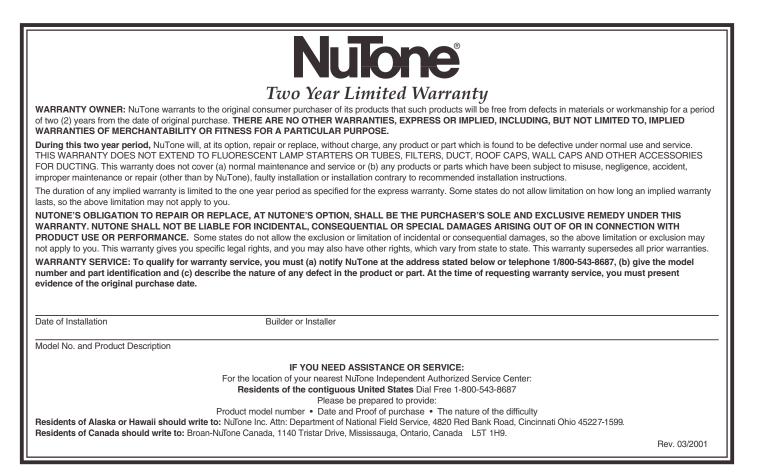



Product specifications subject to change without notice.

4820 Red Bank Road, Cincinnati, Ohio 45227 Printed in U.S.A., Rev. 04/2001, Part No. 49752