


Z120 COMPACT STEREO SPEAKERS

Complete Setup Guide
完整设置指南

完整設定指南
설치 가이드

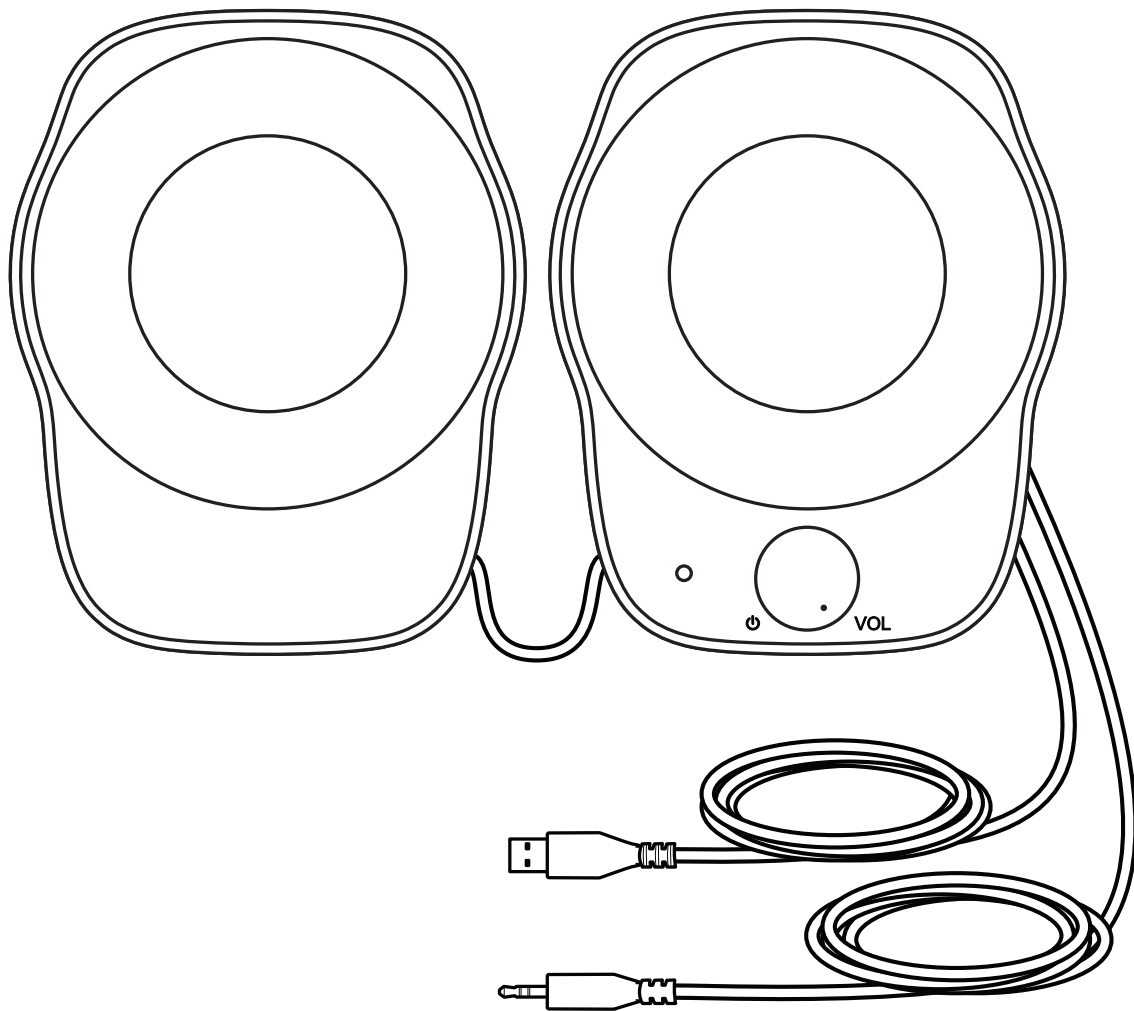

logitech®

CONTENTS



English3

简体中文6

繁體中文9

한국어12


KNOW YOUR PRODUCT

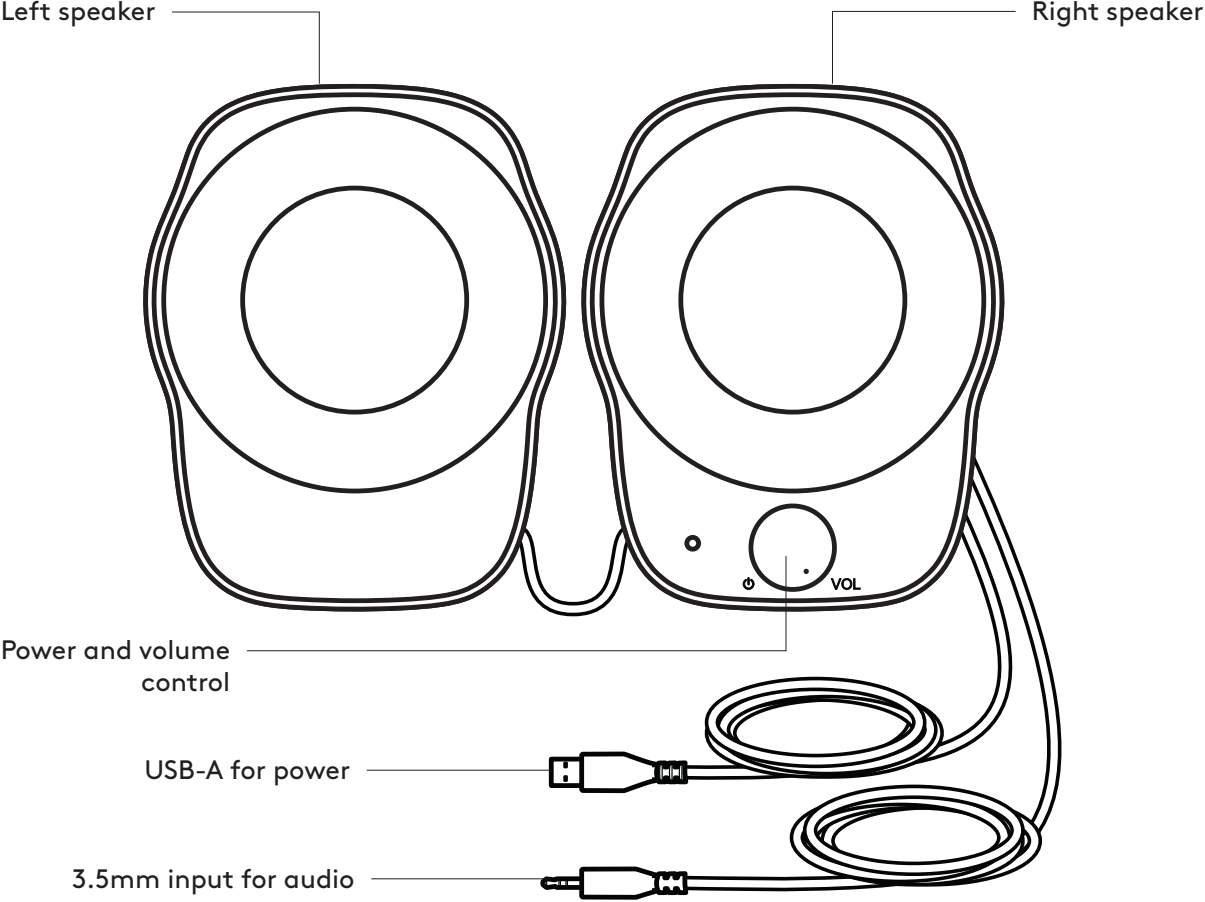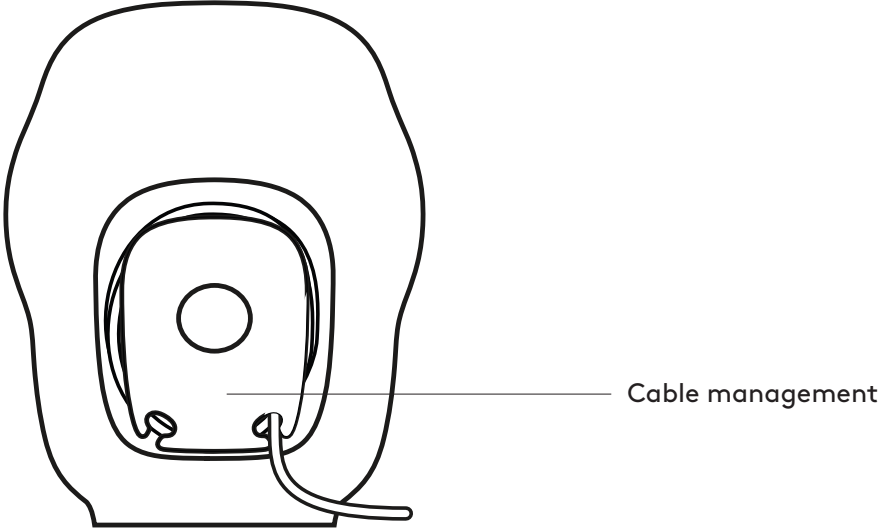


CONNECT THE SPEAKERS

1. Plug the USB-A plug into the USB-A port on your computer for power.
2. Plug the 3.5mm connector into the 3.5mm jack on your audio device.
3. Turn the speaker on using the power knob.


1

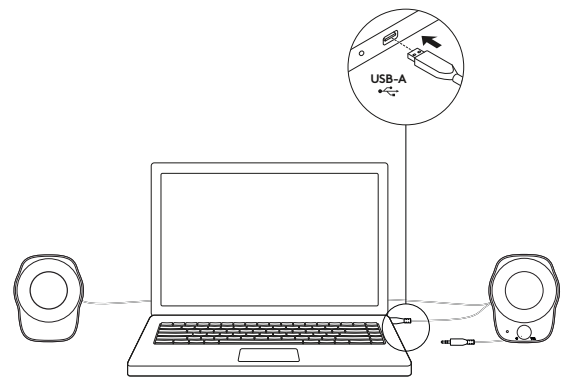

2

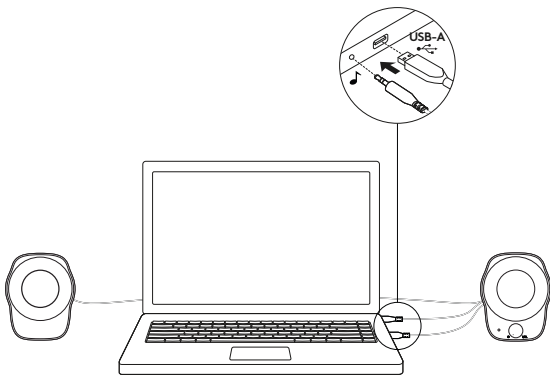


3

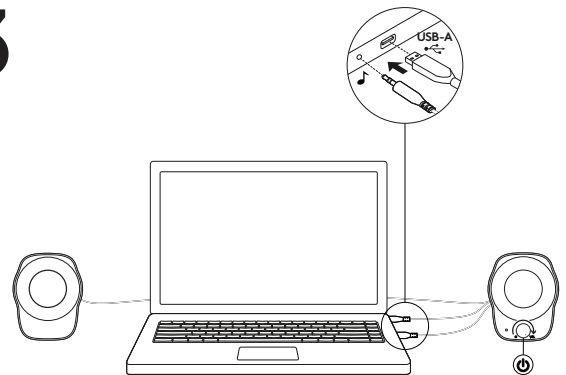


ADJUST THE VOLUME

Increase (or decrease) the volume of speakers by rotating the volume control knob clockwise (counter-clockwise) on the right speaker.

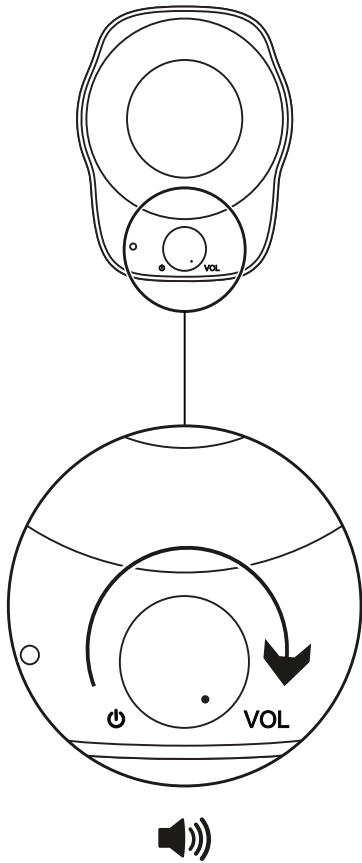


CABLE MANAGEMENT

Wind up extra cable length inside convenient wells behind each speaker.

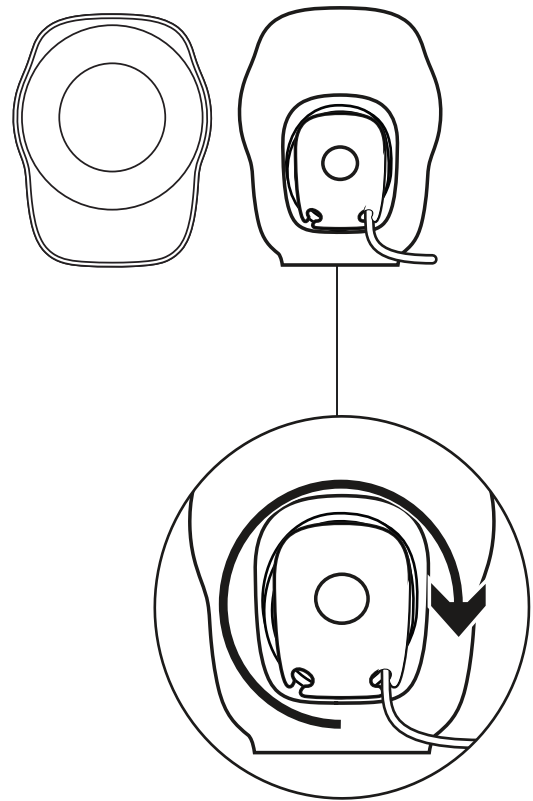

www.logitech.com/support/Z120


了解您的产品

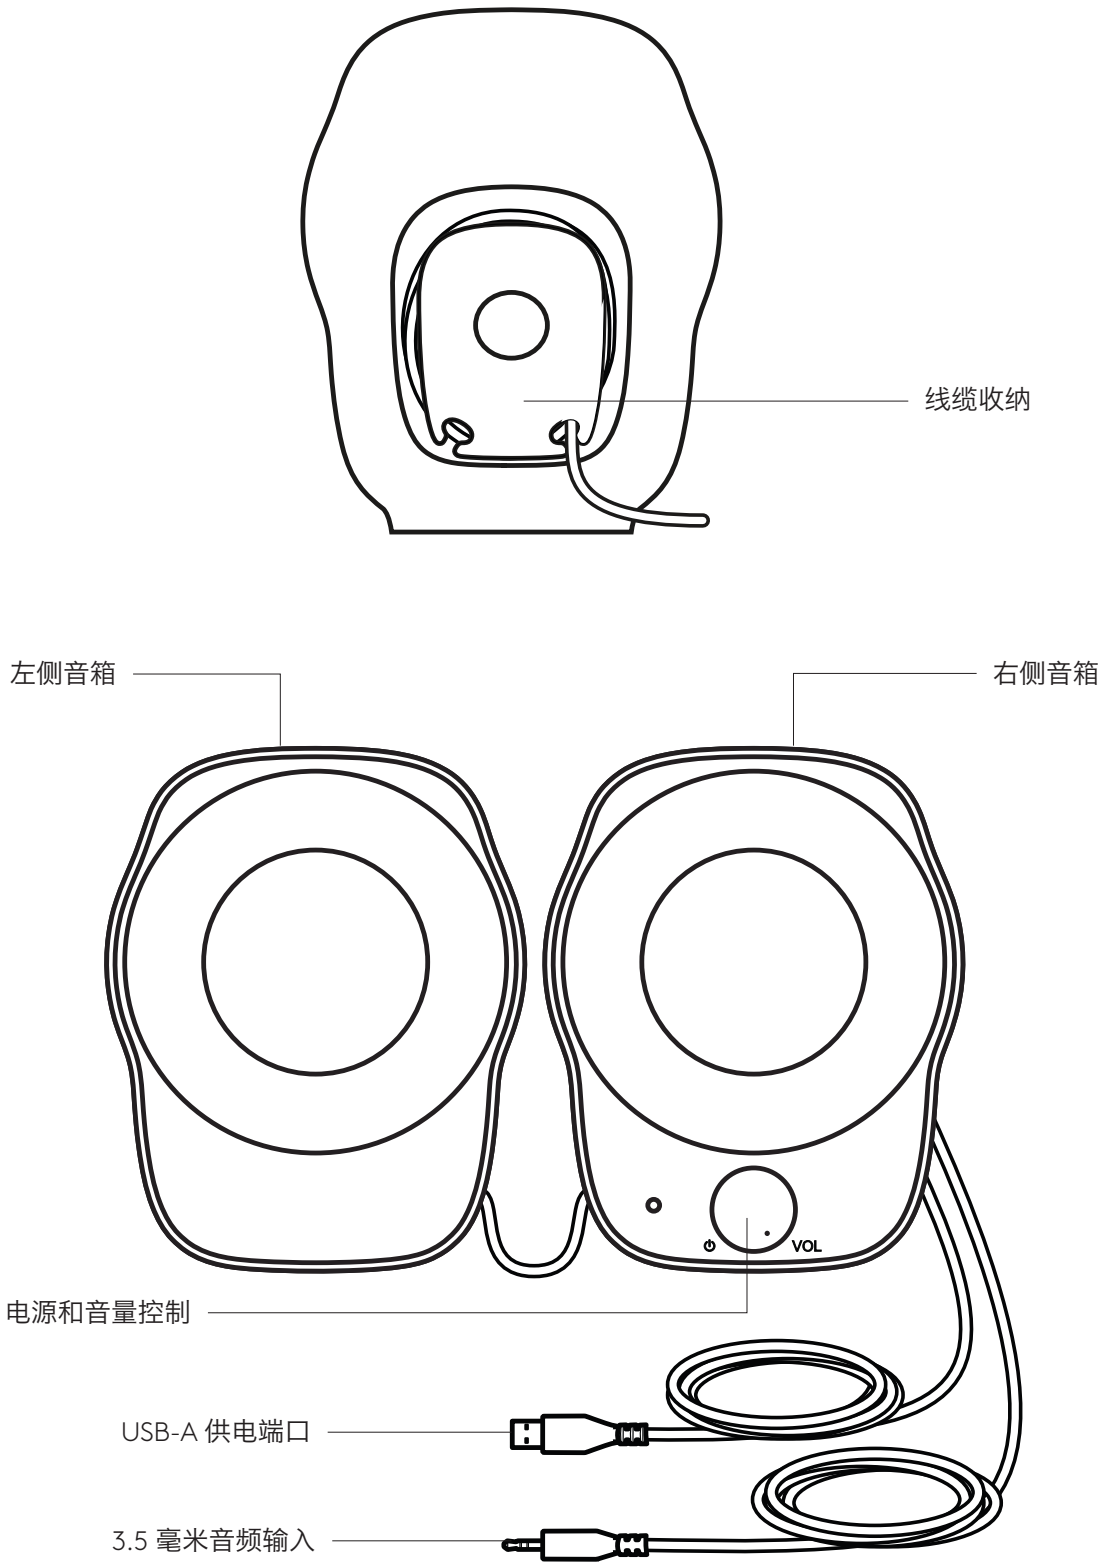


连接音箱

1. 将 USB-A 插入电脑的 USB-A 端口以获得供电。
2. 将 3.5 毫米插头插入音频设备的 3.5 毫米插孔。
3. 通过电源旋钮开启音箱。


1

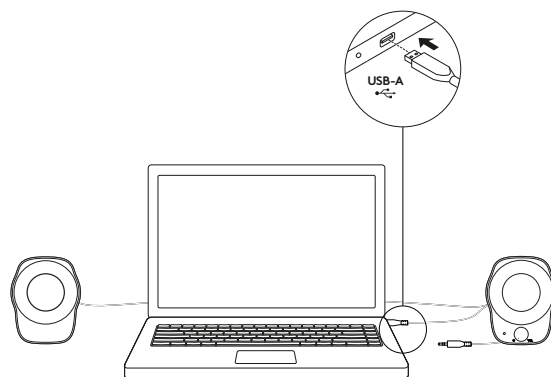

2

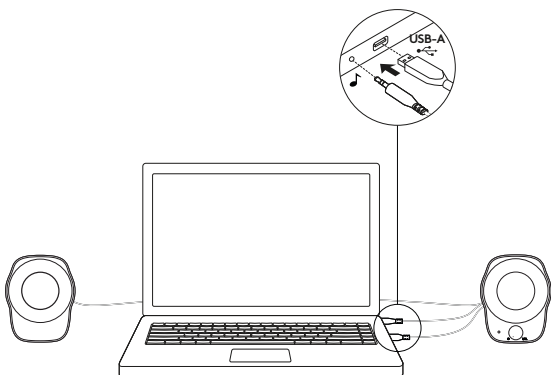


3

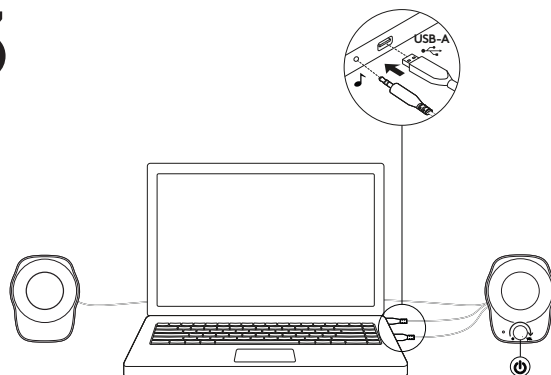


调节音量

顺时针 (逆时针) 旋转右音箱上的音量控制旋钮, 提高 (降低) 音箱音量。

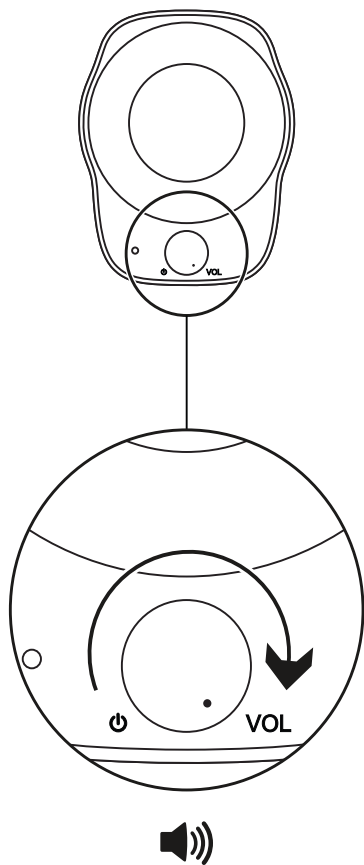


线缆收纳

可在每只音箱后侧方便收纳线缆。

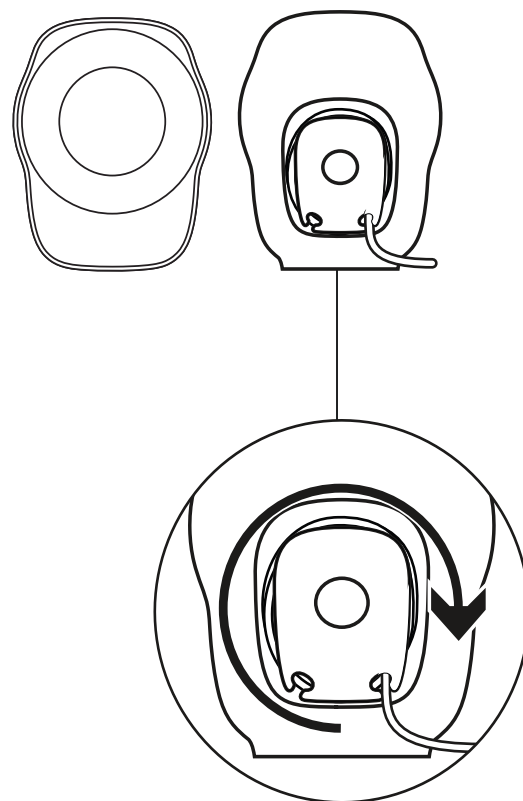

www.logitech.com/support/Z120


瞭解您的產品

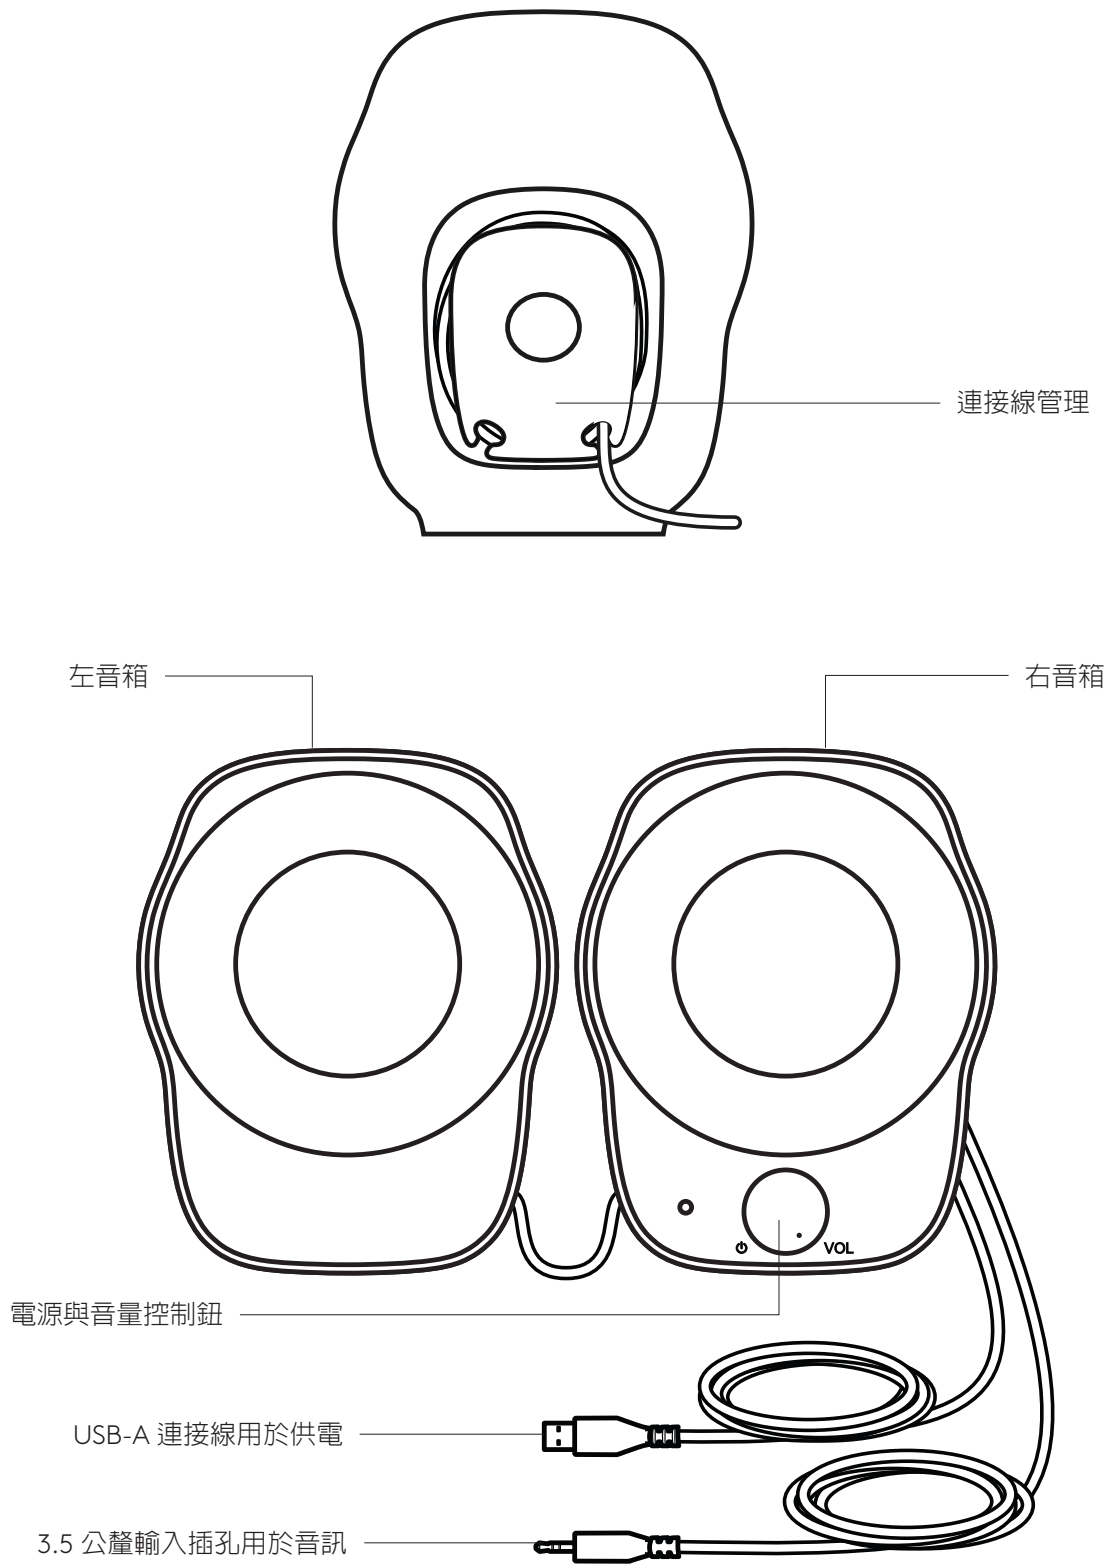


連接音箱

1. 將 USB-A 連接線插入電腦上的 USB-A 充電連接埠以接上電源。
2. 將 3.5 公釐接頭插入您音訊裝置上的 3.5 公釐插孔。
3. 使用電源轉鈕開啓音箱電源。


1

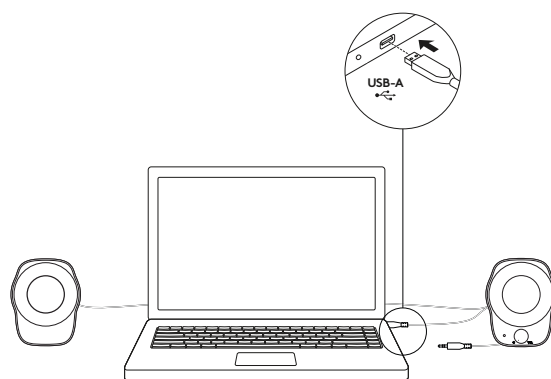

2

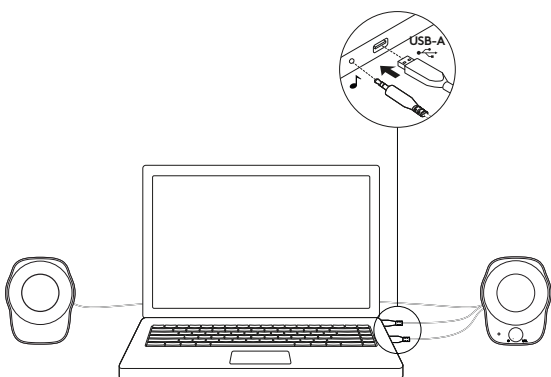


3

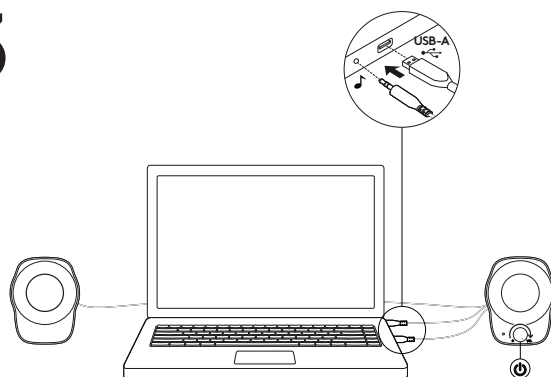


調整音量

順時針 (逆時針) 旋轉右音箱上的音量控制鈕可增加 (減少) 音箱音量。

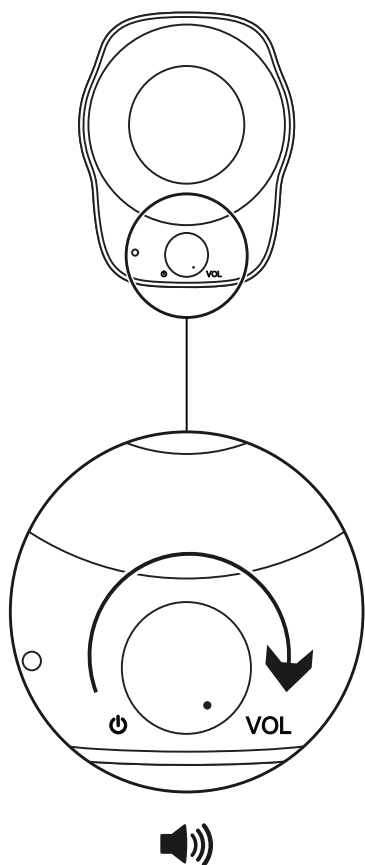


線路收納

將多餘的連接線長度捲起收入每個音箱後方的便利內部線槽。

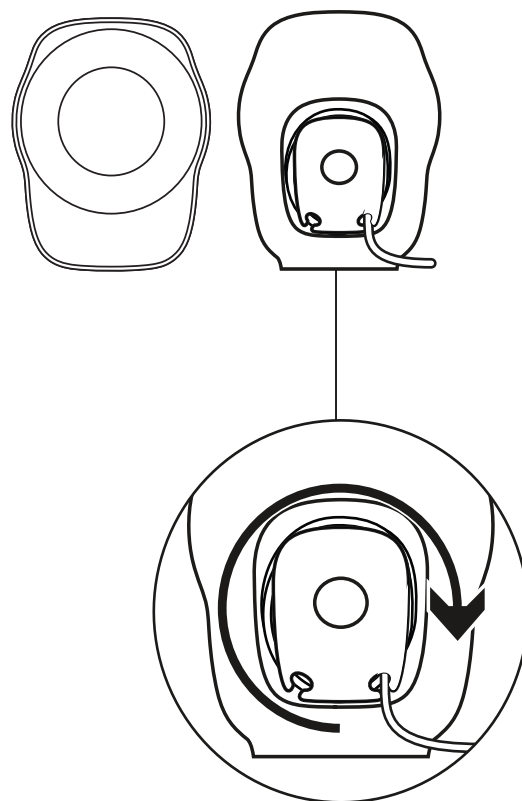

www.logitech.com/support/Z120


제품 설명

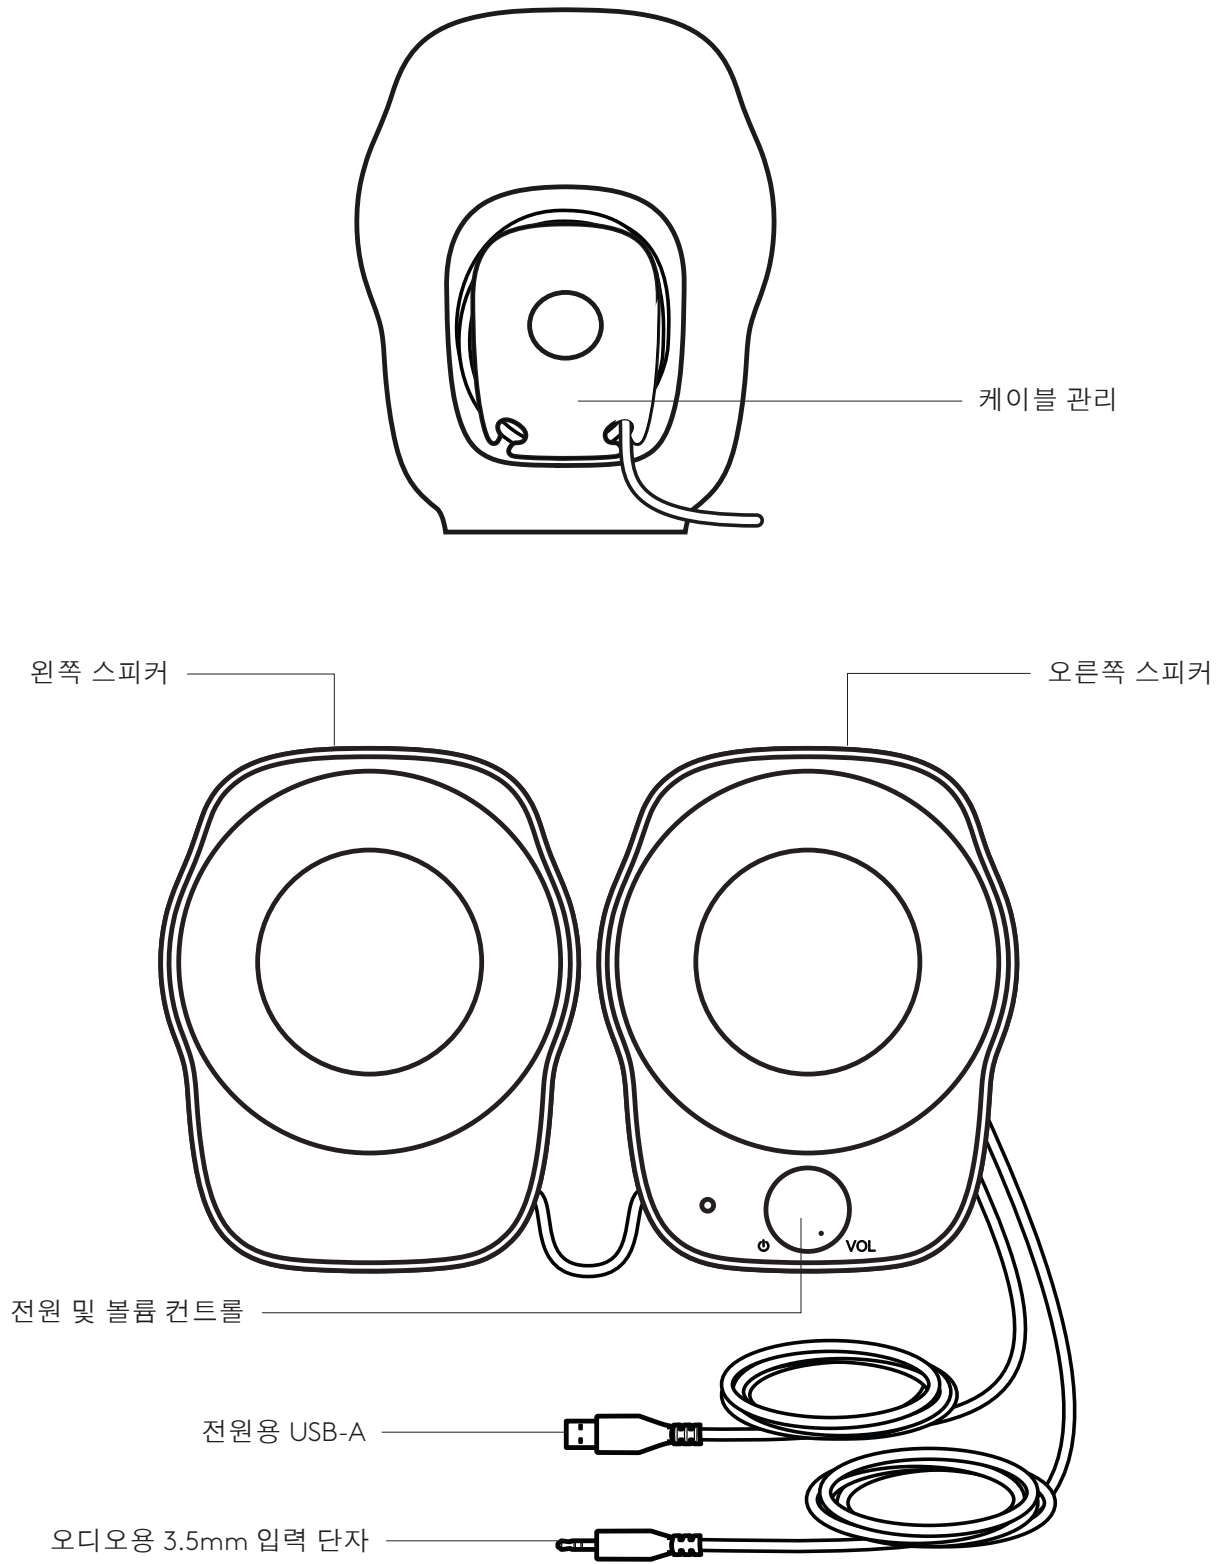


스피커 연결

1. USB-A 플러그를 컴퓨터의 USB-A 포트에 연결하여 전원을 켜십시오.
2. 3.5mm 커넥터를 오디오 장치의 3.5mm 잭에 연결하십시오.
3. 전원 노브를 사용하여 스피커를 켜십시오.


1

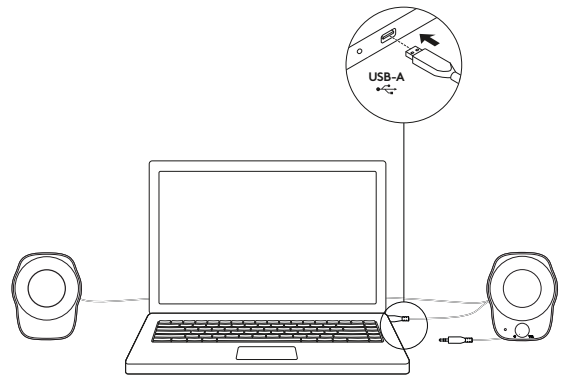

2

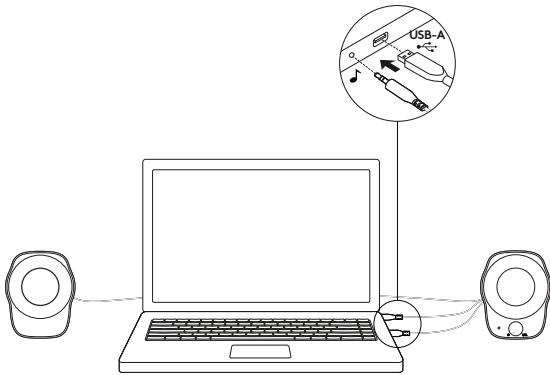


3

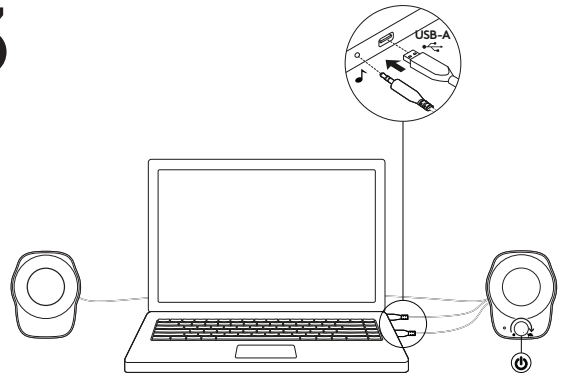


볼륨 조절

오른쪽 스피커의 볼륨 컨트롤 노브를 시계 방향 (반시계 방향)으로 돌려서 스피커 볼륨을 높이거나 낮춥니다.

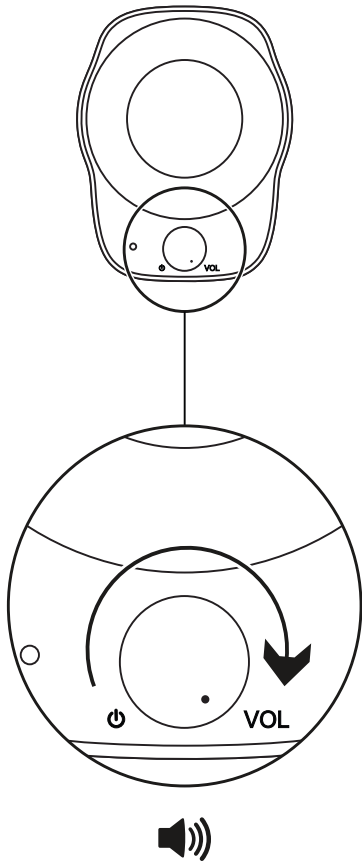

케이블 관리

여분의 케이블 길이는 각 스피커 뒤에 있는 편리한 공간 안에 감아둡니다.

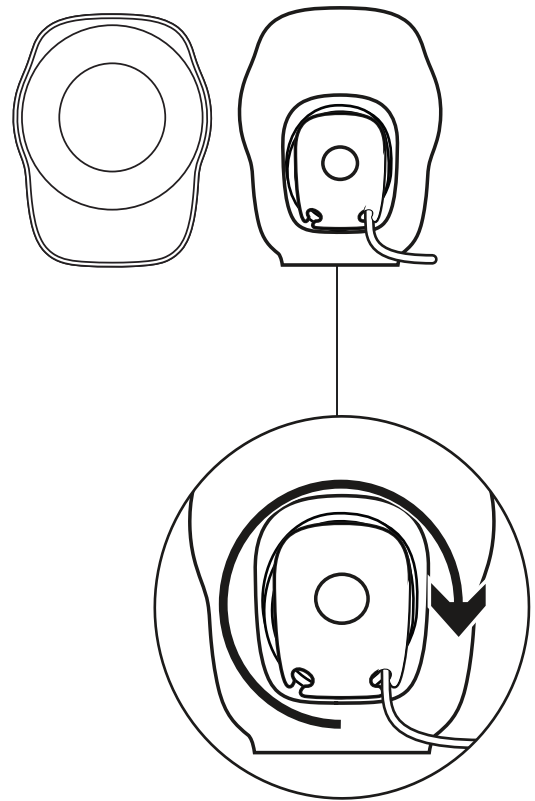

www.logitech.com/support/Z120

www.logitech.com/support/Z120

© 2019 Logitech. Logitech, Logi and other Logitech marks are owned by Logitech and may be registered. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

WEB-621-001291.002

logitech®