


USB HEADSET H540

Complete Setup Guide
完整设置指南

完整設定指南
설치 가이드

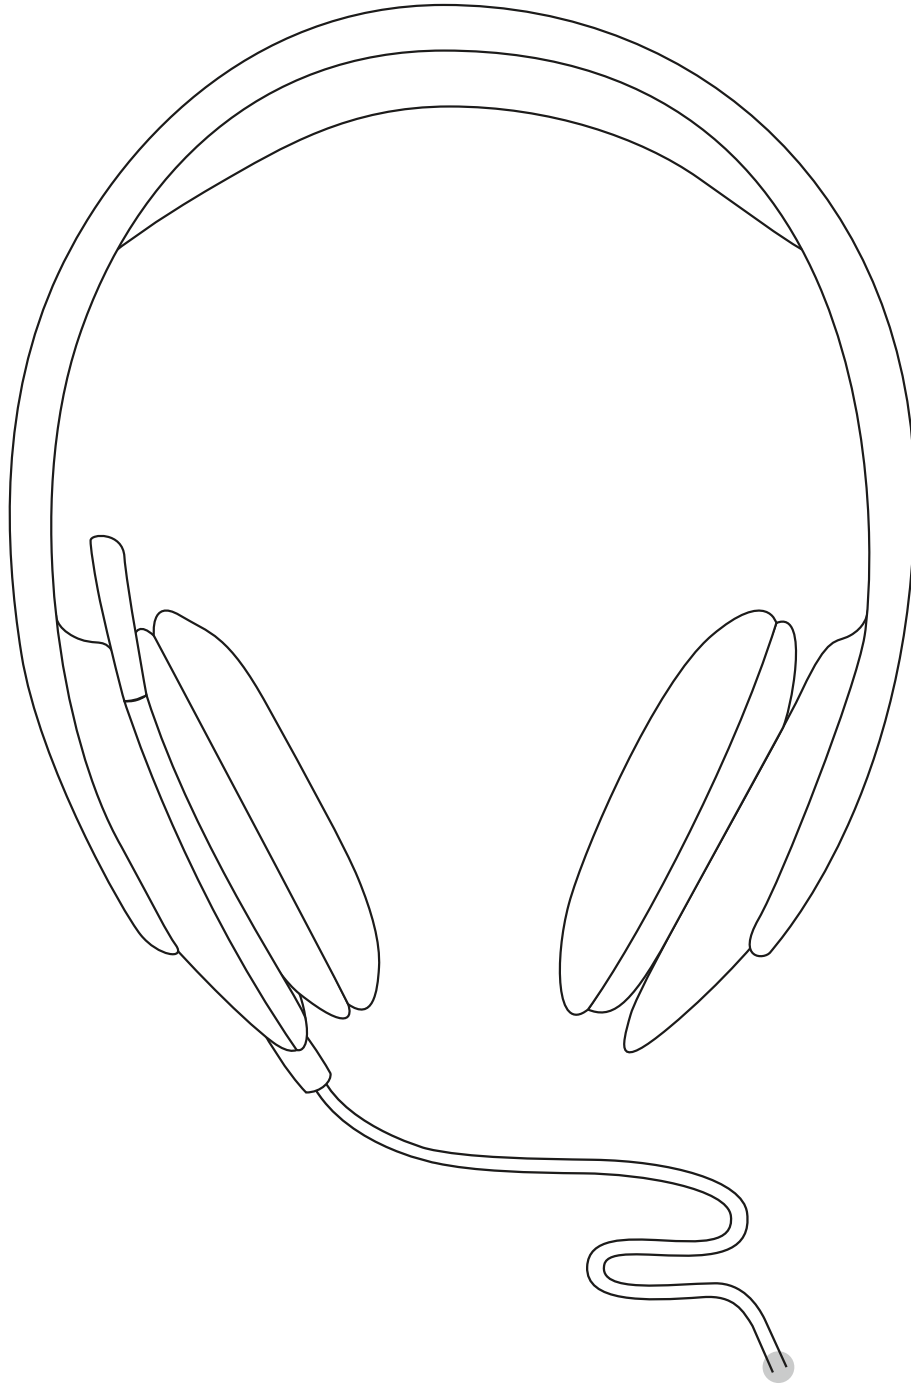

logitech®

CONTENTS


English3

简体中文5

繁體中文7


한국어9

KNOW YOUR PRODUCT

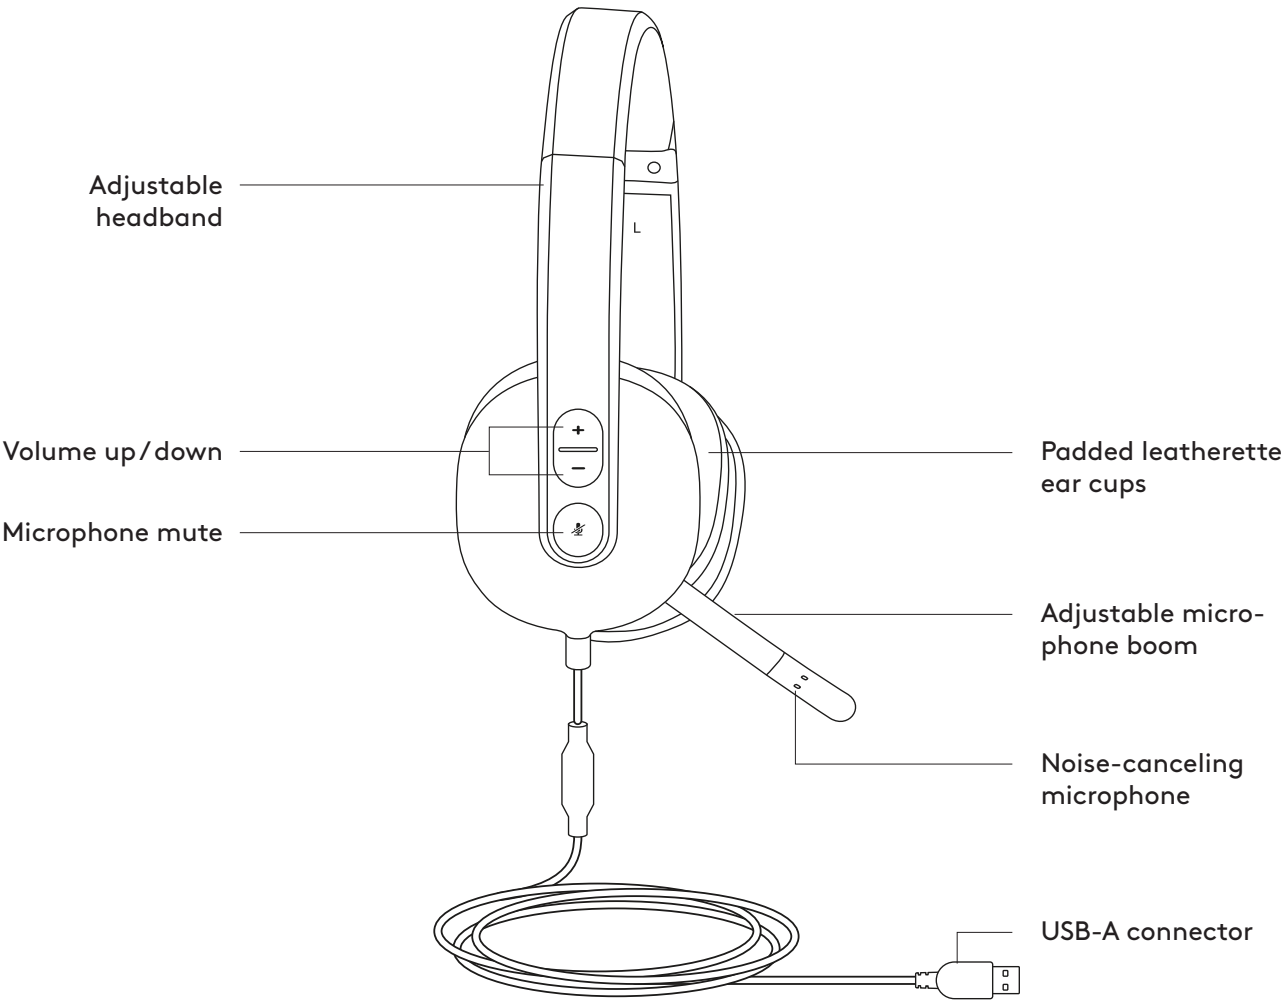

CONNECTING THE HEADSET


Plug the USB-A connector into the computer USB port.

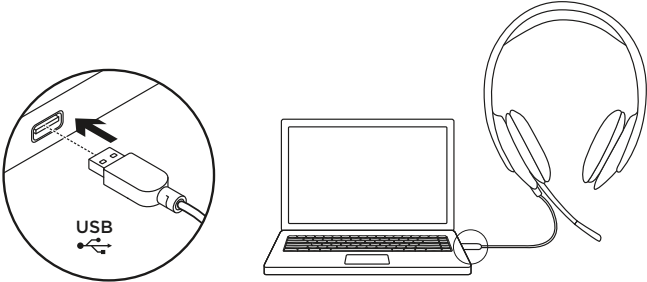


HEADSET FIT

1. To adjust headset size, move the headband up and down until it fits comfortably.
2. Move the flexible microphone boom up or down and in or out until it is level with your mouth for better voice capture.
3. Boom can be tucked out of the way when not being used.


1

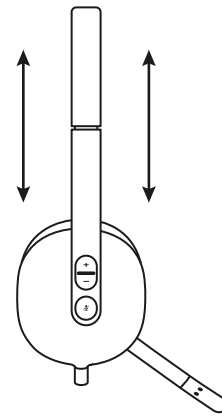

2

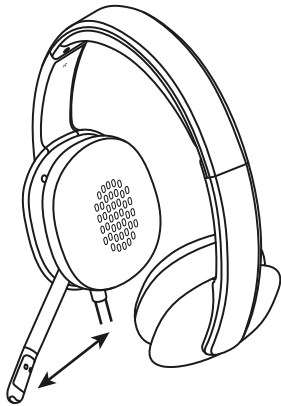


3

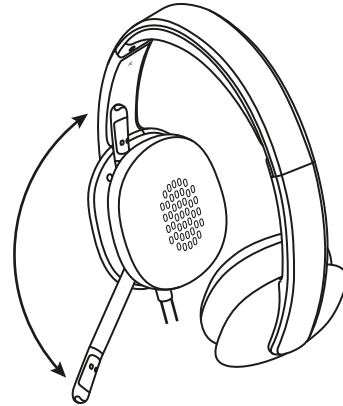

www.logitech.com/support/H540


© 2019 Logitech. Logitech, Logi and other Logitech marks are owned by Logitech and may be registered. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

了解您的产品

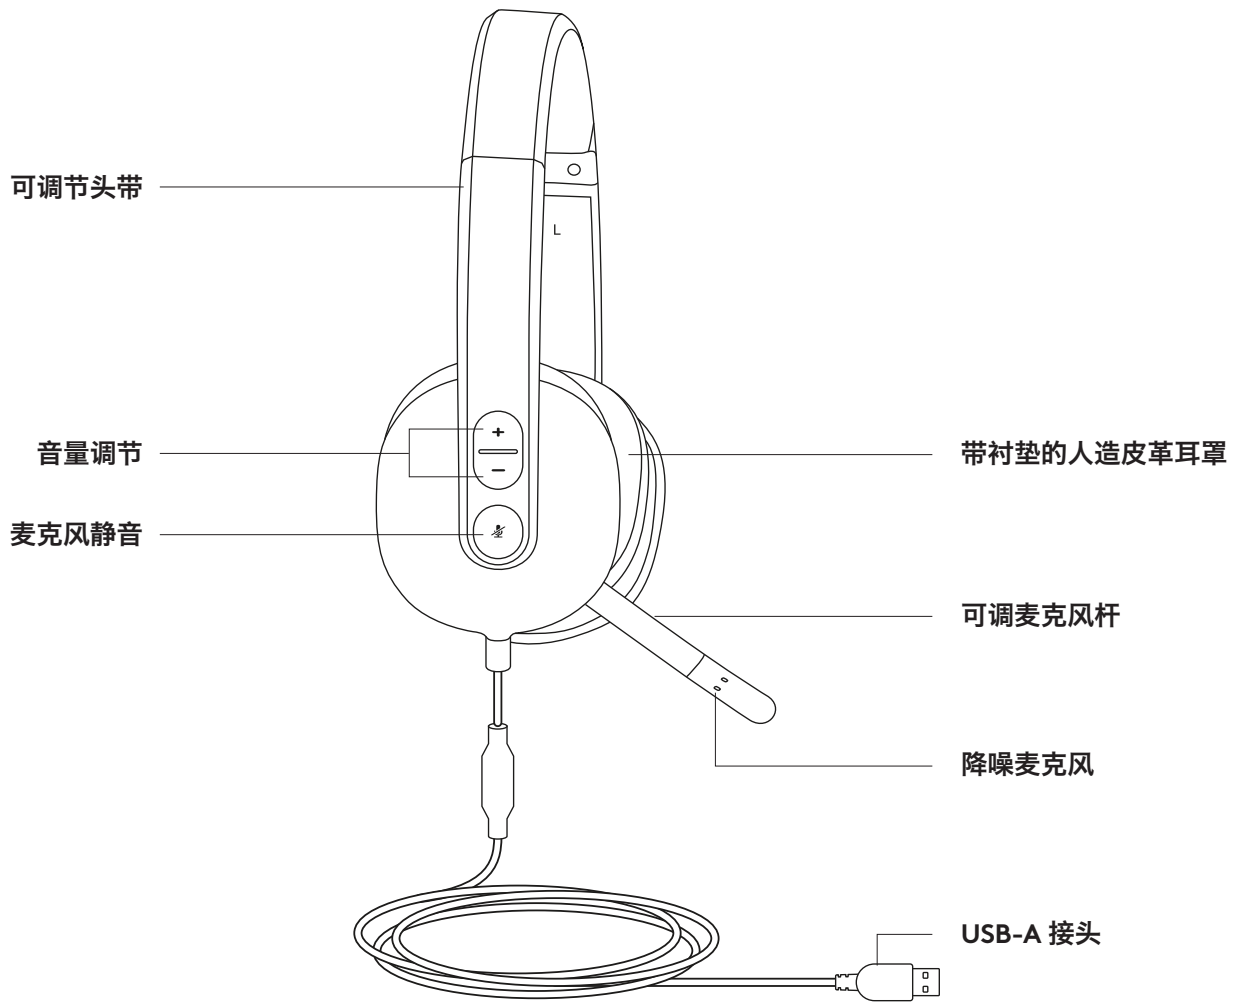

连接耳机麦克风


将 USB-A 接头插入电脑的 USB 端口。

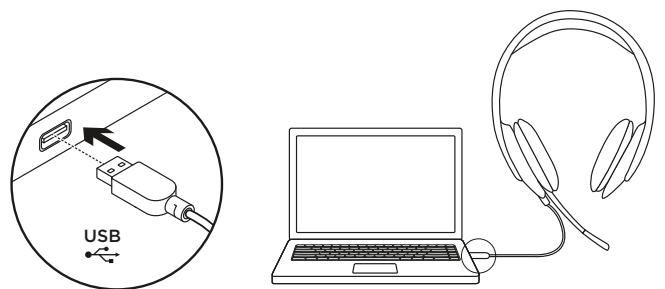


耳机麦克风贴合佩戴

1. 要调节耳机麦克风尺寸, 请上下移动头带, 直至佩戴舒适贴合。
2. 可上下及前后移动麦克风杆, 直至与嘴部齐平, 以便更好地捕捉声音。
3. 不使用时, 可将麦克风杆旋转至不影响当前使用的位置。


1

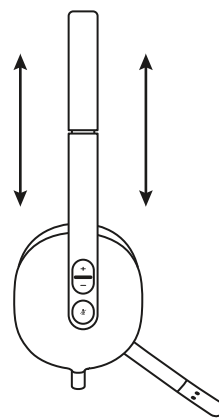

2

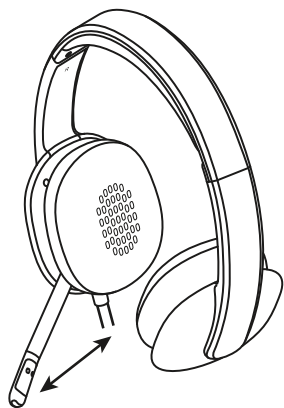


3

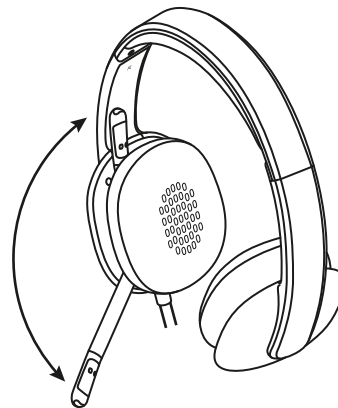


www.logitech.com/support/H540

瞭解您的產品

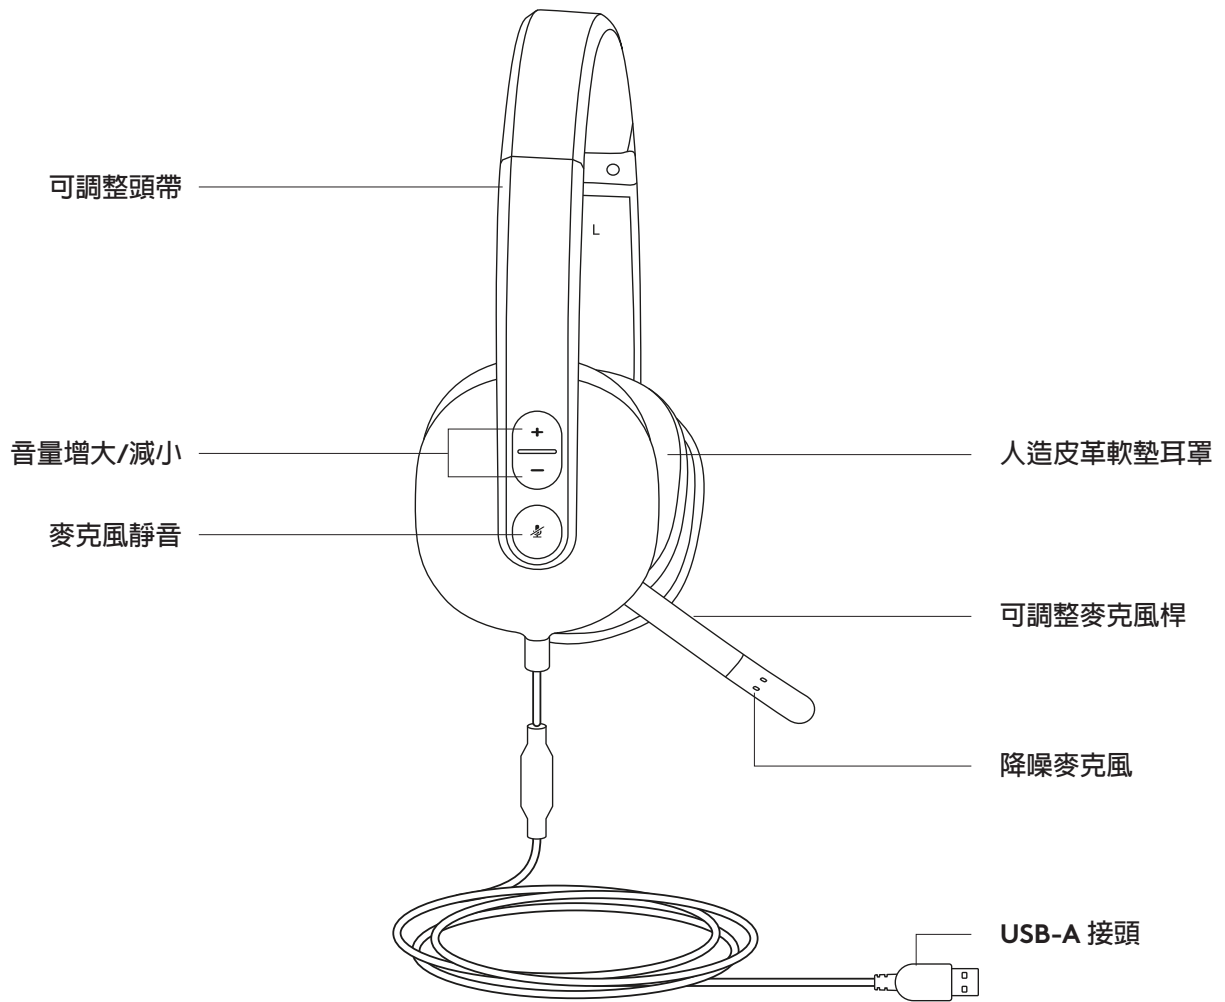

連接耳機麥克風


將 USB-A 插頭插入到電腦上的 USB 連接埠。

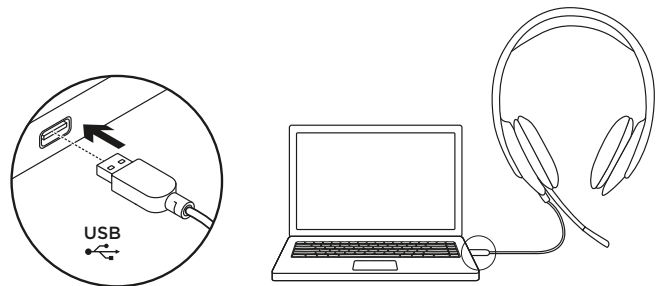


耳機麥克風配戴

1. 若要調整耳機麥克風大小，請上下移動頭帶直到可舒適配戴為止。
2. 上下、內外移動彈性麥克風桿，直到其與您的嘴部同高以獲得更好的收音。
3. 麥克風桿不使用時可以將其完全收合。


1

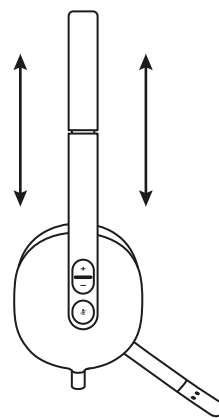

2

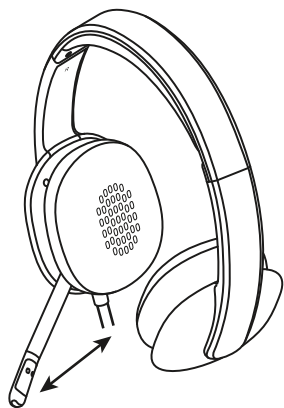


3

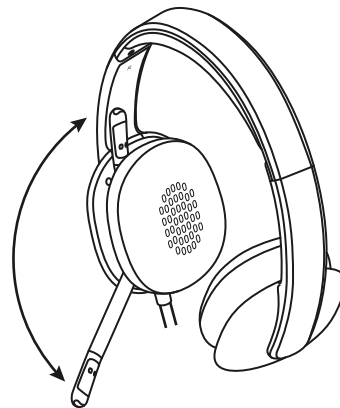


www.logitech.com/support/H540

제품 설명

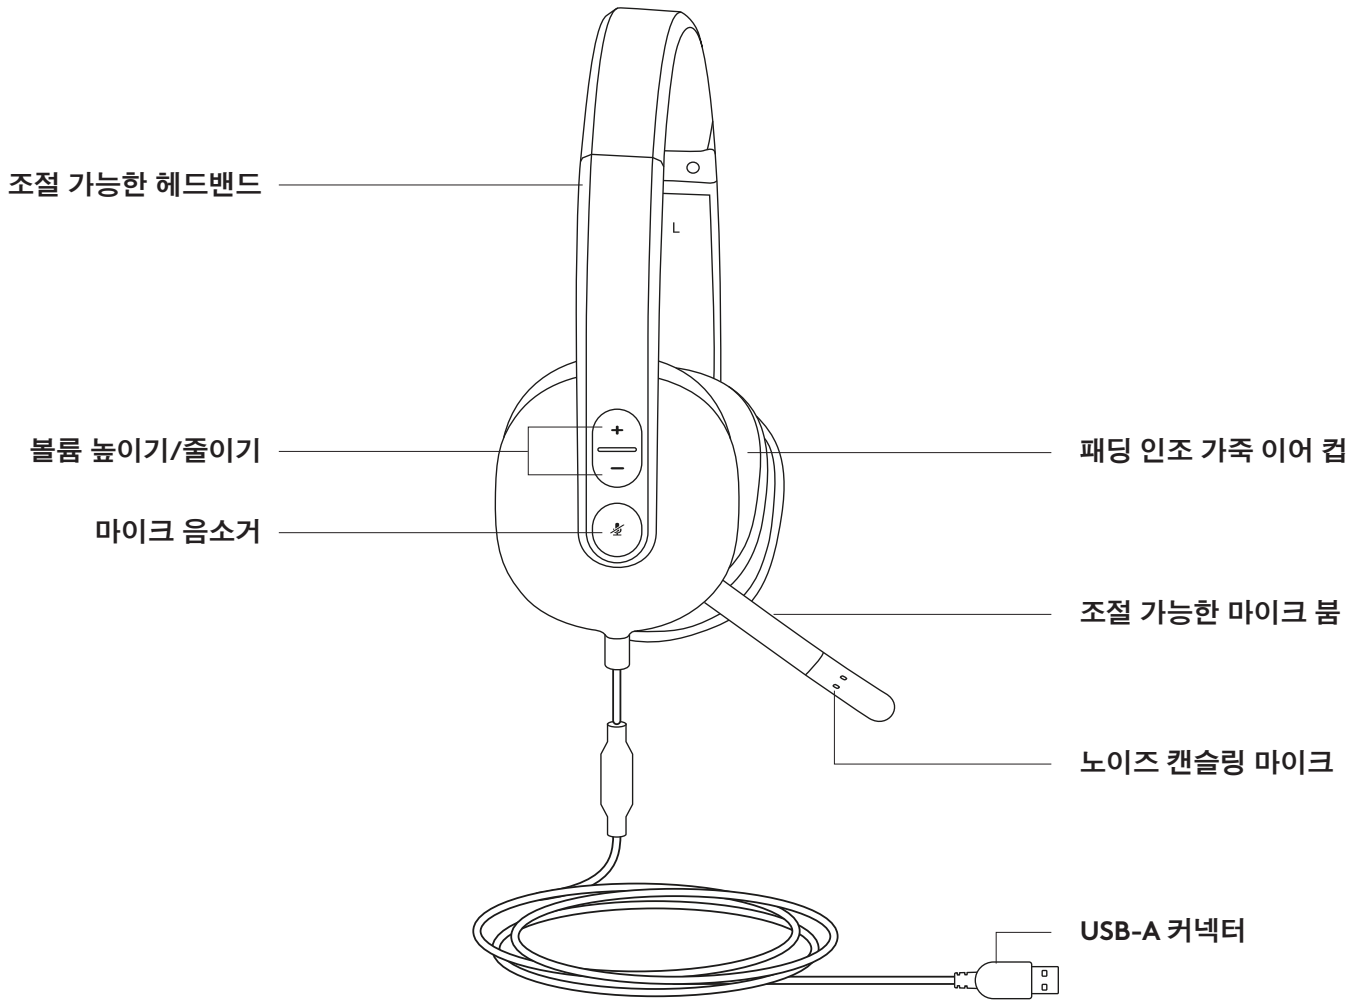

헤드셋 연결


USB-A 커넥터를 컴퓨터 USB 포트에 연결합니다.

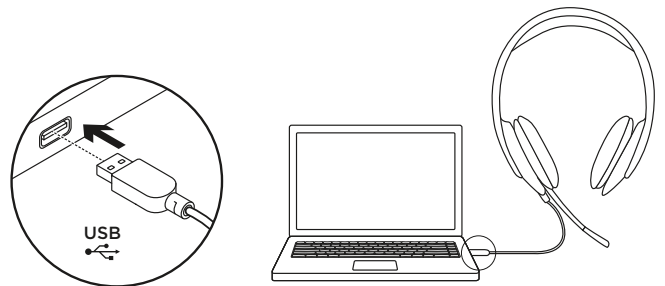


헤드셋 핏

1. 헤드밴드를 위아래로 움직여 헤드셋의 크기를 머리에 맞게 조절하십시오.
2. 또렷한 음성 캡처를 위해 마이크 뿔이 입과 수평이 되도록 이동하십시오.
3. 뿔은 사용하지 않을 때 접어서 넣어둘 수 있습니다.


1

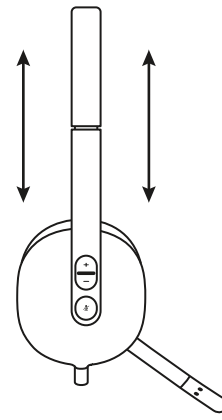

2

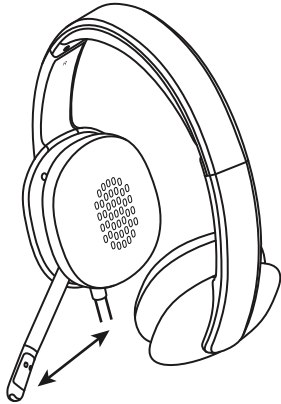

3

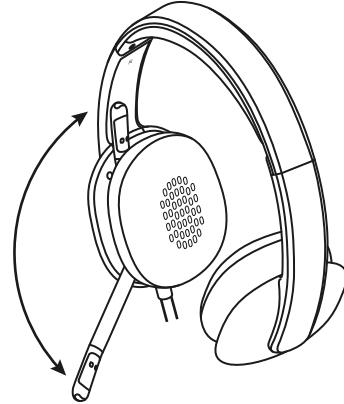

www.logitech.com/support/H540

www.logitech.com/support/H540

© 2019 Logitech. Logitech, Logi and other Logitech marks are owned by Logitech and may be registered. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

WEB-621-001279.002

logitech®