
## **To Enter Car Start/Stop Mode:**

1) Turn on the device

2) Tap timer button till all 3 timer-lights are on

You are now in start/stop mode, device will now detect and react to vibration. You may leave device in this mode even overnight.

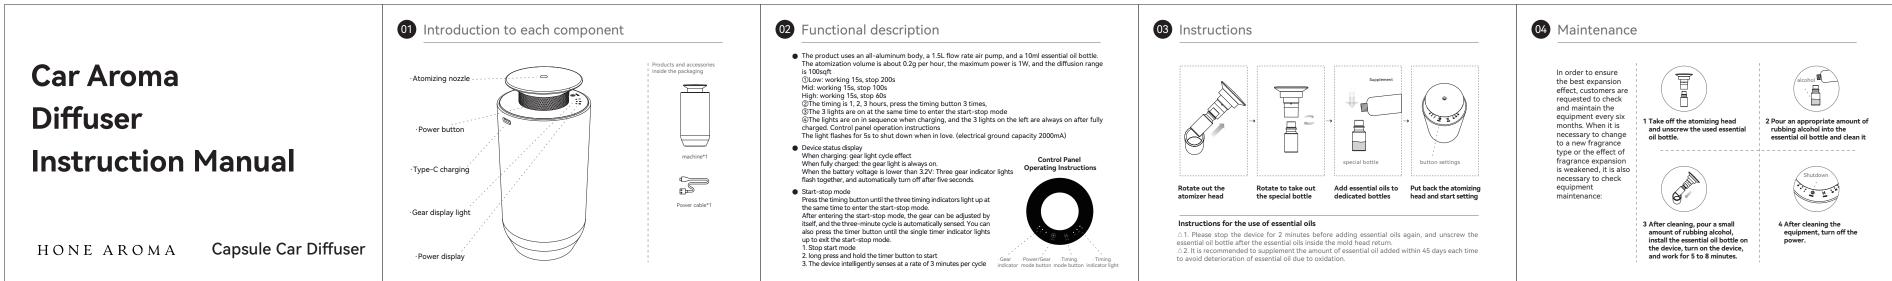

	05 Basic p	05 Basic parameters				06 Troubleshooting		
C C C C C C C C C C C C C C C C C C C	Product name	Product name Car aroma diffuser Product type Aroma diffuser			Refer to the following instructions to diagnose and attempt repairs before requesting a factory repair:			
	Product model	Capsule Car Diffuser	Product size	145* Φ63mm		Fault Type	Method of exclusion	
	Maximum powe	1.2W	Net NrWeight	0.29kg	Device not working	① Please check whether the power adapter is DC5V-1A and the DC end h inserted correctly? ② Is the working procedure set by the equipment in working hours?		
	Input power	DC5V-1.5A (Type-C)	Overall weight	0.8kg 1pc Aroma Diffuser		No atomization, small atomization	<ul> <li>Is the air pump working?</li> <li>Is there an airflow atomizing core at the mist outlet, and whether the o pipe is loose or blocked? Is the sealing ring of the air nozzle damaged or fall</li> </ul>	
	Coverage 	100 Square feet	Packing List Machine noise	+1pc Power Cord ≤30dB		Oil spill	Whether the essential oil bottle and the atomizing head are tightened, wh sealing ring of the atomizing head is deformed or damaged	
	Essential oil capac		Atomization volume per hour	0.2g		Abnormal noise	<ol> <li>The air pump is loose, fix the air pump again</li> <li>The air pump is damaged, replace it with a new one</li> </ol>	
			Polanic per nour					

