

Bushnell®

GOLF



WINGMAN VIEW

SPEAKER + AUDIBLE GPS



Scan to download the
Bushnell Golf Mobile App
to your phone.

Android and Google Play are registered trademarks of Google Inc. in the United States and other countries. iPhone and Apple Store are trademarks of Apple Inc., registered in the U.S. and other countries. Other names may be trademarks of their respective owners.

Click on each topic in the Table of Contents to go directly to it.

TABLE OF CONTENTS

PARTS GUIDE	3
CONNECTING TO BUSHNELL GOLF MOBILE APP	4
CONNECT WINGMAN VIEW TO YOUR PHONE	4
POWER UP & BLUETOOTH™ SPEAKER OPERATION	4
WINGMAN VIEW REMOTE FUNCTIONS - MUSIC MODE	5
TWS CONNECTION (STEREO) OPERATION	5
INDOOR/OUTDOOR EQ MODE	5
PLAY GOLF MODE - USING THE GPS RANGEFINDER	5
HOME SCREEN DISPLAY	5
PLAY GOLF MODE BUTTON OPERATION	6
WINGMAN VIEW REMOTE FUNCTIONS - GOLF MODE	6
BUSHNELL GOLF MOBILE APP FUNCTIONS	6
DEVICE FUNCTIONS	6
SETTINGS	7
SOUND BITES	7
PLAY NOW - ROUND SETUP	8
FIRST TEE INTRODUCTION SETUP	8
FIRST TEE INTRODUCTION & CUSTOM SOUND BITES IN ROUND	9
BITE MAGNETIC MOUNT	9
CLEANING AND GENERAL CARE	9
TROUBLESHOOTING	10
HAZARD GLOSSARY	10
TECHNICAL SPECIFICATIONS	10

INTRODUCTION

Congratulations on purchasing the Bushnell® Wingman View Bluetooth® Speaker with Audible GPS. The Wingman View is a rugged, high-quality wireless speaker designed to entertain the avid golfer while keeping them informed on the course when linked with the Bushnell Golf Mobile App. This owner's guide will help you achieve optimum satisfaction with the product by explaining its features and operation and how to care for it. Please read these instructions before using your Wingman View to ensure the best performance and longevity.

 


- ### PARTS GUIDE
1. Remote Control with BITE Magnet
 2. Power Button
 3. Bluetooth
 4. Volume Up
 5. Play
 6. Volume Down
 7. BITE Magnet
 8. Charge In USB-C
 9. Charge Out USB-A
 10. Reset Hole
 11. USB Charging Cable

CONNECTING YOUR WINGMAN VIEW TO YOUR MOBILE DEVICE & BUSHNELL GOLF MOBILE APP

To connect your Wingman View to your phone and the Bushnell Golf Mobile app:

- Download the Bushnell Golf mobile app at app.bushnellgolf.com/install or scan the QR code.
- If you are new to the app, you will be asked to set up a device after registration and select Wingman View. As a returning user to the app, select "See All" from "My Devices", click "Add Device", and select Wingman View from the list of Bushnell Golf devices.
- Follow the app's on-screen instructions to pair and connect your Wingman View speaker and remote.

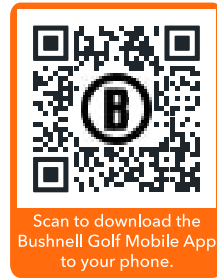

Note: After pairing, the Bluetooth on/off state will be the last set state once powered up.

POWER UP & BLUETOOTH™ SPEAKER OPERATION

 
1. Connect the provided USB-C charger to the USB-C input port at the bottom to charge Wingman View's internal lithium-ion battery.
2. To see the battery's charge, see the top right of the screen. A fully charged battery will provide ten-plus hours of operating time at a normal, moderate volume level. A low-power tone from the speaker indicates low power.
3. The USB-A output port can recharge your phone or other accessories. Note: using the Wingman View to recharge mobile devices will reduce the speaker's battery level and operating time.
4. Hold the Power button on the Wingman View until the startup sound is heard and the screen appears.
5. To pair the device with a mobile phone, ensure the Wingman View is within 10 meters/32 feet from your device. Then, register and pair the device with the Bushnell Golf Mobile App for complete functionality of the Wingman View. Refer to the "Connecting Your Wingman View to Your Mobile Device and the Bushnell Golf Mobile App" instructions above.
6. To set up audio only, press and hold the Bluetooth button on the speaker for three seconds until the Bluetooth icon appears on the screen. Go to the Bluetooth settings in your device and select "Wingman View Audio" to pair.



Note: The remote is only functional when registration and connection are completed through the Bushnell Golf Mobile App. The Bushnell Golf Mobile App has to be running in the background or foreground on your mobile device for the remote to work with the speaker.

7. The Wingman View has a microphone that allows you to take incoming calls. To answer an incoming call, press the Play button. To reject an incoming call, Press and hold the Play button. To end a call, press Play.

Note: when powered on, the speaker automatically reconnects to the last mobile device it was paired with. The speaker can memorize up to 8 paired devices and will shut off after 15 minutes in pairing mode if no devices have been paired. This is a power-saving feature.

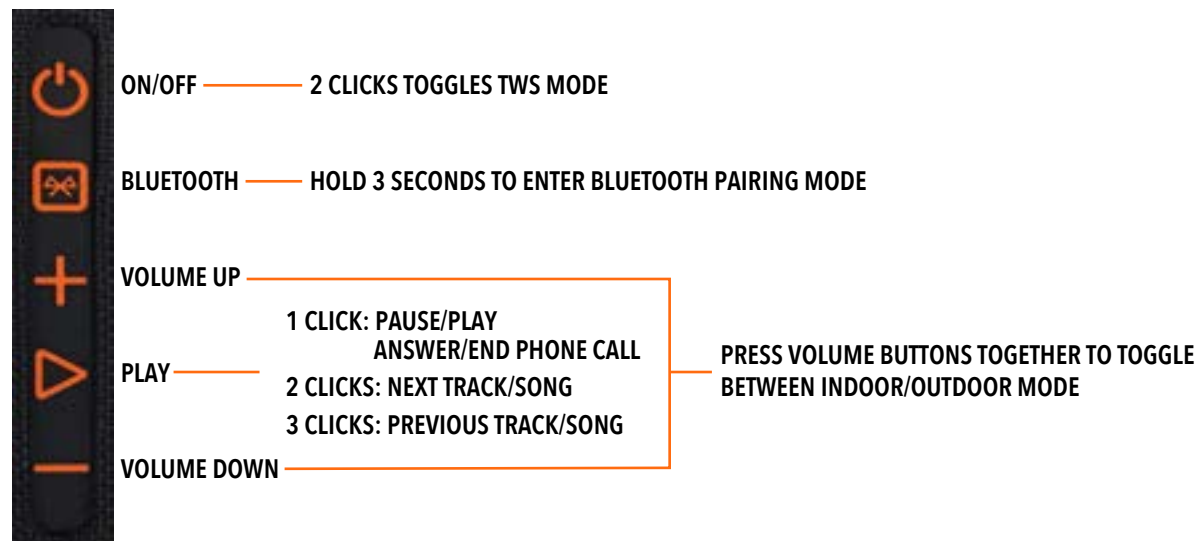

WINGMAN VIEW REMOTE FUNCTIONS - MUSIC MODE

1. Download the Bushnell Golf Mobile App from the App Store (Apple) or Google Play (Android), sign up for an account, or log in. NOTE: The remote is only functional when registration and connection are completed through the Bushnell Golf Mobile App. The Bushnell Golf Mobile App must run in the background or foreground on your mobile device for the remote to work with the speaker.
2. Pair the Wingman View Remote with your smartphone, following the instructions on the app screens. The mobile app will walk the user through the setup process and have you on the course in no time!
3. Use the remote to control the speaker functions. Click the top button once to pause or play a track or song. Double-click the top button to go to the next track or song. Triple-click the top button to go to the previous track/song. Hold the top button to enter Bluetooth pairing mode.
4. Press Plus or Minus to control the volume.

- 1 CLICK: PAUSE/PLAY
2 CLICKS: NEXT TRACK/SONG
3 CLICKS: PREVIOUS TRACK/SONG
CLICK & HOLD: PAIRING MODE



Android and Google Play are registered trademarks of Google Inc. in the United States and other countries. iPhone and Apple Store are trademarks of Apple Inc., registered in the U.S. and other countries. Other names may be trademarks of their respective owners.

TWS CONNECTION (STEREO) OPERATION

The Wingman View's TWS technology enables you to play two Wingman View speakers with the same audio simultaneously. To activate TWS operation and listen to audio with two Wingman View units:

1. Place the two speakers near each other (the distance should not be over 10 meters/32 feet).
2. Power on both speakers. Double-click the Power button on the speaker connected to the device playing the audio. The second speaker needs to be unpaired from any Bluetooth device. The second speaker will pair automatically when the speaker connected to the audio is placed in TWS mode. "TWS ON" will be displayed on the second speaker if the speakers are tethered.
3. To disconnect the TWS connection, double-click the Power button on either speaker's main speaker or power.

INDOOR/OUTDOOR EQ MODE

 
This electronically equalizes the speaker's tonal balance for optimum listening quality when used indoors (clubhouse/home) or outdoors (golf course). Indoor Mode (🏠) provides a fuller, richer sound. Outdoor Mode (🗺️) carries sound further to be heard at a distance.

Press the Volume Up and Volume Down buttons to change the sound mode. Note: The Wingman View default mode is Indoor.

PLAY GOLF MODE - USING THE GPS RANGEFINDER

HOME SCREEN DISPLAY

1. Hole
2. Par
3. Time
4. Battery icon
5. Front Distance
6. Center Distance
7. Back Distance

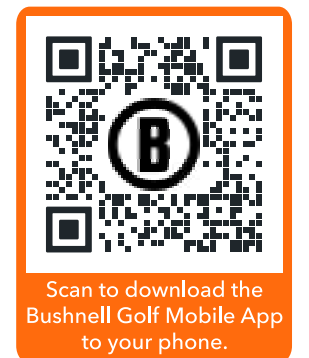

PLAY GOLF MODE BUTTON OPERATION

- Once the Wingman View Speaker and Remote are paired and registered in your Bushnell Golf Mobile App account, you can play golf using your speaker.
- Double-click the Power button to toggle TWS mode. Press the Bluetooth button to show the hazard screen for playing the hole. Double-click the Bluetooth button to put the unit into Hole Change Mode. While in Hole Change Mode, Volume Up advances to the next hole. Volume Down goes back to the previous hole.



- ON/OFF** — 2 CLICKS TOGGLES TWS MODE
- BLUETOOTH** — 1 CLICK SHOWS HAZARD SCREEN
2 CLICKS PUTS SCREEN IN HOLE CHANGE MODE
PRESS + FOR NEXT HOLE OR - FOR PREVIOUS HOLE
- VOLUME UP** — NEXT HOLE
- PLAY**
- VOLUME DOWN** — PREVIOUS HOLE

WINGMAN VIEW REMOTE FUNCTIONS - GOLF MODE

- Download the Bushnell Golf Mobile App from the App Store (Apple) or Google Play (Android), sign up for an account, or log in. NOTE: The Bushnell Golf Mobile App must be running to the remote in the foreground or background of your phone to control the Wingman View.
- Use the remote to control functions on the speaker for Play Golf Mode. Click the top button once to display GPS yardage. Double-click the top button to play the first custom message. Triple-click the top button to play the second custom message. Hold the top button to enter Bluetooth pairing mode. *Instructions for creating Custom Messages or Sound Bites can be found on page 7.
- Press Volume Up and Volume Down together to enter Music Mode briefly.

- 1 CLICK: GPS YARDAGE
- 2 CLICKS: 1ST CUSTOM MESSAGE
- 3 CLICKS: 2ND CUSTOM MESSAGE
- CLICK & HOLD: REMOTE PAIRING MODE



 
VOLUME DOWN VOLUME UP

Note: When reconnecting after shutting down the speaker, the remote must be paired with the app again. Open the Bushnell Golf Mobile App home screen and hold the "Bushnell Golf" button on the remote until a beep indicates the connection is restored. Both devices will be green in the device list.

BUSHNELL GOLF MOBILE APP FUNCTIONS


DEVICE FUNCTIONS

- Unpair Device:** Press to unpair the device from the Bluetooth connection on your phone.
- Settings:** See full explanation on page 7.
- Find Remote:** Press Find Remote in Device Functions to help locate a lost remote. Remote will beep when in range and connected to Bluetooth.
- Sound Bites:** See full explanation on page 7.
- TWS Mode:** TWS can be toggled On/Off in the app or by double-clicking the speaker's Power button. See Page 5 for instructions.
- Software Update:** Check for firmware updates for the speaker and remote.
- Support:**
 - Contact Bushnell Golf product support
 - About your speaker
 - Product user manual
 - Terms and Conditions
- Remove Device:** This button lets you remove the device from the Bushnell Golf Mobile App account. You will also need to remove the device from your phone's list of available devices in the Bluetooth Settings.

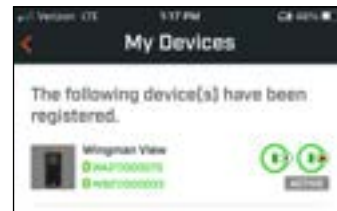



SETTINGS

 - Time Format: Choose 12 or 24 Hour format
- Game Status: Indicates the device is in Music or Golf Mode
- EQ Mode: Choose Indoor or Outdoor (see page 5 for more information)
- Announcement Settings:
 - Announcement Volume: Adjusts the volume for audible GPS distances, custom sound bites, and first introductions.
 - Speak Settings:
 - Select Voice for the character and language you wish to hear.
 - Start Round Message (On/Off): Says course information when starting a round.
 - Auto Hole Advance Message (On/Off): Says hole information when the hole advances.
 - Water Hazards (On/Off): Says water hazard distances when the hole advances
 - Distance Speak Settings:
 - Hole Number (On/Off): Says hole number with distance callout.
 - Par (On/Off): Says par value with distance callout.
 - Distance: Choose between Center or Front, Center, and Back distances called out with single click of the Bushnell Golf button on the remote. If Front, Center, and Back is selected, there is the option of receiving Front and Back distances with options: Always, Inside 300, Inside 250, Inside 200, or Inside 150.

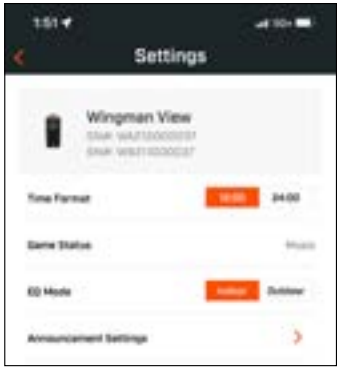

SOUND BITES

  
- Sound Bite List:
 - Two default Sound Bites: Clap and Cheer
 - Up to Ten custom Sound Bites
- Add Message
 - Tap Add Message to create Custom Sound Bite
 - Voice:
 - Tap microphone to record five second Sound Bite
 - Tap microphone to end recording
 - Select Favorite One, Favorite Two or both. This will assign the button command that this Sound Bite will be associated with.
 - Tap "Custom #" in the title bar to rename the Sound Bite.
 - Press Save.
- Text:
 - Write text to be read as a Custom Sound Bite.
 - Tap "Custom #" in the title bar to rename the Sound Bite.
 - Press Save.

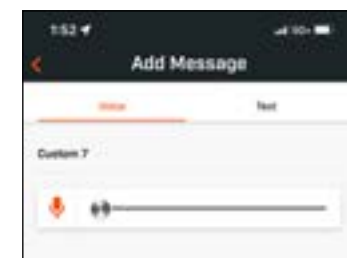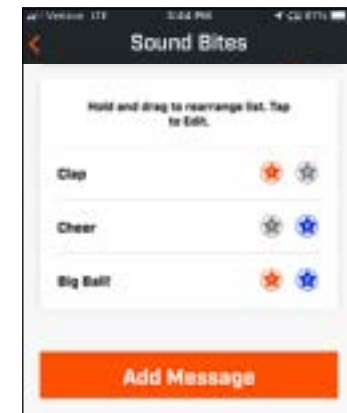

PLAY NOW - ROUND SETUP

Return to the Bushnell Golf Mobile App home page and select "Play Now" to Start Round.

 
Choose a course from a list of Recent, Nearby, or Open courses. If you are continuing a game, choose "Continue Round".

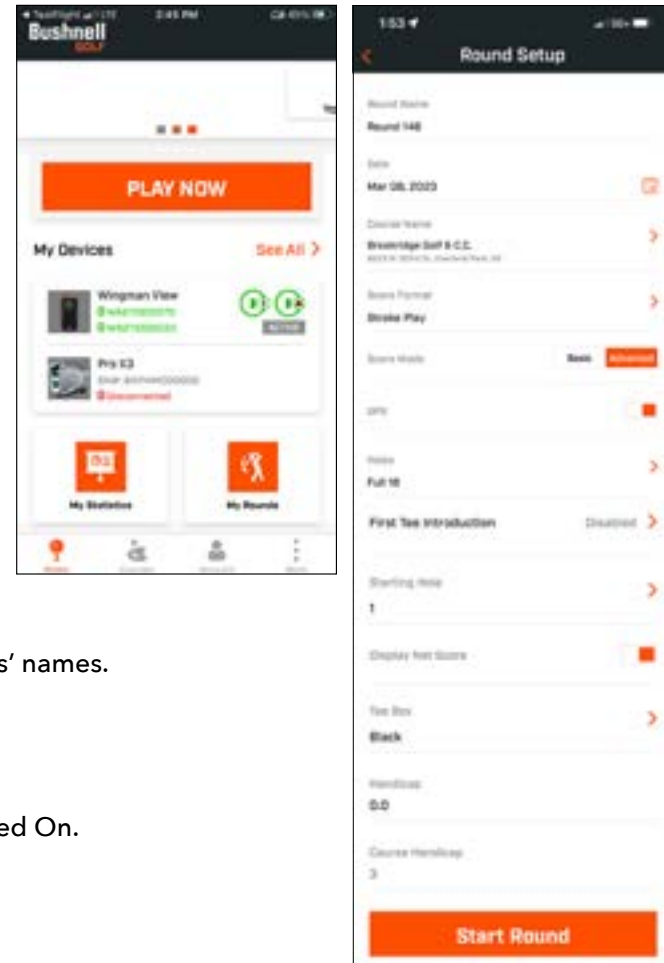

- **Round Name:** The round can be given a custom name. Click "Round #" and type what name you would prefer.
- **Date:** The current day is the default "date", but changing the date of the game can be done by clicking on the calendar icon.
- **Course Name:** Choose a course from a list of Recent, Nearby or Open courses.
- **Score Format:** Choose Stroke Play or Stableford.
- **Score Mode:** Choose Basic or Advanced.
- **GPS:** GPS must be enabled to view the hole layout.
- **Holes:** Choose Front 9, Full 18 or Back 9.
- **First Tee Introduction:** Default is Off. Turn On and add players' names. See full explanation below.
- **Starting Hole:** Choose the hole you are starting the round on.
- **Display Net Score:** On or Off.
- **Tee Box:** Tee Box information is available if net scoring is turned On.
- **Handicap:** Enter personal handicap.
- **Course Handicap**

FIRST TEE INTRODUCTION SETUP

 1. Enable First Tee Introductions in Round Setup.
2. Tap Add Golfer to add a new player.
3. Tap Name to change a player's name.
4. Tap Speaking icon on the right of the player's name to edit the crowd response for the player's introduction.
5. Tap Start Round at bottom of screen to begin.

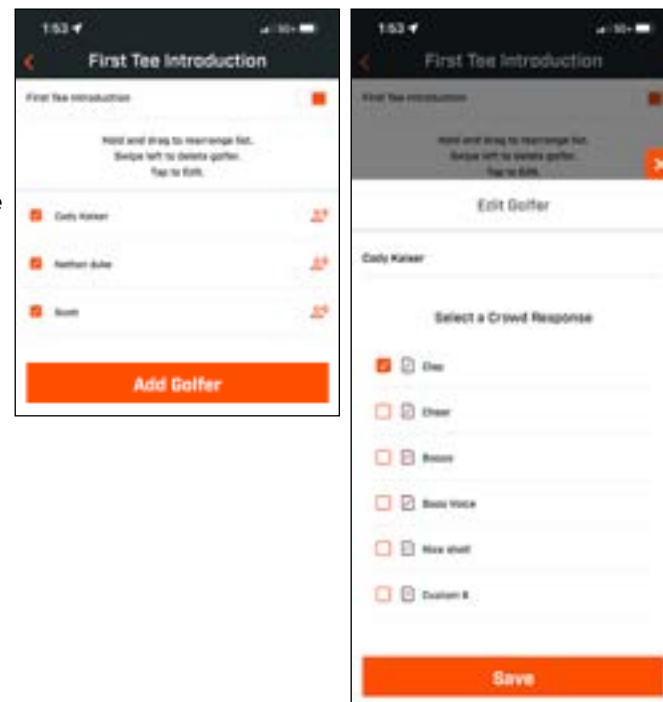


FIRST TEE INTRODUCTION & CUSTOM SOUND BITES IN ROUND

1. Tap the Speaker icon on the upper right of the screen to access Sound Bites and Introductions.
2. The Announcement Volume for Sound Bites and First Tee Introductions can be adjusted here.
3. Custom Sound Bites can be played individually by tapping the Play button to the right. Also, see the "Favorite" designation for the Sound Bite. For example, click the remote Bushnell Golf button once if the Sound Bite is "Favorite One". If the Sound Bite is "Favorite Two", click the remote Bushnell Golf button twice. See *the Remote button functions on page 6*.
4. First Tee Introduction engages when the round is set near the starting hole tee box. Tap the Bushnell Golf button on the remote to start First Tee Introductions. Then tap the button after each player's announcement to move to the next player.
5. Tap on the Speaker icon to access Introductions. Click on Restart Introduction to reset the First Tee Introduction sequence.
6. Tap the Speaking icon to change the Crowd Response for that player's First Tee Introduction.



 Speaker icon: access to Messages and First Tee Introductions

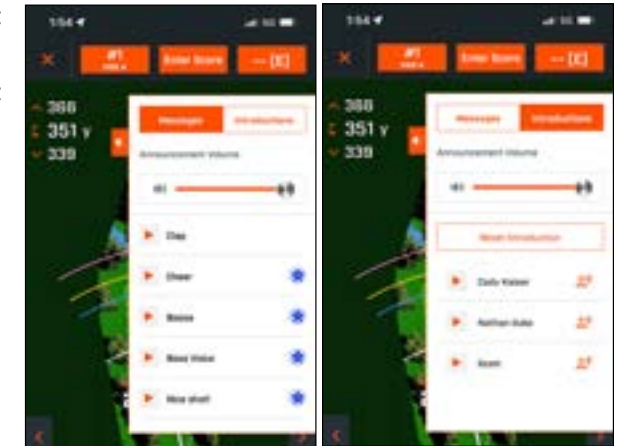

BITE MAGNETIC MOUNT

The Wingman View features a powerful BITE magnet incorporated into its housing, which allows the device to be securely attached to a golf cart bar or frame.

WARNING: BITE FEATURE INCLUDED WITH DEVICE CONTAINS A NEODYMIUM MAGNET. MAGNETS COULD AFFECT THE FUNCTIONING OF PACEMAKERS AND IMPLANTED HEART DEFIBRILLATORS. IF YOU USE THESE DEVICES, KEEP SUFFICIENT DISTANCE FROM MAGNET. WARN OTHERS WHO WEAR THESE DEVICES FROM GETTING TOO CLOSE TO MAGNETS.

- Magnet may lose part of its adhesive force permanently if exposed to temperatures above 175° F (80° C).
- Magnets produce far-reaching, strong magnetic field. They could damage TVs, laptops, computer hard drives, credit and ATM cards, data storage media, mechanical watches, hearing aids, and speakers. Keep the unit away from devices and objects that could be damaged by strong magnetic fields.
- Magnets have strong magnetic fields which can pinch skin and fingers. Use caution when attaching the unit to a metal bar.



CLEANING AND GENERAL CARE

IMPORTANT NOTE: Remove all cable connections and close the port protection cover tightly after charging and before use to ensure the Wingman is water resistant.

Follow these tips for proper cleaning and maintenance:

- Blow away any excess dust or debris on exterior (or use a soft brush).
- To remove dirt or finger prints, clean with a micro-fiber cloth. The Wingman View is water resistant, but should not be exposed to heavy rain or other direct streams of water, and will not withstand submersion in water or other liquids.
- When you are not using the speaker/remote, please store it in a secure, dry indoor location for additional protection.

TROUBLESHOOTING

Never disassemble your Wingman View speaker. Irreparable damage can result from unauthorized service attempts, which also void the warranty.

If unit does not turn on:

- Press Power button fully.
- Charge internal battery. If unit does not respond to power button after fully charging, contact Bushnell Golf customer service: [Bushnell Golf Customer Support Link](#) or call (800) 423-3537.

If unit powers down during use:

- The battery charge level is low, indicated by a flashing orange Indicator Ring. Recharge the battery.

Problems pairing with phone via Bluetooth:

- The Speaker is within 10m from the device.
- The Speaker is in pairing mode, the LED indicator blinking orange and orange.

No Sound

- Make sure the music volume is at audible level on both your device and speaker.
- Make sure your device is successfully paired with the speaker, the LED indicator turn solid orange.

Poor sound quality

- Move the device closer to the Wingman View or remove any obstacle between them.

Buttons do not function

- If necessary, the Wingman View can be reset. Make sure the charging cable is not connected. Place a small pin (<3mm) into the reset key (small opening to the right of the USB charging port) and hold it down (press lightly) for 2 seconds until the LED Indicator Ring turns off.

HAZARD GLOSSARY:

###L To Layup point (i.e. 75L= To 75yd Layup point, 100L = To 100 yard Layup point)

###M To Marker (i.e., 250M = To 250 Marker)

#Bnk To # Bunker (i.e., T1Bk = To 1st Bunker)

#CBK To # Center Bunker (i.e., 2CBk = To 2nd Center Bunker)

#Fwy To # Fairway

#GBk To # Grass Bunker

#LBk To # Left Bunker

#RBk To # Right Bunker

#Wtr To # Water Hazard

Bnr To Bunker

C#Bk Carry to # Bunker (i.e., C1Bk = Carry 1st Bunker)

C#LB Carry to # Left Bunker (i.e C2LB = Carry 2nd Left Bunker)

C#RB Carry to # Right Bunker (i.e., C3RB = Carry 3rd Right Bunker)

C#Wt Carry # Water Hazard (i.e., C2Wt = Carry 2nd Water Hazard)

CBnk To Center Bunker

CCBK Carry Center Bunker

CDch To Center Ditch

CFwy To Center Fairway

Fwy To Fairway

CFyB Carry Fairway Bunker

CHzd Carry Hazard

CLBk Carry Left Bunker

CLHz Carry Left Hazard

Clif To Cliff

CLWs Carry Left Waste Area

CLWt Carry Left Water Hazard

CPh Carry Path

CRBk Carry Right Bunker

CRHz Carry Right Hazard

Crst To Crest

CRWt Carry Right Water Hazard

CWst Carry Waste Area

CWtr Carry Water Hazard

Dtch To Ditch

EFwy To End of Fairway

ELFy To End of Left Fairway

ELoF To End of Lower Fairway

ERFy To End of Right Fairway

EWst To End of Waste Area

GBnk To Grass Bunker

Gorg To Gorge

Hzd To Hazard

LBnk To Left Bunker

LDth To Left Ditch

LFwy To Left Fairway

LGBk To Left Grass Bunker

LndA To Landing Area

LWst To Left Waste Area

LWtr To Left Water

Path To Path

PotB To Pot Bunker

RBnk To Right Bunker

Rdge To Ridge

RDch To Right Ditch

RFwy To Right Fairway

RGBk To Right Grass Bunker

RHzd To Right Hazard

Road To Road

RWst To Right Waste Area

RWtr To Right Water

ThFy Through Fairway

ThRF Through Right Fairway

Wter To Water Hazard

WstA To Waste Area

WstB To Waste Bunker

WstE Waste Area End

CGrg Carry Gorge

RvrB To River Bed

Wall To Wall



WARNING: THIS PRODUCT USES A LITHIUM BASED BATTERY. LITHIUM BATTERIES CAN OVERHEAT AND CAUSE DAMAGE IF PHYSICALLY ABUSED. DO NOT USE BATTERIES THAT ARE DAMAGED OR SHOW SIGNS OF PHYSICAL WEAR.



WARNING: FIRE HAZARD! DO NOT SHORT-CIRCUIT BATTERIES. BATTERIES MAY OVERHEAT OR EXPLODE.



WARNING: DANGER TO LIFE. KEEP BATTERIES OUT OF THE REACH OF PETS AND CHILDREN. IF SWALLOWED, SEEK MEDICAL ADVICE IMMEDIATELY.



WARNING: DO NOT EXPOSE BATTERIES TO WATER OR FIRE. DO NOT ATTEMPT TO CHARGE NON-RECHARGEABLE BATTERIES. THE BATTERIES MAY EXPLODE.

CAUTION:

- Keep the speaker and its accessories away from the reach of children, as they might cause a choking hazard.
- Keep the speaker away from fire, water, liquids, extreme heat and strong magnetic fields.
- Do NOT use this speaker at high volume for extended periods, as this may cause permanent hearing damage or loss.



WARNING: Bite feature included with device contains a Neodymium magnet. Magnets could affect the functioning of pacemakers and implanted heart defibrillators. If you use these devices, keep sufficient distance from magnet. Warn others who wear these devices from getting too close to magnets.

- Magnet may lose part of its adhesive force permanently if exposed to temperatures above 175o F (80o C).

- Magnets produce far-reaching, strong magnetic field. They could damage TVs and laptops, computer hard drives, credit and ATM cards, data storage media, mechanical watches, hearing aids and speakers. Keep unit away from devices and objects that could be damaged by strong magnetic fields.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Shielded interface cable must be used with the equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules. Specifications and designs are subject to change without any notice or obligation on the part of the manufacturer.

 
Caution: There are no user controls, adjustments or procedures. Performance of procedures other than those specified herein may result in access to invisible laser light.

- This product contains no user serviceable controls.
- This product must not be opened or modified by the consumer.
- This product must be returned to the manufacturer for service.


Device specifications and design are subject to change without notice or obligation on the part of the manufacturer.




(MainUnit) FCC ID:2ASQI-362210
(MainUnit) IC: 24886-362210
(Remote) FCC ID:2ASQI-362220
(Remote) IC: 24886-362220



KCC ID: R-R-x6S-362210
KCC ID: R-R-x6S-362220

 

219-229259
219-229260

 

CMIIT ID: 2023DJ3247
CMIIT ID: 2023DJ3236

Industry Canada Statement/Déclaration d'Industrie Canada :

This device complies with ISED's license-exempt RSSs. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'ISED applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) le dispositif ne doit pas produire de brouillage préjudiciable, et (2) ce dispositif doit accepter tout brouillage reçu, y compris un brouillage susceptible de provoquer un fonctionnement indésirable.

Radiation Exposure Statement / Déclaration d'exposition aux radiations :

This device complies with the Industry Canada portable RF exposure limit set forth for an uncontrolled environment and is safe for the intended operation as described in this manual. Further RF exposure reduction can be achieved if the product can be kept as far as possible from the user's body or if the device is set to a lower output power if such function is available.

Le produit est conforme aux limites d'exposition pour les appareils portables RF pour les Etats-Unis et le Canada établies pour un environnement non contrôlé.

Le produit est sûr pour un fonctionnement tel que décrit dans ce manuel. La réduction aux expositions RF peut être augmentée si l'appareil peut être conservé aussi loin que possible du corps de l'utilisateur ou que le dispositif est réglé sur la puissance de sortie la plus faible si une telle fonction est disponible.

Disposal of Electric and Electronic Equipment

(Applicable in the EU and other European countries with separate collection systems)

This equipment contains electric and/or electronic parts and must therefore not be disposed of as normal household waste. Instead, it should be disposed at the respective collection points for recycling provided by the communities. For you, this is free of charge.



If the equipment contains exchangeable (rechargeable) batteries, these too must be removed before and, if necessary, in turn be disposed of according to the relevant regulations (see also the respective comments in this unit's instructions).

Further information about the subject is available at your community administration, your local waste collection company, or in the store where you purchased this equipment.

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



88904/SDPPI/2023
14455



89371/SDPPI/2023
14455

©2023 Bushnell Outdoor Products
Bushnell,™, ®, denote trademarks of Bushnell Outdoor Products
www.bushnell.com

9200 Cody, Overland Park, KS 66214
Made in China

<http://bushnellgolf.com/patents>

TECHNICAL SPECIFICATIONS

Dimensions	185mm H x 77.5mm D x 82.5mm W (with remote)
Weight	Speaker 23oz/652g Remote 1.05oz/30g
Power Source	Speaker: Internal rechargeable lithium-ion battery (non-replaceable) Remote: CR2032 Li-metal non-rechargeable "coin cell" battery
Speaker	2 x 10mm
Waterproof Rating	Speaker IPX6 Remote IP66
Included Items	Speaker, Remote, USB charging cable (charger not included)

Bushnell[®]
GOLF