 
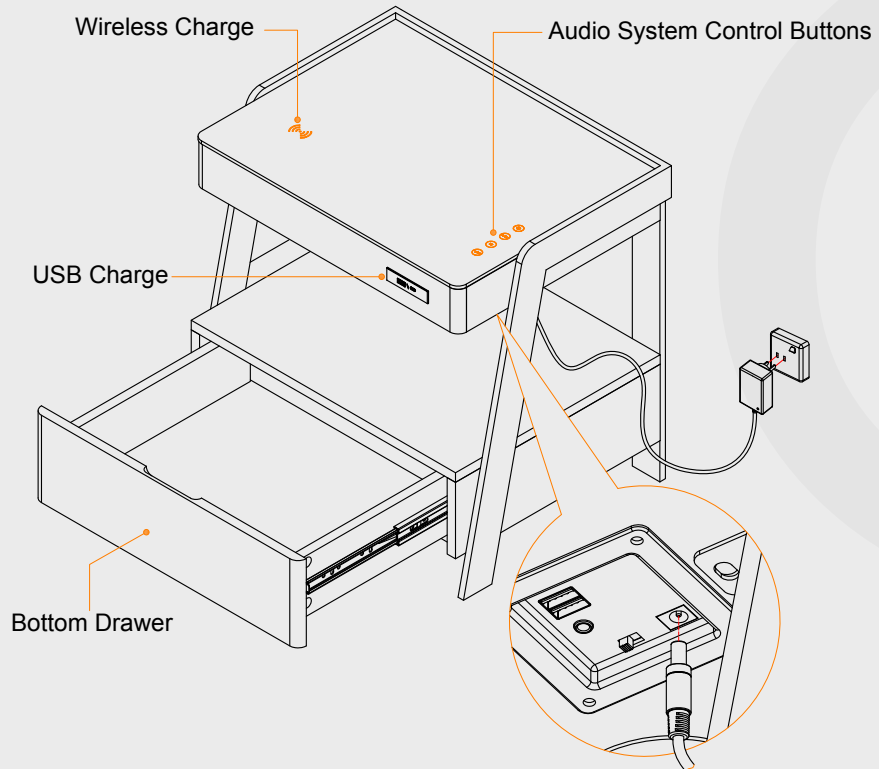 


OZARKÉ

INSTRUCTION MANUAL

 
Installation Instructions

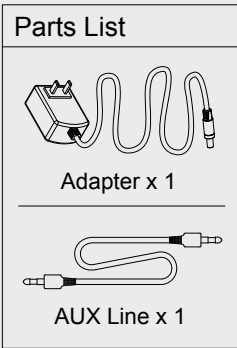

Insert the DC end of the adapter into the product's bottom.


Connector Assembly Drawing

Underside Desk Connection

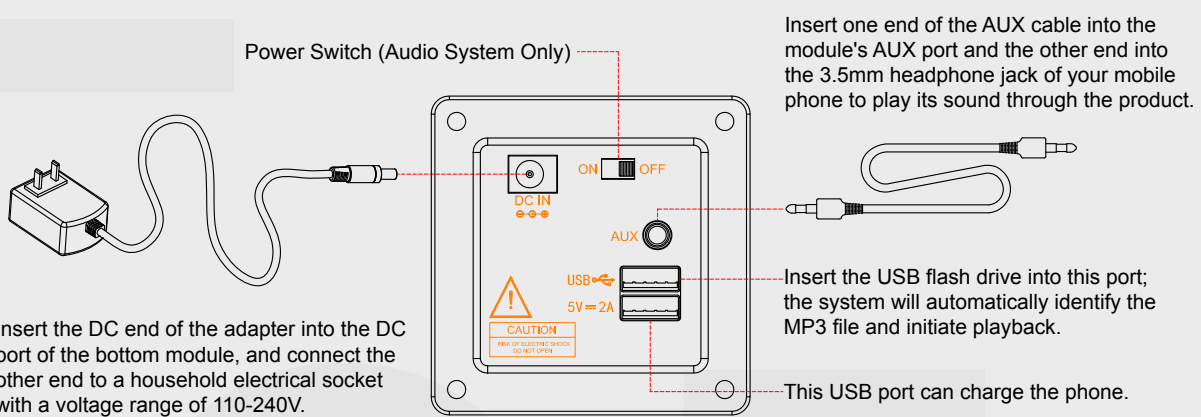

Important Safety Notice: Only use the supplied power adapter.
The use of any other adapter may result in overheating or other electrical faults.

 
Bottom Sensor Light

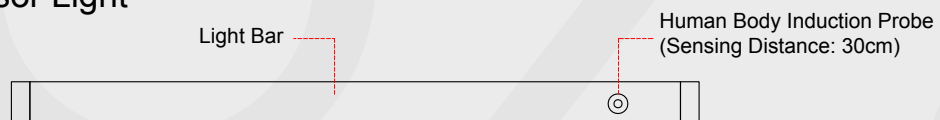

Installation Instructions


Functions

 Desktop Keys

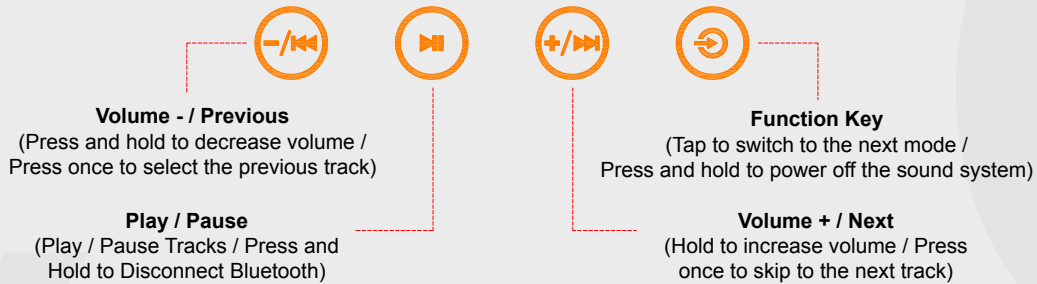

Note: The sound system will automatically power off after 15 minutes of inactivity. To turn it back on, long-press the Function key.

Bluetooth Mode

On initial power-up, the desk will automatically default to Bluetooth mode. Enable Bluetooth pairing on your mobile device and choose 'smart audio' from the list of available devices. Once pairing is successful, you'll hear an audible beep. To disconnect Bluetooth, press and hold the  for 3 seconds.

Note: The desk can only be paired with one device at a time. To connect to a different device, first disconnect from the original device, then initiate a new pairing with the new device.


AUX Mode

Connect the AUX cable to the port on the underside of the desk and the other end to your music playback device (3.5mm headphone jack). Use your playback device to control music playback through the desk speakers. In AUX mode, the desktop keys cannot be used to control music playback.

USB Mode

Insert a USB flash drive with MP3 files into the music-reading USB port on the underside of the desk. It will automatically recognize and play songs in MP3 format.

USB Charging

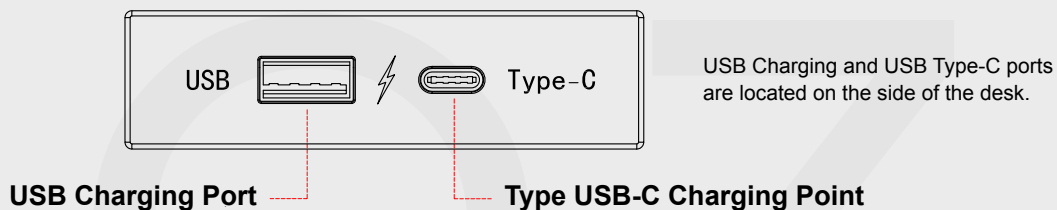

- Two interfaces support 18W quick charging.
- Please connect the Type-C interface correctly with the USB charger on the desk.

Installation Instructions

Wireless Charging

If you have a device compatible with wireless charging, place the phone on the wireless charging indicator and verify if it successfully connects to the charging function. If not, reposition the mobile phone closer to the logo until the connection is successful. Note that certain phone cases may hinder the efficiency of wireless charging. If difficulties arise, consider removing the phone case.



Wireless charging is only compatible with mobile devices that support wireless charging.

Trouble Shooting

When a failure occurs, please refer to the following solutions to identify potential causes and resolve the issue. If these steps do not help, seek assistance from a professional.

PROBLEM	PROBLEM CAUSE	REMEDY
No power display	The power plug is not inserted properly. There is no power in the socket. The power is not switched on.	The jack must be connected electrically. Insert the plug. Turn on the power.
No wireless charging	Power not connected. The mobile device does not have a wireless charging function.	Ensure that the power is connected and turned on. Verify that your mobile device supports wireless charging.

Disposal



If disposal of this product becomes necessary, please do so in an environmentally responsible way. Contact your local government office or authority for suitable disposal or recycling options in your area. Do not dispose of this product or its components with your general domestic waste.