

zeatin

FIELDHOUSE MANUAL

INDEX

03 WHAT'S INCLUDED

04 FIELDHOUSE


05 ASSEMBLY

07 CLEANING AND CARE


08 SAFETY INSTRUCTIONS

10 WHAT'S NEXT


WHAT'S INCLUDED

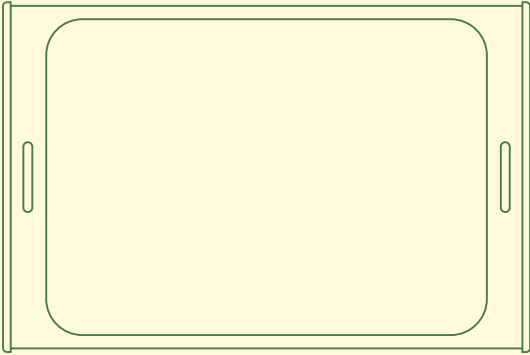


FIELDHOUSE BASE

 


FIELDHOUSE ROOF/
LED GROW LIGHT

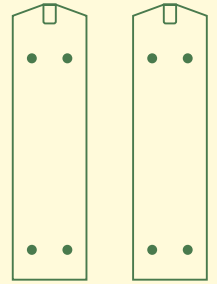

FIELDHOUSE ARMS

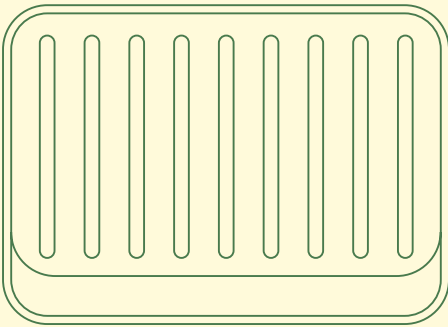

WATER RESERVOIR TRAY

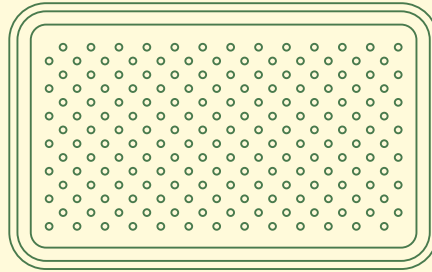

TOP GROW TRAY




GERMINATION LID/
CUTTING BOARD



SPRAY BOTTLE



MEASURING CUP

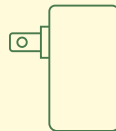

AC/DC ADAPTER




ALLEN WRENCH




SCREWS (X8)


FIELDHOUSE

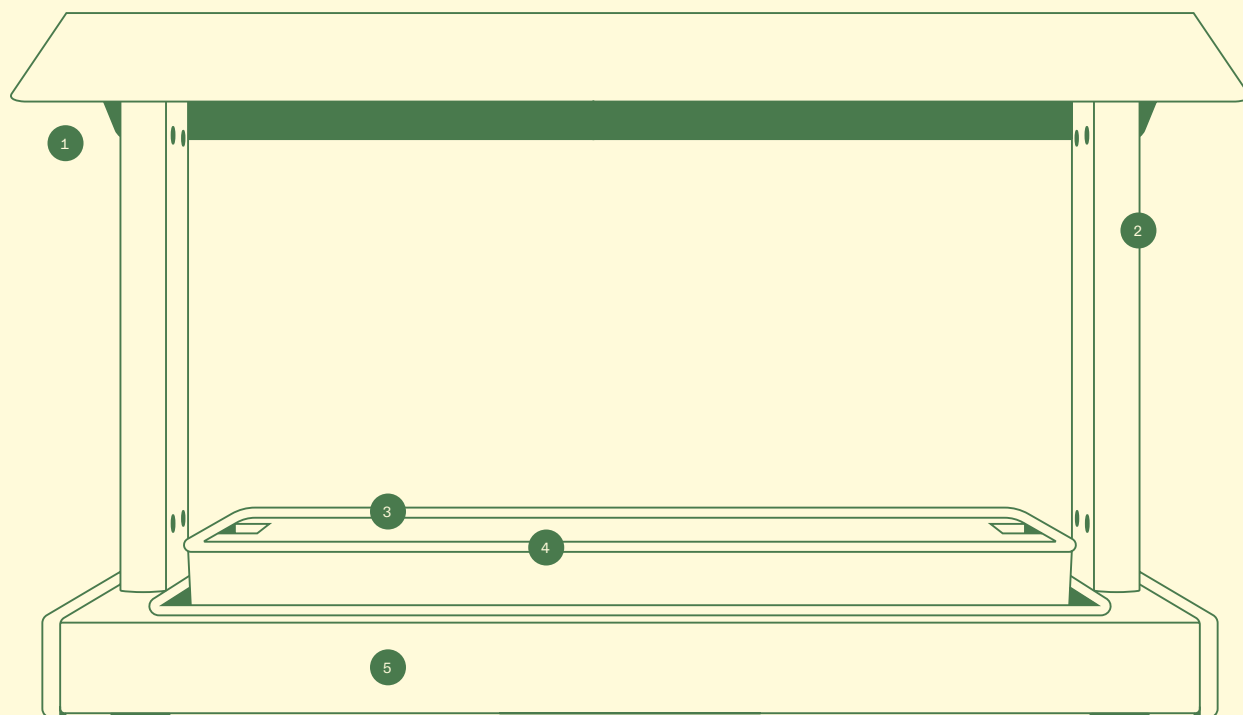


- 1 LED GROW LIGHT
- 2 ARMS
- 3 GERMINATION LID / CUTTING BOARD
- 4 TOP GROW TRAY
- 5 BASE
- 6 ROOF SHADE
- 7 WATER RESERVOIR TRAY
- 8 AC/DC ADAPTER
- 9 POWER ON/OFF BUTTON
- 10 12 HOUR TIMER BUTTON

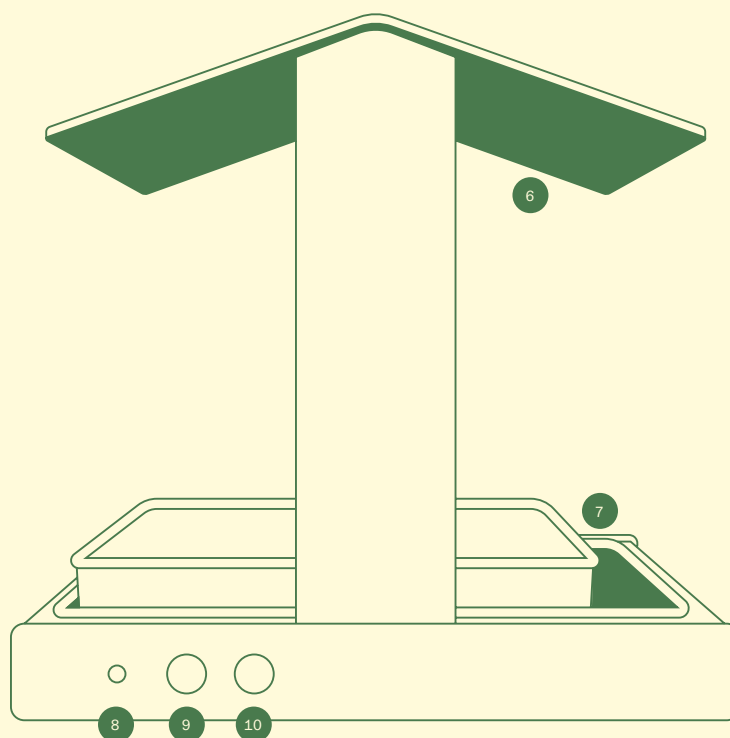


ASSEMBLY

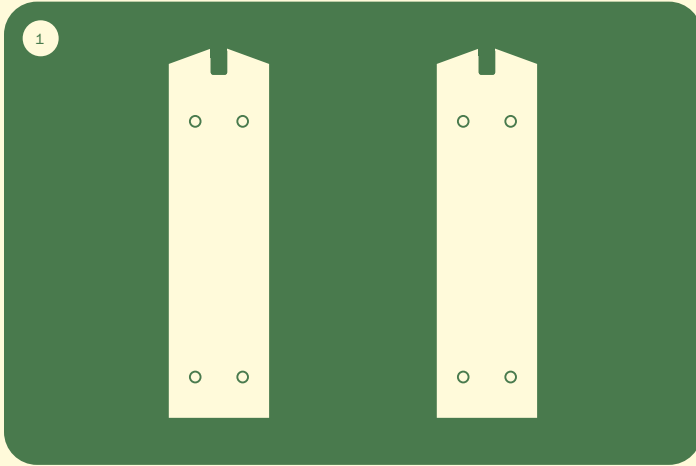


1
Locate the two arms. Each arm has an inner and outer face. The inner face contains a cable routing channel and four (4) screw openings, two (2) at the angled top, and two (2) near the flat bottom.

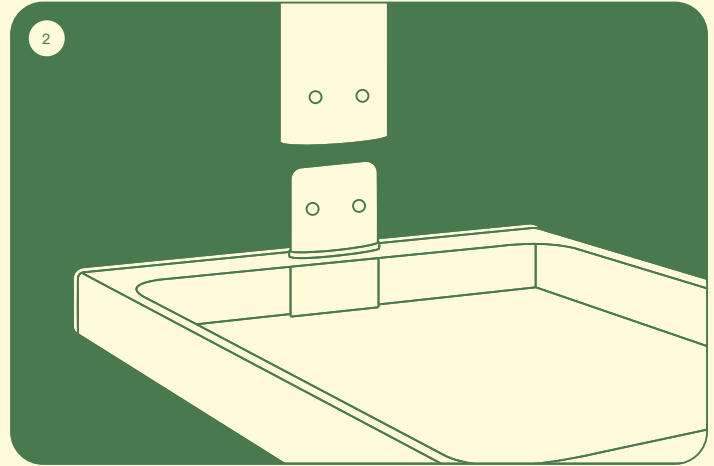

2
Locate the base of the Fieldhouse. Slide the arms over the base uprights. Locate two (2) screws and insert into the holes on the inside arms. Using the included Allen key, tighten the screws until firm, being sure not to over-tighten. Repeat these steps for the second arm.

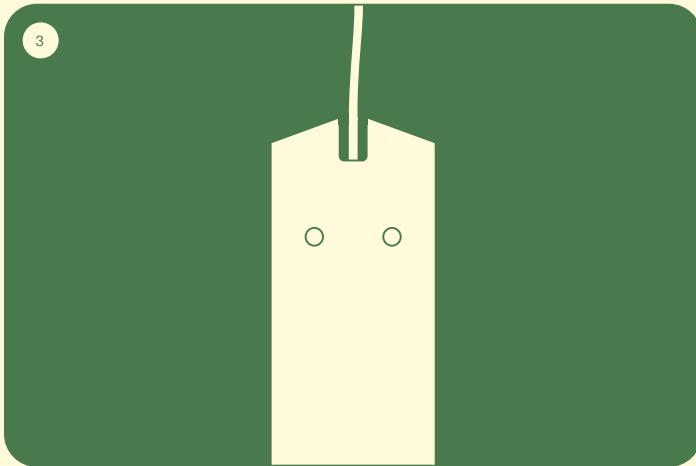


3
Next gather the roof from the packaging. Route the cable connected to the roof shade through the inner square channel of the arm on the same side of the Fieldhouse with the control buttons and Leath logo. Pull the cable fully through to avoid cord pinching inside the arm channel.

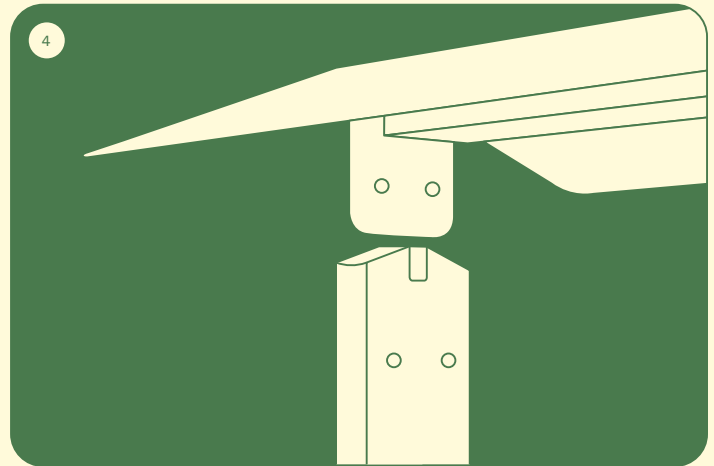


4
After the cable has been successfully routed through the arm, carefully slot the roof uprights into the top of the arms.


ASSEMBLY

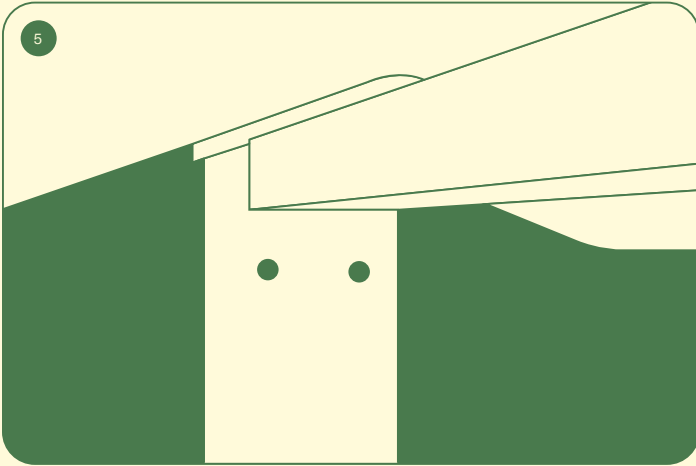


Once slotted, locate two (2) screws, and insert into the holes on the upper part of the inside arms, just below the LED light panels. Using the included Allen key, tighten the screws until firm, being sure not to over-tighten. Repeat these steps for the second arm.

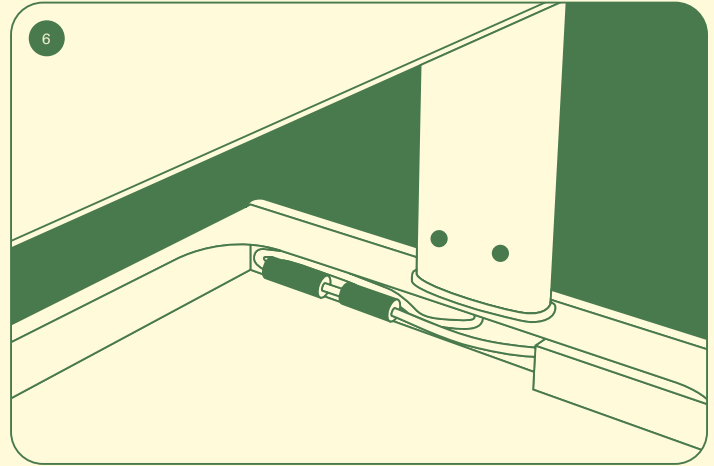

Locate the cable exiting the arm and plug into the cable exiting the control box inside of the Fieldhouse base. Twist the moisture seal clockwise to tighten. Secure the cable to the inner panel using the built-in magnetic ring located around the cable exiting the interior control box.

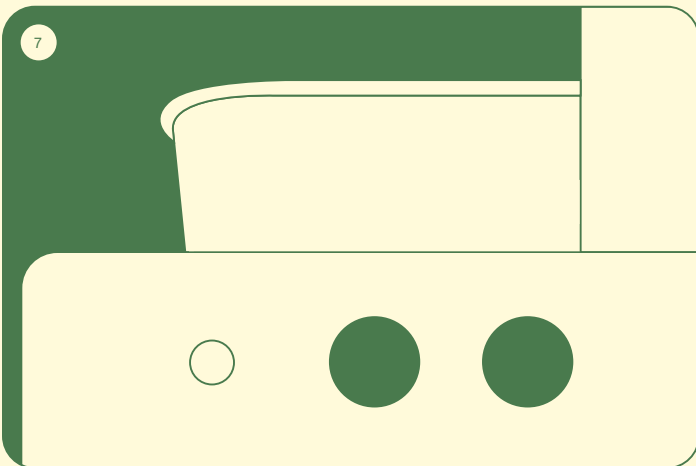

Remove the AC/DC adapter from packaging and plug into port located on the outside panel of the Fieldhouse base and plug into any standard wall outlet.

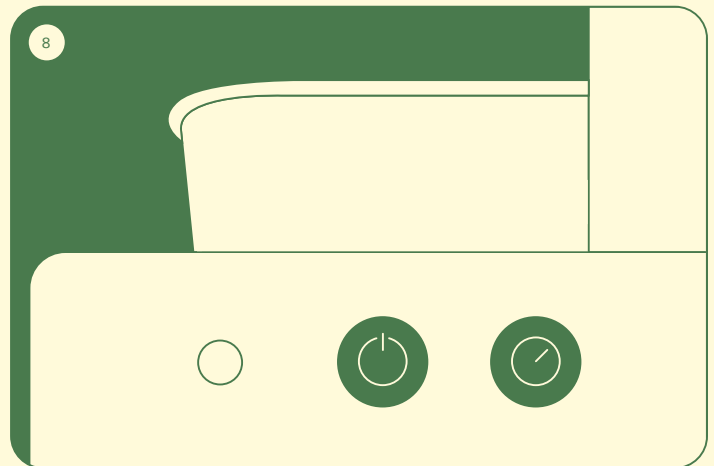

Press power button to turn the light on/off. To activate the timer function, turn on grow light and press the timer button to start timer mode. Grow light will flash twice to indicate successful activation. In timer mode, grow light will cycle between 12 hours on and 12 hours off. After 7 cycles (7 days), the light will turn off.

CLEANING AND CARE



Do not use abrasive cleaning agents, glass cleaning agents, all purpose cleaners or oil-based conditioning agents.

Fieldhouse

The Fieldhouse can, if necessary be cleaned using a dry lint-free cloth.

In the event of heavy soiling, pull the power plug out of the socket and clean frame with a damp cloth and some dishwashing soap.

Ensure the frame is completely dry before you plug the power plug back into the socket.



Always remove the water reservoir tray, base tray, and cutting board before cleaning them.

Grow trays and cutting board

Clean the water reservoir tray, base tray, and cutting board by hand with dishwashing soap. Rinse all parts thoroughly with water and leave them to dry. Do not use a dishwasher.



Do not let water into the bottom base of the Fieldhouse. If moisture gets into the appliance, there is a risk of electric shock.

SAFETY INSTRUCTIONS



Warning!

Please read these instructions completely and carefully.

To reduce the risk of fire, electric shock or injury please:

- Assemble appliance completely and ensure cable connection is secure before plugging in the power cord and turning on controls.
- Turn off all controls before unplugging.
- Unplug the power cable from the power outlet before removing or filling the reservoir.
- Unplug appliance before cleaning the machine.
- Unplug if you are not going to use the appliance for a longer period of time.
- Do not use appliance if plug or cord has been damaged.
- Do not pull on or carry appliance by the power cord. Route cord so it is not subject to strain and is protected from physical damage.
- Never handle plug or appliance with wet hands.
- Do not pull or carry appliance by the cord, use cord as a handle, close a door on the cord, or pull cord around sharp edges or corners. To unplug, grasp the plug, not the cord. Keep cord away from wet or heated surfaces.
- Do not conceal, extend, or permanently affix the cord through a wall, floor, ceiling or other parts of the building structure.
- Never immerse the frame or the power supply unit in water or other liquids.
- Make sure that no liquid comes into contact with the electrical parts as a result of overflow or spilling of liquid onto the device connector or the cables.
- Do not fill more water into the reservoir than indicated by the filling line of the beaker.
- If liquid comes into contact with the electrical parts, unplug the power cable from the power outlet immediately.
- Do not use appliance as a toy.
- Beware of small parts. May pose a choking hazard to young children.
- Make sure that children are not able to access the small parts.
- Use close attention when used near children. Keep appliance out of reach of children.

- Keep the packaging material away from babies and children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, please contact Leath support at hello@growleath.com.
- Do not attempt to repair appliance on your own.
- Do not change the plug, LED, or other parts in any way.
- Household use only.
- Do not use outdoors.
- Installation environment should be between 60–75 degrees Fahrenheit (15–24 degrees Celsius), away from direct sources of heat (stove, furnace vents) and sunlight.
- Place the device on a firm, level and stable surface. The device must not slip or tip over.
- Set up appliance at working height and not above head height. The appliance must be accessible at all times without the need of a climbing aid.
- Place the device at least 3 cm from any walls, ceilings, movable partitions, or the like.
- The installation site must be larger than the appliance.
- Install the power cable so that there is no risk of tripping.
- The installation site must be able to bear the weight of the appliance with a planted grow tray.
- Make sure that the power cord does not hang down from the work surface so that the appliance cannot be accidentally pulled down by it.
- Before touching the top of the metal frame, switch off the light and wait 5 minutes.
- Do not place the appliance on vibrating surfaces (e.g. washing machine).
- For best results, use only seeds and soil packs (Leathlets) purchased from Leath. Do not use fertilizers, soil / water supplements, or chemical agents.
- Suitable for damp locations – Convient aux emplacements
- Do not submerge – Ne pas immerger

Save these instructions

Email hello@growleath.com if you require repairs or support.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WHAT'S NEXT



SCAN FOR GROW DIRECTIONS