 


INSTALLING THE BATTLE ARCADE'S BATTERIES

 
 
1. Locate the battery compartment on the base of your Battle Arcade.
2. Using a phillips screwdriver remove the screw securing the cover and open.
3. Install 4xAA batteries into the battery holder taking care to match the correct polarity (+/-).
4. Replace the battery holder, install the cover and replace the screw.

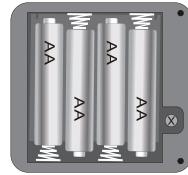

Speaker

USING YOUR BATTLE ARCADE

Controls

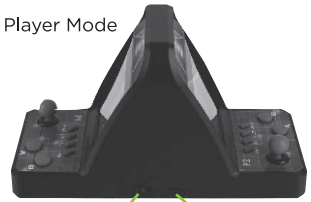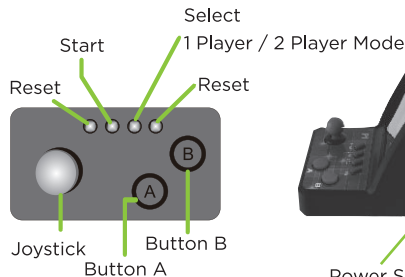

Power Switch

1. Locate the power switch on the side of the Battle Arcade and turn it on.
2. Use the joystick to cycle through the 300 available games. Once you find a game press "Start".
3. Play the Game using the controller.
4. To return to the selection screen press "Reset".

- ★ Tip. 1 For two player operation press "Select" before starting the game to activate the 2nd players controls.
- ★ Tip. 2 You can play without batteries by connecting the provided USB Cable to the Micro USB port and a suitable Class II 5v1a USB charger.

AVAILABLE GAMES (1 PLAYER)

RacingFighter	MerryChristmas	Escapeway	PanzerAttack
Skywing	CatchOut	FatedPirate	Puzzle
Seething	Motorboat	FinalBlood	PolarBat
F22	Octopus	FishStory	SeasonGarden
RabbitVillage	Patternmaker	FruitGift	TheArcher
PanzerFlyCar	Prey	GhostCastle	Abscondee
HeroesMice	RepairUrgently	GoFish	AgileMice
Outrun	Reversi	HammerAndNail	BreastStroke
Poleaxe	SnowBall	HappyMatch	DarkCastle
Bubbles	SpringJester	Highcard	Fishing
SwiftRider	SymbolPuzzle	Island	BackStroke
AetherMission	UFO	JumpJump	MagicBubble
Difference	UnwontedSpace	LittleWitch	FirstDefender
Benthal	Warrior	Meccano	Cowpoke
RoadWorker	WormDream	MetroMenia	Dragon
Greedy	Archery	MirrorDevil	HurryBurry
Ladangel	Crystal	MouseSnare	LuckyBall
ShrewMouse	Discusput	Mowing	MaskedMan
MarsMan	EarthFighter	PizzaBoy	MaskedMan2
MikePig	FiveDays	PoliceDog	MusicMoment
BolTaction	GhostPalace	Polk	Panda
CurlyMonkey2	Harbor	RiverJump	Bugbear
CutFruit	HighJump	Seamaid	PowerRobot
JanKenPunch	HunterAlone	SeaportGuarl	Sudoku
Shark	Javelin	SeaWolf	AetherKavass
ThunderMan	LongJump	SpaceBase	Shift
ChampionBoat	MagicPond	Submarine	DragonDen
Sketchpad	Oldmaid	ToadInTheHole	Dice
MaskedMan3	100mDash	ToyFactory	DuneWar
SuperHero	110mHurdles	WildWorm	HitMouse
TheHacker	Shoot	Antiquarium	Tactful
AmusementPark2	ShotPut	Aquarium	Mars
HorseRacing	Thinice	Assart	MemoryTest
Zooming	TripleJump	Cannonade	MerryChristmas
Pulveration	TwinCards	CloseQuarters	GotOn
Distinction	TwinFish	CubAdventure	CatchTheApples
Dominoes	FishingRace	DepthBomb	FrogHome
FatefulBattle	MagicJony	DevildomDoom	GrotKid
FreestyleStroke	AetherCruiser	Diamond	TheFarmer
FrontalFire	AimCruise	IqChampion	TactfulMonkey
FruitBoxes	AnimalBlockes	FranticMouse	Tnt
Star	BalloonShoot	Fruitdish	Fishing
Defier	BrotherBall	Gate	StrongPjcc
InvincibleGirl	BugCatcher	GoalKeeper	WonderRabbit
Irrigate	BusyBar	GobletTower	SunkenShip
FlightShooter	CandyWorkshop	ButterFlyStroke	Blobman
JumpingWeald	Contest	SpeedChallenge	BackGammon
Knocking	CookieLabyrinth	SuperTennis	Checkers
KnockIt	CrystalBlast	RuralGoblin	ChineseCheckers
ManInRed	Dejectile	HexapodWar	F22

AVAILABLE GAMES (2 PLAYER)

SuperFighter	Combata	Climbing	Burbles
WinterCup	Conqueror	DangerBridge	UnderseaArena
BattlePlan	Dada	EggContest	EdacitySnakes
Spar	Penguin	Strafe	NutCracky
Deformable	SeaWar	LatticeWinner	WrestlingChampion
ExtremeRally	Vanguard	Vigilant	AirCombat
HighwayRider	CurlyMonkey	WaterPipe	Bug
ToTo	King	BurrowExplorer	CloudFire
Aether	Enchanter	Hallihoo	Goodhand
AirUmbrella	BalloonLabyrinth	FrontlineGallop	Hassle
Billiard	SkyDreamer	Lunarian	LawnPurge
GoldenBird	HeroesMice2	Alone	Scoring
PongPong	HomingChicken	Gallagant	Soldier
AnimalContest	JumpingKid	Labyrinth	Tank
Fairy sTreasure	MadXmas	Battle	Arena
FlingBall	PuzzleBlocks	HittingMice	UltimateChoice
PoliceVsThief	RoadMound	GardenWar	BreakOut
Lightning	SpeedMan	Fairy	ConvertSoldier
UtmostWarfare	Swing	XRacing	CrazyGoldDigger
WarZone	TeamStar	SpaceWar	SnackAttack
CoastGuard	Tower	SpeedRacing	VillageProtector
IceOcean	Falling	PuppetShow	SpaceDestroyer
JigChick	Girl	MagicEgg	AetherTigher
Bitha	Lunation	Pindable	
Bomb	TelePort	SpringWorld	
Bounce	BlocksWorld	WonderBall	

WARRANTY

60 DAY LIMITED WARRANTY

Odyssey Marketing / Odyssey Toys warrants this product to be free and clear of defects in materials and workmanship, under normal residential use and conditions, for a period of 60

days of the original purchase date. This warranty does not apply for commercial use of the product and does not extend outside of the U.S and Canada. During the warranty period, we will at our discretion, repair or replace this product without charge, if the product has not been abused or mishandled as by our determination.

Returns or Exchange requests must be submitted to Odyssey Customer Support within 30-days of purchase or delivery and must be returned in their original packaging. All Parts and Components are covered within 60-days of purchase or delivery. If original packaging is not available additional fee's may apply.

To conduct Returns or Exchanges a Return Authorization Number must be issued by Odyssey Marketing's Customer Service Department. Once you have obtained a Return Authorization Number, you will be provided a return address within the Customer Service email.

This warranty does not cover installation, adjustments in the home, nor damage due to accidents, misuse, abuse, fire, or any acts of God, incorrect line voltage, damage to other equipment caused by improper installation, unauthorized or improper modifications.

**** THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.**** 2021 Odyssey Marketing Corp.

FCC STATEMENT: This product complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference receiver, including interference that may cause undesirable operation.



For Customer Service please email:
Care@OdysseyToys.com

Please note the units model number and name in your email:
Model no. ODY-1979VG • Battle Arcade

For questions or assistance on installation, parts or
operation contact: Odyssey Toys at 1-(305)-933-4480.
Hours of operation: 10:00am - 5:00pm EST
Email: Care@OdysseyToys.com
or visit us online at: www.odysseytoys.com/support
20855 NE 16 AVE C-4, Miami FL, 33179

CAUTIONS & WARNINGS

- Suitable for ages 8 and up. Adult supervision is always recommended.
- This product contains small parts which are a choking hazard. Keep away from small children.
- Manufacturers and dealers disclaim all responsibility for damage caused by misuse.
- If product will be stored and unused for an extended period of time, please remove the batteries.
- Check the batteries regularly for potential leakage or corrosion that may occur.
- When installing the batteries carefully follow the polarity marking +/-.
- Do not mix different battery types.
- Remove exhausted or drained batteries.

CARE & MAINTENANCE

- Do not submerge the unit in any liquids.
- Keep the unit dry.
- Do not place the unit near powerful, un-shielded magnets.
- Do not expose the unit to extreme hot or cold temperatures.
- Do not hit, drop, or smash the unit with extreme force.
- Do not disassemble the unit for any reason.

NOT FOLLOWING THESE PRECAUTIONS WILL VOID YOUR WARRANTY.

FCC STATEMENT: This product complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference receiver, including interference that may cause undesirable operation.

MANUFACTURED FOR ODYSSEY TOYS
MADE IN CHINA

