

CUSTOMER SERVICE

For Customer Service please email: Care@OdysseyToys.com

Please note the units model number and name in your email:
Model no. ODY-805 COMET POPPER

www.OdysseyToys.com

60 DAY LIMITED WARRANTY

Odyssey Marketing/ Odyssey Toys warrants to the original purchaser when used in North America only, that this product shall be free of defects in material and workmanship. This warranty applies within 60 days of the original purchase date with normal home use. This warranty does not apply for commercial use of this product. Use outside of North America is not covered by this warranty. During the warranty period, we will at our discretion, repair or replace this product without charge, as long as the product has not been abused or mishandled as by our determination. Our determination shall be final and be the consumer's sole remedy. ALL RETURNS must be accompanied by a Return Authorization Number which is issued by Odyssey Marketing's Customer Service Department.

Please contact Customer Service BEFORE returning any products or parts thereof. Once you have obtained a Return Authorization Number you will be provided a return address within the Customer Service email.

This warranty does not cover installation, adjustments in the home, nor damage due to accidents, misuse, abuse, fire, or any acts of God, incorrect line voltage, damage to other equipment caused by improper installation, unauthorized or improper modifications. This warranty gives you specific legal rights and you may also have other rights that vary from state to state.

**** THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.**** ©2017 Odyssey Marketing Corp.

FCC STATEMENT: This product complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference receiver, including interference that may cause undesirable operation.



Please do not return this product to the store.

For questions or assistance on installation, parts, or operation contact Odyssey Toys at: **1-(305)-933-4480**.

Email: Care@OdysseyToys.com

or visit us online at: www.odysseytoys.com/support

MADE IN CHINA




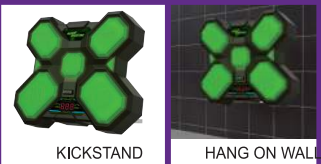
INSTRUCTION MANUAL: COMET POPPER

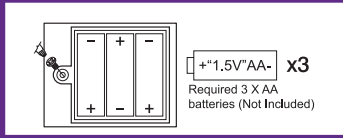
FOR AGES 8+




ASSEMBLING THE COMET POPPER

- 

Apply all the included decals to the Comet Popper blaster and target.
- 

Insert 3x AA batteries into the target and either setup with the kick stand or hang on the wall.
- 

Required 3 X AA batteries (Not Included)
- 

Insert a foam ball into the Comet Popper blaster.

USING THE COMET POPPER



- Setup the Digital Target using either the stand mount or the wall mount options.
- Turn the Digital Target Mode switch to A or B mode.
A Mode = Aim at the targets as they light up. Each round lasts 3 mins.
B Mode = Practice Mode, aim at any target. Each round lasts 3 mins.
- Load the Comet Popper blaster with a soft ball and pull back the blaster handle.
- Take aim at the target and fire.

- ★ Tip 1. After the 3mins of the game you can start a next round by shooting the center score button.
- ★ Tip 2. If you leave the game on and unattended it will remind you to play every 60seconds, and turn off automatically after 3 mins.

POWER SWITCH



Use the Mode Switch to change between Gameplay Modes

MUSIC SWITCH



Use the "Music" switch to select between Music, Silent or SoundFX Mode