




TRAILBLAZER FOG CAR



SETTING UP THE TRAILBLAZER FOG CAR


1. Turn the car over and turn off the power switch.
2. Using a Phillips screwdriver open the battery compartment.
3. Connect the included LiPo battery to the Trailblazer's connector as shown in the diagram.
4. Close the battery compartment, re-tighten screw.
5. Switch the power switch to On.

Power On/Off Switch LiPo Battery Connector

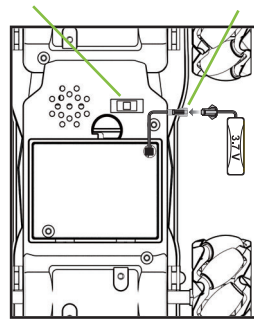


SETTING UP THE REMOTE CONTROL

1. Using a phillips screwdriver open the battery cover on the back of the controller.
2. Install 2x new AA batteries taking care to match the correct polarity (+/-).
3. Close the battery cover and re-tighten the screw.

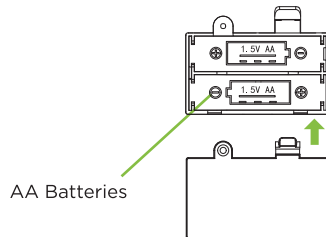

CHARGING THE TRAILBLAZER'S BATTERY


1. Remove the battery from the Trailblazer as shown in the setting up instructions.
 2. Connect the Trailblazer battery to the USB charging cord connector.
 3. Plug the USB cord into a 5v1a USB charger.
 4. The charger light will turn on to indicate charging. When the charger light goes out charging is complete and you can reinstall the battery in the Trailblazer.
- ★Tip. Full charge takes up to 2hrs

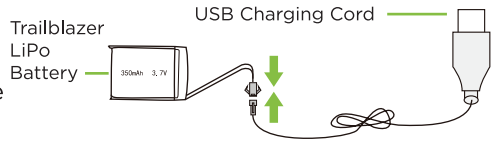

TRAILBLAZER FOG CAR CONTROLLER

★ Tip. For best results the car needs to be within a 15 foot range of the controller.


Controller Functions

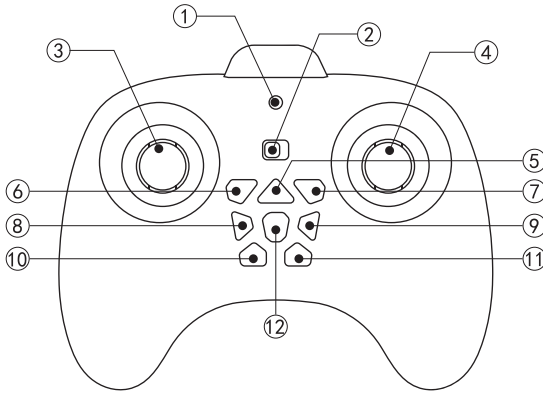


1. Indicator Light
2. Controller Power Switch (On/Off)
3. Forward / Backward Joystick
4. Left / Right Joystick
5. Auto Demo (Short Press) & Sound On/Off (Long Press).
6. Left Forward at 45deg
7. Right Forward at 45deg
8. Strafe Left
9. Strafe Right
10. Left Backward at 45deg
11. Right Backward at 45deg
12. Activate Fog

Trailblazer Movement


Forward / Backward

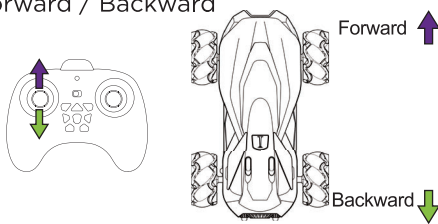


Rotate Left / Right

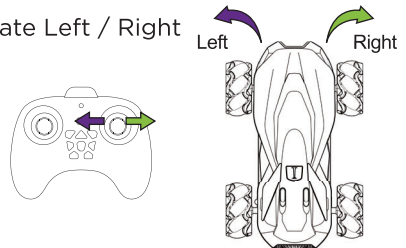

Left Forward at 45deg

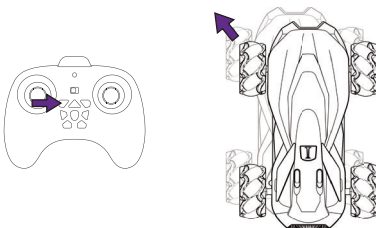


Right Forward at 45deg

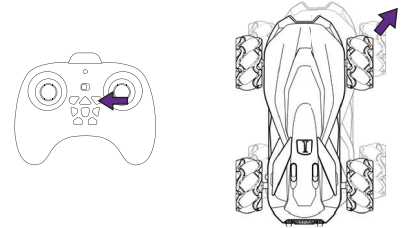


Trailblazer Movement Continued


Left Backward at 45deg

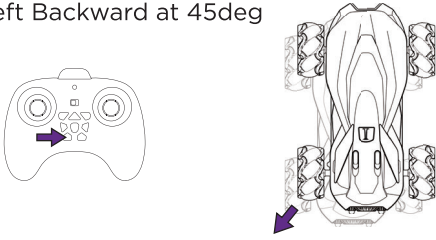


Right Backward at 45deg

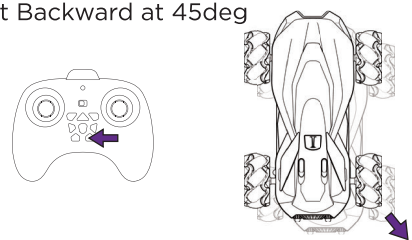

Strafe Left or Right

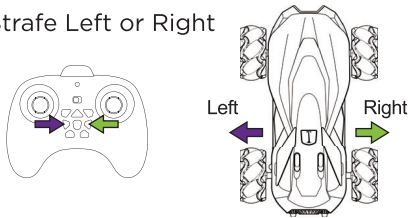

Demo Mode

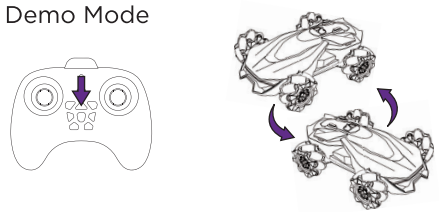

USING THE FOG FUNCTION


To use the Trailblazer's fog function, the water reservoir on the top of the car should be filled with clean water.

To do this follow these steps:

1. Open the cover on the top of the car and use the provided dropper to fill the water.
2. Once the car is full of water close the cover and turn the car on.
3. Pressing the fog button on the controller will activate the fog.



Water Reservoir

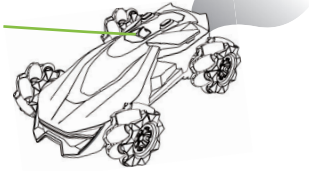

Press this Button to Activate Fog

CAUTIONS & WARNINGS

- Suitable for ages 8 and up. Adult supervision is always recommended.
- This product contains small parts which are a choking hazard. Keep away from small children.
- Manufacturers and dealers disclaim all responsibility for damage caused by misuse.
- Keep hair and loose clothing away from the car when powered on.
- If car will be stored and unused for an extended period of time, please remove the batteries.
- Check the batteries regularly for potential leakage or corrosion that may occur.
- When installing the batteries carefully follow the polarity marking +/-.
- Do not mix different battery types & remove exhausted or drained batteries.
- Charge the Trailblazer's battery using a 5v 1a Class 2 USB charger.



For Customer Service please email:
Care@OdysseyToys.com

Please note the units model number and name in your email:
Model no. ODY-120 • Trailblazer Fog Car

www.OdysseyToys.com



Please do not return this product to the store.

CARE & MAINTENANCE

- Do not submerge the unit in any liquids.
- Keep the unit dry.
- Do not place the unit near powerful, un-shielded magnets.
- Do not expose the unit to extreme hot or cold temperatures.
- Do not hit, drop, or smash the unit with extreme force.
- Do not disassemble the unit for any reason.

NOT FOLLOWING THESE PRECAUTIONS WILL VOID YOUR WARRANTY.

60 DAY LIMITED WARRANTY

Odyssey Marketing/ Odyssey Toys warrants to the original purchaser when used in the United States only, that this product shall be free of defects in material and workmanship. This warranty applies within 60 days of the original purchase date with normal home use. This warranty does not apply for commercial use of this product. Use outside of United States is not covered by this warranty. During the warranty period, we will at our discretion, repair or replace this product without charge, as long as the product has not been abused or mishandled as by our determination. Our determination shall be final and be the consumer's sole remedy, ALL RETURNS must be accompanied by a Return Authorization Number which is issued by Odyssey Marketing's Customer Service Department.

Please contact Customer Service BEFORE returning any products or parts thereof. Once you have obtained a Return Authorization Number you will be provided a return address within the Customer Service email.

This warranty does not cover installation, adjustments in the home, nor damage due to accidents, misuse, abuse, fire, or any acts of God, incorrect line voltage, damage to other equipment caused by improper installation, unauthorized or improper modifications. This warranty gives you specific legal rights and you may also have other rights that vary from state to state.

**** THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES. EXPRESSED OR IMPLIED INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.** ©2020 Odyssey Marketing Corp.**

FCC ID: 2AG7S-Q72

FCC STATEMENT: This product complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference receiver, including interference that may cause undesirable operation.

MADE IN CHINA

