 





CONTENTS


Target

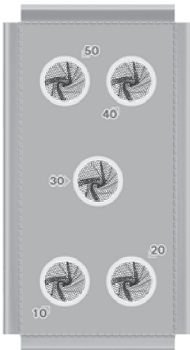

 
1x
Target
Backdrop

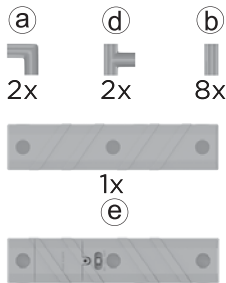

1x
Motorized
Base

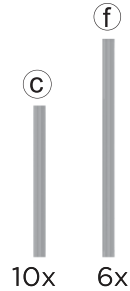 

Balls & Launchers

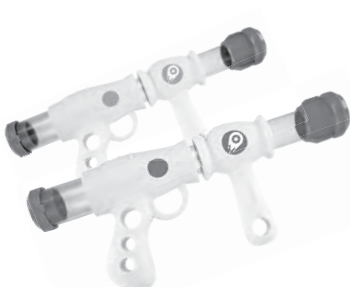 

2x Ball blasters



 
24x Foam Balls



4x Footballs
2x Baseballs

ASSEMBLING THE MOVING TARGET


Assemble the moving target by gently pushing together the connecting pieces and tubes.
Follow the letters for the correct tube and connection piece.

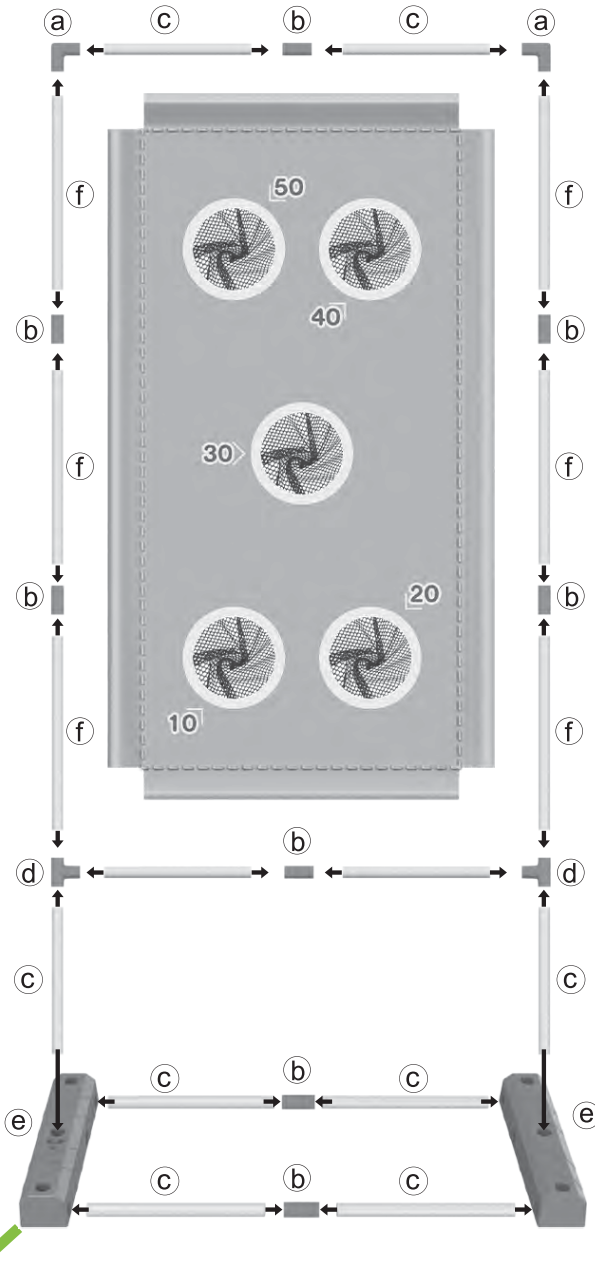

Motorized Base

SETTING UP THE MOTORIZED BASE

 Mode Switch

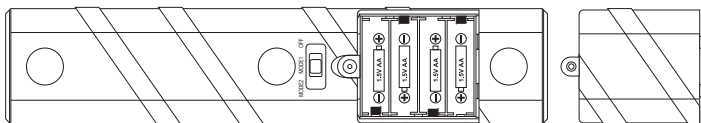

1. Locate the battery compartment on the underside of the target motorized base.
2. Using a phillips screwdriver remove the screw securing the cover and open.
3. Install 4xAA batteries into the battery holder taking care to match the correct polarity (+/-).
4. Replace the battery holder, install the cover and replace the screw.

USING THE MOVING TARGET BLASTER

1. After assembling the target, and installing the batteries in the motorized base set the target on a level and smooth floor.
2. Switch the Mode Switch to Mode #1 or Mode #2 to start the game.
 - ★ In Mode #1 the target moves back and forth at a fixed speed and distance of +/- 6'.
 - ★ In Mode #2 the target moves back and forth over random distances and at different speeds.
3. Use the included Footballs, Baseballs or Ball Blasters & Balls to aim for the targets. The player with the highest point score wins!
4. When finished playing turn the Mode Switch to the Off position.

CARE & MAINTENANCE

- Do not submerge the bow and arrow in any liquids.
- Keep the target and accessories dry.
- Do not expose the unit to extreme hot or cold temperatures.
- Remove all batteries when not being used or stored.

NOT FOLLOWING THESE PRECAUTIONS WILL VOID YOUR WARRANTY.



For Customer Service please email:
Care@OdysseyToys.com

Please note the units model number and name in your email:
Model no. ODY-807 • Moving Target Blaster

www.OdysseyToys.com

CAUTIONS & WARNINGS

- Suitable for ages 8 and up. Adult supervision is required.
- This product contains small parts which are a choking hazard. Keep away from small children.
- Manufacturers and dealers disclaim all responsibility for damage caused by misuse.
- Do not aim the target blaster at people or animals.
- Be a responsible marksman.

WARRANTY

60 DAY LIMITED WARRANTY

Odyssey Marketing/ Odyssey Toys warrants to the original purchaser when used in the United States only, that this product shall be free of defects in material and workmanship. This warranty applies within 60 days of the original purchase date with normal home use. This warranty does not apply for commercial use of this product. Use outside of United States is not covered by this warranty. During the warranty period, we will at our discretion, repair or replace this product without charge, as long as the product has not been abused or mishandled as by our determination. Our determination shall be final and be the consumer's sole remedy. ALL RETURNS must be accompanied by a Return Authorization Number which is issued by Odyssey Marketing's Customer Service Department.

Please contact Customer Service BEFORE returning any products or parts thereof. Once you have obtained a Return Authorization Number you will be provided a return address within the Customer Service email.

This warranty does not cover installation, adjustments in the home, nor damage due to accidents, misuse, abuse, fire, or any acts of God, incorrect line voltage, damage to other equipment caused by improper installation, unauthorized or improper modifications. This warranty gives you specific legal rights and you may also have other rights that vary from state to state.

**** THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.** ©2022 Odyssey Marketing Corp.**

FCC STATEMENT: This product complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference receiver, including interference that may cause undesirable operation.

MADE IN CHINA

