

Odyssey my first camera

MEET YOUR FIRST CAMERA



CAMERA OPERATION

Turning Your Camera On

1. Press and hold the power button, the blue indicator will light up.
2. Pressing and holding the power button again will turn the camera off.

Taking Photos

1. Press the "Mode Button" until the menu shows on the screen.
2. Use the "Directional Buttons" to highlight the camera icon, then press the "Take Photo / Video" button to select.
3. Press the "Take Photo / Video" button again to take photos.

Taking Video

1. Press the "Mode Button" until the menu shows on the screen.
2. Use the "Directional Buttons" to highlight the video icon, then press the "Take Photo / Video" button to select.
3. Press the "Take Photo / Video Button" once to start shooting video, and again to stop.

★ Tip 1. In the Camera mode use the up or down directional buttons to access fun on screen graphics and frames for your photos.

★ Tip 2. In the Camera mode you can press the right directional button to jump straight to video mode.

CAMERA FEATURES

Your camera contains many customizable features in the setup menu. You can access this menu by pressing the "Mode Button", then using the "Directional Buttons" to navigate to the gear icon then using the "Take Photo / Video Button" to enter the setup menu. You can exit the menu at anytime by pressing the "Menu Button" again.

Camera & Video Resolution

You can use "Resolution" menu options to change the resolution of your videos from 1080p to VGA. Or change the resolution of your photos using the "Photo Size" menu from 40M to 8M.

★ Tip 1. For high resolution videos with a large file size use 1080P. To reduce file sizes select a lower resolution such as 720p or VGA.

★ Tip 2. For high resolution photos with a large file size use 40M setting. To reduce file sizes select a lower resolution such as 8M.

Timestamp

Use the "timestamp" option to permanently imprint the date and time your photo or video was taken on the saved file.

Delay Capture

Use the "Delay Capture" mode to setup a self timer mode that will take photos at 3 or 10 seconds after pressing the "Take Photo / Video Button".

Format

Use the "format" option to format a newly installed memory card and erase all the files.

Language

Use the "language" option to toggle between different language options for the camera menus.

Auto Off

Use the "auto off" option to set how long the camera will stay on without being used. Select from "off" and 1, 3 or 5 minutes.

★ Tip. Selecting "off" will mean the camera will stay on indefinitely until the power button is pressed.

Volume

Use the "volume" option to change the volume of the cameras sounds.

Date Input

Use the "date input" to set the date and time used by your camera.

Restore factory settings

Use "Restore factory settings" to reset your camera back to factory default settings.

GAMES & MUSIC MODES

Games Mode

1. Press the "Mode Button" until the menu shows on the screen.
2. Use the "Directional Buttons" to highlight the game icon, then press the "Take Photo / Video" button to select.
3. Use the "Directional Buttons" again to navigate through the preprogrammed games.
4. Press the "Take Photo / Video Button" to select a game.

Music Mode

1. Press the "Mode Button" until the menu shows on the screen.
2. Use the "Directional Buttons" to highlight the music icon, then press the "Take Photo / Video" button to select.
3. The camera will automatically play any stored MP3s on the Memory Card.
4. Use the "Directional Buttons" to skip tracks.

DOWNLOADING PHOTOS AND VIDEOS

To download your photos to a computer or other memory card compatible device, simply remove the memory card from your camera and insert into a reader that is compatible with the memory card.

PHOTO & VIDEO PLAYBACK

Video / Photo Playback

1. Press the "Mode Button" until the menu shows on the screen.
2. Use the "Directional Buttons" to highlight the picture frame icon, then press the "Take Photo / Video" button to select.
3. Use the "Directional Buttons" again to navigate through the stored files.
4. Press the "Take Photo / Video Button" to view the file.

CHARGING YOUR CAMERA

Charging the Camera Battery

1. To charge the camera battery connect the USB charging cord to the USB Charging Port on the camera and the included charging adapter.
2. A charging icon will show on the camera display to show the camera is charging.

★ Tip. Full charge takes approx. 1 Hr.



Full Battery



Half Battery



Low Battery



Empty Battery

CARE & MAINTENANCE



Tip. If the camera freezes or becomes non-responsive you can perform a reset by pressing the reset button located next to the USB charging port.

- Do not submerge the unit in any liquids.
- Keep the unit dry.
- Do not place the unit near powerful, un-shielded magnets.
- Do not expose the unit to extreme hot or cold temperatures.
- Do not hit, drop, or smash the unit with extreme force.
- Do not disassemble the unit for any reason.

NOT FOLLOWING THESE PRECAUTIONS WILL VOID YOUR WARRANTY.

CAUTIONS & WARNINGS

- Suitable for ages 3 and up. Adult supervision is always recommended.
- This product contains small parts which are a choking hazard. Keep away from small children.
- Manufacturers and dealers disclaim all responsibility for damage caused by misuse.
- Do not exceed charging volts and amps of 5v1a.
- Do not leave charger connected or charge for more than 1hr.



For Customer Service please email:
Care@OdysseyToys.com

Please note the units model number and name in your email:
Model no. ODY-510 • My First Camera

www.OdysseyToys.com

MADE IN CHINA

