



my first Recar

For Your Junior Driver!

SETTING UP THE RC CAR AND REMOTE

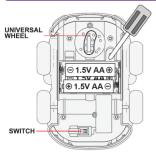

 - Locate the battery compartment on the base of your RC Car.
- 2. Using a phillips screwdriver remove the screw securing the cover and open.
- 3. Install 3xAA batteries into the battery compartment taking care to match the correct polarity (+/-).
- 4. Replace the battery holder, install the cover and replace the screw.




- 1. Locate the battery compartment on the base of the remote.
- 2. Using a phillips screwdriver remove the screw securing the cover and open.
- 3. Install 2xAA batteries into the battery compartment taking care to match the correct polarity (+/-).
- 4. Replace the battery holder, install the cover and replace the screw.

CHANGING THE CAR CHARACTERS AND DRIVING



Your RC car comes with 3 different characters, choose between the Bee Car, Train and Boat

 Simply change the character top over the motorized base.



To drive the car turn the car on using the switch below.

Then press the forward button to move the car forward and backward button to move the car backwards.

When finished with the car turn the car off.



For Customer Service please email: Care@OdysseyToys.com

Please note the units model number and name in your email: Model no. ODY-2421 • My First RC Car

www.OdysseyToys.com

For questions or assistance on installation, parts or operation contact: Odyssey Toys at 1-(305)-933-4480.

Hours of operation: 10:00am - 5:00pm EST

Email: Care@OdysseyToys.com

or visit us online at: www.odysseytoys.com/support

20855 NE 16 AVE C-4 Miami FL 33179

CAUTIONS & WARNINGS

- Suitable for ages 3 and up. Adult supervision is always recommended.
- This product contains small parts which are a choking hazard. Keep away from small children.
- Manufacturers and dealers disclaim all responsibility for damage caused by misuse.
- Keep hair and loose clothing away when powered on.
- Check the batteries regularly for potential leakage or corrosion that may occur.
- When installing the batteries carefully follow the polarity marking +/-.
- Do not mix different battery types.
- Remove exhausted or drained batteries.

CARE & MAINTENANCE

- Do not submerge the unit in any liquids.
- Keep the unit dry.
- Do not place the unit near powerful, un-shielded magnets.
- Do not expose the unit to extreme hot or cold temperatures.
- Do not hit, drop, or smash the unit with extreme force.
- Do not disassemble the unit for any reason.

NOT FOLLOWING THESE PRECAUTIONS WILL VOID YOUR WARRANTY.

FCC STATEMENT: This product complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference receiver, including interference that may cause undesirable operation.













