

 
 


# ROBOT ROBOT

 


## USING YOUR ROBOT ROBOT

1. Locate the On / Off switch on the back of your Robot's head and switch the Robot on.
2. The Robot will start up in Sound FX mode.
3. Tap your Robot on the head to hear your Robot talk and play it's Sound FX.

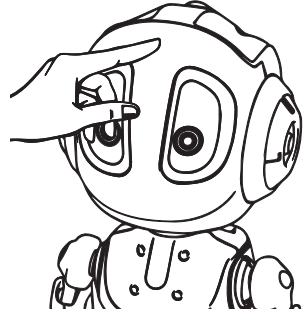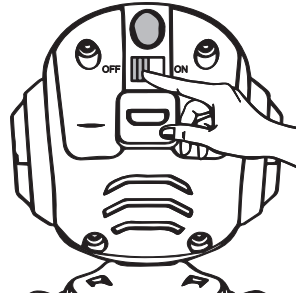 


4. Press the button to change the Robot's mode to "repeating" mode.
5. Your Robot will now listen for a short while and then speak what it heard back to you.

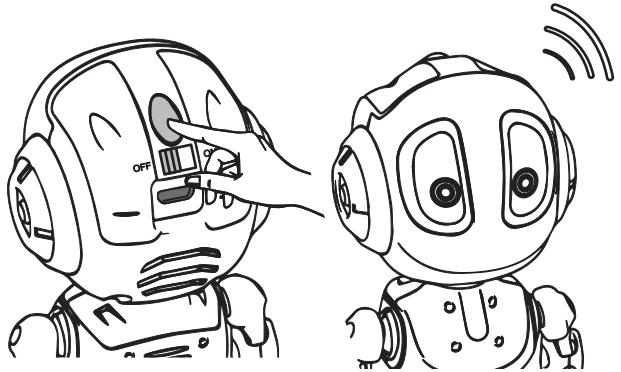

## CHARGING ROBOT ROBOT

1. If your Robot turns itself off quickly after being turned on it needs to be charged.
2. Use the included Micro USB cable to connect to the charging port on the back of the Robot's head.
3. Connect the USB cord to a computer or suitable Class 2 USB charger.
4. The back of the Robot will light up red when charging. A full charge takes approx. 2hrs.

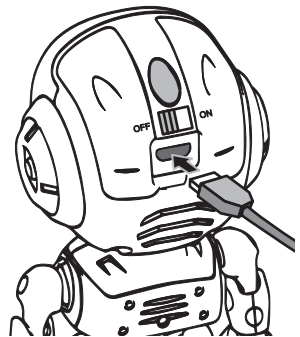



For Customer Service please email:  
Care@OdysseyToys.com

Please note the units model number and name in your email:  
Model no. ODY-1216 RED, ODY-1216 GREEN & ODY-1216 BLUE • Robot Robot

[www.OdysseyToys.com](http://www.OdysseyToys.com)

## CAUTIONS & WARNINGS

- Suitable for ages 3 and up. Adult supervision is always recommended.
- This product contains small parts which are a choking hazard. Keep away from small children.
- Manufacturers and dealers disclaim all responsibility for damage caused by misuse.
- Use only Class 2 USB chargers to charge this device.
- Do not leave unattended when charging.
- Do not exceed 5v 1a charging supply.

## CARE & MAINTENANCE

- Do not submerge the unit in any liquids.
- Keep the unit dry.
- Do not place the unit near powerful, un-shielded magnets.
- Do not expose the unit to extreme hot or cold temperatures.
- Do not hit, drop, or smash the unit with extreme force.
- Do not disassemble the unit for any reason.

NOT FOLLOWING THESE PRECAUTIONS WILL VOID YOUR WARRANTY.

MADE IN CHINA





## 60 DAY LIMITED WARRANTY

Odyssey Marketing / Odyssey Toys warrants to the original purchaser, when used in North America only, that this product shall be free of defects in material and workmanship. This warranty applies within 60 days of the original purchase date with normal home use. This warranty does not apply for commercial use of this product. Use outside of North America is not covered by this warranty. During the warranty period, we will at our discretion, repair or replace this product without charge, as long as the product has not been abused or mishandled as by our determination. Our determination shall be final and be the consumer's sole remedy. ALL RETURNS must be accompanied by a Return Authorization Number which is issued by Odyssey Marketing's Customer Service Department.

Please contact Customer Service BEFORE returning any products or parts thereof. Once you have obtained a Return Authorization Number, you will be provided a return address within the Customer Service email.

This warranty does not cover installation, adjustments in the home, nor damage due to accidents, misuse, abuse, fire, or any acts of God, incorrect line voltage, damage to other equipment caused by improper installation, unauthorized or improper modifications. This warranty gives you specific legal rights and you may also have other rights that vary from state to state.

**\*\* THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.\*\* ©2017 Odyssey Marketing Corp.**

FCC STATEMENT: This product complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference receiver, including interference that may cause undesirable operation.



***Please do not return this product to the store.***

For questions or assistance on installation, parts, or operation contact Odyssey Toys at: **1-(305)-933-4480**.

Email: **Care@OdysseyToys.com**

or visit us online at: **www.odysseytoys.com/support**