




## SETTING UP SLAP CAR

1. Turn off the power switch.
2. Use a phillips screwdriver to open the battery cover.
3. Connect the battery wire to the Slap Car's connector as shown on the diagram.
4. Close the battery compartment, reinstall the screw, and switch the power switch to On.

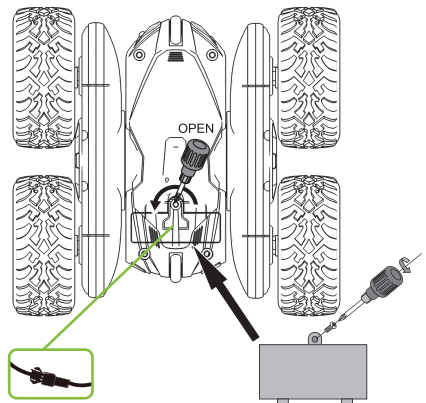

Battery Connector


## SETTING UP THE REMOTE CONTROL

1. Use a phillips screwdriver to open the battery cover.
2. Install 2x new AA batteries taking care to match the correct polarity (+/-).
3. Close the cover and reinstall the screw.



## CHARGING THE SLAP CAR'S BATTERY

1. Remove the battery from the Slap Car as shown in the Slap Car setting up instructions.
  2. Connect the battery to the USB charging cord connector.
  3. Plug the USB cord into a 5v1a USB charger.
  4. The charger light will turn on to indicate charging. When the charger light goes out charging is complete and you can reinstall the battery.
- ★Tip. Full charge takes approx. 1hr

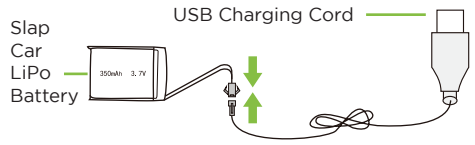

## OPERATING SLAP CAR

- For best results the Slap Car needs to be within a 15' foot range of the controller.


### Controller Functions

Left Wheels  
Forward

Right Wheels  
Forward

Left Wheels  
Back

Right Wheels  
Back

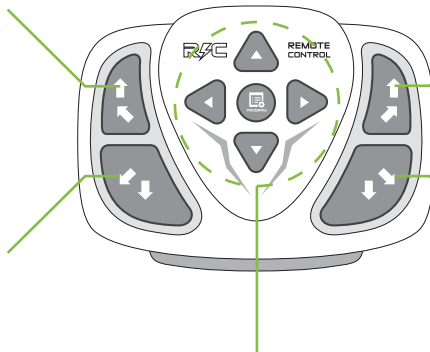

Programming  
Buttons

(Colors may vary)

## Slap Car Movement

(Colors may vary)

Forward



Reverse



Spin Left



Spin Right



Turn Left



Turn Right



Reverse & Turn Left



Reverse & Turn Right



## Slap Car Programming

To program your slap car, press the middle programming button,



followed by the direction buttons you want to program eg.



When you have finished press



again to run the program.



For Customer Service please email:  
Care@OdysseyToys.com

Please note the units model number and name in your email:  
Model no. ODY-112BLK • Slap Car

[www.OdysseyToys.com](http://www.OdysseyToys.com)

## CAUTIONS & WARNINGS

- Suitable for ages 8 and up. Adult supervision is always recommended.
- This product contains small parts which are a choking hazard. Keep away from small children.
- Manufacturers and dealers disclaim all responsibility for damage caused by misuse.
- Keep hair and loose clothing away from the Slap Car when powered on.
- If Slap Car will be stored and unused for an extended period of time, please remove the batteries.
- Check the batteries regularly for potential leakage or corrosion that may occur.
- When installing the batteries carefully follow the polarity marking +/-.
- Do not mix different battery types.
- Remove exhausted or drained batteries.
- Do not exceed charging volts and amps of 5v1a.
- Do not leave charger connected or charge for more than 1hr.

## CARE & MAINTENANCE

- Do not submerge the unit in any liquids.
- Keep the unit dry.
- Do not place the unit near powerful, un-shielded magnets.
- Do not expose the unit to extreme hot or cold temperatures.
- Do not hit, drop, or smash the unit with extreme force.
- Do not disassemble the unit for any reason.

NOT FOLLOWING THESE PRECAUTIONS WILL VOID YOUR WARRANTY.

MADE IN CHINA

