




SPYROVER FPV




SETTING UP THE SPYROVER

1. Turn off the power switch.
2. Open the battery compartment.
3. Connect the battery wire to the Spy Rover's connector as shown on the diagram.
4. Close the battery compartment and switch the power switch to On.

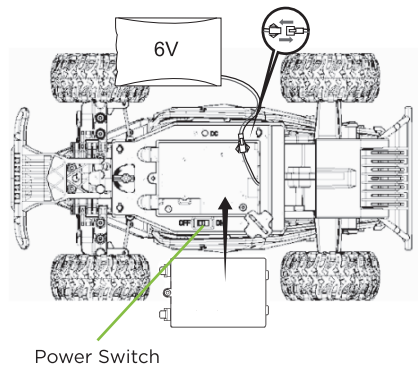


SETTING UP THE REMOTE CONTROL

1. Open the battery cover on the base of the controller.
2. Install 4x new AA batteries taking care to match the correct polarity (+/-).
3. Close the battery cover.

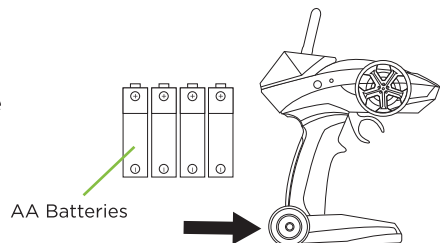

CHARGING THE SPY ROVER'S BATTERY

1. Remove the battery from the Spy Rover as shown in the setting up instructions.
 2. Connect the Spy Rover battery to the USB charging cord connector.
 3. Plug the USB cord into a 5v1a USB charger.
 4. The charger light will turn on to indicate charging. When the charger light goes out charging is complete and you can reinstall the battery in the Spy Rover.
- ★Tip. Full charge takes up to 2hrs

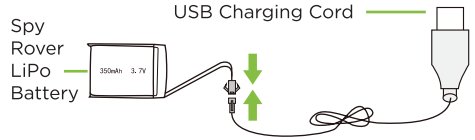

USING WIFI FPV

The Spy Rover comes equipped with a WIFI enabled First Person Video (FPV) camera. Follow these steps to set up:

1. Slide the camera into the mount located on the top of the Spy Rover.
2. Connect the Spy Rover camera to the onboard power connector as shown.
3. Install the phone holder on the top of the remote controller.
4. Use the QR link to download the “Heliway Racing App” from the Android or iTunes store.
5. Turn the Spy Rover on, open WIFI settings on your phone and connect to the “Heliway-xxxxxxx” network.
6. Once connected open the Heliway Racing App and drive!

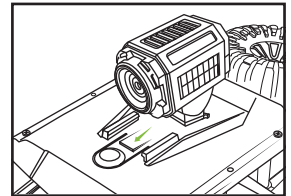


Fig. 1

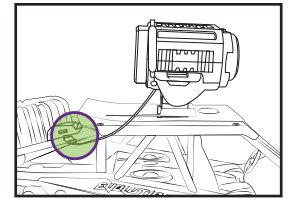


Fig. 2

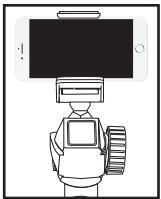


Fig. 3



iOS

Fig. 4



Android




Fig. 5

- ★Tip 1. The camera will automatically disconnect when the battery is low.
- ★Tip 2. The camera signal range is approx. 100ft max.


OPERATING THE SPY ROVER

★ Tip. For best results the car needs to be within a 15 foot range of the controller.


Vehicle Functions

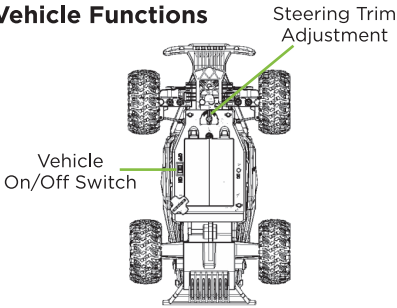


Controller Functions

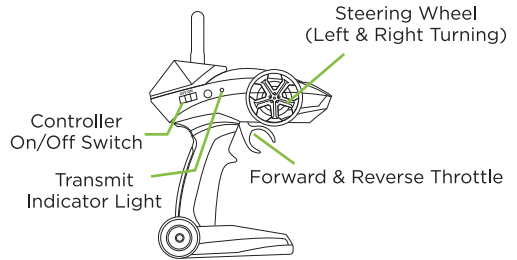


Spy Rover Movement

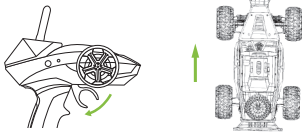


Forward: Pull down on the throttle to drive the vehicle forwards. Adjust the throttle position to control the speed of the vehicle.

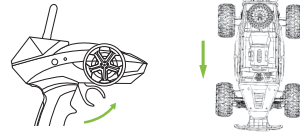


Reverse: Push up on the throttle to drive the vehicle in reverse. Adjust the throttle position to control the speed of the vehicle.

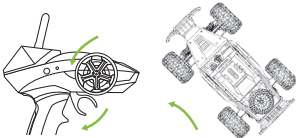


Forward & Turn Left: Pull down on the throttle while turning the steering wheel to the left.

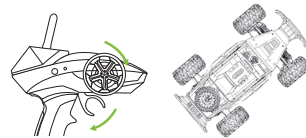

Forward & Turn Right: Pull down on the throttle while turning the steering wheel to the right.

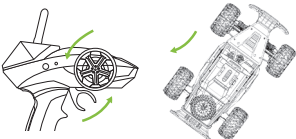


Reverse & Turn Left: Push up on the throttle while turning the steering wheel to the left.

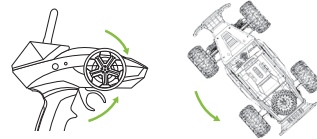


Reverse & Turn Right: Push up on the throttle while turning the steering wheel to the right.

Spy Rover Steering Trim Adjustment

★ Tip. If your Spy Rover pulls to the left or right when driving forwards without steering from the controller, you should adjust the steering trim.

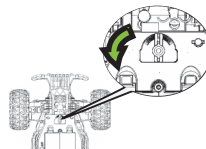

If the vehicle pulls to the left adjust the trim setting to the right until the vehicle travels in a straight line.

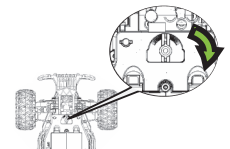

If the vehicle pulls to the right adjust the trim setting to the left until the vehicle travels in a straight line.



For Customer Service please email:
Care@OdysseyToys.com

Please note the units model number and name in your email:
Model no. ODY-106C • Spy Rover

www.OdysseyToys.com

CAUTIONS & WARNINGS

- Suitable for ages 14 and up. Adult supervision is always recommended.
- This product contains small parts which are a choking hazard. Keep away from small children.
- Manufacturers and dealers disclaim all responsibility for damage caused by misuse.
- Keep hair and loose clothing away from the Spy Rover when powered on.
- If Spy Rover will be stored and unused for an extended period of time, please remove the batteries.
- Check the batteries regularly for potential leakage or corrosion that may occur.
- When installing the batteries carefully follow the polarity marking +/-.
- Do not mix different battery types.
- Remove exhausted or drained batteries.
- Do not exceed charging volts and amps of 5v1a.
- Do not leave charger connected or charge for more than 1hr.

CARE & MAINTENANCE

- Do not submerge the unit in any liquids.
- Keep the unit dry.
- Do not place the unit near powerful, un-shielded magnets.
- Do not expose the unit to extreme hot or cold temperatures.
- Do not hit, drop, or smash the unit with extreme force.
- Do not disassemble the unit for any reason.

NOT FOLLOWING THESE PRECAUTIONS WILL VOID YOUR WARRANTY.

FCC ID: 2AG7SHLW1801 & 2AG7SHLW1801A

FCC STATEMENT: This product complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference receiver, including interference that may cause undesirable operation.

MADE IN CHINA

