




Wonky Monkey



SETTING UP WONKEY MONKEY

1. Turn Wonky Monkey over open the velcro patch on its back.
2. Use a phillips screwdriver to open the battery cover.
3. Insert 3xAAA batteries taking care to match polarity.
4. Close the battery compartment, reinstall the screw, switch the power switch to ON and close the velcro patch.

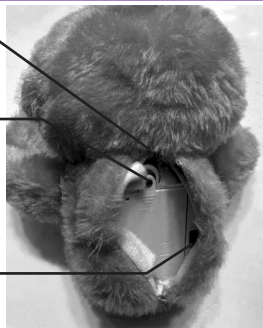

OPERATING WONKEY MONKEY

1. Open the velcro patch on the back of the Wonkey Monkey and turn the power switch to On.
2. Gently press the button on the front of Wonkey Monkey to start the Monkey singing and swinging its arms. Place the monkey on the floor so it can roll around. At the end of each song the Wonkey Monkey will stop rolling and wait for you to "clap" your hands to start the next song.
3. Your Monkey will also repeat any words you say back to you. To activate this mode press the button a second time. The Monkey will now repeat everything you say to it.
4. Repeatedly pressing the button on the front of your Monkey will alternate between the available songs and "repeating" mode.
4. When finished turn the power switch to Off to conserve battery power.
 - ★ Important! Keep clear of the Wonkey Monkey when it's dancing arms are moving.



Please do not return this product to the store.

For Customer Service please email:
Care@OdysseyToys.com

Please note the units model number and name in your email:
Model no. ODY-200WM • Wonkey Monkey

www.odysseytoys.com/support
1-(305)-933-4480

Hours of operation: 10:00am - 5:00pm EST

FCC STATEMENT: This product complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference receiver, including interference that may cause undesirable operation.

CAUTIONS & WARNINGS

- Suitable for ages 5 and up. Adult supervision is always recommended.
- This product contains small parts which are a choking hazard. Keep away from small children.
- The Wonkey Monkey rotates it's arms in use. Keep all hands, clothing etc. clear of the Monkey when it's arms are rotating.
- Manufacturers and dealers disclaim all responsibility for damage caused by misuse.
- Keep hair and loose clothing away from Monkey when powered on.
- If Monkey will be stored and unused for an extended period of time, please remove the batteries.
- Check the batteries regularly for potential leakage or corrosion that may occur.
- When installing the batteries carefully follow the polarity marking +/-.
- Do not mix different battery types & remove exhausted or drained batteries.
- Do not submerge the unit in any liquids.
- Keep the unit dry.
- Do not place the unit near powerful, un-shielded magnets.
- Do not expose the unit to extreme hot or cold temperatures.
- Do not hit, drop, or smash the unit with extreme force.
- Do not disassemble the unit for any reason.

NOT FOLLOWING THESE PRECAUTIONS WILL VOID YOUR WARRANTY.

WARRANTY

60 DAY LIMITED WARRANTY

Odyssey Marketing/ Odyssey Toys warrants to the original purchaser when used in the United States only, that this product shall be free of defects in material and workmanship. This warranty applies within 60 days of the original purchase date with normal home use. This warranty does not apply for commercial use of this product. Use outside of United States is not covered by this warranty. During the warranty period, we will at our discretion, repair or replace this product without charge, as long as the product has not been abused or mishandled as by our determination. Our determination shall be final and be the consumer's sole remedy. ALL RETURNS must be accompanied by a Return Authorization Number which is issued by Odyssey Marketing's Customer Service Department.

Please contact Customer Service BEFORE returning any products or parts thereof. Once you have obtained a Return Authorization Number you will be provided a return address within the Customer Service email.

This warranty does not cover installation, adjustments in the home, nor damage due to accidents, misuse, abuse, fire, or any acts of God, incorrect line voltage, damage to other equipment caused by improper installation, unauthorized or improper modifications. This warranty gives you specific legal rights and you may also have other rights that vary from state to state.

** THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.** ©2022 Odyssey Marketing Corp.

MADE IN CHINA

