


CASSOLA LADY MANUAL

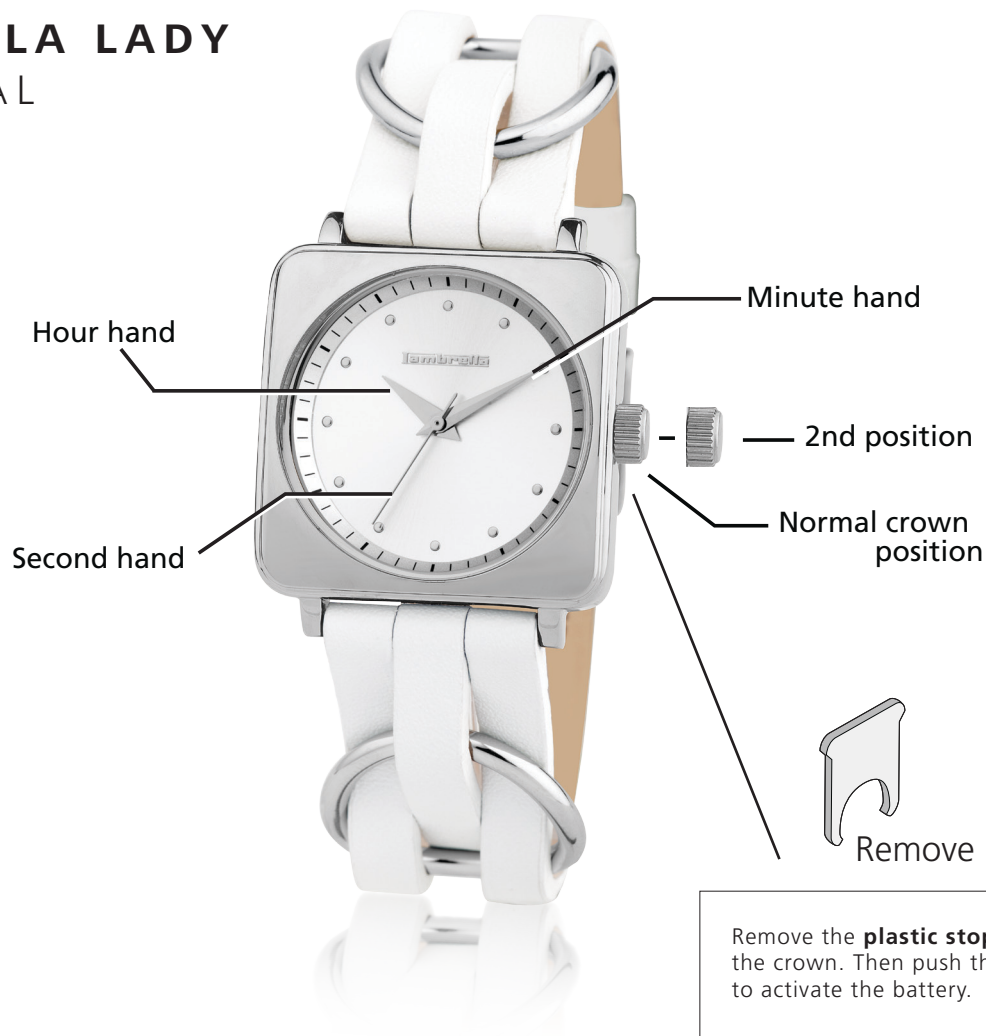

Remove the **plastic stopper** underneath the crown. Then push the crown back in to activate the battery.

SETTING THE TIME

1. Pull the crown out to the 2nd position.
2. Turn the crown to set hour and minute hands.
3. When the crown is pushed back to the normal position, second hand begins to run.

This watch is **NOT** suitable for water activities. Do **NOT** swim with watch.