



ENZO



Remove the **plastic stopper** underneath the crown. Then push the crown back in to activate the battery.

SETTING THE TIME

- 1. Pull the crown out to the 2nd position.
- 2. Turn the crown to set hour and minute hands.
- ${f 3}.$ When the crown is pushed back to the normal position, second hand begins to run.

This watch is NOT suitable for water activities. Do **NOT** swim with watch.

