

KOMATSU EXCAVATOR PARTS---Controller




CMPK-A001	CMPK-A002	CMPK-A003	CMPK-A004
Komatsu Controller, Control Panel, ECU, Control Box Assy	Komatsu Controller, Control Panel, ECU, Control Box Assy	Komatsu Controller Governor, Control Panel, ECU	Komatsu Controller Governor, Control Panel, ECU
PC200-5 PC200LC-5 PC220-5 PC220LC-5 PC100-5 PC120-5 PC150-5 PC300-5	PC100-5 PC120-5 PC200-5 PC220-5 PC300-5 PC400-5	PC100-6 PC120-6 PC130-6 PC200-6 PC220-6 PC230-6 PC250-6	PC210-6 PC240-6 PC210LC-6
7824-12-2000/1 7824-10-2000/1/3 7824-14-2000/1	7824-32-1100 7824-30-1100 7824-34-1100	7834-21-6000/1/2/3 7834-21-3000	7834-21-5000/1/2/3 7834-21-3000
CMPK-A005	CMPK-A006	CMPK-A007	CMPK-A008
Komatsu Controller, Control Panel, ECU, Control Box Assy	Komatsu Controller Governor, Control Panel, ECU	Komatsu Controller Governor, Control Panel, ECU	Komatsu Controller Pump, Control Panel, ECU
PC300-6 PC340NLC-6 PC350-6 PC400-6 PC450-6	PC200-6 PC210-6 PC220-6 PC230-6	PC200-6 PC210-6 PC220-6 PC250-6 PC290-6	PC100-6 PC120-6 PC130-6 PC200-6 PC220-6 PC230-6
7834-20-5000/1/3/4/5/6 7834-20-4000/1 7834-20-2001	7834-21-4000/1/2/3/4	7834-21-7000/1/2/3	7834-10-2000 7834-10-2001 7834-10-2002 7834-10-2003 7834-10-9001
CMPK-A009	CMPK-A010	CMPK-A011	CMPK-A012
Komatsu Controller, Control Panel, ECU, Control Box Assy	Komatsu Controller, TVC controller	Komatsu Controller, TVC controller	Komatsu Controller, Control Panel, ECU, Control Box Assy
PC100-6 PC120-6 PC130-6 PC200-6 PC220-6 PC230-6	PC100-6 PC120-6 PC130-6 PC200-6 PC220-6 PC230-6	PC300-6 PC340NLC-6 PC350-6 PC400-6 PC450-6	PC130-7
7834-30-2000 7834-30-3000	7834-27-2002 7834-27-2000 7834-27-2001	7834-27-3003 7834-27-3001 7834-27-3002	7835-26-5000 7835-26-5001
CMPK-A013	CMPK-A014	CMPK-A015	CMPK-A016
Komatsu Controller, Control Panel, ECU, Control Box Assy	Komatsu Controller, GP controller, Control Panel, ECU, Control Box Assy	Komatsu Controller, Control Panel, ECU, Control Box Assy	Komatsu CONTROLLER ASSEMBLY, engine controller, ECM
PC200-7 PC210-7 PC220-7 PC230-7 PC270-7 PC290-7	PC300-7 PC340-7 PC350-7	PC400-7 PC450-7 PC600-7	PC400-8 PC450-8
7835-26-1001/2/3/4/5/6/7/8/9	7835-26-2003 7835-26-2002 7835-26-2000 7835-26-2001	7835-28-3000 7835-28-3002 7835-28-3001 7835-26-4002(PC228US-3)	600-461-1100
CMPK-A017	CMPK-A018	CMPK-A019	CMPK-A020
Komatsu CONTROLLER ASSEMBLY, engine controller, ECM number 4921776	Komatsu controller, Pump controller, ECU, control panel	Komatsu controller, Pump controller, ECU, control panel	Komatsu controller
PC200-8 PC220-8 pc270-8 PC210-8 PC240-8 PC290-8	PC200-8 PC210-8 PC220-8 PC230-8 PC240-8 PC270-8 PC290-8	PC200-8M0 PC220-8M0 PC300-8M0 PC300-8 PC350-8 PC400-8 PC400-8	PC300-8 PC350-8 PC400-8 PC400-8
600-467-1100 600-467-1200 600-468-1200 600-475-1102 600-475-1100 600-462-1202	7835-46-1000/1/2/3/4/5/6/8/9 7835-46-1010 7835-46-3005	7835-46-3000 7835-46-3001 7835-45-4000/1/2 7835-45-5002	7826-23-3012 7826-23-3011

EMAIL: service@sinocmp.com sales@excavator-parts.com sales@cmpparts.com

Whatsapp: +8615328181468 +8613242057399 +8613434784596

Skype: Mou Mark(CMP) sinocmp-daisy

KOMATSU EXCAVATOR PARTS----Controller

CMPK-A021	CMPK-A022	CMPK-A023
		
<p>Komatsu control panel assembly, Air conditioner Panel, A/C panel (NEW type)</p>	<p>Komatsu control panel assembly, Air conditioner Panel, A/C panel (OLD type)</p>	<p>Komatsu controller, Air conditioner Panel, A/C panel</p>
<p>PC200-7</p>		
<p>20Y-979-7630 20Y-979-6141 Denso 146570-0160 237040-0021</p>	<p>208-979-7630 (Denso 146570-0160 237040-0021)</p>	<p>20Y-810-1231 17A-979-3180</p>

KOMATSU EXCAVATOR PARTS---Monitor and LCD

CMPK-B001	CMPK-B002	CMPK-B003	CMPK-B004
			
Komatsu Monitor Assy, Monitor Panel, Instrument Panel	Komatsu Monitor Assy, Monitor Panel, Instrument Panel	Komatsu Monitor Assy, Monitor Panel, Instrument Panel	Komatsu Monitor Assy, Monitor Panel, Instrument Panel
PC20MR-2 PC27MR-2 PC30MR-2 PC35MR-2 PC40MR-2 PC50MR-2	PC20MR-2 PC27MR-2 PC30MR-2 PC35MR-2 PC40MR-2 PC50MR-2	PC200-5 PC220-5 PC300-5 PC400-5 PC410-5	PC100-5 PC120-5
22M-06-23200 22M-06-23101	22M-06-23101 22M-06-R3101 22M-06-23100 22M-06-32100	7824-72-2001 7824-72-4100 7824-72-7100 7824-72-3000 7824-70-2001 7824-72-3100	7824-70-4000
CMPK-B005	CMPK-B006	CMPK-B007	CMPK-B008
			
Komatsu Monitor Assy, Monitor Panel, Instrument Panel	Komatsu Monitor Assy, Monitor Panel, Instrument Panel	Komatsu Monitor Assy, Monitor Panel, Instrument Panel	Komatsu Monitor Assy, Monitor Panel, Instrument Panel
PC100-5 PC120-5 PC150-5	PC200-5 PC210-5 PC220-5 PC240-5 PC300-5 PC350-5 PC400-5	PC60-6	PC100-6 PC120-6 PC130-6 PC130-6
7824-70-3100/1/2/3 7824-70-2100/1/2	7824-72-7000 7824-72-6100 7824-72-4000	7824-83-3000	7834-70-4002 7834-70-4000 7834-70-4100
CMPK-B009	CMPK-B010	CMPK-B011	CMPK-B012
			
Komatsu Monitor Assy, Monitor Panel, Instrument Panel	Komatsu Monitor Assy, Monitor Panel, Instrument Panel	Komatsu Monitor Assy, Monitor Panel, Instrument Panel	Komatsu Monitor Assy, Monitor Panel, Instrument Panel
PC100-6 PC120-6 PC130-6 PC130-6 PC200-6 PC220-6 PC210-6 PC230-6	PC200-6 PC220-6 PC210-6 PC230-6	PC200-6 PC200LC-6	PC300LC-6 PC300-6 PC400LC-6 PC200-6 PC210-6 PC220-6 PC450-6
7834-70-6001/2/3 7834-76-2001/2/3	7834-72-4000/1/2	7834-70-5000/2 7834-70-5100/2 7834-71-7001/2	7834-76-3001 7834-76-3002
CMPK-B013	CMPK-B014	CMPK-B015	CMPK-B016
			
Komatsu Monitor Assy, Monitor Panel, Instrument Panel	Komatsu Monitor Assy, Monitor Panel, Instrument Panel	Komatsu Monitor Assy, Monitor Panel, Instrument Panel	Komatsu Monitor Assy, Monitor Panel, Instrument Panel
PC100-6 PC100L-6 PC120-6 PC120LC-6 PC130-6	PC200-6 PC210-6 PC220-6 PC220LC-6 PC230-6 PC250-6 PC300-6 PC400-6	PC210-6 PC240-6 PC290-6 PC340-6 PC380-6 PC450-6	PC100-6 PC120-6 PC130-6 PC200-6 PC220-6 PC130LC-6 PC200LC-6
7834-77-2000/1/2	7834-77-3000/1/2	7834-77-7000 7834-77-7001	7834-71-6000 7834-71-6001 7834-71-6002 7834-71-6101
CMPK-B017	CMPK-B018	CMPK-B019	CMPK-B020
			
Komatsu Monitor Assy, Monitor Panel, Instrument Panel	Komatsu Monitor Assy, Monitor Panel, Instrument Panel	Komatsu Monitor Assy, Monitor Panel, Instrument Panel	Komatsu Monitor Assy, Monitor Panel, Instrument Panel
PC120-6Z PC200-6Z PC200LC-6Z PC220-6Z PC220LC-6Z PC400-6Z	PC220-6Z PC400-6Z PC220LC-6Z PC200LC-6Z	PC60-7 PC70-7 PC75uu-2	PC60-7 PC70-7
7834-75-2000 7834-75-2001 7834-75-2002 7834-75-2003	7834-75-2100 7834-75-2101 7834-75-2102 7834-75-2103	7834-73-2000 7834-73-2001 7834-73-2002	7834-73-2100 7834-73-2101 7834-73-2102

EMAIL: service@sinocmp.com sales@excavator-parts.com sales@cmpparts.com







Whatsapp: +8615328181468 +8613242057399 +8613434784596

Skype: Mou Mark(CMP) sinocmp-daisy

KOMATSU EXCAVATOR PARTS---Monitor and LCD

CMPK-B021	CMPK-B022	CMPK-B023	CMPK-B024
			
Komatsu Monitor Assy, Monitor Panel, Instrument Panel	Komatsu Monitor Assy, Monitor Panel, Instrument Panel	Komatsu Monitor Assy, Monitor Panel, Instrument Panel	Komatsu Monitor Assy, Monitor Panel, Instrument Panel
PC200-7 PC220-7 PC228US-3 PC270-7 PC300-7 PC400-7 PC450-7 PC160-7	PC160LC-7E0 PC180NLC-7E0 PC228US-3E0	PC130-7	PC128US-2 PC138US-2
7835-10-2002 7835-10-2003 7835-10-2004 7835-10-2005	7835-16-5002 7835-16-5001	7835-10-5000	7835-10-3002 7835-10-3001
CMPK-B025	CMPK-B026	CMPK-B027	CMPK-B028
			
Komatsu Monitor Assy, Monitor Panel, Instrument Panel	Komatsu Monitor Assy, Monitor Panel, Instrument Panel	Komatsu Monitor Assy, Monitor Panel, Instrument Panel	Komatsu Monitor Assy, Monitor Panel, Instrument Panel
PC400-7 PC450-7	PC200-7 PC210LC-7 PC220-7 PC300-7 PC340NLC-7 PC290NLC-7 PC240-7	PC300-7E0 PC350-7E0 PC400-7E0 PC450-7E0	PC400-7 PC450-7
7835-12-2003/7835-12-4000 7835-12-2001	7835-12-1001 7835-12-1002 7835-12-1003 7835-12-1004 7835-12-1005 7835-12-1006 7835-12-1007 7835-12-1008 7835-12-1009	7835-16-1003 7835-16-1002	7835-12-2008
CMPK-B029	CMPK-B030	CMPK-B031	CMPK-B032
			
Komatsu Monitor Assy, Monitor Panel, Instrument Panel	Komatsu Monitor Assy, Monitor Panel, Instrument Panel	Komatsu Monitor Assy, Monitor Panel, Instrument Panel	Komatsu Monitor Assy, Monitor Panel, Instrument Panel
PC360-7	PC200-7 PC210LC-7 PC220-7 PC300-7 PC340NLC-7 PC290NLC-7 PC240-7	PC200-8 PC270-8 PC220-8 PC210-8 PC240-8	PC200-8 PC270-8 PC220-8 PC210-8 PC240-8
7835-12-3007 7835-12-3000 7835-12-3006 7835-12-3005	7835-12-1010 7835-12-1011 7835-12-1012 7835-12-1013 7835-12-1013	7835-31-1000 7835-31-1001 7835-31-1010 7835-31-1003 7835-31-1011 7835-31-1005 7835-31-1006 7835-31-1007 7835-	7835-30-1002 7835-30-1006 7835-30-1007 7835-30-1008 7835-30-1009 7835-31-1212
CMPK-B033	CMPK-B034	CMPK-B035	CMPK-B036
			
Komatsu Monitor Assy, Monitor Panel, Instrument Panel	Komatsu Monitor Assy, Monitor Panel, Instrument Panel	Komatsu Monitor Assy, Monitor Panel, Instrument Panel	Komatsu Monitor Assy, Monitor Panel, Instrument Panel
PC300-8 PC350-8 PC400-8 PC450-8	PC300-8 PC350-8 PC400-8 PC450-8	PC138US-8	PC138US-8 PC130-8
7835-31-5001 7835-31-5002 7835-31-5003 7835-31-5004 7835-31-5005 7835-31-5006	7835-31-5006 7835-31-5007 7835-31-5008 7835-31-5009	7835-31-3008 7835-31-3002 7835-31-3016	7835-31-3009 7835-31-3006
CMPK-B037	CMPK-B038	CMPK-B039	CMPK-B040
			
Komatsu Monitor Assy, Monitor Panel, Instrument Panel	Komatsu Monitor Assy, Monitor Panel, Instrument Panel	Komatsu Monitor Assy, Monitor Panel, Instrument Panel	Komatsu Monitor Assy, Monitor Panel, Instrument Panel
PC130-8 PC160-8 PC138US-8	PC600-8 PC600LC-8	PC200-8	PC200-8M0
7835-31-3013 7835-31-3017	7835-16-2003	7835-31-9001	7835-34-1202 7835-34-1203

KOMATSU EXCAVATOR PARTS----Monitor and LCD

CMPK-B041	CMPK-B042	CMPK-B043	CMPK-B043
			
<p>Komatsu LCD, Monitor LCD, LCD</p>	<p>Komatsu LCD, Monitor LCD, LCD</p>	<p>Komatsu LCD, Monitor LCD, LCD</p>	<p>Komatsu LCD, Monitor LCD, LCD</p>
<p>PC100-5 PC120-5 PC200-5 PC210-5 PC220-5 PC300-5 PC400-5 PC-5</p>	<p>PC200-6 PC100-6 PC120-6 PC130-6 PC210-6 PC220-6 PC300-6 6D95</p>	<p>PC200-6 PC210-6 PC220-6 PC300-6 PC350-6 PC290-6 PC400-6 PC450-6 6D95</p>	<p>PC-7 PC200-7 PC130-7 PC210-7 PC300-7 PC400-7</p>
CMPK-B044	CMPK-B045		
			
<p>komatsu monitor LCD Module, LCD modele</p>	<p>Komatsu Monitor and controller Plug, connectors</p>		
<p>PC-8 PC130-8 PC200-8 PC200-8 PC300-8 PC400-8</p>	<p>PC-5 PC-6 PC-7 PC-8</p>		

KOMATSU EXCAVATOR PARTS----Motor

CMPK-C001	CMPK-C002	CMPK-C003	CMPK-C004
			
Komatsu governor motor, motor assy, throttle motor	Komatsu governor motor, motor assy, throttle motor	Komatsu governor motor, motor assy, throttle motor	Komatsu governor motor, motor assy, throttle motor
PC228US-1 PC228US-2 PC60-7 PC138US-2 PC70-7	PC120-6 PC120LC-6 PC200-6 PC200LC-6 PC220-6 PC220LC-6 PC250-6	PC130-7 PC200-7 PC200LC-7 PC220-7 PC220LC-7 PC270-7 PC200/220-7	PC120-5 PC150-5 PC200-5 PC200LC-5 PC220-5 PC220LC-5 PC120/200/220-5
22U-06-11790 22U-06-11113 201-43-72120 22B-43-11142 22B-43-11141 22B-43-	7834-40-2000/1/2/3/4/5/6/7 7834-40-3000 7834-40-3002	7834-41-2000/1/2/3 7834-41-3000/1/2/3	7824-30-1600 7824-31-3600
CMPK-C005	CMPK-C006	CMPK-C007	CMPK-C008
			
Komatsu governor motor, motor assy, throttle motor	blower motor	blower motor	blower motor
PC228US-1 PC228US-2 PC60-7 PC138US-2 PC70-7	PC-5 PC200-5 PC100-5	PC-5 PC200-5 PC100-5	PC-6 6D95
22U-06-11790 22U-06-11113 201-43-72120 22B-43-11142 22B-43-11141 22B-43-			
CMPK-C009	CMPK-C010	CMPK-C011	CMPK-C012
			
blower motor	blower motor	blower motor	blower motor
PC-6 6D102	PC300-7	PC200-7 PC-7	PC-8 PC200-8 PC220-8 PC300-8

KOMATSU EXCAVATOR PARTS----wire harness

CMPK-D001	CMPK-D002	CMPK-D003	CMPK-D004
			
Komatsu wire harness harness	Komatsu wiring harness, external outer wire harness	Komatsu wiring harness, internal cabin wire harness	Komatsu main wiring harness
PC300-8 PC350-8	PC200-7 PC210-6 PC220-6 PC230-6 PC250-6	PC200-7 PC210-6 PC220-6 PC230-6 PC250-6	PC200-8 PC220-8 PC270-8 PC240-8
207-06-77411 207-06-76511 207-06-76511	20Y-06-22713 20Y-06-22712 20Y-06-22711	20Y-06-25120	20Y-06-42411 20Y-06-42721 20Y-06-42720 20Y-06-48313 20Y-06-48312 20Y-06-
CMPK-D005	CMPK-D006	CMPK-D007	CMPK-D008
			
Komatsu main wiring harness	Komatsu engine wiring harness	Komatsu injector wire harness	Komatsu wire harness(Monitor)
PC200-8 PC220-8 PC270-8 PC240-8	PC200-8 PC220-8 PC270-8 PC240-8	PC200-8 PC220-8 PC270-8 PC240-8	PC200-7 PC210-7 PC220-7 PC270-7
20y-06-41113 20Y-06-41112 20Y-06-41110	6754-81-9440 6754-81-9310	6754-81-9450 7861-93-1780 6754-81-9210	20Y-06-31120
CMPK-D009	CMPK-D010	CMPK-D011	CMPK-D012
			
Komatsu wiring harness	Komatsu wire harness(Monitor)	Komatsu Excavator external wiring harness(old type)	Komatsu Excavator external wiring harness(old type)
PC300-8 PC130-8 PC350-8 pc400-8 pc450-8	PC-7 PC200-7 PC130-7 PC210-7 PC220-7 PC300-7 PC350-7 PC400-7 PC450-7	PC200-7 PC220-7 PC210-7 PC230-7 PC240-7 PC270-7	PC200-7 PC220-7 PC210-7 PC230-7
20Y-06-41151	208-53-12920	20Y-06-31611	20Y-06-31612 20Y-06-316123 20Y-06-31614
CMPK-D013	CMPK-D014	CMPK-D015	CMPK-D016
			
Komatsu cabine wire harness(old type)	Komatsu Excavator external wiring harness (new type)	Komatsu cabine wire harness (new type)	Komatsu engine harness
PC200-7 PC220-7 PC230-7 PC210-7 PC270-7	PC200-7 PC220-7 PC270-7	PC200-7 PC220-7 PC230-7 PC210-7 PC270-7	PC300-7 PC350-7
20Y-06-31110	20Y-06-31614 20Y-06-31613	20Y-06-71510 20Y-06-71511 20Y-06-71512	6743-81-8310
CMPK-D017	CMPK-D018	CMPK-D019	CMPK-D020
			
Komatsu engine harness	Komatsu Excavator external wiring harness	Komatsu wiring harness	Komatsu internal cabin wiring harness
PC400-7E0 PC450-7E0 PC400-8 PC450-8	PC300-7 PC350-7	PC300-7 PC350-7 PC400-7 PC450-7	PC300-7 PC350-7
6251-81-9810	207-06-71341 207-06-71110 207-06-71114 207-06-71112	207-06-71141	207-06-71562

EMAIL: service@sinoamp.com sales@excavator-parts.com sales@cmpparts.com


















Whatsapp: +8615328181468 +8613242057399 +8613434784596

Skype: Mou Mark(CMP) sinoamp-daisy






KOMATSU EXCAVATOR PARTS----wire harness

CMPK-D021	CMPK-D022	CMPK-D023	CMPK-D024
			
<p>Komatsu Excavator external wiring harness</p>	<p>Komatsu cabin internal wiring harness</p>	<p>Komatsu engine injector harness</p>	<p>Komatsu engine sensor harness</p>
<p>PC400-7 PC450-7</p>	<p>PC400-7 PC450-7</p>	<p>PC400-7 PC450-7</p>	
<p>208-06-71113</p>	<p>208-06-71511 208-06-71510</p>	<p>6156-81-9211</p>	<p>6156-81-9320</p>
<p>CMPK-D025</p>			
			
<p>Komatsu harness</p>			
<p>PC20-8 PC78US-8 PC88US-8 PC130-8 PC138US-8</p>			
<p>6271-81-8240</p>			

KOMATSU EXCAVATOR PARTS----ENGINE parts (Injector, pump, rebuild kits)

<p>CMPK-E101</p>  <p>Komatsu injector</p> <p>PC200-8 PC220-8 PC228US-3 PC270-8 4D107E-1 6D107E-1</p> <p>6754-11-3010 6754-11-3011</p>	<p>CMPK-E102</p>  <p>Komatsu injector</p> <p>PC300-8 PC350-8 6D114E-3</p> <p>6745-11-3100 6745-11-3102 6745-12-3100</p>	<p>CMPK-E103</p>  <p>Komatsu injector</p> <p>PC300-7 PC350-7 PC360-7 6D114E-2</p> <p>6743-11-3320</p>	<p>CMPK-E104</p>  <p>Komatsu injector</p> <p>PC450-8 6D125E-6</p> <p>6252-11-3100 095000-6070</p>
<p>CMPK-E104</p>  <p>Komatsu injector</p> <p>PC400-7 PC450-7 6D125E-3</p> <p>6156-11-3300 095000-1211</p>	<p>CMPK-E105</p>  <p>Komatsu injector</p> <p>PC300-8</p> <p>6745-11-3102 Bosch 0445120236</p>	<p>CMPK-E106</p>  <p>Komatsu injector</p> <p>Komatsu S4D95L S6D95L PC100-5 PC200-6</p> <p>6202-13-3110</p>	
<p>CMPK-E201</p>  <p>Fuel pump 6D125</p> <p>PC400-7 PC450-7</p> <p>6156-71-1112 6156-71-1111 094000-0383</p>	<p>CMPK-E202</p>  <p>ISF3.8 Cummins</p> <p>ISF3.8</p> <p>4450201220 4988595 5256607</p>	<p>CMPK-E203</p>  <p>Fuel pump 6D107 Bosch</p> <p>PC-8 PC200-8 PC220-8</p> <p>7854-71-1320 0445020150</p>	
<p>CMPK-E301</p>  <p>Overhaul gasket</p> <p>6D95 4D95 6D102 6D107 6D125</p>	<p>CMPK-E302</p>  <p>Piston</p> <p>6D95 4D95 6D102 6D107 6D125</p>	<p>CMPK-E303</p>  <p>Piston Ring</p> <p>6D95 4D95 6D102 6D107 6D125</p>	<p>CMPK-E304</p>  <p>bearing</p> <p>6D95 4D95 6D102 6D107 6D125</p>
<p>CMPK-E305</p>  <p>main bearing</p> <p>6D95 4D95 6D102 6D107 6D125</p>	<p>CMPK-E305</p>  <p>Cylinder head gasket</p> <p>6D95 4D95 6D102 6D107 6D125</p>	<p>CMPK-E307</p>  <p>liner kit</p> <p>6D95 4D95 6D102 6D107 6D125</p>	

KOMATSU EXCAVATOR PARTS---Alternator, Turbo charger

CMPK-E401	CMPK-E402		
			
Alternator	Alternator		
PC200-3	PC200-5 PC200-6 PC200-7 PC200-8		
RKD25A04			
CMPK-E501	CMPK-E502	CMPK-E503	
			
Turbocharger	6D102 Turbocharger	6D125E Turbocharger	
Komatsu 6D102 turbocharger	PC-7 PC200-7 PC220-7 PC230-7 PC270-7	PC400-8 PC450-8 PC550-8	
6735-81-8031	3598036 6738-81-8192 6738-81-8190 6738-81-8191	6506-21-5020	

KOMATSU EXCAVATOR PARTS----sensor, switch, relay

CMPK-F001	CMPK-F002	CMPK-F003	CMPK-F004
			
Pressure sensor/ Switch	Pressure sensor/ Switch	Pressure sensor/ Switch	Pressure sensor
PC200-5 PC210-5 PC220-5	PC-8 PC200-8 PC300-8 PC55MR-3	PC-8 PC300-8 PC350-8 PC400-8 PC450-8	6D114 6D107
20Y-06-15190	20Y-06-21710	206-06-61130	6754-72-1210
CMPK-F005	CMPK-F006	CMPK-F007	CMPK-F008
			
OIL PRESSURE SENSOR	OIL PRESSURE SENSOR	OIL PRESSURE SENSOR	sensor
4D102 PC60-7 PC200-6 PC210-6 PC228US-1	PC100-5 PC120-5 PC130-5 PC200-5 PC220-5	PC100-6 PC200-6 PC300-6	
6732-81-3140 08073-10505	7861-92-1540	7861-92-1610	7861-93-1651
CMPK-F009	CMPK-F010	CMPK-F011	CMPK-F012
			
Pressure sensor	Pressure sensor	Sensor	Oil temperature sensor
PC130-8 PC138US-8 PC200-8 PC300-8 PC400-8	PC130-8 PC138US-8 PC200-8 PC300-8 PC400-8	PC400-7 PC450-7 PW160-7	
7861-93-1812	7861-93-1840	208-06-71130	7861-92-3320
CMPK-F013	CMPK-F014	CMPK-F015	CMPK-F016
			
Water temp sensor			Revolution speed sensor
PC200-6 6D102 4D102			
7861-92-3380	7861-93-3320	7861-93-3380	7861-92-2310
CMPK-F017	CMPK-F018	CMPK-F019	CMPK-F020
			
Revolution speed sensor	Revolution speed sensor	Ignition key	Ignition key
		PC200-1 PC200-2 PC300-3 PC200-5	PC200-7
7861-92-2340	7861-93-2310	08086-10000	08086-20000

KOMATSU EXCAVATOR PARTS----sensor, switch, relay

CMPK-F021	CMPK-F022	CMPK-F023	CMPK-F024
			
sensor	throttle motor fitting sensor throttle positioner		
PC750-7	PC200-7	PC450-7	PC450-7
6217-81-9240	7861-93-4131	ND029600-0570	ND29600-0580
CMPK-F025	CMPK-F026	CMPK-F027	CMPK-F028
			
PC400-8PC450-8	Relay	motor starter relay	starter relay
WA200-6 PC300-8	Relay	PC200-6	PC-7
ND949979-1300	569-06-61960	600-815-2170	600-815-2170 600-815-8940 600-815-8941
CMPK-F029	CMPK-F030	CMPK-F031	CMPK-F032
			
relay	EXCAVATOR BATTERY RELAY 24V	24V battery Relay	Relay
PC200-8 PC200LC-8 PC220-8 PC220LC-8			
600-815-8941	08088-10000	08088-30000	SD1599-0010010

KOMATSU EXCAVATOR PARTS----valve(solenoid valve)

CMPK-G101	CMPK-G102	CMPK-G103	CMPK-G104
Solenoid Valve 20Y-60-32120	Solenoid Coil 20Y-60-11713	Solenoid Coil PC120-6 PC60-7 203-60-62171 203-60-62161	Solenoid Coil PC200-6 6D102
CMPK-G105	CMPK-G106	CMPK-G107	CMPK-G108
Solenoid Valve wa320-3 714-10-16951	Solenoid Valve PC200-5 20Y-60-11672	Solenoid Valve PC200-6 6D95 20Y-60-22121 20Y-60-22123	solenoid valve PC 60-5 pc120-5 pc 60-6-old 203-60-56180
CMPK-G109	CMPK-G110	CMPK-G111	CMPK-G112
solenoid valve coil 203-60-56560	Komatsu Rotary Solenoid Valve PC200-6 6D102 206-60-51130	solenoid valve 561-15-47210 17A-15-17271	solenoid valve 600-815-9260
CMPK-G113	CMPK-G114	CMPK-G115	CMPK-G116
PC200-6 6D102 4D102 702-21-07010	komatsu solenoid valve 702-21-07311	solenoid PC350-8 702-21-07610	Main Pump Pilot Valve PC200-7 PC220-7 PC350-7 702-21-57400 702-21-55901 702-21-57500
CMPK-G117	CMPK-G118	CMPK-G119	CMPK-G120
pc200-3 pc200-5 pc200-6 6D95 708-2H-25240 18272 708-23-18272	Vlave Assy 708-2L-06410	Solenoid Valve Komatsu Excavator PC250LC-6L PC200-6 708-2L-25211	solenoid 6732-82-9110 24v

KOMATSU EXCAVATOR PARTS----valve(solenoid valve, pilot valve)

CMPK-G121	CMPK-G122
	
Solenoid Valve	Solenoid Valve
PC55 PC40	PC200-6 6D102
12V	206-60-51130 206-60-51131 206-60-51132
CMPK-G1201	CMPK-G202
	
Pilot valve Pilot pump	Pilot valve Pilot pump
PC-6 PC200-6 PC100-6 PC120-6 PC300-6 PC400-6C	PC200-5 PC-5 PC220-5
702-16-01180	702-16-01022

KOMATSU EXCAVATOR PARTS----Relief valve, main relief valve, Valve Assy

CMPK-H001	CMPK-H003	CMPK-H003	CMPK-H004
			
control main valve	Komatsu Main Valve	main relief valve	
PC300-1 PC200-1		PC200-6	
700-92-55000	702-75-01200	702-75-01201	
CMPK-H005	CMPK-H006	CMPK-H007	CMPK-H008
			
	Komatsu Relief Valve	main Valve	main Valve
	PC220-6 PC220LC-6		
708-2L-04523	708-2L-04531 708-2L-04532	Komatsu 708-2L-04713	708-2L-06710
CMPK-H009	CMPK-H010	CMPK-H011	CMPK-H012
			
main relief valve	Relief Valve	Hydraulic Main Relief Valve	Main Relief Valve
PC120-5	PC150-5 PC180LC-5K 4D102	PC300-5 PC200-5	PC120-6 PC130-6
709-70-51202 709-70-51203	709-80-5290	709-90-52201	723-30-50101
CMPK-H013	CMPK-H014	CMPK-H015	CMPK-H016
			
	main valve ass'y	main relief valve ass'y	
723-30-56100	PC120-6 PC100-6 PC128UU-1	PC120-6 PC130-6	PC200-6 PC200LC-6
	723-30-60101	723-30-50101 723-30-90101	723-40-50100
CMPK-H017	CMPK-H018	CMPK-H019	CMPK-H020
			
PC200-6 PC200LC-6		PC300-8-PC350-8-PC400-8	Main Relief Valve
723-40-50200 (723-40-60101	723-40-85100	PC200LC-6 PC220LC-6
			723-40-90200

KOMATSU EXCAVATOR PARTS----Relief valve, main relief valve, Valve Assy

CMPK-H021	CMPK-H022	CMPK-H023	CMPK-H024
			
relief valve oil suck valve			Service Relief valve
pc200-6			PC60-7
709-90-74302 723-90-61600 723-40-91200 709-70-55200	723-40-51102	723-40-92103 723-40-93600	
CMPK-H025	CMPK-H026	CMPK-H027	CMPK-H028
			
Relief valve	main relief valve	main relief valve	main relief valve
PC200-1	PC200-8	PC40	PC50
	723-46-23101		
CMPK-H029	CMPK-H030	CMPK-H031	CMPK-H032
			
main relief valve	Service relief valve	Service relief valve	Valve Assy
PC60-7	PC200-7 PC200-8	PC200-3	PC200

KOMATSU EXCAVATOR PARTS----Hydraulic pump rebuild parts

CMPK-1001

ITEM	DESCRIPTION	QUANTITY	REMARK
1	ROLLER BEARING	1	
2-A	DRIVE SHAFT (L/R)	1	
2-B	DRIVE SHAFT (L/REV)	1	(PC200-3)
2-C	DRIVE SHAFT (L/SPLINE)	1	(PC200-3)
3-A	CRADLE (L/R)	1	
3-B	CRADLE (L)	1	(PC200-3)
4	SPACE	2	
5	SOCKET BOLT	4	
6	FIX PLATE	2	
7	CAM ROCKER	1	
8	PISTON SHOE	9	
9	SET PLATE	1	
10	CYLINDER BLOCK	1	
11	COIL SPRING	1	
12	WASHER	2	
13	SNAP RING	1	
14	VALVE PLATE (L/R)	1	
15	THRUST BEARING	2	

HPV35 HPV55 HPV71 HP90 HP160	PC200-3/5 PC300-3 PC300-3/5 PC400-3/5		
Drive shaft, Cradle, Cam roker, Piston Shoe, Set plate, Cylinder block, Vlave plate	Piston Shoe, Snap spring, fix Plate, Coil Sring, Thrust Bearing, etc		

CMPK-1002

ITEM	DESCRIPTION	QUANTITY	REMARK
1	VALVE PLATE (L/R)	1	
2	SPACE-A	1	
3	COIL SPRING	1	
4	SPACE-B	1	
5	CYLINDER BLOCK	1	
6	PIN OF CYLINDER BLOCK	3	
7	BALL GUIDE	1	
8	SET PLATE	1	
9	PISTON SHOE	9	
10-A		1	(HPV95A/PC200-6)
10-B		1	(HPV95C)
10-C		1	(HPV95A/PC200-7)
10-D	CAM ROCKER	1	(HPV140/PC200-7)
10-E		1	(HPV160/PC200-7)
10-F		1	(HPV120/PC200-8)
11-A		1	(HPV95C)
11-B	CRADLE	1	(HPV132A/55)
11-C		1	(HPV95A)
11-D		1	(HPV140)
12	DRIVE SHAFT (L/R)	1	
13	ROLLER BEARING	1	
14	SPACE	1	
15	SNAP RING	1	

HPV95A HPV95C HPV95H HPV 132 HPV140 HPV165 HPV375	PC200-6 PC200-7 PC200-8 PC400-6/7/8 PC800-8 PC300-6/7/8		
Drive shaft, Cradle, Cam roker, Piston Shoe, Set plate, Cylinder block, Vlave plate	Piston Shoe, Snap spring, fix Plate, Coil Sring, Thrust Bearing, etc		

KOMATSU EXCAVATOR PARTS----seal kits and other parts

CMPK-J001	CMPK-J002	CMPK-J003	CMPK-J004
			
<p>Boom cylinder seal kits PC200-3/5/6/7/8 PC-3/5/6/7/8</p>	<p>Arm Cylinder seal kits PC200-3/5/6/7/8 PC-3/5/6/7/8</p>	<p>Bucket cylinder seal kits PC200-3/5/6/7/8 PC-3/5/6/7/8</p>	<p>Control valve seal kits PC200-3/5/6/7/8 PC-3/5/6/7/8</p>
CMPK-J005	CMPK-J006	CMPK-J007	CMPK-J008
			
<p>Pilot valve seal kits PC200-3/5/6/7/8 PC-3/5/6/7/8</p>	<p>Main Pump seal kits PC200-3/5/6/7/8 PC-3/5/6/7/8</p>	<p>Center joint seal kits PC200-3/5/6/7/8 PC-3/5/6/7/8</p>	<p>swing motor seal kits PC200-3/5/6/7/8 PC-3/5/6/7/8</p>
CMPK-J008	CMPK-J009		
			
<p>Travel motor seal kits PC200-3/5/6/7/8 PC-3/5/6/7/8</p>	<p>Track Adjuster seal kits PC200-3/5/6/7/8 PC-3/5/6/7/8</p>		