WARRANTY

Limited Warranty

Jackery Inc. warrants to the original consumer purchaser that the Jackery product will be free from defects in workmanship and material under normal consumer use during the applicable warranty period identified in the "Warranty Period" section below, subject to the exclusions set forth below. This warranty statement sets forth Jackery's total and exclusive warranty obligation. We will not assume, nor authorize any person to assume for us, any other liability in connection with the sale of our products.

The warranty period is 24 months. In each case, the warranty period is measured starting on the date of purchase by the original consumer purchaser. The sales receipt from the first consumer purchase, or other reasonable documentary proof, is required in order to establish the start date of the warranty period.

Jackery will repair or replace (at Jackery's option) any Jackery product that fails to operate during the applicable warranty period due to defect in workmanship or material. If a valid claim is made during the applicable period, Jackery, at its option, will either (1) replace the product, or (2) exchange the product with a product that is of equal value. A replacement product assumes the remaining warranty of the original product or 180 days from the date of replacement, whichever is greater. Customer is responsible for the return shipping costs.

Limited to Original Consumer Buyer

The warranty on Jackery's product is limited to the original consumer purchaser and to any subsequent owner.

Jackery's warranty does not apply to (i) any product that is misused, abused, modified, damaged by accident, or used for anything other than normal consumer use as authorized in Jackery's current product literature, or (ii) any product purchased through an online auction house. Jackery's warranty does not apply to the battery cell unless the battery cell is fully charged by you within seven days after you purchase the product and at least every 6 months thereafter.


How to Receive Service

To obtain warranty service, contact our customer service team at hello@jackery.com

© Copyright 2012-2020 Jackery Inc. All trademarks cited herein are the property of their respective owners. information contained herein is subject to change without notice. The only warranties for Jackery products and services are set forth in the warranty statements accompanying such products and services. Jackery shall not be liable for technical or editorial errors or omissions contained herein. First Edition: March 2020. Document Part Number: J880-UM-001. This user guide describes features that are common to most models.

SPECIFICATIONS **USB Output** DC Input Car Port AC Output USB-C Outpu 3x110V-9.09A, 60Hz, 33.3 x 23.3 x 28.3cm 24V =: 7.5A-8.33A 40.8Ah/21.6V 9.9 kg / 21.8lbs 13.1 x 9.2 x 11.1in (Support 12~30V) 9V:::2A, 12V:::1.5A 5-6.5V:::3A 6.5-9V::2A, 9-12V::1.5

4 Battery	-`@ LED Flashlight	Lifecycles	Operating Temperature	Recharging Temperature	Management System	MPPT	Warranty	Certifications	Technical Support
Lithium-ion	SOS LED	≥ 500	-10 ~ 40 °C (14 ~ 104 °F)	0 ~ 40°C (32 ~ 104 °F)	Under voltage Protection Dues voltage Protection Over current in Charge (Taccharge Protection Short Circuit in Charge) Blackarge Protection Over temperature in Charge/ Plackarge Protection Overcharging Variage Protection	Support Solar Panel MPPT Charging	24 Months	UN38.3,RoHS, FCC, @ entre so	Lifetime

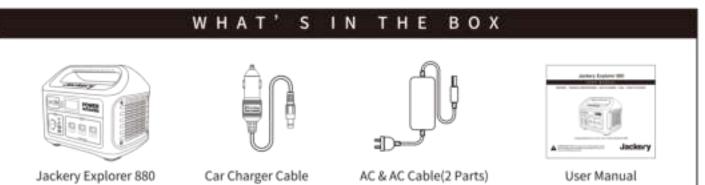

FAQs

What type of battery is in an Explorer 880?

Explorer 880 contains a battery pack which consists of an array of cylindrical 18650 lithium-ion battery cells with high energy density.

How do I know if my Explorer 880 is charged?

To check the charge level of the Explorer 880, refer to the LCD Battery Display.

Can I charge the Explorer 880 while supplying power at the same time?

The Explorer 880 could power other devices while recharging itself.

How do I know if my device will work with the Explorer 880?

You will need to check the amount of power your device requires. This may require some research on your end. An online search or examining the user guide for your device should suffice. To be compatible with the Explorer 880 you should use devices that

CONTACT US





www.jackery.com hello@jackery.com 1-888-502-2236







jackery.inc



jackeryusa

CAUTION

Noncompliance may lead to injuries

and/or property damage***

using the unit immediately and contact the

The unit complies with all legal requirements

Make sure that the unit is properly secured

devices that you intend to connect to your

when transporting it in a motor vehicle.

· Only charge, use and store the unit within

for transport of dangerous goods.

exposed to vibrations.

connect it





Jackery Inc

Congratulations on your new Jackery Explorer 880

Jackery Explorer 880

USER MANUAL

FEATURES • TECHNICAL SPECIFICATIONS • HOW TO CHARGE • FAQs • WHAT'S IN THE BOX



CHARGE FIRST! Before using your new Jackery Explorer, plug it into a suitable power outlet until it is fully charged. Then you can start your exciting journey with it.



DISCLAIMER

Our company assumes no liability for damages caused by

Intended use: The Jackery Explorer 880 portable power unit

maximum power consumption of 1000W. Our product is not

suitable to be used with equipment that relates to one's own

devices, equipment for nuclear facilities, the manufacture of

air and spacecraft, etc. We therefore assume no liability for accidents involving personal safety, fires, or machine failures,

personal safety and relies heavily on electricity, such as medical

caused by using our product with the aforementioned devices.

is intended as a power supply for electronic devices with a

incorrect use or non-compliance with this instruction manual.

conditions are beyond our responsibility.

POWER U

LCD Screen Button Press the power button to check the remaining battery.

AC Button/ DC 12V Button / USB Button

Turn off each output by pressing its power button as it does not turn off automatically or it will drain the battery out.

LCD

Power Level Percentage

Check the battery level by pressing the display button before use. If battery is at a low level, charge first.

LCD screen flickers around 10 times when battery capacity Irains to 20% and 10%.

Power of Input & Output (W) If the Jackery Explorer's total output exceeds 1000W, it will

automatically shut off.


then press the power button.

Low & High Temperature Alarm

The Explorer 880 can power your devices at temperatures ranging from -10 ~ 40°C (14 ~ 104°F). If your working temperature s outside this range, the Explorer 880 may stop working.

LED FLASHLIGHT

ress button for LED flashlight, hold on button for 2-3 seconds for SOS function, press button one more time to turn off.

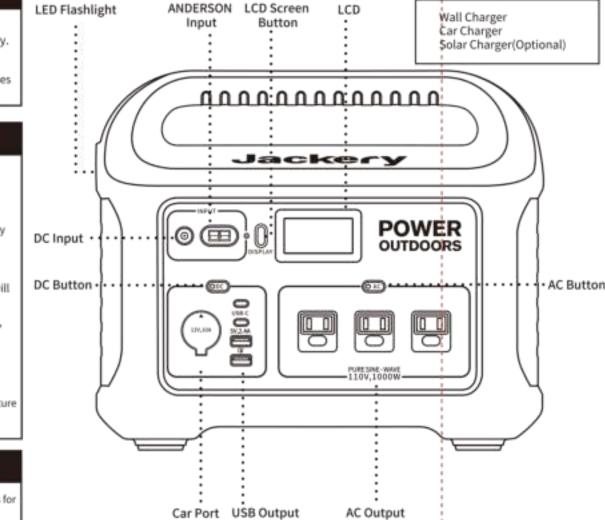

CHARGING [4]


Here are some common devices and their power requirements for each charging port.

DC Output Car Fridge (60 W)

DC INPUT

About 60 Hours

12" Laptop (30 W) About 11 Recharges

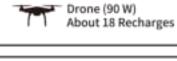



CPAP Machine About 15.5~70 Hours

USB Output

AC Output

Smartphone (18 W) About 90 Recharges



Motion Camera (5 W) About 163 Recharges

Explorer 880 will be turned off automatically in 12 hours when being drawn under 10W power for

RECHARGING

Before use or storage, plug your Explorer 880 into the wall until it is fully charged. If the display shows less than 20% capacity, plug it into a power source, like an AC outlet or a solar panel, as soon as possible. There are four ways to recharge your Jackery Explorer:







About 15 Hours (Depending on Weather)

100W Solar Panels(Optional)

Read the following instructions to ensure safe usage:

Noncompliance may very likely lead to serious injury* or death DO NOT disassemble, repair or modify the

- unit or the battery. DO NOT place the unit close to or in a fire or expose it to heat. Keep out of direct sunlight DO NOT charge, use or store the unit in a
- Only use the output socket to power external devices. Never connect the output to mains power under any circumstances.

bathroom or in an area exposed to rain or

- DO NOT touch the unit or the plug-in points if your hands are wet. DO NOT connect any metallic objects to the
- AC input or output. DO NOT rub your eyes if fluid from inside the unit should get in your eyes.
- DO NOT dispose the unit together with household waste.
- DO NOT use any inappropriate power cords. DO NOT operate the unit above the specified
- DO NOT use the unit if it is not functioning DO NOT move the unit if it is recharging or in use.
- DO NOT put fingers or hands into the product. DO NOT use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- DO NOT disassemble the power pack, take it to aqualified service person when service or repair is required. Incorrect reassembly may result in a risk of fire or electric shock.

Use and store the unit only in a clean and dry

SAFETY INSTRUCTIONS

Noncompliance may lead to serious injury** or death

- If rust, peculiar odors, overheating or other environment, DO NOT use and store in dusty abnormal circumstances are observed, stop and wet environment. Check the unit prior to every use. DO NOT use dealer or our customer service center.
- the unit if it is damaged, broken. DO NOT use the unit if the power cord is
- Keep the unit away from children. DO NOT let children use the power supply unit. ep this product away from pets. DO NOT use or store the unit in an area or

damaged or broken.

- environment with high temperature. Should fluid from inside of the unit come in contact with your skin or clothing, wash the
- affected areas with tap water. In a storm, unplug the power cord from the DO NOT charge the unit via power supply
- systems that operate outside of 100-240V. DO NOT place the unit on its side or upside
- DO NOT use accessories for other usage WARNING - RISK OF EXPLOSIVE GASES.
- To reduce risk of battery explosion, follow these instructions and those published by battery manufacturer and manufacturer of any equipment you intend to use in vicinity of the battery. Review cautionary marking on these products and on engine.

- 1) NEVER smoke or allow a spark or flame in vicinity of battery.
- 2) Be extra cautious to reduce risk of dropping a metal tool onto battery. It might spark or short-circuit battery or other electrical part that may cause explosion.
- 3) DO NOT expose a power pack to fire or excessive temperature. Exposure to fire or temperature above 130°C may cause explosion.
- Serious injuries include blindness, burns, electric shock, fractures, poisoning, etc., which can lead to complications, hospitalization or permanent treatment. Injuries include burns, electric shock, etc., which do not lead to hospitalization or permanent treatment. ** Property damage: includes buildings, belongings and pets, etc.

ATTENTION

Not permitted on aircrafts. Our company cannot be held liable for damages caused by fire, earthquake, use by a third party, other accidents, intentional misconduct on the part of the customer, abuse or To preserve the battery lifespan, please use other abnormal conditions. and recharge at least once every 6 months. Do not repair any damage to the AC plug or power supply on your own. Use original or certified charger and cables. The warranty covers all terms and conditions of the warranty. Contents that are not specified in the warranty terms and

- woid extreme temperature.
- an ambient temperature of 0 to 40 °C (32) woid dropping. Switch the unit off immediately if it has accidentally fallen, was dropped or was Carefully read the instructions for the electric Do not disassemble.
- Make sure that the device you are connecting is switched off before you
 - t's not waterproof, do not expose to liquids. Please dispose of batteries and electronic goods in accordance with local regulations.

This device complies with part 15 of the FCC Rules, Operation is subject to the following two conditions: This device may not cause harmful interference.



(2) This device must accept any interference received, including interference that may cause undesired operation.