



Driver—Speakerphone


1. Search for "Device Manager" in the lower-left search bar, and click it to enter the settings.

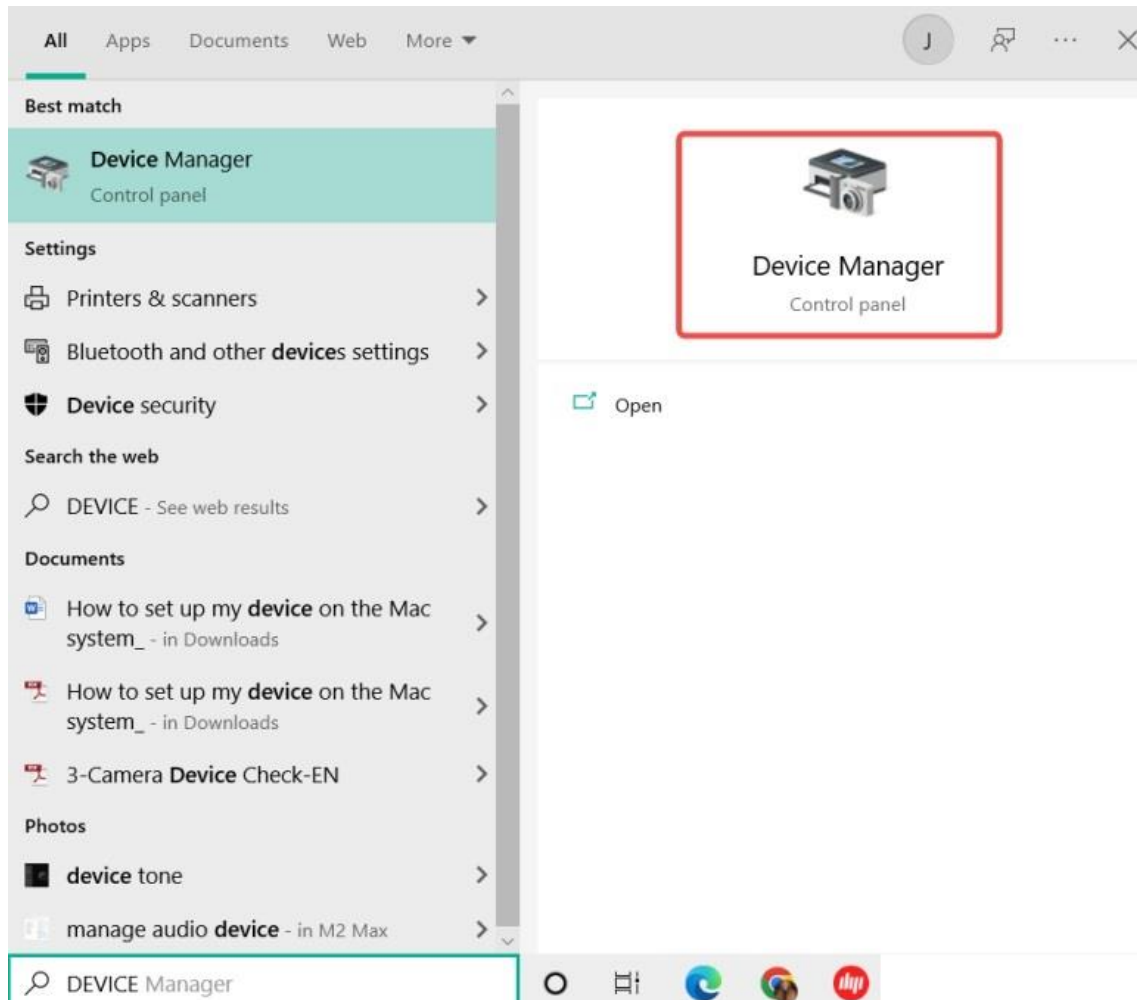

2. Select "Sound, video and game controllers" from the list and click it.

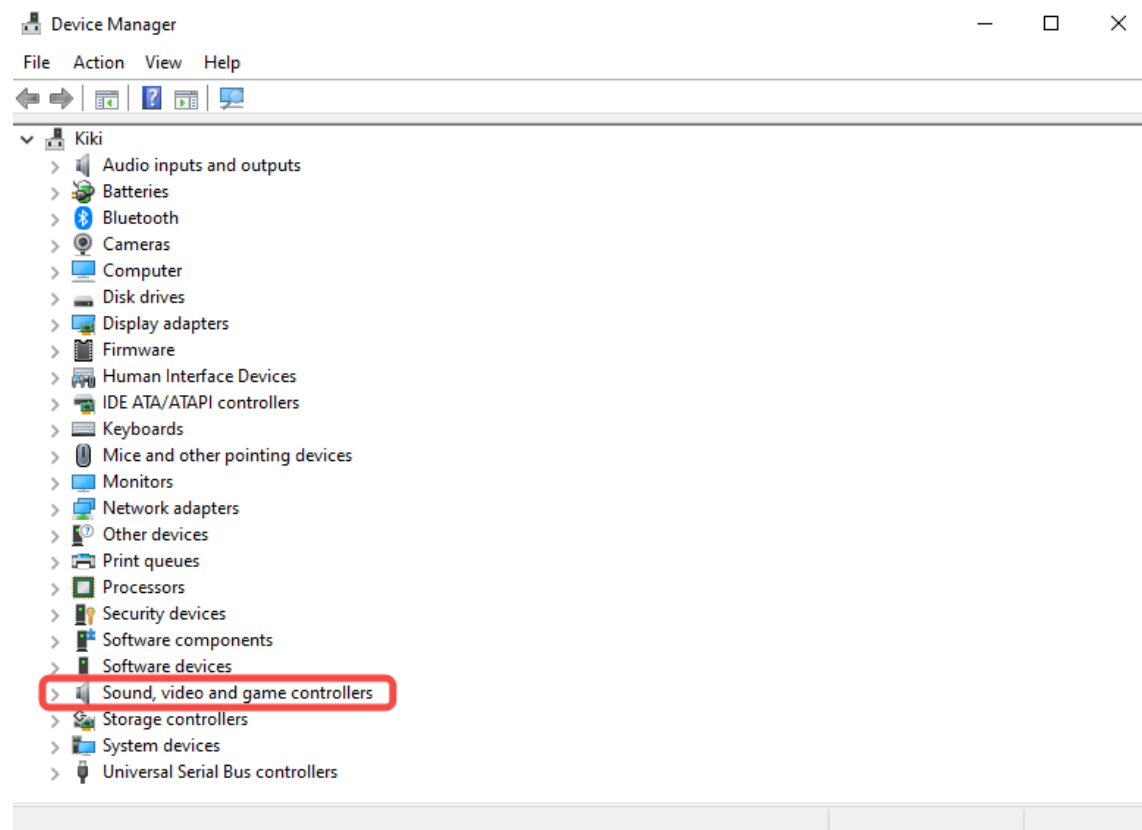

3. Right click "EMEET OfficeCore XXX", and select "Uninstall device".

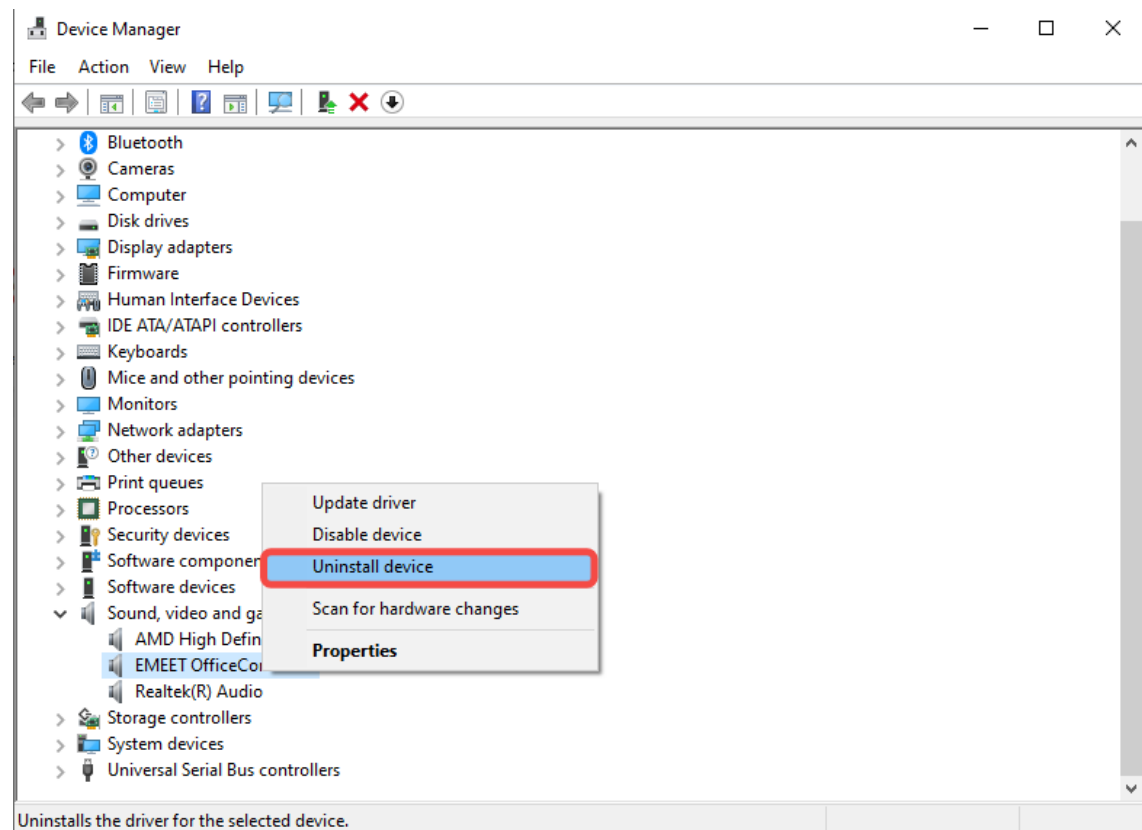

4. Click "Uninstall" to complete the uninstall.



5. Re-plug the device into the computer, and the device will appear again in the list.

